

Introduction

Thank you for purchasing SoftBank 730SC.

SoftBank 730SC is compatible with 3G Prepaid Service. Use USIM Card for exclusive use of the prepaid service.

For details on compatible services and usage procedure, contact Customer Service (☎P.11-22).

SoftBank 730SC is compatible with 3G network technology.

- Read this guide thoroughly before using 730SC to ensure proper usage.
- After reading this guide, keep it on hand for later reference.
- Should you lose or damage this guide, contact Customer Service (☎P.11-22).
- Accessible services may be limited by contract conditions or service area.

Notes

- Unauthorized copying of any part of this guide is prohibited.
- Contents are subject to change without prior notice.
- Some functions and services are not available in Japan.
- Steps have been taken to ensure the accuracy of descriptions in this guide. If you find inaccurate or missing information, contact Customer Service (☎P.11-22).
- SoftBank will replace missing/misplaced pages upon request.

Chapter Contents At a Glance

Getting Started	1
Basic Operations	2
Calling	3
Messaging	4
Camera	5
Media Player	6
Handy Extras	7
Handset Security	8
Connectivity	9
Handset Customization	10
Appendix	11

Contents.....ii
 Accessories..... iv
 About This Guide v
 Safety Precautions vii
 General Notes xv
 SAR Certification..... xviii
 European RF Exposure Information xix

1 Getting Started

Parts & Functions1-2
 Charging Battery1-4
 Power On/Off1-6
 Handling Precautions.....1-6
 Minding Mobile Manners1-7
 Security Codes1-12
 Emergency Numbers1-13

2 Basic Operations

Selecting Functions2-2
 Common Operations2-3
 Standby Display Options.....2-4
 Text Entry2-4
 Text Entry Method2-5
 User's Dictionary2-9
 Phonebook2-10
 Using Phonebook2-13

Account Details.....2-15
 Data Folder2-16
 Viewing Files.....2-17
 Managing Files/Folders.....2-18
 Viewing Memory Status2-20

3 Calling

Making a Call.....3-2
 Receiving a Call3-3
 Answering Machine3-4
 Speed Dial.....3-5
 Call Time & Cost3-5
 Call Log Records3-6
 Optional Services.....3-7
 Voice Mail.....3-8
 Call Forwarding3-10
 Call Waiting3-11
 Group Call.....3-12
 Call Barring.....3-12
 Caller ID3-14

4 Messaging

Messaging Basics 4-2
 Sending S! Mail 4-3
 Sending SMS Messages 4-5
 Received Messages 4-6
 Managing & Using Messages 4-9
 Managing Folders..... 4-12

5 Camera

Mobile Camera 5-2
 Camera Mode 5-3
 Single Shot 5-4
 Capturing Options 5-5
 Video Mode 5-6
 Recording Video 5-6

6 Media Player

Media Player..... 6-2
 Playing Music 6-3
 Playing Video..... 6-5
 Using Playlist..... 6-6

7 Handy Extras

Saving Calendar Entries7-2
 Alarms7-3
 Calculator7-4
 Currency or Unit Converter7-4
 World Clock.....7-5
 Notepad7-5
 Tasks7-6
 Voice Recorder7-6
 Stopwatch7-7

8 Handset Security

Changing Phone Password.....8-2
 Setting PINs8-2
 Setting USIM Lock.....8-3
 Locking & Restricting Handset Operations8-3
 Restoring Default Settings.....8-6

9 Connectivity

Infrared9-2
 Infrared Data Transmission.....9-2

10 Handset Customization

Messaging Settings 10-2
 Media Player Settings..... 10-6
 Mobile Camera Settings 10-7
 Phonebook Settings..... 10-8
 Sounds & Alerts Settings 10-8
 Manner Mode Settings 10-9
 Display Settings 10-9
 Phone Settings..... 10-10
 Security Settings..... 10-12
 Call Settings..... 10-13
 Mode Settings 10-16
 Connectivity Settings..... 10-16
 Memory Settings 10-16


11 Appendix

Battery & Charger 11-2
 USIM Card..... 11-4
 Troubleshooting 11-6
 Function List 11-9
 Key List for Text Entry 11-10
 Symbols 11-11
 Memory List..... 11-12
 Specifications 11-12
 Index..... 11-14
 Objective Index 11-18
 Advanced Settings Index..... 11-20
 Warranty & Service..... 11-21
 Customer Service..... 11-22


Accessories

Make sure Battery and AC Charger are included in the package with handset. These accessories are also sold separately. For details on accessories or optional items, contact Customer Service (☎P.11-22).

Battery [SCBAM1]

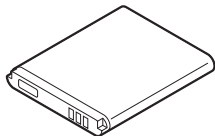

AC Charger [SCCAM1]

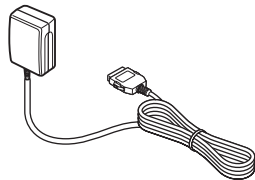

Note: Use only specified Earphone Microphone and USB cable.

About This Guide

In this guide, SoftBank 730SC is referred to as 730SC/handset. Instructions are described using mainly default settings. When settings are changed, screen shots or handset responses may differ from those depicted in this guide.

Screen Shots and 730SC Illustrations

Screen shots appearing in this guide are for reference only and may differ from actual Display images. Product illustrations may differ from actual product appearances.

Confirmations & Warning Messages

Messages not described in this guide may appear; read all handset confirmations and warning messages carefully.

Japanese Functions & Services


When "(Japanese)" appears in a title, Japanese ability is required to use full range of the function or service.

Symbols


In this guide, graphics represent 730SC keys; see "Parts & Functions" (P.1-2). Softkey and Multi Selector operations are indicated as follows.

Softkeys

Operation options appear at the bottom of Display. Press the corresponding Softkey to execute assigned functions.

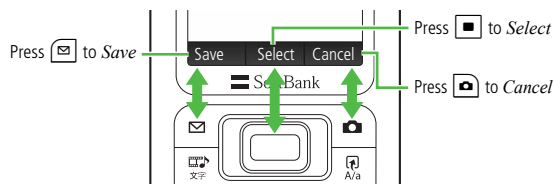


Softkey Operations

 




Multi Selector Operations



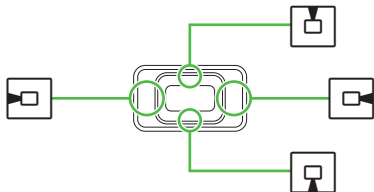


Use Multi Selector to select menu items, move cursor, scroll, etc. In this guide, Multi Selector operations are indicated as shown below.

Basic Multi Selector Operations



 : Press  or 

  : Press  or 

 : Press , ,  or 

Highlighting

In this guide, "to highlight" means to move cursor to an item.

Menu Operations


Main Menu/Menu operations are simplified with arrows.

Main Menu



For details, see "Selecting Functions from Main Menu" (P.2-2).

Menu

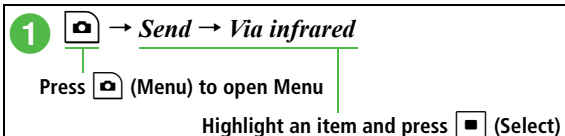




Safety Precautions

- Read these safety precautions before using handset.
- Observe all precautions to avoid injury to yourself and others, or damage to property.
- SoftBank is not liable for any damage resulting from use of this product.

Before Using Handset

● Symbols

Make sure you thoroughly understand these symbols before reading on. Symbols and their meanings are described below:

 Danger	Great risk of death or serious injury from improper use
 Warning	Risk of death or serious injury from improper use
 Caution	Risk of injury or damage to property from improper use

● Symbols

 Prohibited Actions	 Compulsory Actions	 Attention Required
---	---	---

Danger

Handset, Battery, & Charger

Use only specified battery and Charger (ⓘP.iv).

Using non-specified equipment may cause malfunctions, electric shock or fire due to battery leakage, overheating, or bursting.



Do not short-circuit Charger Port.

Keep metal objects away from the Charger Port. Keep handset away from jewelry. Battery may leak, overheat, burst, or ignite causing injury. Use a case to carry handset.



Battery

If battery fluid gets into your eyes, do not rub them. Rinse with clean water and consult a doctor immediately.



Eyes may be severely damaged.

Avoid battery leakage, breakage or fire injury.

Do not:



- Heat or dispose of battery in a fire.
- Disassemble, modify, or break battery.
- Damage or solder on to battery.
- Use a damaged or deformed battery.
- Use a non-specified charger (ⓘP.iv).
- Force battery into handset.
- Charge or place battery near fire, heat sources or expose it to extreme heat.
- Use battery for other equipments.

Warning

Handset, Battery, & Charger

Do not insert foreign objects into handset.

Do not place metal or flammable objects in handset or Charger. This may cause fire or electric shock. Keep handset out of the reach of children.



Keep handset out of rain or extreme humidity.

Fire or electric shock may occur.



Keep handset away from liquid-filled containers.

Keep handset and Charger away from chemicals/liquids. Fire or electric shock may result.



Avoid sources of fire.

To prevent fire or explosion, do not use handset near gas or fine particles (Coal, dust, metal, etc.).



Keep handset and Charger away from microwave ovens.

Battery or handset may leak, burst, overheat, or ignite.



Do not disassemble or modify handset.

- Do not open the housing of handset or Charger; it may cause electric shock or injury. Contact the SoftBank Customer Center, Customer Assistance for repairs.
- Do not modify handset or Charger. Fire or electric shock may result.



If water or foreign matter gets inside handset:

Discontinue handset use to prevent fire or electric shock. Turn handset power off, remove battery, unplug Charger and contact the SoftBank Customer Center, Customer Assistance.



Do not subject handset to shocks.

Subjecting handset or Charger to shocks may cause malfunction or injury. Should handset break, remove battery and contact the SoftBank Customer Center, Customer Assistance. Discontinue handset use. Fire or electric shock may occur.



If an abnormality occurs:

Should there be any unusual sound, smoke, or odor, discontinue handset use to avoid fire or electric shock. Turn handset power off, remove battery, unplug the Charger, and contact the SoftBank Customer Center, Customer Assistance. Fire or electric shock may result.



Keep handset off and Charger disconnected near filling station or places with risk of fire/explosion.

Handset use near petrochemicals or other flammables may lead to fire or explosion.



Handset

Preventing accidents

- For safety, never use handset while driving. Pull over beforehand. Mobile phone use while driving is prohibited by the revised Road Traffic Law (Effective November 1 2004).
- Do not use headphones while driving or riding a bicycle. Accidents may result.
- Do not turn the volume up so high that ambient sounds cannot be heard, especially when walking in or around traffic to avoid accidents.



Do not swing handset by the strap.

Injury or breakage may result.



Turn handset power off before boarding aircraft.

Using wireless devices aboard aircraft may cause electronic malfunctions or endanger aircraft operation.



Ringtone & Vibration Settings

Select settings carefully if you have a heart condition or wear a pacemaker/defibrillator.



During thunderstorms, turn power off; move to a safe place.

There is a risk of a lightning strike or electric shock.



Do not use handset with wet hands.

Doing so may lead to electric shock or damage to 730SC.



Charger

Use only the specified voltage.

Non-specified voltages may cause fire or electric shock.



• AC Charger: AC 100V-240V Input

Do not touch plug blades with wet hands.

Electric shock may occur.



Do not plug multiple cords in one outlet.

Excess heat or fire may occur.



Do not bend, twist, pull, or set objects on the cord.

Do not put heavy objects on the cords or heat or pull the cords.



Fire or electric shock may result.

Do not short-circuit Charger Port.

Keep the metal away from Port. Overheating, fire, or electric shock may result.



Do not use AC Charger if the cord is damaged.

Fire or electric shock may be caused. Contact the SoftBank Customer Assistance to replace the cord.



During thunderstorms:

Unplug Charger to avoid damage, fire, or electric shock.



Keep Charger out of the reach of children.

Electric shock or injury may result.



Battery

If battery does not charge properly, stop charging.

Battery may overheat, burst or ignite.



If there is leakage or abnormal odor, keep battery away from fire sources.

It may catch fire or burst.



If there is abnormal odor, excessive heat, discoloration, or distortion, remove battery from handset.

It may leak, overheat, or explode.



Handset Use & Electronic Medical Equipment

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).

People with implanted pacemakers/defibrillators should keep handset more than 22 cm away.

Implanted pacemakers/defibrillators may malfunction due to radio waves.



Turn handset power off in crowded places such as trains. People with implanted pacemakers/defibrillators may be near.

Implanted pacemakers/defibrillators may malfunction due to radio waves.



Observe these rules inside medical facilities:

- Do not take handset into operating rooms or Intensive or Coronary Care Units.
- Keep handset off in hospitals.
- Keep handset off in hospital lobbies. Electronic equipment may be near.
- Obey rules regarding mobile phone use in medical facilities.



Consult the manufacturer of other electronic medical equipment about radio wave effects.

Caution

Handset, Battery, & Charger

Handset Care



- Place 730SC on stable surfaces to avoid malfunction or injury.
- Keep 730SC away from oily smoke or steam. Fire or accidents may result.
- Cold air from air conditioners may condense, resulting in leakage, or burnout.
- Keep 730SC away from direct sunlight (Inside vehicles, etc.) or heat sources. Distortion, discoloration, or fire may occur. Battery shape may be affected.
- Keep 730SC out of extremely cold places to avoid malfunction or accidents.
- Keep 730SC away from fire sources to avoid malfunction or accidents.

Usage Environment



- Excessive dust may prevent heat release and cause burnout or fire.
- Avoid using 730SC on the beach. Sand may cause malfunction or accidents.
- Keep 730SC away from credit cards, phone cards, etc. to avoid data loss.

Handset

730SC temperature

730SC may become hot while in use. Avoid prolonged contact with skin especially at high temperature. May cause burn injuries.



Avoid leaving 730SC in extreme heat (Inside vehicles, etc.).

Handset may heat up and lead to burns.



Volume settings

Keep handset volume moderate.
Excessive volume may cause damage to your hearing.



Headphones

- Do not unplug by pulling the cord; may damage the cord.
- Keep the plug clean to avoid noise or malfunction.



Inside vehicles:

Handset use may cause other electronic equipment to malfunction.



Should skin irritation occur, discontinue handset use and consult a doctor.





Skin irritation, rashes, or itchiness may result depending on your physical condition.

Parts	Materials & Finishing
Housing (Upper)	PC
Housing (Rear)	PC
Keypad	PC
Charger Port Cover	PC + Urethane
Ear Cover	PC + Urethane
Battery Cover	PC

Charger

Charger

- Grasp the plug (not the cord) to disconnect Charger. Otherwise, fire or electric shock may result. 
- Keep the cord away from heaters. Exposed wire may cause fire or electric shock.
- Stop use if the plug is hot or improperly connected. Fire or electric shock may result. 

Always charge 730SC in a well-ventilated area.

Avoid covering/wrapping Charger; may cause damage or fire.



Disconnect AC Charger during long periods of disuse.

Be sure to unplug AC Charger after use.



Handset Maintenance

When cleaning, disconnect AC Charger to prevent shock or injury.



Battery

Keep battery out of the reach of children.

They may sustain injuries. And when using, do not let them remove battery from handset.



Do not leave battery in direct sunlight or inside vehicles.

Overheating or fire may occur and performance may be reduced.



Do not expose battery to liquids.

Performance may deteriorate.



If battery fluid makes contact with skin or clothes:

Rinse with clean water immediately.



Do not dispose of exhausted batteries with ordinary refuse.

Tape over battery terminals before disposal, or bring them to a SoftBank shop. Follow local regulations regarding battery disposal.



Do not throw or abuse battery.

Battery may overheat, burst, or ignite.



Charge battery within a range of 5°C- 40°C.

Battery may leak/overheat and performance may deteriorate.



If a child is using handset, explain all these instructions and supervise handset's usage.



If there is any abnormal odor or excessive heat, stop using battery and call the SoftBank Customer Center, Customer Assistance.



Do not leave battery uncharged.

Charge at least once every six months.



General Notes

General Use

- SoftBank is not liable for any damage resulting from accidental loss/alteration of any data on handset. Please keep separate records of Phonebook entries, etc.
- Handset transmissions may be disrupted inside buildings, tunnels, or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines, TVs or radios may cause interference.
- **Beware of eavesdropping.**
Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.

Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.

Inside Vehicles

- Never use handset while driving.
- Do not park illegally to use handset.
- Handset use may affect a vehicle's electronic equipment.

Aboard Aircraft

- Never use handset aboard aircraft (Keep the power off). Handset use may impair aircraft operation.

Function Usage Limits

- The following functions are disabled after handset upgrade/replacement or service cancellation:
 - Camera
 - Media Player
- After a long period of disuse, these functions may be unusable; establish a Network connection to restore usability.

Handset Care

- If handset is left with no battery or an exhausted one, data may be altered/lost. SoftBank is not liable for any resulting damage.
- Use handset between 5°C - 40°C. Avoid extreme temperatures/direct sunlight.
- Exposing the lens to direct sunlight may damage the color filter and affect image color.
- Do not drop or subject handset to shocks.
- Clean handset with a dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Do not expose handset to rain, snow, or high humidity.
- Never disassemble or modify handset.
- Avoid scratching Display.
- When using headphones, moderate the volume to avoid sound bleed.
- Handset is not water-proof. Avoid exposure to liquids and high humidity.
 - Keep handset away from precipitation.
 - Cold air from air conditioning, etc. may condense causing corrosion.
 - Avoid placing handset in damp places (Restrooms, bath/shower rooms, etc.).
 - On the beach, keep handset away from water and direct sunlight.
 - Perspiration may get inside handset causing malfunction.
- Heavy objects or excessive pressure should be avoided. This may cause malfunction or injury.
 - Do not sit down with handset in a back pocket.
 - Do not place heavy objects on handset in a bag.
- Insert only specified devices into Charger Port. Malfunction or damage may result.
- Always turn power off before removing battery. If battery is removed while saving data or sending mail, data may be lost, changed or destroyed.

Copyrights

Copyright laws protect sounds, images, computer programs, databases, other materials for copyright holders. Duplicated material is limited to private use only.

Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.

The software contained in 730SC is copy protected material; copyright, moral right, and other related rights are protected by copyright laws. Do not copy, modify, alter, disassemble, decompile, or reverse-engineer the software, and do not separate it from hardware in whole or part.

Trademarks

- Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations:

4,901,307	5,490,165	5,056,109	5,504,773	5,101,501
5,506,865	5,109,390	5,511,073	5,228,054	5,535,239
5,267,261	5,544,196	5,267,262	5,568,483	5,337,338
5,600,754	5,414,796	5,657,420	5,416,797	5,659,569
5,710,784	5,778,338			

- S! Mail, Arrange Mail, Feeling Mail and 3D Pictogram are trademarks or registered trademarks of SOFTBANK MOBILE Corp.
- "SOFTBANK", SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.
- "Yahoo!", the "Yahoo!" and "Y!" logos are trademarks or registered trademarks of Yahoo! Inc.
- Part of the software in this product incorporates a module developed by the Independent JPEG Group.

- THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com).
- Contains Macromedia® Flash® Flash Lite™ technology by Adobe Systems Incorporated.
- Macromedia, Flash, Macromedia Flash, and Macromedia Flash Lite are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and other countries.
- "Chaku-Uta®" and "Chaku-Uta Full®" are registered trademarks of Sony Music Entertainment Corp.

SAR Certification

730SC meets the technical standards of Ministry of Internal Affairs and Communications (MIC) regarding radio wave absorption by a human body.

These technical standards are established on a scientific basis to prevent radio waves emitted from wireless devices such as mobile phones that are used close to human head from affecting human health. These standards assure that the SAR (Specific Absorption Rate), an indicator of the amount of average energy absorbed in the side of a human head, must not exceed the permissive value of 2W/kg^* . This value includes a substantial safety margin designated to assure the safety of all persons, regardless of age and physical size. The value is equal to the international guideline recommended by International Commission on Non-Ionizing Radiation Protection (ICNIRP) that has a cooperative relationship with the World Health Organization (WHO).

The highest SAR value for 730SC is 0.737 W/kg . This value is obtained in accordance with the MIC testing procedure with the mobile phone transmitting at its highest permitted power level. While there may be differences in the SAR levels depending on phones, they all meet the MIC's permissible value. Because mobile phones are designed to employ the minimum power level required for the communication with the base station, the SAR of the phone during a call is usually below the maximum value.

For further information about SAR, please see the following websites:

MIC: <http://www.tele.soumu.go.jp/ele/index.htm>

ARIB: <http://www.arib-emf.org/initiation/sar.html>

* The guideline is defined by relevant laws and regulations associated with the Radio Law (No. 2 of Article 14 of Ordinance Regulating Radio Equipment).

SoftBank's Body SAR Policy

* Body SAR: The SAR value at the maximum transmission power when continuously talking with handset placed on the body and using earphone-microphone.

** Specific Absorption Rate (SAR): The value measured when having talked continuously for 6 minutes.

*** Placement on the body: Measurements are taken with the rear of handset facing the body at a distance of 1.5 cm as the ordinary handset position. In order to comply with radio frequency exposure requirements, use an accessory (e.g. belt clip, holster) that does not contain metallic parts to maintain a 1.5 cm separation between the body and handset.

For further information, see the following SoftBank website:

<http://www.softbankmobile.co.jp/ja/info/public/emf/emf02.html>

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 0.737 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide. In this case, the highest tested SAR value is 0.412 W/kg.

As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a hands-free device to keep the mobile phone away from the head and body.

* The tests are carried out in accordance with international guidelines for testing.



Getting Started









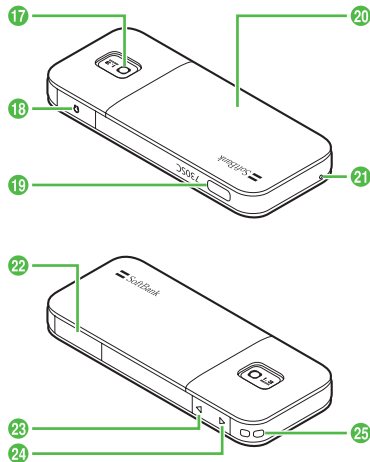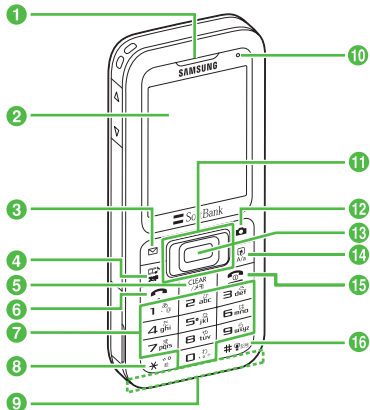




 


Parts & Functions	1-2
Handset	1-2
Display Indicators	1-3
Charging Battery	1-4
AC Charger	1-4
Power On/Off	1-6
Handling Precautions	1-6
Key Lock	1-6
Minding Mobile Manners	1-7
Manner Related Functions	1-7
Offline Mode	1-7
Manner Key	1-8
Mode Settings	1-8
Changing Mode Settings	1-9
Security Codes	1-12
Phone Password	1-12
Center Access Code	1-12
Network Password	1-13
Emergency Numbers	1-13

Parts & Functions

Handset




- 1 Earpiece/Speaker
- 2 Display
- 3  Left Softkey/Mail Key
Open Messaging menu or execute Left Softkey command/function.
- 4  Media Player/Character Key
Activate Media Player or toggle text entry modes.
- 5  Clear/Back Key
Delete entered text or return to the previous operation step.
- 6  Start Key
Make and receive Voice Calls. Press on Standby to open Call log (Dialed).
- 7  Keypad
Enter numbers or characters and select menu items.
- 8  * Key
Enter pictograms or press for 1+ seconds to open Mode settings.
- 9 Internal Antenna
- 10 External Light
Flashes for Missed Call or Incoming Call/Mail; illuminates blue while charging.
- 11  Multi Selector
Select menu items, move cursor, scroll window.
- 12  Right Softkey/Camera Key
Open Messaging menu or execute Right Softkey command/function. Also use to activate Camera.


 








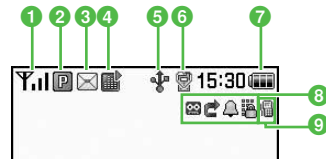

- 13  Center Key
Open Main Menu or execute Center Softkey command/function.
- 14  Switch Bar Key
Open Switch Bar (P.2-3).
- 15  Power/End Key
Turn power on/off or end operations.
- 16  #/Manner Key
Enter symbols or press for 1+ seconds to activate or cancel Manner mode.
- 17 Camera
Capture images or send video during a Video Call.
- 18 Earphone/Microphone Jack
Use for connecting to the stereo earphone set (optional).
- 19 Infrared Port
Use for infrared data transmissions.
- 20 Battery Cover
Remove to access Battery or USIM.
- 21 Microphone
- 22 Charger Port
Connect Charger, PC, etc. here.
- 23  Side Key
Lower ringer or Media Player volume.
- 24  Side Key
Raise ringer or Media Player volume.
- 25 Strap Eyelet

• Internal Antenna

730SC transmits and receives signals via Internal Antenna. There is no external antenna. Voice quality may vary by where/how handset is used. Do not cover or place stickers, etc. over the area containing Internal Antenna.

Display Indicators



- 1  Signal Strength (more bars indicate stronger signal)
 Out-of-Range (言語選択 set to Japanese)
Out Out-of-Range (言語選択 set to other than Japanese)
 Offline Mode
- 2  3G Network Connected
 3G Network S! Mail in Use/Network in Auto adjust
 Packet Communication Unavailable
 Voice Call in Progress
- 3  New Message
 Memory Full (S! Mail/SMS)
 Receiving Delivery report
- 4  Music Playback
 Music Paused

- 5 (Blue) USB Connected
 USB Connection
 (Gray) Infrared Data in Transmission
 (Red) Infrared Data Transmission Activated
- 6 Manner Mode
 Drive Mode
 Meeting Mode
 Outdoor Mode
- 7 Battery Strong
 Battery Moderate
 Battery Low
 (Flashing) Battery Weak (Charge Now)
- 8 Voice Mail/Call Forwarding (*No reply*) Activated
 Answering Machine Activated
 Alarm Set
 Unheard Answering Machine Message
 Unheard Voice Mail
 All Keys Locked
 Password Locked
 Secret Mode Set
- 9 Other than *Off* for *Voice call* in *Volume*, and other than *Off* for *Voice call* in *Vibration* Set
 Other than *Off* for *Voice call* in *Volume*, and *Off* for *Voice call* in *Vibration* Set
Off for *Voice call* in *Volume*, and other than *Off* for *Voice call* in *Vibration* Set
Off for *Voice call* in *Volume*, and *Off* for *Voice call* in *Vibration* Set


- When (Red) appears, only Packet Communications and Outgoing S! Mail are available; Calls, Incoming S! Mail and SMS Service are all disabled.

Charging Battery

- If handset is on while Charger is connected, battery indicator shows charge level, charging as follows:
 flashes when battery is fully charged. If handset is off, *Charging...* appears while charging and when battery is charged, *Battery full* appears. External Light illuminates while charging.
- An empty battery requires 150 minutes (approx.) to charge with power off. Charging time may vary by ambient temperature.


AC Charger

- 1 Open Port Cover and insert AC Charger Connector into Charger Port

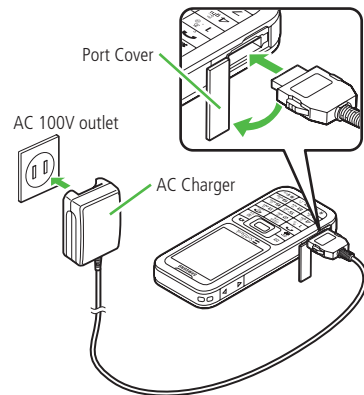

- 2 Plug AC Charger into an AC 100V outlet

3 When battery is charged, disconnect handset, close Port Cover and unplug AC Charger

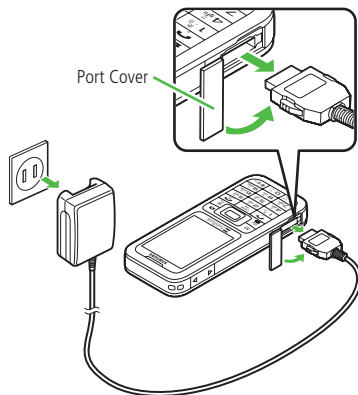

USB Charging

Connect 730SC to a PC via USB Cable (optional) to charge battery.


- 1 Open Port Cover and insert USB Cable Connector into Charger Port
- 2 Insert USB Plug into a PC USB port
- 3 When battery is charged, disconnect handset, close Port Cover and remove USB Plug

- USB Charging takes longer; charging time varies by PC. A weak battery may not charge via USB.

- If handset is off when initially connected to a PC, power on handset to begin charging battery.
- If install driver prompt appears upon USB connection, follow one of these steps:
 - Select *Cancel*
 - Remove USB Plug from PC → Open <http://jp.samsungmobile.com/pc/support/download.html> → Select 730SC → Download driver via *USB Driver Installer*
 - To install driver, open the downloaded file and execute *Setup.exe* → Insert USB Plug into PC. Battery will charge without installing USB driver. If driver is unnecessary, select *Cancel* above.

Power On/Off

Power On


 
1  (1+ seconds)








Standby

Note

• **Do not subject 730SC to strong shocks/impacts. Excessive force may cause damage.**

- To confirm handset phone number, press  → . Your phone number appears in Account details. Edit or use contents (P.2-15).
- When handset is left open without operations, Display automatically shuts down to conserve power (P.10-10).

- The first time , ,  or  is pressed or a function requiring a network connection is activated, *Retrieve NW info* confirmation appears. Follow onscreen instructions and choose *Yes* or press .


- *Retrieve NW info* confirmation appears after replacing USIM Card or executing *All reset*.
- Retrieving Network Info sets time and date.
- Network Services (Messaging) are available.
- Retrieve Network Info manually (P.10-16).
- This guide describes operations with time and date set unless noted otherwise.

Advanced

Settings


- Retrieve Network Information manually (P.10-16)

Power Off

1  (2+ seconds)

- SoftBank logo appears and 730SC powers off.

Note

• **When powering off, be sure to press  for 2+ seconds.**


Handling Precautions


Note these precautions when handling 730SC.



- Lock keys before carrying 730SC in a pocket.
- When carrying AC Charger, retract plug blades. Do not pull/twist power cord; doing so may damage the cord.

Key Lock

You can lock keys to prevent from malfunction when carrying 730SC. Set Key Lock in Standby.

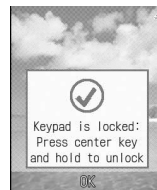1  (1+ seconds)



- When keys are locked,  appears in Standby. When any key is pressed, Unlock Keys message appears.
- While message appears, press  for 1+ seconds to cancel Key Lock.
- *Settings* → *Phone settings* → *Set Auto keypad lock to On* to lock automatically when Display backlight turns off (P.8-3).

Minding Mobile Manners

Please take care not to disturb others when using your handset.


- Turn your handset off in theaters, museums and other places where silence is the norm.
- Keep your handset off aboard airplanes, inside hospitals, or in other places where handset use is prohibited.
- Refrain from using your handset in quiet places such as restaurants, hotel lobbies or elevators.
- Observe announcements or posted instructions regarding handset use aboard trains, etc.
- Refrain from handset use that interrupts the flow of pedestrian or vehicle traffic.


Manner Related Functions

730SC offers two manner-related modes.


- **Manner mode**
Mute handset sounds and activate Vibration for all alerts, tones and alarms. Use Manner Key to activate or cancel Manner mode.
- **Offline mode**
Suspends handset transmissions. Other functions may be used. Without activating Manner mode or Offline mode, vibration and muting tones are still available independently.

Offline Mode



- 1  → *Settings* → *Call settings* → *Offline*

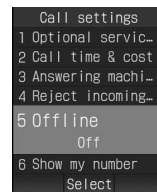


- 2 **On or Off**

 
- If handset powers off in Offline mode, Offline mode activation confirmation appears the next time 730SC powers on. Press  (No) for Normal mode.

 Manner Key

Use Manner Key to toggle Manner mode. In Standby, press  for 1+ seconds to activate or cancel Manner mode. Using  to cancel Manner mode returns 730SC to the previous mode.

1 (1+ seconds)

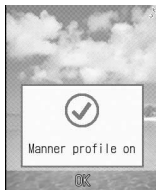

- When Manner mode is active,  appears.
- Even when Manner mode is active, shutter click sounds for Camera.

Mode Settings

730SC features five modes, including Manner.






1 (1+ seconds)

2 *Normal, Manner, Drive, Meeting or Outdoor*



Modes












Select mode by usage; edit Normal mode or Manner mode settings as required (P.1-9).




Mode	Description
 Normal Mode*	All Sounds & Alerts settings apply
 Manner Mode	Mutes 730SC system sounds
 Drive Mode	Mutes ringer; plays Driving Message and activates Answer Phone for calls
 Meeting Mode	Mutes Ringtones & Keypad tones
 Outdoor Mode	Maximizes tone volume

 
* Normal mode indicator does not appear in Standby.

Changing Mode Settings

Change incoming transmission response by mode.

- 1  (1+ seconds)
- 2 **Highlight mode** →  (Edit)
- 3 **Set items**
 - **To set ringtone volume**
Volume → Select item to set → Use  to adjust volume →  (Play) →  (Select)
 - **To set System sounds or Keypad tones**
Volume → *Phone sounds* → Use  to adjust volume →  (Select)
 - **To set ringtone for Voice Call**
Ringtone → *Voice call* → Select a file location → Highlight a file →  (Play) →  (Select)
 - **To set other ringtones**
Ringtone → *Message, Missed call notification* or *Delivery report* → *Assign tone* → Select a file location → Highlight a file →  (Play) →  (Select)

- **To set message ringtone duration**
Ringtone → *Message, Missed call notification* or *Delivery report* → *Duration* → Enter a time
 - **To set Vibration**
Vibration → Select item to set → *Off* or *Pattern 1 to Pattern 5* →  (Play) →  (Select)
 - **To set Keypad tones**
Phone sounds → *Keypad tones* → *Beep, Glossy* or *Off*
 - **To set System sounds**
Phone sounds → *System sounds* → Check item to set →  (Save)
 - **To set External light**
External light → *Incoming* or *Notification* → Select an item → *On/Off*
 - **To set Answering machine**
Answering machine → *On/Off*
- For details on items, see Mode Settings (📖P.1-10) and System Sounds (📖P.1-12).

- If *Ringtone reducer* is *On*, ringtone volume is reduced to Level 1 for the first two seconds, regardless of Ringtone volume set for Voice Call.
- Use  to adjust ringtone volume while 730SC rings.
- To mute Voice/Video Call or Message tones, set *Volume* and *Vibration* to *Off*. 🚫 appears.
- Open *Sounds & Alerts* to change sounds for Normal mode. Settings cannot be changed for other modes.
- Open *Manner mode settings* to change Manner settings.

Mode Settings

Available items vary by mode. Defaults are as listed below.

Item \ Mode	Normal	Manner	Drive	Meeting	Outdoor
Volume					
Voice call	Level 3	N/A	N/A	Off	Level 5
Message	Level 3	N/A	N/A	Off	Level 5
Missed call notification	Level 3	N/A	N/A	Off	Level 5
Delivery report	Level 3	N/A	N/A	Off	Level 5
Phone sounds	Level 3	N/A	N/A	Off	Level 5
Ringtone (Upper: Assign tone, Lower: Duration)					
Voice call	Samsung Tune.mp4 N/A	N/A	N/A	Samsung Tune.mp4 N/A	Samsung Tune.mp4 N/A
Message	Samsung Tune.mp4 5 seconds	N/A	N/A	Samsung Tune.mp4 5 seconds	Samsung Tune.mp4 5 seconds
Missed call notification	BusinessTone.mp4 5 seconds	N/A	N/A	BusinessTone.mp4 5 seconds	BusinessTone.mp4 5 seconds
Delivery report	BusinessTone.mp4 5 seconds	N/A	N/A	BusinessTone.mp4 5 seconds	BusinessTone.mp4 5 seconds
Vibration					
Voice call	Off	Pattern 1	N/A	Off	Off
Message	Off	Pattern 1	N/A	Off	Off
Missed call notification	Off	Pattern 1	N/A	Off	Off
Delivery report	Off	Pattern 1	N/A	Off	Off

Item \ Mode	Normal	Manner	Drive	Meeting	Outdoor
Phone sounds/System sounds ¹					
Keypad tones	Off	N/A	N/A	Off	Off
System sounds	Several tones on	Alerts on call	N/A	Alerts on call	Several tones on
External light					
Incoming					
Voice call	On	On	On	On	On
Message	On	On	On	On	On
Missed call notification	On	On	On	On	On
Delivery report	Off	Off	Off	Off	Off
Notification					
Missed call	On	On	On	On	On
Message	On	On	On	On	On
Answering Machine	On	On	On	On	On
Missed call notification	On	On	On	On	On
Missed alarm	On	On	On	On	On
Delivery report	On	On	On	On	On
Answering Machine	Off	On	N/A ²	Off	Off

1 In Manner Mode, Phone sounds are not available.

2 Answering Machine activates automatically in Drive mode and cannot be disabled.

System Sounds

Available items vary by mode. Volume level set in *System sounds* applies to all Phone sounds.

Item	Description
All	Check/uncheck all items.
Popup box alerts	Sounds for confirmations/warnings.
Minute minder	Sounds about once a minute during calls.
Call connect tone	Sounds before called phone rings to notify the call is going to be connected.
Call end tone	Sounds when a call ends.
Power on	Sounds when the power is turned on.
Power off	Sounds when power is turned off.
Alerts on call	Sounds for alarms/incoming transmissions during a call.

Advanced

Settings

- Adjust volume (☞ P.10-8)
- Set Ringtone for Voice Call (☞ P.10-8)
- Set ringtone other than Voice Call (☞ P.10-8)
- Set ringtone duration other than Voice Call (☞ P.10-8)
- Set Vibration (☞ P.10-8, P.10-9)
- Set Keypad tones (☞ P.10-8)
- Set system sounds (☞ P.10-8, P.10-9)
- Illuminate External Light for incoming transmissions (☞ P.10-8, P.10-9)
- Illuminate External Light for missed calls (☞ P.10-8, P.10-9)
- Set Answering Machine (☞ P.10-9)
- Activate or cancel Offline mode (☞ P.10-15)
- Activate or cancel automatic ringer reduction (☞ P.10-15)
- Change mode (☞ P.10-16)

Security Codes

Phone Password, Center Access Code and Network Password are required are required to use 730SC.

Phone Password

The 4-digit number (9999 by default) is required to operate/change some handset functions.

- Entered Phone Password digits are represented with *.
- If incorrect, an error message appears. Try again.
- Phone Password can be changed on 730SC (☞ P.8-2).

Center Access Code

4-digit number specified at subscription; required to change service subscriptions or to operate Optional Services from landlines.

Network Password

4-digit number specified at subscription, required to restrict handset services. Entering incorrect Network Password 3 consecutive times locks Call Barring settings. To resolve, Network Password and Center Access Code must be changed. For details, contact Customer Service (☎P.11-22).

- Network Password can be changed on 730SC (☎P.3-14).

Note

- **Write down Phone Password, Center Access Code and Network Password. If you lose a code, contact Customer Service (☎P.11-22).**
- **Do not reveal Phone Password, Center Access Code or Network Password to others. SoftBank is not liable for damage caused by misuse of these codes by others.**

Emergency Numbers

Call 110 (Police), 119 (Fire & Ambulance) or 118 (Maritime Safety Agency). These numbers can be dialed even when certain Call Barring settings are active. See details below.

730SC Status	Emergency Numbers
Offline mode activated (☎P.1-7)	None
Call Cost limit exceeded	110, 119, 118
Phone lock activated (☎P.8-3)	None
Password lock activated (☎P.8-4)	110, 119, 118
Required PIN not entered (☎P.8-2)	None
USIM Card not be authenticated (☎P.8-3)	None
Outgoing Call Barring activated (☎P.3-12)	110, 119, 118

Emergency Location Report

When calls are placed to Police or other emergency agencies from 730SC, handset location information is automatically sent to the corresponding agency. 730SC transmits location based on base station positioning information.

- Location accuracy may vary by geography or signal conditions. Always verify your location with address or nearby landmark.
- Base station positioning accuracy ranges from several hundred meters to 10 kilometers. This information may differ from actual location due to distance of the closest base station location.
- This function is only available if the agency receiving an emergency call has implemented infrastructure for receiving location information.
- If you hide Caller ID by dialing 184 before calling an emergency number, your location information is not sent. However, authorities may access this information when necessary.
- No subscription/communication fee required.

Basic Operations



Selecting Functions	2-2	Account Details	2-15
Selecting Functions from Main Menu	2-2	Data Folder	2-16
Using Shortcuts in Standby	2-3	Default Folders	2-16
Selecting Functions with Switch Bar	2-3	Viewing Files	2-17
Common Operations	2-3	Viewing Images with Picture Browser	2-17
Menu Options	2-3	Managing Files/Folders	2-18
Selecting/Canceling Multiple Items	2-3	Creating Folders	2-18
Standby Display Options	2-4	Renaming File/Folder	2-18
Wallpaper	2-4	Moving Files/Folders	2-19
Text Entry	2-4	Copying Files/Folders	2-19
Text Entry Window	2-4	Deleting Files/Folders	2-20
Changing Entry Mode	2-5	Viewing Memory Status	2-20
Text Entry Method	2-5	Advanced Settings	
Hiragana/Kanji	2-5	Basic Operations	2-21
Katakana, Alphanumerics and Numbers	2-6	Text Entry	2-21
Symbols	2-7	User's Dictionary	2-22
Pictograms and Emoticons	2-7	Phonebook	2-22
Line Breaks	2-8	Account Details	2-26
Hangul	2-8	Viewing Files	2-26
Deleting & Editing Text	2-9	File/Folder Management	2-26
User's Dictionary	2-9	Memory Status	2-28
Saving to User's Dictionary	2-9		
Phonebook	2-10		
Phonebook Entry Items	2-10		
Phonebook Entry Tabs	2-12		
Creating New Entries	2-12		
Saving from Call Log Records	2-13		
Using Phonebook	2-13		
Searching Phonebook	2-13		
Calling from Phonebook	2-14		
Deleting Phonebook Entries	2-15		


Selecting Functions

Selecting Functions from Main Menu

1 In Standby, 



Main Menu

2 Highlight an item → 


(Select)


3 Repeat Step 2 to select target function


Example: Selecting *Wallpaper*




Highlight *Settings*
→  (Select)

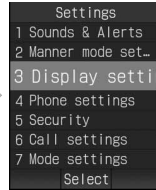

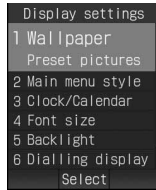

Highlight *Display settings*
→  (Select)

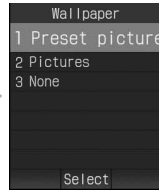

Highlight *Wallpaper*
→  (Select)



Wallpaper setting window appears

- Press  to exit menu. 730SC returns to Standby. If multiple functions are active, active window appears.
- Press  to cancel menu. Handset returns to Standby or previous window. In some menus, a confirmation appears.
- When numbered items appear in menu or list window, use Keypad to select an item.

Using Shortcuts in Standby

Key	Corresponding Menu/Function
	Open Messaging menu
(1+ seconds)	Open Create Message window
	Activate Camera
(1+ seconds)	Open Camera menu
	Activate Switch Bar
	Open Calendar
	Open Phonebook list
(1+ seconds)	Open Phonebook Entry window
	Open Call log (Received)
	Open Call log (Dialed)
	Open Recordings list
(1+ seconds)	Toggle Answering Machine On/Off
(1+ seconds)	Open Mode setting window
(1+ seconds)	Toggle Manner mode On/Off
	Open Media Player music window

Selecting Functions with Switch Bar

Select Call, Messaging or Media Player. Use multiple functions at the same time (e.g. listen to music while messaging).

- 1 In Standby or active function,**
- 2 Use to highlight an item** → (Select)



- To exit a function, show it and press .
 - To exit all, highlight and press (Yes).
- When exiting all, confirmation may appear for some functions; choose *Yes* or *No*.
- Activate other functions while creating a message. After exiting all, Create Message window appears.

Advanced

Advanced Settings P.2-21

Common Operations

Menu Options

When *Menu* appears as Right Softkey label, press to open Menu. To execute an item, highlight it and press (Select).

Selecting/Canceling Multiple Items

Press (Mark all) or (Unmark all) to check/uncheck all items to delete or move.


- Available operations vary by function.
- Enter Phone Password to delete multiple items.

Standby Display Options

Wallpaper

Set still image to appear in Standby. Alternatively, hide still image.

- 1 → *Settings* → *Display settings* → *Wallpaper*

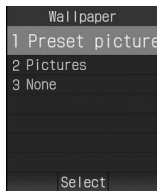

- 2 **Set Wallpaper**

■ **To set an image in Data Folder**

Select a folder → Select a file → (Set)

■ **To set none**

None

Advanced


Settings

- Change Wallpaper (☞ P.10-9)
- Set Menu style (☞ P.10-9)
- Set Standby Display appearance (☞ P.10-9)
- Change font size for menu list (☞ P.10-9)
- Adjust Display brightness (☞ P.10-9)
- Set Dialing window font type (☞ P.10-10)
- Set Dialing window font size (☞ P.10-10)
- Set Dialing window font color (☞ P.10-10)
- Set Dialing window background color (☞ P.10-10)
- Set Operator name (☞ P.10-10)
- Change user interface language (☞ P.10-10)
- Set Time zone updating (☞ P.10-10)
- Change Home time zone (☞ P.10-10)
- Activate or cancel Daylight savings time adjustment (☞ P.10-10)
- Set time (☞ P.10-10)
- Set AM/PM (when Time format is set to 12H) (☞ P.10-11)
- Set date (☞ P.10-11)
- Change Time format (☞ P.10-11)
- Change Date format (☞ P.10-11)





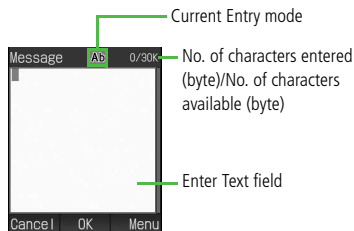

Text Entry


Enter Kanji, Hiragana, Katakana (single-/double-byte), alphanumerics (single-/double-byte), symbols (single-/double-byte), pictograms, emoticons or Hangul.

Text Entry Window



Icon	Entry Mode	Icon	Entry Mode
	Kanji or Hiragana		Symbols (double-byte)
	Katakana (double-byte)		Symbols (single-byte)
	Katakana (single-byte)		Pictograms
	Alphanumeric (double-byte)		Emoticons

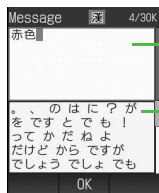

Icon	Entry Mode	Icon	Entry Mode
	Alphanumeric (single-byte)		Hangul
	Number (double-byte)		Alphanumeric (double-byte, lower case)
	Number (single-byte)		Alphanumeric (single-byte, lower case)



Text entry field

Suggestions*

Japanese Kana conversion alternatives

* Suggestions do not appear in Katakana, alphanumeric, and number input modes. If Prediction entry function is canceled, suggestions appear when characters are converted with  (Convert) or  (EngNum/カナ) in Kanji/Katakana input mode.

- When Voice Call arrives while entering text, simply answer the call. When the call ends, text entry window returns. When Alarm is activated, end Alarm to return to text entry window.
- For Date field in Day and Time or Time field in Alarm which can only enter numbers, text entry window does not appear. Enter numbers directly in Entry field.

 

Changing Entry Mode

Text entry modes may be limited by status.

1 In text entry window, 

2 Select entry mode to switch



- In text entry window, press  for Symbols,  to toggle Pictograms and Emoticons.

Text Entry Method

Hiragana/Kanji

Use predictive entry to convert and enter characters. Alternatively, convert entered hiragana directly. Katakana or pictograms may appear in Suggestions.


 
Example: Enter "鈴木"

1 In text entry window, 

2 漢かな

3  (3 times)

• "す" is entered.


4  →  (3 times) →



 

 

 

 
 




• "ず" is entered.

5  (twice)

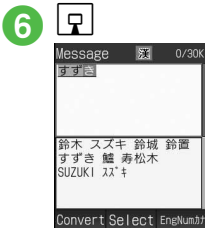• "き" is entered.



 - After entering hiragana, press  to add " or " .
- After entering hiragana, press  for small kana.
- Press  to cancel a misentry.
- If you over-toggle target character, press  to toggle in reverse.
- To enter same character continuously, press  to move the cursor to the right.
- To set as Hiragana, press  (Select).
- If no suggestions appear, press  (Convert) → use  to change the range for conversion as required → use  to move cursor to Suggestions → highlight the target conversion alternatives →  (Select) → repeat the steps for other characters.












- When conversion fails, try another reading. When multiple Kanji characters do not convert together, try to convert them separately.
- While Suggestions appear, press  (Convert) for conversion alternatives. While conversion alternatives appear, press  (Predict) to return to Suggestions.

Katakana, Alphanumerics and Numbers

 1 In text entry window,

2 Select entry mode


 
3 Enter text

- After entering katakana, press  to add " or " .
- After entering katakana, press  to toggle case.
- Press  in alphanumeric entry mode to toggle  or ; enter same size/case characters without further mode change. After entering alphanumerics, press  to toggle case.
- Press  to cancel a misentry.
- If you over-toggle target character, press  to toggle in reverse.
- To enter same character continuously, press  to move the cursor to the right.
- In Kanji/Kana entry mode, enter characters and press  (EngNumカナ) to toggle katakana/alphanumerics/numbers entry mode. Example: Enter "くも" and press  (EngNumカナ). クモ, C, or 2227777 appears in Suggestions.



Symbols

 
1 In text entry window,





- Press  or  (Next page) until the target symbol appears.

2 Highlight target character in Suggestions → (Select)

- To enter symbols continuously, press  (Continue) instead of  (Select).

• Once entered double-byte symbols remain in history and appear in Suggestions at first. Press  to toggle Suggestions: double-byte symbol logs → double-byte symbols → single-byte symbols. In single-byte katakana, single-byte alphanumerics, single-byte numbers or Hangul entry mode, Suggestions appear: double-byte logs → single-byte symbols → double-byte symbols.

 

- In Kanji/Kana entry mode, enter characters and press  (Convert) to convert to symbols. Example: Enter "㇏㇏" and press  (Convert), · or … appear among Suggestions.


 
Pictograms and Emoticons

1 In text entry window,



2 Highlight target character in Suggestions → (Select)

- To enter additional pictograms or emoticons, press  (Continue) instead of  (Select).

- Once entered pictograms remain as history and appear in Suggestions at first. Pressing  switches Suggestions between pictogram logs → pictograms → emoticons.
- In Kanji/Kana entry mode, enter "はーと", "でんわ" and press  (Convert) to switch to pictograms. Similarly, "わーい" or "えーん" can be converted to emoticons.


Line Breaks

Use these steps to enter Line break in any entry mode.

1 In text entry window,



2 Select line break symbol and press (Select)

• Alternatively, press .

• In some entry windows, line break cannot be inserted.

Hangul

 
 
 

 
 

 
 

 
 


 
 



 










1 In text entry window, →

Hangul




2 Enter characters

      • Press number keys to enter assigned character units that appear; combine several consonants and vowels.


Consonant Example (Key assignment)	
ㄱ	 (once)
ㅋ	 (twice)
ㆁ	 (3 times)
Vowel Example (Key assignment)	
아	 (1),  (1),  (·)
어	 (1),  (·),  (1)
오	 (1),  (·),  (—)
야	 (1),  (1),  (2), 
여	 (1),  (2),  (2), 
요	 (1),  (2),  (2), 
왜	 (1),  (2),  (—),  (1),  (2),  (1)

• Hangul appears in received S! Mail, however Hangul cannot be entered into an S! Mail message.

Deleting & Editing Text

 - 1 Use  to move cursor to character to delete, and



- When a space is highlighted, the character before cursor is deleted.
- To delete all characters after the cursor, press  for 1+ seconds. If there is no character after the cursor, all characters are deleted.

Advanced

Advanced Settings (P.2-21)


- Deleting Text Template
- Specify Range to Copy/Cut
- Pasting Copied or Cut Text
- Undoing Text Entry
- Jump to Top/End

Settings

- Change font size for text entry window (P.10-9)
- Reset entry history to default (P.10-11)


User's Dictionary

Save frequently used words/phrases of up to 20 characters; entries appear in Suggestions when Reading is entered.

- 1  → *Settings* → *Phone settings* → *User's dictionary* → *New entry*


- 2 Select Word field → Enter word or sentence


 
- 3 Select Reading field → Enter reading

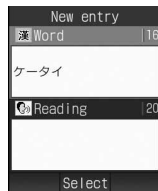




- 4  (Save)


Saving to User's Dictionary

- 1 In text entry window,  → *Add to dictionary*

- 2 Use  to move cursor to the first letter of adding character, and  (Start)


- Press  (UserDic) to open User's Dictionary menu and view added entries.

- 3 Use  to select the range →  (End)

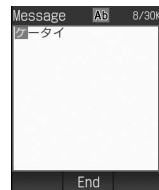

- 4 Select Reading field → Enter text

- 5  (Save)

- If selecting the range which includes a line break, character strings before the line break are saved.
- Press  and select *Edit entry* in Step ② to view currently saved word list.

Advanced

Advanced Settings (P.2-22)

- Setting & Canceling Prediction Entry Function

Settings

- Save entries to User's Dictionary (P.10-11)
- Edit User's Dictionary entries (P.10-11)
- Delete User's Dictionary entries (P.10-11)
- Reset entry history to default (P.10-11)

Phonebook

Phonebook Entry Items

Create up to 1,000 entries. The number of items that can be saved varies by USIM Card. Insert USIM Card into compatible SoftBank handsets to use USIM Card Phonebook entries.

Each Phonebook entry contains items listed below.

Item/Description	Location
Last name	
Double/single-byte (Saved as "Name" in USIM Card Phonebook)	730SC: Yes (up to 50 byte)
	USIM Card: Yes ²
First name	
Double/single-byte (Saved as "Name" in USIM Card Phonebook)	730SC: Yes (up to 50-byte)
	USIM Card: Yes ²
Reading last name	
Single-byte (Saved as "Name" in USIM Card Phonebook)	730SC: Yes (up to 50-byte)
	USIM Card: Yes ²

Item/Description	Location
Reading first name	
Single-byte (Saved as "Name" in USIM Card Phonebook)	730SC: Yes (up to 50-byte)
	USIM Card: Yes ²
Add phone number	
Saved along with area code	730SC: Yes (5 entries/up to 32-byte)
	USIM Card: Yes ^{1 2}
Phone icon	
Select one of seven icons	730SC: Yes
	USIM Card: No (1 icon)
Add E-mail address	
Single-byte alphanumerics	730SC: Yes (5 entries/up to 128-byte)
	USIM Card: Yes ² (1 entry)
E-mail address icon	
Select one of four icons	730SC: Yes
	USIM Card: No (1 icon)

Item/Description	Location
Picture	
Still image appears for incoming calls	730SC: Yes
Select a Data Folder image or capture with Camera	USIM Card: No
Ringtone settings	
Voice Call/Messages Selectable from Data Folder	730SC: Yes
	USIM Card: No
Vibration settings	
Set vibration for all incoming calls/mails	730SC: Yes
	USIM Card: No
Group	
Select from 21 groups	730SC: Yes
	USIM Card: Yes ¹
Secret mode	
On/Off	730SC: Yes
	USIM Card: No

Item/Description	Location
Birthday	
Date of birth	730SC: Yes
	USIM Card: No
Blood type	
Select one of four types	730SC: Yes
	USIM Card: No
Hobby	
Enter up to 100 bytes	730SC: Yes
	USIM Card: No
Company	
Enter up to 64 bytes	730SC: Yes
	USIM Card: No
Job title	
Enter up to 64-byte	730SC: Yes
	USIM Card: No
Add address	
Post code (40 bytes), Country (64 bytes), Province, City, Street and Additional information (128 bytes)	730SC: Yes (2 entries)
	USIM Card: No

Item/Description	Location
Add homepage	
Enter up to 1,024 bytes	730SC: Yes (2 entries)
	USIM Card: No
Homepage icon	
Select one of three icons	730SC: Yes
	USIM Card: No
Memo	
Enter up to 512-byte	730SC: Yes
	USIM Card: No

- 1 Number of savable items varies by USIM Card type.
- 2 Number of savable characters varies by USIM Card type.



- When using Phonebook entries for the first time after replacing USIM Card with Phonebook entries registered, a confirmation appears; choose *Yes* to copy USIM Card entries to 730SC.



Note

- **Protect important information Phonebook entries may be lost/altered if battery is removed or left uncharged for an extended period; accidents/malfunctions may also affect entries. Back-up entries and store separately. SoftBank is not liable for damage from lost information.**

Phonebook Entry Tabs

Phonebook entry information is divided into three tabs. Toggle Tabs to view desired information.

- 1  → Search Phonebook and select entry (ⓍP.2-13) → Use  to switch tabs

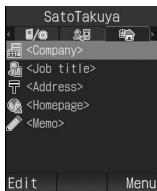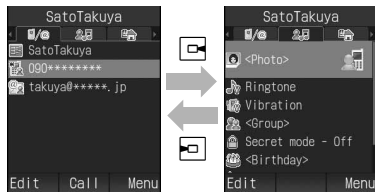

Creating New Entries



Default data location for Phonebook is *Phone*. Set it to USIM Card as required (ⓍP.10-8).




Entry Details

 

Example: Creating a new entry and saving Name, Reading, Phone Number and E-mail Address.

- For other items, see "Adding Information to Phonebook Entry" (ⓍP.2-22).

- 1  →  (New)
- 2 Select Last name field → Enter last name
- 3 Select First name field → Enter first name
- 4 Select Reading last name field → Edit as required




- 5 Select Reading first name field → Edit as required
- 6 Select Phone number field → Enter number → Select an icon
- 7 Select E-mail address field → Enter address → Select an icon
- 8  (Save)

Valid Phone Field Characters

Enter 0 through 9, #, *, -, P (Pause) and + (International Code). Press  to toggle *, - and P. Press  for 1+ seconds to enter +.

Saving from Call Log Records

Save numbers from Call Log records to new or existing Phonebook entries.

- 1  (Received calls) or  (Dialed calls)
- 2 Highlight an entry →  → *Add to Phonebook*
- 3 Select saving method
 - To save as a new entry
New
 - To update existing entry
Update → Search and select an entry (☞P.2-13)
- 4 To enter each item, follow Steps 2 to 3 in "Saving to Phonebook" (☞P.2-12)

Advanced

Advanced Settings (☞P.2-22)

- Entering E-mail Address & URL to Phonebook Quickly
- Creating Message from Phonebook
- Adding Phonebook Entry to Speed Dial
- New Group (USIM Card)
- Adding Member to Group
- Removing Member from Group
- Showing or Hiding Caller ID
- Sending Phonebook as vFile
- Creating and Saving vFiles
- Copying Entries between Phone & USIM
- Copying Items
- Setting Default Phone Number or Mail Address
- Viewing USIM Card Service Number
- Canceling Phonebook Secret Mode Temporarily
- Checking Memory Status
- Enter and Save Phone Number
- Renaming Group

Settings

- Select Phonebook Save Location (☞P.10-8)
- Change Phonebook preference (Phone/USIM) (☞P.10-8)
- Change Search Method (☞P.10-8)
- Backup Phonebook entries (☞P.10-8)
- Change Phonebook font size (☞P.10-8)
- Change font size for Phonebook menu (☞P.10-9)
- Activate or cancel Simple Search (☞P.10-11)

Using Phonebook

 


Searching Phonebook


Example: Using A-ka-sa-ta-na search

- 1 
- 2 Use  to navigate to the target entry




Phonebook List

- To change search method, in Phonebook list, press  → *Settings* → select *Search method*. The changed settings are saved.
 - Alternatively, enter name in abc field (first few letters) to search.
- 3 Use  to view the target entry
 - For details, press  (Details/Select).



- In *Security*, if *Secret mode* is set to *Hide*, secret Phonebook entries do not appear. In Phonebook search window, press  and select *Unlock temporarily* to see secret entries.

Changing Search Method



In Standby, press  to open the specified search window.

1  →  → *Settings* → *Search method*

2 *A-ka-sa-ta-na, Reading or Group*

- For *A-ka-sa-ta-na*, press  in Standby to open a list. When selecting other settings, the selected search window appears.
- Secret Phonebook entries do not appear. In Phonebook search window, press  and select *Unlock temporarily* to see secret entries.

Calling from Phonebook

- 1  → Highlight the target entry in the list →  (Details) → Highlight the target phone number




Entry Details


2 Make a call




■ To make a Voice Call

 (Call) → *Voice call*





■ To make an international call

 (Call) → *International call*
(➔P.3-15 Making International Calls from Japan)

- Alternatively, highlight the target entry in the list and press , select *Call*, then select *Voice call* or *International call*. When entry contains multiple numbers, Default number is dialed if set; otherwise, first number listed is dialed. If Default number is *Not assigned*, Call window appears; select a number.

- **Calling from Simple Search or search result**
If *Simple Search* (➔P.10-11) is *On*, press number key to search entry starting with corresponding Reading. Name and phone number appears. Highlight phone number and press , or  (Select) and then  (Call) for Voice Call.



- **Calling from phone number search or search result**

Enter four digits to search for entry beginning or ending with those digits. Entry name and phone number appear. If *Simple Search* is *On*, press  to toggle Phone Number search and Simple Search. Highlight number and press , or  (Select) and then  (Call) for Voice Call.



Deleting Phonebook Entries

Deleting an Entry

- 1  → Highlight an entry to delete in the list
- 2  → *Delete* → *Selected* → *Yes*




• To delete from details, after Step 1, select  (Details) →  → *Delete* → *Yes*.

Deleting Multiple Entries

- 1 
- 2  → *Delete* → *Multiple*
- 3 Check entries
- 4 Press  (Delete) → *Yes*



Deleting All Entries

Delete all Phonebook entries saved in 730SC or USIM Card at once.


- 1 
- 2  → *Delete* → *All*
- 3 Enter Phone Password →  (OK) → *Yes*

Account Details



View handset phone number in USIM Card. Add your name, mail address, street address and other information.

- 1  → 



• Alternatively, in Standby, press  → *Phonebook* → *Account details*.

Advanced

-  **Advanced Settings**  P.2-26
- Sending Account Details as vFile
- Resetting Account Details
- Creating vFile and Save in Data Folder
- Copying Item in Account Details


Data Folder

Organize handset files by file type here.

Default Folders

Data Folder contains 7 default folders. Files created with 730SC functions or acquired via infrared or Mail are saved to appropriate folder by the file type/format.

Create additional folders within default folders.

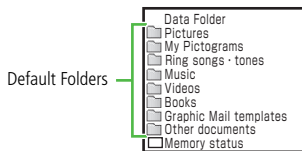



Folder/Description	File Type ¹
Pictures	
Image files captured with 730SC Camera	JPEG, BMP, GIF, WBMP, PNG, Animation GIF
My Pictograms	
Pictograms received via infrared or message	GIF, GPK
Ring songs · tones	
Melody files received via infrared or message, or files recorded with Voice Recorder	SMAF, MIDI, SMF, Mobile XMF, MPEG4 Audio, AMR
Music	
Chaku-Uta Full [®] received via infrared or message	MPEG4 Audio (mp4, m4a, aac, 3gp), smc
Videos	
730SC video files	MPEG4 (mp4, 3gp), H.263
Graphic Mail templates	
Created S! Mail Templates	HMT
Other documents	
Document or graphic files requiring File Viewer for use on 730SC, vFiles ² , etc.	vCard, vCalendar, EML, Unsupported file








¹ Files are saved by type. Files cannot be moved to or saved in folders that do not support them.




² 730SC supports vCard (.vcf) for Phonebook entries and vCalendar (.vcs) for Task/Schedule.

- Save up to 999 files/folders in each default folder.
- In a folder, use *Memory status* to confirm memory. Alternatively, confirm memory in *Settings* (P.2-20).

Viewing Files

- 1  → *Data Folder*
- 2 Select a folder
- 3 Highlight a file →  (View, Play, Select or Start)

- File List Indicators
 - : Nontransferable
 - : Nontransferable and unusable
 - : Copy Protected File (Nontransferable, Content Key Invalid)
 - : Copy Protected File (Transferable, Content Key Invalid)
 - : Protected
 - : Set as Wallpaper (P.2-27)
 - : Set as Ringtone (P.2-27)

- **Activating Camera or Voice Recorder from Data Folder**
 Highlight *Pictures* folder or image, press  and select *Take photo* to activate Camera in Camera mode. Similarly, highlight *Videos* or video in *Videos*, press  and select *Record video* to activate Camera in Video mode. Highlight *Ring songs · tones* or sound file in *Ring songs · tones*, press  and select *Record sound* to activate Voice recorder.

Note

- **JPEG Files over 3 MB or larger than 5000 x 5000 pixels cannot be zoomed or set as Incoming image. For other formats, files over 3 MB or larger than 1600 x 1600 pixels cannot be zoomed.**

Viewing Images with Picture Browser






View images in Normal or Full Screen View.
 Landscape images rotate for Full Screen View.



Normal View



Full Screen View


- 1  → *Data Folder*
- 2 *Pictures*
- 3 Highlight file in the list →  (View)
 - Press  (FULL) to view in Full Screen View.
 - Press  to return to Normal View.
- 4 Use  to move image

- Some images may not be displayable.



Sorting Images

Choose sorting rule from the following:

- By Folder
- By Composition
- By Color
- By Timeline

- 1 View images (⌘ Viewing Images with Picture Browser).
- 2 Use  to select sorting rule

Advanced



 **Advanced Settings**  P.2-26

- Viewing Slide Show
- Confirming File/Folder Details

Managing Files/Folders



Creating Folders

Create sub-folder in Default folders.
Use *Set secret* to hide created folder.

- 1  → *Data Folder*
- 2 Select default folder to create a sub-folder
- 3  → *Manage* → *Create folder*
- 4 Enter name


- New folder cannot be created in a created folder.
- Activate *Secret data folder of Security* to see secret folders.

Renaming File/Folder


- 1  → *Data Folder*
- 2 Select default folder → Highlight file or sub-folder to rename
- 3  → *Manage* → *Rename* or *Rename folder*
- 4 Enter a new name
 - To rename Graphic Mail template, Select *Rename* and enter name.

- Protected files cannot be renamed.

Moving Files/Folders


1  → *Data Folder*

2 Select default folder →
Highlight a file or sub-folder

3  → *Move*

4 Move files/folders

■ To move a file/folder
Selected

■ To move multiple files/folders
Multiple → Check files or sub-
folders to move →  (Move)

■ To move all files/sub-folders in
the same folder
All

5 Select a destination folder →
Move here

- Protected files cannot be moved.
- If target file/folder with the same name exists, text entry window appears; edit file/folder name.


Note

- Files received via infrared may not appear/play properly if moved to another device or when a different USIM Card is inserted in 730SC.

Copying Files/Folders


Copy a file or folder and paste in the same or another folder.

1  → *Data Folder* → Select a folder

2 Highlight file or folder to
copy →  → *Copy or Copy folder*

3 Copy files/folders

■ To copy a file/folder
Selected

■ To copy multiple files/folders
Multiple → Check files/folders to
copy →  (Copy)

■ To move all files/folders in the
same folder
All

4 Select a destination folder →
Paste here

- When pasting files/folders in the same location as the original, numbers such as "_001" are automatically added to pasted file/folder names.
- When target file/folder with the same name exists, edit the name of the file/folder. Text entry window appears to enter new name.

Note

- Nontransferable files cannot be copied.

Deleting Files/Folders


Deleting Files


1  → *Data Folder* → Select a folder

2 Highlight a file in the list →  → *Delete*

3 Delete files


■ To delete a file
Selected → *Yes*


■ To delete multiple files
Multiple → Check files to delete →  (Delete) → *Yes*


■ To move all files in the same folder
All → Enter Phone Password →  (OK) → *Yes*

• When deleting a file that is set to a function or protected, a confirmation appears. Choose *Yes* to cancel the setting and delete the file. When deleting multiple files, choose *No* to delete only files not set to functions and unprotected files.

Deleting Created Sub-folders

1  → *Data Folder*



2 Select default folder → Select created sub-folder →  → *Delete folder*

3 Enter Phone Password →  (OK) → *Yes*

- Enter Phone Password only when the file is saved in sub-folder.

• When deleting folders containing files set to a function or protected, a confirmation appears. Choose *Yes* to cancel setting and delete the file. Choose *No* to delete only files not set to functions and unprotected files; folders are unchanged.

Advanced


 **Advanced Settings**  P.2-26


- Sending Files
- Selecting Folder List
- Sorting Files
- Canceling Secret Setting Temporarily
- Activating Camera Mode
- Activating Video Mode
- Recording Sound
- Setting & Canceling File Lock
- Setting Secret in Sub-folder

Viewing Memory Status

View the following information.

- Available shared memory
- Status of mail boxes
- Status of memory in Data Folder
- Status of Calendar items registered
- Status of Phonebooks (Handset and USIM Card)


1  → *Settings* → *Memory settings* → *Memory status*

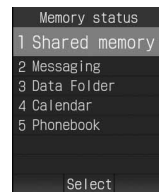

2 View each item

■ To view Shared memory
Shared memory

■ To view Messaging status
Messaging

- Received, Drafts, Sent and Unsent Mail memory appears by Size. Press  (Count) to see Mail memory by Count.
- USIM Card SMS appears by Count only.

■ To view Data Folder status

Data Folder

■ To view Calendar status

Calendar

■ To view Phonebook

Phonebook

Advanced

Advanced Settings (P.2-28)




Settings

- Confirm total or remaining Phone Memory (P.10-16)
- Clear Phone Memory (P.10-16)
- View Memory status (P.10-16)

Advanced Settings

Basic Operations



Setting Main Menu Style

 →  (Style) → Use  to choose a color to set.

 
- This setting changes menu appearance.

Text Entry


Entering date/time

In text entry window, select Kanji/Kana entry mode and enter Hiragana →  (EngNum力力) → Highlight conversion alternative →  (Select)


Toggling Double-byte and Single-byte Symbols

In text entry window, while conversion alternative for double/single byte symbols, 


Adding Text to Templates

 → *Templates* → *Text templates*

■ To add the first entry



 (Add new) → Enter text

■ To add second or later entries


 → *Add new* → Enter text

- Save up to 70 characters per template.


Editing Text Template

 → *Templates* → *Text templates* → Highlight template →  (Edit) → Edit text


Deleting Text Template

 → *Templates* → *Text templates*



■ To delete an entry

Highlight template →  → *Delete* → *Selected* → *Yes*






■ To delete multiple entries


 → *Delete* → *Multiple* → Check templates to delete →  (Delete) → *Yes*

■ To delete all templates



 → *Delete* → *All* → Enter Phone password
→  (OK) → *Yes*

Specify Range to Copy/Cut

In text entry window,  → *Copy* or *Cut* → Use  to move cursor to the first character of the range to cut/copy and press  (Start) → Use  to specify the range →  (End)

- To copy or cut all text in text entry window, press  (All).
- Copied or cut text remains even after powering off.

Pasting Copied or Cut Text


In text entry window, use  to move cursor to the position to paste →  → *Paste*

Undoing Text Entry

In text entry window,  → *Undo*


- In Kanji/Kana entry mode, undo operations immediately after performing such as Cut, Paste or Delete. Undoing conversion is also available.

Jump to Top/End

 
In text entry window,  → *Cursor position* → Select an item

User's Dictionary



Deleting Entries from User's Dictionary

 → *Settings* → *Phone settings* → *User's dictionary* → *Edit entry*

■ To delete an entry

Highlight entry →  → *Delete*

■ To delete all entries

 → *Delete all* → Enter Phone Password →  (OK) → *Yes*

Setting & Canceling Prediction Entry Function




In Dictionary window,  → *Prediction On* or *Prediction Off*

Phonebook

 


Adding Information to Phonebook Entry

 →  (New)

■ To save Group

Use  to switch to  → Select Group field → Select Group →  (Save)




■ To set Secret mode

Use  to switch to  → Select Secret mode field → Select an item →  (Save)

■ To save Birthday

Use  to switch to  → Select Birthday field → Enter Birthday →  (Save)

 ■ To save Blood type

Use  to switch to  → Select Blood type field → Select Blood type →  (Save)



 
■ To save Hobby

Use  to switch to  → Select Hobby field → Enter Hobby →  (Save)

■ To save Company

Use  to switch to  → Select Company field → Enter Company →  (Save)

■ To save Job title

Use  to switch to  → Select Job title field → Enter Job title →  (Save)

To save Address

Use to switch to → Select Address field → Select Zip code field → Enter Zip code → Select Country field → Enter Country name → Select Province field → Enter Province name → Select City field → Enter City name → Select Street field → Enter Street name → Select Additional information field → Enter Additional information → (OK) → Select an icon → (Save)

To save URL

Use to switch to → Select Homepage field → Enter URL → Select an icon → (Save)

To save Memo

Use to switch to → Select Memo field → Enter Memo → (Save)

- Items other than Group are unavailable in USIM Card Phonebook.

Entering E-mail Address & URL to Phonebook Quickly

→ (New)

To enter E-mail address

Select E-mail address field → → *Quick Address List*

To enter URL

Use to switch to → Select homepage field → → *Quick Address List*

Setting Incoming Image to Phonebook Entry

→ (New) → Use to switch to → Select Picture field

To set from saved still image

Pictures → Select a file → (Save)

To set by capturing still image

Take photo → Capture still image → (Save)

To cancel set incoming image

Off → (Save)

Setting Ringtone to Phonebook Entry

→ (New) → Use to switch to → Select Ringtone field

To set Ringtone for Voice Call

Voice call → Select a file location → Highlight a file → (Play) → (Select) → (Done) → (Save)

To set Ringtone for Message

Messages → *Assign tone* → Select a file location → Highlight a file → (Play) → (Select) → (OK) → (Done) → (Save)

To set Ringtone duration for Message

Messages → *Duration* → Enter duration → (OK) → (Done) → (Save)

Setting Vibration to Phonebook Entry

→ (New) → Use to switch to → Select Vibration field → Select *Voice call* or *Messages* → Highlight a vibration pattern → (Play) → (Select) → (Done) → (Save)

Adding International Code and Country Number to Phone Number in Phonebook

→ Search Phonebook and select entry (☞P.2-13) → Highlight phone number → → *Call* → *International call* (☞P.3-15 Making International Calls from Japan)

Creating Message from Phonebook

→ Highlight Phonebook entry to send message → → *Create message* → *S! Mail* or *SMS* → (☞P.4-3 Sending S! Mail , P.4-5 Sending SMS Messages)

Adding Phonebook Entry to Speed Dial

→ Search Phonebook and select entry (☞P.2-13) → → *Add to Speed dial* → Select a field to add the entry

New Group (USIM Card)

→ → *New group* → Select Group name field → Enter group name → (Save)

- Change search method to *Group* (☞P.2-14) and view USIM Phonebook, to create new group (☞P.2-24).

Adding Member to Group

→ Select group to add member → → *Add member* → Check member → (Add)
 • Set search method to *Group* to add (☛P.2-14).

Removing Member from Group

→ Select group to remove member → → *Remove member* → Check member → (Remove)
 • Set search method to *Group* to remove (☛P.2-14).
 • Removed member is not deleted from Phonebook.

Showing or Hiding Caller ID

→ Highlight Phonebook entry to call → → *Hide/Show my ID*
 ■ **To follow Show my number setting**
None →
 ■ **To show phone number**
Show my ID →
 ■ **To hide phone number**
Hide my ID →

Sending Phonebook as vFile

→ Search Phonebook and select entry (☛P.2-13) → → *Send*
 ■ **To send via message**
Via message → (☛P.4-3 Sending S! Mail 2)
 ■ **To send via infrared**
Via infrared (☛P.9-3)

Creating and Saving vFiles

→ Search Phonebook and select entry (☛P.2-13) → → *Save to Data Folder* → *Yes*

Copying Entries between Phone & USIM

→ Highlight entry → → *Copy to USIM* or *Copy to phone*
 ■ **To delete an entry**
Selected → *Yes*
 • To copy entry details, press (Details) → Menu.
 ■ **To copy multiple entries**
Multiple → Check entries → (Copy) → *Yes*
 ■ **To copy all Phone or USIM Card entries**
All → *Yes*

Copying Items

→ Search Phonebook and select entry (☛P.2-13) → Highlight item → → *Copy item*
 • Paste copied item in text entry window.

Setting Default Phone Number or Mail Address

→ Search Phonebook and select entry (☛P.2-13) → → *Set default number* → *Voice call* or *Messages* → Select phone number or mail address → (Save)
 • To leave default phone number or mail address undefined, highlight item and press (Reset).

Viewing USIM Card Service Number

→ → *Service number*
 • *Service number* may not appear depending on USIM Card.

Toggling Phonebook View (USIM/Phone)

→ → *Settings* → *Change view* → Select an item
 • Change remains even if handset is powered off.

Changing Phonebook Search Method

→ → *Settings* → *Search method*
 ■ **To search by reading**
Reading → Enter first part of reading in text field → View target Phonebook entry from search result
 ■ **To search by group**
Group → Select a group → Use to view target Phonebook entry from search result
 • Alternatively, after selecting a group, enter first part of reading in text field.

Canceling Phonebook Secret Mode Temporarily

→ → *Unlock temporarily* → Enter Phone Password → (OK)
 • In *Security*, if *Secret mode* is set to *Hide*, Secret entries appear for current session only.

Checking Memory Status

→ → *Memory status*
 • To delete viewed memory, press (Delete) (☛P.2-28 Deleting Registered/Saved Data).

Editing Phonebook

- Search Phonebook and select entry (P.2-13) → (Edit) → (P.2-12 Creating New Entries 2)
- To edit secret Phonebook entry, set *Secret mode of Security to Show*.

Enter and Save Phone Number

Enter phone number → → *Add to Phonebook*

■ To save new entry

New → Enter each item → (Save)

■ To update entry

Update → Search Phonebook and select entry (P.2-13) → Enter each item → (Save)

- Alternatively, during a call, press and select *Add to Phonebook*.
- Only Name, Reading, Phone number, E-mail address and Group can be saved in USIM Card Phonebook.

Renaming Group

→ *Phonebook* → *Group settings* → → *View from phone group* or *View from USIM group* → Select group to edit → Select Group name field → Enter group name → (Save)

- When *Change view* (P.2-24) is set to *Phone*, *View from USIM group* appears; when *USIM*, *View from phone group* appears.

Changing Group Settings

→ *Phonebook* → *Group settings* → Select group

■ To set Incoming image

Select Group image field → Select a file location → Select a file → (Save)

■ To set Ringtone for Voice Call

Select Ringtone field → *Voice call* → Select a file location → Highlight a file → (Play) → (Select) → (Done) → (Save)

■ To set Ringtone for Message

Select Ringtone field → *Messages* → *Assign tone* → Select a file location → Highlight a file → (Play) → (Select) → (OK) → (Done) → (Save)

■ To set Ringtone duration for Message

Select Ringtone field → *Messages* → *Duration* → Enter duration → (OK) → (Done) → (Save)

■ To set Vibration

Select Vibration settings field → Select *Voice call* or *Messages* → Highlight a vibration pattern → (Play) → (Select) → (Done) → (Save)

- To release set image or vibration and save the entry, highlight Image/Vibration field → (Reset) → (Save)

- To release set Ringtone and save the entry, select Ringtone field → highlight item to reset → (Reset) → (Done) → (Save). To release all Ringtone, highlight Ringtone settings field → (Reset) → (Save).
- Set only for Phone group.
- Images and ringtones set for individual Phonebook entries take priority over Group settings.

Account Details

Editing Account Details

→ → → (Edit) → Enter each item in the same way as Phonebook entry (➔P.2-12 Creating New Entries ➊) → (Save)

Sending Account Details as vFile

→ → → *Send Account details*

■ To send via message

Via message → (➔P.4-3 Sending S! Mail ➋)

■ To send via infrared

Via infrared (➔P.9-3)

Resetting Account Details

→ → → *Reset account details* → Yes

- All Account details other than phone number saved in USIM Card are reset.

Creating vFile and Save in Data Folder

→ → → *Save to Data Folder* → Yes

Copying Item in Account Details

→ → Highlight item → → *Copy item*

- Paste copied item in text entry window.

Sending Message to E-mail Address in Account Details

→ → Highlight E-mail address → (Send) → (➔P.4-3 Sending S! Mail ➌)

Viewing Files

Enlarging and Viewing Image

→ *Data Folder* → *Pictures* → Highlight a file → (View) → (FULL) → (Zoom)

- Use or to enlarge or reduce image, or use to scroll.

Viewing Slide Show

→ *Data Folder* → *Pictures* → Highlight a file → (View) → → *Slide show*

- To pause/resume Slide show, press (Pause/Restart).
- To stop Slide show, press (Stop).

Changing Picture View of Group

→ *Data Folder* → *Pictures* → Highlight a file → (View) → Use to select sorting order → Use or to move images by groups

Guide in Full Screen View

→ *Data Folder* → *Pictures* → Highlight a file → (View) → (FULL) →

- Guide disappears after about 3 seconds.

Confirming File/Folder Details

→ *Data Folder* → Select a file/folder → Highlight a file/folder → → *Details*

File/Folder Management

Sending Files

→ *Data Folder* → Select a folder → Select a file → → *Send*

■ To send via message

Via message → (➔P.4-3 Sending S! Mail ➋)

■ To send via infrared

Via infrared (➔P.9-3)

Selecting Folder List


→ *Data Folder* → Select a folder → Highlight a file → → *View by* → Select an item

Sorting Files

 
→ *Data Folder* → Select a folder → Highlight a file → → *Sort by* → Select an item

- Sort by following order.
 - Descending order of date (*Date*)
 - File type (*Type*)
 - File name (*Name*)
 - Ascending order of file size (*Size*)
 - Title (*Title*)
- Folders appear at the top of list.
- When selecting *Type*, files are sorted in alphabetical order by file extension.
- When selecting *Name*, files are sorted in order of numerics → alphabets → Japanese syllabary.
- Files sorted by *Title* are *Ring songs* · *tones*, *Music*, *Videos* and *Graphic Mail templates*.

Adding Files to Playlist



■ → *Data Folder* → *Ring songs · tones, Music* or *Videos* → Highlight a file →  → *Manage* → *Add to playlist*

Showing & Hiding File/Folder Information


■ → *Data Folder* → Select a folder → Highlight a file →  → *Manage* → Select an item

- In List window for Folder with thumbnail view, set to show folder/file name when highlighted.


Canceling Secret Setting Temporarily

■ → *Data Folder* → Select a folder → Highlight a file →  → *Unlock temporarily* → Enter Phone Password →  (OK)


Activating Camera Mode

■ → *Data Folder* → *Pictures* → In File list window,  → *Take photo*


Activating Video Mode

■ → *Data Folder* → *Videos* → In File list window,  → *Record video*

Recording Sound



■ → *Data Folder* → *Ring songs · tones* → In File list window,  → *Record sound*

Setting & Canceling File Lock

■ → *Data Folder* → Select a folder → Highlight a file →  → *Lock* or *Unlock*


- Set file lock to restrict renaming, moving or deleting.

Setting Secret in Sub-folder


■ → *Data Folder* → Highlight created sub-folder →  → *Set secret* or *Unset secret* → Enter Phone password →  (OK)

- Set *Secret data folder* of *Security* to *Hide* to hide created sub-folders by *Set secret*. To cancel setting, set *Secret data folder* to *Show*.


Setting Images to Wallpaper etc.

■ → *Data Folder* → Select a folder → Highlight a file →  (Set as)


■ To set image to Wallpaper

Wallpaper → Preview the image →  (Set)

■ To set image to Incoming image

Caller ID → Search Phonebook and select entry (☎P.2-13) →  (Set)

Setting Sound File to Ringtone in Normal Mode

■ → *Data Folder* → Select a folder → Highlight a file →  (Set as)

■ To set to Ringtone for each function

Voice ringtone, Message ringtone, Missed call notification ringtone or *Delivery report ringtone*

■ To set to Ringtone for Phonebook

Caller ringtone → Search Phonebook and select entry (☎P.2-13)

Setting Video File to Ringtone in Normal Mode

■ → *Data Folder* → Select a folder → Highlight a file →  (Set as)

■ To set to Ringtone for Voice call


Voice ringtone

■ To set to Ringtone for Phonebook

Caller ringtone → Select Phonebook entry to set (☎P.2-13)

- Only copy protected MPEG4 (mp4, 3gp) AAC, AAC+ or Enhanced AAC+ files can be set.



Registering vFile to Other Functions

■ → *Data Folder* → *Other documents* → Select vFile →  (Resister)

- Register a vCard or vCalendar files saved in Data Folder to Phonebook or Calendar.

Memory Status



Deleting Registered/Saved Data

 → *Settings* → *Memory settings* → *Memory status* → Select function → Highlight item → 
(Delete) → *Yes* → View item list

■ To delete an entry/multiple entries

Check item →  (Delete) → *Yes*

■ To delete all entries

 (Mark all) →  (Delete) → Enter Phone

Password →  (OK) → *Yes*

- Delete Mailbox messages, Data Folder files, Calendar or Phonebook entries.
- If file(s) are locked or set for another function, a confirmation appears. Choose *Yes* to delete all files. Choose *No* to delete all other files only.

Calling






Making a Call	3-2
Receiving a Call	3-3
Answering Machine	3-4
Activating & Canceling	3-4
Playing Recordings	3-4
Deleting Recordings	3-4
Speed Dial	3-5
Saving as Phone Numbers	3-5
Using Speed Dial	3-5
Call Time & Cost	3-5
Checking Call Time & Cost	3-6
Call Log Records	3-6
Viewing Call Log Records	3-6
Calling Call Log Records	3-6
Deleting Call Log Records	3-7
Optional Services	3-7
Voice Mail	3-8
Setting Voice Mail	3-8
Canceling Voice Mail	3-9
Listening to Voice Mail Message	3-9
Missed Call Notification	3-9
Call Forwarding	3-10
Activating Call Forwarding	3-10
Canceling Call Forwarding	3-10
Call Waiting	3-11
Activating & Canceling Call Waiting	3-11
Receiving a Second Call	3-11

Group Call	3-12
Making New Call during a Call	3-12
Switching Party	3-12
Talking with All Parties	3-12
Call Barring	3-12
Restricting Outgoing/Incoming Calls	3-13
Canceling All Barring	3-13
Checking Call Barring Status	3-13
Changing Network Password	3-14
Caller ID	3-14
Showing & Hiding Caller ID	3-14
Advanced Settings	
Call	3-14
Call Log Records	3-16
Group Call	3-17


Making a Call


 
 

 



See "Using Phonebook" (➔ P.2-13) to make a call from Phonebook.

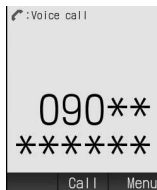- 1 Enter a phone number including area code
- 2 Confirm entered phone number →  or  (Call)



Phone Number Entry Window

- 3 To end the call, 

- To correct an entered digit, use  to move cursor to the digit to be deleted, and press . Press  for 1+ seconds to delete all.
- To enter "P (pause)," press  twice. To enter "+ (International Code)," press  for 1+ seconds.
- When the line is busy, press  to end the call and try again later. If *Auto Redial* (➔ P.10-15) is *On*, number is automatically redialed. Press  (Cancel) or  to cancel redialing.
- If Stereo Earphone Microphone is connected, set *Earphone call activate* to *On*, to call specified phone number by pressing the switch of Stereo Earphone Microphone for 1+ seconds. Press again for 1+ seconds to end the call.

Advanced

Advanced Settings (➔ P.3-14)

- Saving Entered Phone Number to Phonebook
- Creating New Message Addressed to Entered Number
- Switching Phone Number Entry Window to Phonebook Window
- Switching Phone Number Entry Window to Call Log Window
- Making International Calls from Japan
- Calling with Your Phone Number Shown
- Talking in Small Voice
- Setting Mute

- Making New Call during a Call
 - Searching Phonebook during a Call
 - Saving the Other Party's Phone Number to Phonebook
 - Viewing Call Log during a Call
 - Creating New Message Addressed to the Other Party's Phone Number
 - Sending Push Tones
 - Recording Hearing Voice
 - Creating Text Memo during a Call
 - Ending Call by Menu Operation
- ### Settings
- Save International Code (➔ P.10-13)
 - Add/change/delete Country Number (➔ P.10-14)
 - Show or hide your own number when placing calls (➔ P.10-15)
 - Set 730SC to automatically redial busy numbers (➔ P.10-15)
 - Enable or disable calling via Stereo Earphone Microphone (➔ P.10-15)
 - Adjust Earpiece volume (➔ P.10-15)

Receiving a Call

1 Voice Call window appears,



2 To end the call,



- If *Any key answer* is *On*, press any key except , , , , and to accept call.
- To place caller on hold, press . To connect the call, press (Accept).
- To adjust ringer volume, press or .
- If Stereo Earphone Microphone is connected, press Stereo Earphone Microphone switch for 1+ seconds to accept Voice Calls. Press again for 1+ seconds to end the call.

• Missed Call Window

Missed Call window appears for unanswered calls. Press (View) to view Received calls (P.3-6).

• Ringtone

Specify ringtones by Phonebook entry or Category (P.2-23, P.2-25). If not set, active Mode Setting applies (P.1-9).

In *Security*, if *Secret mode* is set to *Hide* when a call from a Secret entry is received, active Mode Setting applies.

• Incoming Call Window

If a caller sends Caller ID, phone number appears. If saved in Phonebook, name also appears. If caller hides Caller ID, *Withheld* appears.

If incoming image has been saved in Phonebook or for the group, image also appears (P.2-23, P.2-25).

In *Security*, if *Secret mode* is set to *Hide* when a call from a Secret entry is received, only number appears.

• When you cannot answer a call

Use Call Forwarding or Voice Mail to handle calls. While handset rings/vibrates, press (Forward) to forward call to Voice Mail or forwarding number (P.3-8, P.3-10). Alternatively, press (Record) to record caller message on 7305C (P.3-4).

Advanced

Advanced Settings (P.3-14)


Settings

- Set Side Keys to activate Reject Call or mute ringer (P.10-11)
- Set Any key answer (P.10-11)
- Accept or reject calls from specified phone numbers (P.10-14)
- Create or edit Black List (P.10-15)
- Accept or reject calls from unknown numbers (P.10-15)
- Accept or reject calls when number is withheld (P.10-15)
- Accept or reject calls from payphones (P.10-15)
- Accept or reject calls when number is unavailable (P.10-15)


 
Answering Machine

Handset records up to three 15-second caller messages.

Activating & Canceling

1  → *Settings* → *Call settings* → *Answering machine* → *Setting*


2 *On or Off*


- When *On*,  appears in Standby.
- Alternatively, in Standby, press  for 1+ seconds to activate/cancel Answering Machine.


 
Note

- **Answering Machine is not available if 730SC is off, out-of-range or in Offline mode. Use Voice Mail (separate subscription required) to handle missed incoming calls.**
- **If 730SC shared memory (P.11-12) is below 600KB, Answering Machine cannot be used.**


Playing Recordings

1  → *Settings* → *Call settings* → *Answering machine* → *Recordings*

2 Highlight a voice file →  (Play)


- When a message is recorded,  appears in Standby.
- Alternatively, in Standby, press  to play recorded message.

Deleting Recordings



1  → *Settings* → *Call settings* → *Answering machine* → *Recordings*

2 Delete recording

■ To delete an entry


 


Highlight content →  (Delete) → *Yes*

■ To delete all entries

 (Delete all) → Enter Phone Password →  (OK) → *Yes*

Advanced

Settings

- Activate or cancel Answering Machine ( P.10-14)
- Set Answering Machine response time ( P.10-14)
- Play Answering Machine records ( P.10-14)
- Set Answering Machine response language ( P.10-14)

Speed Dial



 
Saving as Phone Numbers

Save up to ten frequently used phone numbers.

1  → *Phonebook* → *Speed dial*

2 Select number to save



3 Search Phonebook and select entry (P.2-13) → Select number

- To change saved phone number, highlight entry →  (Change) → *Yes* → Search Phonebook and select entry (P.2-13) → Select number.
- To delete saved phone number, highlight entry →  → Select *Delete* → *Yes*.
- To delete all, press  → Select *Clear all* → *Yes*.
- Secret entry phone numbers cannot be saved as Speed Dial.
- Setting a Speed Dial number to Secret cancels Speed Dial setting automatically.

Using Speed Dial

1 Select from  to 

2  () or 

- After Step 1, press  (S! Mail) to compose a message.
- Enter Entry No. with *Simple search On*, for names and phone numbers. The display disappears in about 5 seconds. When  appears, make a call with Speed Dial.

Call Time & Cost


Call Cost does not appear on 730SC.

Call settings menu includes items below.

Set	Settings
All calls	Confirm approximate total call time/cost or reset it.
Last call	Confirm approximate call time/cost of the previous call.
Data counter	Confirm approximate incoming/outgoing mail data volume or reset it.
Show charge after call	Set whether to show call time/cost after ending a call.
Set currency	Set or change currency.
Set max cost limit	Set the limit for call cost.

- *Show charge after call* may not be available depending on service status. *Set max cost limit* is not available when *Show charge after call* is disabled.




Checking Call Time & Cost

- 1  → *Settings* → *Call settings* → *Call time & cost*
- 2 Select an item

• To reset item, highlight it and press  (Reset).

Advanced




Settings

- Check Call Time ( P.10-14)
- Check last Call Time ( P.10-14)
- Check Data Counter ( P.10-14)







Call Log Records

Select Received Calls or Dialed Calls. Confirm call type, number and call time & cost or dial records directly. Call Log holds up to 500 Received Call and Dialed Call records each.

Viewing Call Log Records



- 1  (Received calls) or  (Dialed calls)
- 2 Highlight record →  (Details)

• Call Log Record Icons

-  : Dialed Voice Call
-  : Received Voice Call
-  : Missed Voice Call
-  : Rejected Voice Call
-  : Voice Mail Notification
-  : Received Call Notification


• In *Security*, if *Secret mode* is set to *Hide*, names do not appear in Call Log for Secret Phonebook entries.

Calling Call Log Records

- 1  (Received calls) or  (Dialed calls)








List Window
(Received calls)

- 2 Highlight record →  (Call) → *Voice call*





Deleting Call Log Records

Deleting a Single Records

- 1  (Received calls) or  (Dialed calls)
- 2 Highlight record →  → *Delete* → *Selected* → *Yes*





- To confirm and delete records one by one, after 1, highlight record →  (Details) → Confirm and press  → *Delete* → *Yes*

Deleting Multiple Records


- 1  (Received calls) or  (Dialed calls)
- 2  → *Delete* → *Multiple*
- 3 Check records
- 4 Press  (Delete) → *Yes*

Deleting All Records

Delete all records in each Call Log at once.

- 1  (Received calls) or  (Dialed calls)
- 2  → *Delete* → *All*
- 3 Enter Phone Password →  (OK) → *Yes*

Advanced

 **Advanced Settings** (☞ P.3-16)

- Saving Call Log Record Numbers to Phonebook
- Saving Call Log Record Numbers to Black List
- Viewing Phonebook Entry Details via Call Log
- Adding International Code and Country Number to Call Log Record Numbers
- Showing Caller ID when Calling Call Log Record

Optional Services

Available optional services are as follows.

For details on option services for prepaid-compatible models, see the SoftBank Prepaid Service (3G) Guide.

Service	Description
Voice Mail	Divert all or all unanswered calls to Voice Mail Center; access caller messages via handset from within the service area or via a touchtone phone anywhere. <ul style="list-style-type: none"> • Set <i>Missed call notification</i> to notify missed calls by SMS when handset is off or out-of-range. (☞ P.3-9)
Call Forwarding	When you know you will be unable to answer calls, automatically divert calls to a specified number.
Call Waiting*	Put the line on hold to answer another line or alternate between lines. Or you can toggle lines among multiple lines simultaneously.

Service	Description
Group Call*	Open another line while one is engaged; toggle lines or talk on up to six parties simultaneously.
Call Barring	Restrict incoming or outgoing calls by condition.
Caller ID	Show or hide your own number when making calls.

* A separate subscription is required to use this service.

Note

- When *Out* appears, services are unavailable. For details on operations from landline phones or services, confirm on SoftBank website (<http://www.softbank.jp>).

Voice Mail


According to the following conditions, handset forwards incoming voice Call to Voice Mail Center.

Forwarding Condition	Description
Always	Handset does not ring/vibrate for incoming calls; calls are diverted automatically. Missed Call does not appear.
No reply	Unanswered calls are diverted after the specified ring time, or when the line is busy or handset is out-of-range.

Note

- Voice Mail and Call Forwarding cannot be active at the same time.
- Activating Voice Mail cancels Call Forwarding.

Setting Voice Mail

- 1  → *Settings* → *Call settings* → *Optional services*
→ *Voice mail/Call forwarding*
→ *Voice mail on*


- 2 **Select an item**

- **To transfer immediately**


Always (0 sec.)

- **To set duration before transfer**

No reply (5 to 30 sec.) → 5 seconds, 10 seconds, 15 seconds, 20 seconds, 25 seconds or 30 seconds

- If *No reply (5 to 30 sec.)* is set, answer an incoming call while handset rings/vibrates, or press  (Forward) to forward immediately.


Canceling Voice Mail


- 1  → **Settings** → **Call settings** → **Optional services** → **Voice mail/Call forwarding** → **Deactivate All** → **Yes**

Note

- **Deactivate All** also cancels Call Forwarding.

Listening to Voice Mail Message

When a caller saves a Voice Mail message, a notification appears in Standby and  appears at the top of Display.

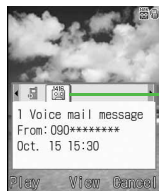




Notification


When Notification Appears

Connect to Voice Mail Center as described below and follow voice guidance.

- 1  (Play)


- To confirm the details of the message, press  (View) while notification appears.
- Press  (Cancel) to clear the notification without playing the message.
- Voice Mail indicator  disappears when messages are accessed via 7305C.

When Notification does not Appear

- 1 Enter "1416" → 

Missed Call Notification

Receive SMS for calls missed while handset is off or outside service area; or when caller saves message at Voice Mail Center while the line is engaged.

- 1 Enter "1414" → 

- To call from landline phone in Japan, dial "090-665-1414".

- 2 Follow guidance

- SMS notification is saved as Received call.
- Missed Call Notification is complimentary.

Advanced

Settings

- Forward all calls to Voice Mail (7305C does not ring) (☎ P.10-13)
- Forward unanswered calls to Voice Mail (specify ring time) (☎ P.10-13)
- Cancel Voice Mail/Call Forwarding (☎ P.10-13)
- Confirm current Voice Mail/Call Forwarding settings (☎ P.10-13)
- Listen to Voice Mail message (☎ P.10-13)
- Set Missed Call Notification (☎ P.10-13)

Call Forwarding


Set forwarding condition and number, beforehand, to divert incoming calls to a specified number.

Note

- Call Forwarding and Voice Mail cannot be used at the same time.
- Activating Call Forwarding cancels Voice Mail previously activated.

Activating Call Forwarding

Specify a forwarding number beforehand.

- 1  → *Settings* → *Call settings* → *Optional services* → *Voice mail/Call forwarding* → *Call forwarding on*
- 2 *Always (0 sec.) or No reply (5 to 30 sec.)*

3 Set forwarding number

■ To set previously forwarded number

Last set number → Select previously forwarded number


■ To set from Phonebook

Phonebook → Search Phonebook and select entry (☎P.2-13)

■ To set by entering phone number


Enter number → Enter phone number

- Specify call duration after Step 3 when *No reply* is selected for the call forwarding service.

• If *No reply (5 to 30 sec.)* is set, answer an incoming call while handset rings/vibrates, or press  (Forward) to forward immediately.

Canceling Call Forwarding

Cancel all Diverts services regardless of the condition.

- 1  → *Settings* → *Call settings* → *Optional services* → *Voice mail/Call forwarding* → *Deactivate All* → *Yes*

Note

- Voice Mail service previously activated is also canceled.

Advanced


Settings

- Activate and set Forwarding (☎P.10-13)
- Cancel Voice Mail/Call Forwarding (☎P.10-13)
- Confirm current Voice Mail/Call Forwarding settings (☎P.10-13)

Call Waiting

A separate subscription is required to use this service. This function is only applicable to Voice Calls.





Activating & Canceling Call Waiting


- 1  → *Settings* → *Call settings* → *Optional services* → *Call waiting*
- 2 *On or Off*

• To check current status, select *Get status* in Step 2.

Receiving a Second Call

If another incoming call arrives during a call, a tone sounds and notification appears. Place current call on hold to answer the second call.

- 1 **When you hear the interrupt sound,  (Accept)**
- 2 **Hold active call**
 - To disconnect the current call to answer the new incoming call, select *End Active call*.
- 3 **To switch party to talk, highlight party →  (Multi talk) → *Switch***
- 4 **End a call**
 - **To end selected call**
Highlight party →  (Multi talk) → *End this call*
 - **To end all calls**
 (Multi talk) → *End all calls*

- If one party ends a call with another on hold, press  (Answer) to talk with party on hold.
- If Call Forwarding or Voice Mail is set and second call is unanswered, it is forwarded to forwarding number or Voice Mail Center. If forwarding condition is set to *Always*, Call Waiting service is unavailable.

Advanced

Settings

- Activate or cancel Call Waiting (📞 P.10-13)
- Confirm current Call Waiting settings (📞 P.10-13)


Group Call

A separate subscription is required to use this service. Talk with a maximum of 6 parties simultaneously.

Making New Call during a Call

When a new call is connected, first party is placed on hold.


1 Enter phone number during a call

- To select from Phonebook,  → *Phonebook* → search Phonebook and select entry (☎P.2-13).

2 (Call) → Call with the party



Switching Party

1 While connected with multiple parties, highlight party → (Group call) → *Switch*



- If connected party ends call during Group Call, a party on hold remains on hold. To talk with party on hold, press  (Answer) and cancel hold.

Talking with All Parties

1 While connected with multiple parties, (Group call) → *Call to all*

- To talk with one party again, highlight party, press  (Group call), and select *Call to this person*
- To end all calls, press  (Group call) and select *End all calls*.
- When one party ends the call during Group Call, continue talking with remaining parties.

Advanced

 **Advanced Settings**  P.3-17

Call Barring

Bar outgoing/incoming Voice Calls or SMS by the conditions listed below.

Item	Description
Outgoing Calls	
Bar all outgoing calls	Disables calling or sending SMS to all but emergency numbers.
Bar all international calls	Disables calling or sending SMS to numbers outside Japan.
Incoming Calls	
Bar all incoming calls	Blocks all incoming calls or SMS.

- Setting Call Barring requires Network Password (the 4-digit number dedicated to Call Barring service specified at the subscription). Network Password can be changed (☎P.3-14).
- A message appears indicating that outgoing Call Barring is active. The message may appear after a while depending on service area.

Note

- If incorrect Network Password is entered 3 consecutive times, Call Barring service is disabled. In this case, change Network Password and Center Access code. For details, contact Customer Service (☎P.11-22).
- If Call Forwarding or Voice Mail is active, *All outgoing calls* and *All incoming calls* cannot be set.

Restricting Outgoing/Incoming Calls

Set Call Barring for outgoing/incoming calls for Voice Calls/SMS transmissions.

- 1 → *Settings* → *Call settings* → *Optional services* → *Call barring*
- 2 Select a restriction type
 - For outgoing calls
Outgoing call → *Bar all outgoing calls* or *Bar all international calls*
 - For incoming calls
Incoming call → *Bar all incoming calls*
- 3 *On or Off* → Enter Network Password → (OK) → *Yes*

Canceling All Barring

Cancel all barring for outgoing or incoming calls.





- 1 → *Settings* → *Call settings* → *Optional services* → *Call barring*
- 2 *Cancel all barring*

- 3 Enter Network Password → (OK) → *Yes*

Checking Call Barring Status

- 1 → *Settings* → *Call settings* → *Optional services* → *Call barring*
- 2 *Get status* → *All outgoing calls*, *All international calls* or *All incoming calls*

Changing Network Password

- 1  → *Settings* → *Call settings* → *Optional services* → *Call barring* → *Set security code*
- 2 Enter current Network Password in Old field →  (OK)
- 3 Enter new Network Password in New field →  (OK)
- 4 Enter new Network Password again in Cnf field →  (OK)

Advanced


Settings

- Set Outgoing Call Barring (☎ P.10-13)
- Activate or cancel Incoming Call Barring (☎ P.10-13)
- Cancel all Call Barring (☎ P.10-13)
- Confirm current Call Barring settings (☎ P.10-13)
- Change Network Password (☎ P.10-13)

Caller ID

Show or hide your own phone number when calling from handset.

Showing & Hiding Caller ID

- 1  → *Settings* → *Call settings* → *Show my number*
- 2 *On/Off* → *On or Off*

- After Step 1, select *Get status* to confirm the current setting.
- Regardless of *Show my number* setting, you can show/hide your phone number every time when you make a call (☎ P.3-15).

Advanced


Settings

- Show or hide your own number when placing calls (☎ P.10-15)


Advanced Settings

Call

Saving Entered Phone Number to Phonebook

Enter a phone number including area code →  → *Add to Phonebook* → (☎ P.2-25 Enter and Save Phone Number)


Creating New Message Addressed to Entered Number

Enter a phone number →  → *Create message* → *S! Mail or SMS* → (☎ P.4-3 Sending S! Mail 5, P.4-5 Sending SMS Messages 5)

Switching Phone Number Entry Window to Phonebook Window

On phone number entry window,  → *Phonebook*

Switching Phone Number Entry Window to Call Log Window

On phone number entry window,  → *Call log*

Making International Calls from Japan

Enter a phone number including area code → → *International call* → Select a country/Select *Enter Code* and enter Country number → Confirm phone number →

- 730SC is designed for domestic use only. For details, contact Customer Service (☎P.11-22).
- Calls to SoftBank handset abroad is available only by the phone number, regardless of the country where the receiver stays.

Calling with Your Phone Number Shown

Enter a phone number including area code → → *Hide/Show my ID*

■ To follow Show my number setting

None →

■ To show phone number

Show my ID →

■ To hide phone number

Hide my ID →

- Alternatively, enter → Enter phone number → , to make a call with your phone number shown.
- Alternatively, enter → Enter phone number → , to make a call with your phone number hidden.

Rejecting and Disconnecting Incoming Call

While handset is ringing, (Reject)

- The rejected call is recorded in Call Log.
- Alternatively, if *Side key* is set to *Reject*, press or for 1+ seconds to reject an incoming call.
- When Call Forwarding or Voice Mail is not used, press (Forward) while handset is ringing, to reject the incoming call. Message indicating "busy" appears on caller's handset before call is disconnected. If caller's handset is incompatible, call is simply disconnected.

Adjusting Earpiece Volume

During a call, or

- Adjust Earpiece or Earphone volume. Setting remains even after powered off.

Putting a Call on Hold

During a call, (Hold)

- When a call is put on hold, the party on hold hears a hold tone and neither party can hear the other's voice. A subscription to Call Waiting or Group Call is required to use this function. If you do not subscribe to either service, this function is disabled.
- Press (Answer) to reconnect the call.

Switching to Speaker Phone

During a call, (☎) → *Yes*

- To cancel Speaker Phone, during a call, press (☎).

Talking in Small Voice

During a call, → *Whisper on* or *Whisper off*

- With *Whisper on*, the volume of sent sounds is raised on the other party's side.

Setting Mute

During a call, → *Mute* → Check or uncheck *Voice* → (OK)

Making New Call during a Call

During a call, → *New call* → Enter phone number → (Call)

- To search Phonebook, after pressing → *New call*, press (Search).
- This function is available when Group Call is in use.

Searching Phonebook during a Call

During a call, → *Phonebook* → (☎P.2-13) Searching Phonebook (🔍)

Saving the Other Party's Phone Number to Phonebook

During a call, → *Add to Phonebook*

■ To save new entry

New → Enter each item → (Save)




■ To update entry

Update → Search Phonebook and select entry (☎P.2-13) → Select phone number → (Save)

Viewing Call Log during a Call


During a call,  → *Call log*

Creating New Message Addressed to the Other Party's Phone Number




During a call,  → *Create message* → *S! Mail* or *SMS* → (P.4-3 Sending S! Mail , P.4-5 Sending SMS Messages )




Sending Push Tones

During a call,  → *Send DTMF* → Enter digits →  (Send)

- To search Phonebook, press *Send DTMF* and then  (Search).

Recording Hearing Voice

During a call,  → *Record* →  (Record) →  (Stop)

- Record voice of up to 2 minutes during a call.
- To pause recording, press  (Pause). Press  (Record) to resume recording; press  (Save) to save recording up to paused point.
- Recorded sound file is saved to *Ring songs · tones* in Data Folder.
- If Call Waiting is subscribed, recording stops and the recorded content is automatically saved by another incoming call, and incoming call window appears.
- Recording stops automatically after the call is ended, and voice file is saved.

Creating Text Memo during a Call




During a call,  → *Memo* → Enter text memo

Ending Call by Menu Operation






During a call,  → *End call*

Call Log Records

Making Voice Calls from Call Log Records

 (Received calls) or  (Dialed calls) → Highlight record →  (Call) → *Voice call*




Sending Message from Call Log Records

 (Received calls) or  (Dialed calls) → Highlight record →  (Call) → *Create message* → *S! Mail* or *SMS* → (P.4-3 Sending S! Mail , P.4-5 Sending SMS Messages )




Saving Call Log Record Numbers to Phonebook

 (Received calls) or  (Dialed calls) → Highlight records →  → *Add to Phonebook* → (P.2-13 Saving from Call Log Records )





Saving Call Log Record Numbers to Black List

 (Received calls) or  (Dialed calls) → Highlight record →  → *Add to black list* → *Yes*



Viewing Phonebook Entry Details via Call Log

 (Received calls) or  (Dialed calls) → Highlight record →  → *View phonebook details*


Adding International Code and Country Number to Call Log Record Numbers

 (Received calls) or  (Dialed calls) → Highlight record →  → *International call* → Select country or *Enter Code* and enter Country number → Confirm phone number → 


Showing Caller ID when Calling Call Log Record

 (Received calls) or  (Dialed calls) → Highlight record →  → *Hide/Show my ID*


■ **To apply *Show my number* setting**

None → 

■ **To show phone number**


Show my ID → 

■ **To hide phone number**


Hide my ID → 

Group Call

Ending Selected Call

Highlight party to disconnect →  (Group call) → *End this call*

Putting All Calls on Hold

 (Group call) → *Hold all calls*

Messaging



Messaging Basics	4-2
Sending S! Mail	4-3
Attaching Files	4-3
Creating Graphic Mail	4-4
Sending SMS Messages	4-5
Received Messages	4-6
Viewing New Messages	4-6
Receiving Messages Manually	4-8
Replying to Received Messages	4-8
Forwarding Received Messages	4-9
Managing & Using Messages	4-9
Viewing from Message List	4-9
Using Message Information	4-11
Deleting Messages or Templates	4-11
Managing Folders	4-12
Creating Folders	4-12
Moving Messages	4-13
Sorting Messages	4-13
Advanced Settings	
Sending S! Mail	4-14
Sending SMS	4-17
Received Messages	4-18
Using & Managing Messages	4-19
Folder Management	4-22

Messaging Basics

Use S! Mail and SMS services on 730SC.

S! Mail

Exchange long text messages with SoftBank and other e-mail compatible handsets, PCs and other mobile devices; attach media files for multimedia messaging.

Use Graphic Mail or Feeling Mail to add color and other graphic elements to S! Mail message text.

- Exchange Feeling Mail with compatible handsets.
- A separate subscription is required to use S! Mail.

Note

- **For details on changing Mail address, see the SoftBank Prepaid Service (3G) Guide.**

SMS

Exchange short text messages with SoftBank handsets; use handset numbers as address.

Entry items and character limits vary as follows.

Item	S! Mail ¹	SMS
Entry Item		
Address	Yes	Yes
Subject	Yes	No
Attachment	Yes	No
Text	Yes	Yes
Character Limits	Up to 15,000 double-byte/ 30,000 single-byte characters (30 KB) ²	Up to 70 single-/ double-byte characters, or up to 160 single-byte alphanumerics ³

- 1 Send up to 300 KB including address, subject and message text, as well as attachments (same limit applies to replies and forwarded S! Mail messages).
- 2 Entry limit varies by attachment size, etc.
- 3 When *Char-code* is set to *GSM 7 bit* (ⓈP.10-5).


- If Retry Function is enabled, undeliverable mail (handset off or out-of-range) are saved at Mail Service Center and delivery reattempted regularly.

Note

- Messages created on 730SC may not appear on other party's handset correctly.
- Received Hangul messages are viewable. Use SMS to create new Hangul messages. Replying to/forwarding received S! Mail automatically deletes Hangul characters.
- Hangul may be deleted from sent SMS or appear as spaces on other party's handset.

Sending S! Mail

Example: Sending S! Mail to a Phonebook entry.

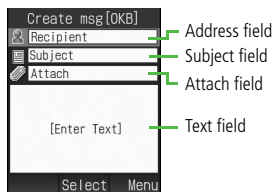

Text Entry Window

- 1 → *Create new*
- 2 Select Recipient field
- 3 *From Phonebook* → Select entry (ⓅP.2-13 Searching Phonebook 2)
- 4 Select number or address
- 5 Select Subject field → Enter subject

- Alternatively, highlight Subject field and enter Subject text.

6 Select Enter Text field → Enter text

- Alternatively, highlight Enter Text field and enter message text.

7 (Send)

- Alternatively, in Standby, press for 1+ seconds to open Create msg window.
- Enter SoftBank handset numbers or mail addresses in Recipient field. Add up to 20 recipients.
- If , or is pressed with address, subject or text entered, or a file attached, an exit confirmation appears. Choose *Yes* to exit. Alternatively, if or is pressed, select *Save* to save to Drafts before exiting.
- Sent mail is saved in *Sent messages* or *Unsent*. If *Auto delete* is *On (Auto delete)* (ⓅP.10-2) and memory full, sent messages are deleted, oldest first (except protected), automatically to make room for new ones. If *Auto delete* is *Off* or *Unsent* full, memory full confirmation appears. Delete items and then send message.

Note

- **Received S! Mail Hangul is viewable, but is deleted from replies or forward messages (Hangul cannot be used to create S! Mail).**

Attaching Files

Send up to 300 KB including address, subject, text and attachment. Attach up to 20 files per S! Mail message.

- During message creation, message size appears next to *Create msg* in Create Message window.

Note

- **Some attachments may be lost depending on recipient handset status. For supported file types, confirm on SoftBank website (<http://www.softbank.jp>).**
- **When attaching a video, select a file recorded in *For S! Mail* (ⓅP.5-9). If file is incompatible, a warning message appears.**

Attaching Files from Data Folder, etc.

Attach media files directly, or Phonebook/Calendar entries or Account details as vCard or vCalendar.


1  → *Create new* → **Select Attach field**

2 **Attach file**


■ Data Folder files

Data Folder → Select folder → Select a file

■ Phonebook entries (vCard)

Phonebook details → Search Phonebook and select an entry (☞P.2-13) →  (Add)







■ Calendar entries (vCalendar)

Calendar item → Use  to select *Schedule* or *Task* → Select an entry

■ Account details (vCard)

Account details →  (Add)

- To add files, select Attach field → *Add file*.
- When files are attached, file type indicators and file names appear in Attached file list.

 : Image  : Sound
 : Video  : vCalendar
 : vCard  : Other


Note

- When attaching Account details, Hobby cannot be attached.

Creating Graphic Mail

Example:

- Changing font size, background color
- Inserting image, pictograms in Data Folder
- Scrolling characters left and right
- For other items, see "Sending S! Mail" of Advanced Settings (☞P.4-14).

1  → *Create new* → **Select Enter Text field**


2  → *Graphic Mail*




Graphic Mail Entry Window

3 *Font size* → *Large, Normal* or *Small* → **Enter text**

- To continue, press  (Add art).


4  (Add art) → *Background color*






 
5 **Select a background color**

6  (Add art) → *Image*

7 *Pictures* → **Select a file**

- To capture image to insert, select *Camera*.

8  (Add art) → *MYPICT* → **Select a pictogram**

9  (Add art) →  (Select Area) →  to move cursor to starting point and  (Start) →  to specify Add art area →  (End) → *Effect*

10 *Scrolling*

11 *Right to left* or *Swing*

12 [Quit] → [Done]

- In Graphic Mail entry window, *Undo* to undo most recent change.
- In Graphic Mail entry window, *Cancel* → *Yes* to cancel Graphic Mail and return message text only.

Advanced

[Settings] [Advanced Settings] (P.4-14)

- Changing Address Type to To, Cc or Bcc
- Deleting Address
- Deleting Attached File
- Sending Feeling Mail
- Resetting Feeling Setting
- Saving S! Mail Being Created to Drafts
- Using Templates to Create S! Mail
- Deleting All Text
- Setting Scroll Unit in S! Mail Creation Window
- Jumping to Top/Bottom of Text
- Viewing 3D Pictograms before Sending
- Setting Message Actions
- Using Graphic Mail Settings
- Changing Font Color or Font Size
- Using Templates
- Moving Cursor to Top or End of Text
- Setting Conversion
- Adding Words to Dictionary (Japanese)
- Selecting Pictogram Setting
- Entering Address Quickly

[Settings]


- Insert or hide Signature (P.10-2)
- Edit Signature (P.10-2)
- Set or cancel Auto Delete for received messages when Received memory is full (P.10-2)
- Set or cancel Auto Delete for sent messages when Sent memory is full (P.10-2)
- Show or hide transmission progress bar (P.10-2)
- Set message sending priority (P.10-4)
- Set sent message Mail Service Center expiry (P.10-4)
- Set time to send a message via Mail Service Center (P.10-4)
- Select reply setting (P.10-4)
- Set "reply to" address (P.10-4)

Sending SMS Messages

Example: Sending SMS to a Phonebook entry.

1 [Envelope] → *Create new SMS*

2 Select Recipient field

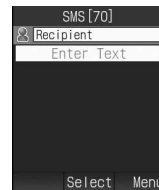

Text Entry Window

3 *From Phonebook* → Search Phonebook and select an entry (P.2-13 Searching Phonebook 2)

4 Select a phone number

5 Select Enter Text field → Enter text

- Alternatively, with Enter Text field highlighted, enter text.

6 [Envelope] (Send)

- Enter SoftBank handset numbers in Recipient field. Add up to 20 Recipients.
- When entered text exceeds entry limit (P.4-2), S! Mail conversion confirmation appears. Choose *Yes* to switch to S! Mail. If SMS contained Hangul text, delete Hangul text confirmation appears. Choose *Yes* to delete Hangul text and switch to S! Mail.
- Sent mail is saved in *Sent messages* or *Unsent*. If *Auto delete is On (Auto delete)* (P.10-2) and memory full, sent messages are deleted, oldest first (except protected), automatically to make room for new ones. If *Auto delete is Off* or *Unsent* full, memory full confirmation appears. Delete items and then send message.

Advanced

Advanced Settings (P.4-17)

- Deleting Recipient
- Saving SMS to Drafts
- Converting SMS to S! Mail
- Deleting All Text
- Viewing 3D Pictograms before Sending
- Using Template to Send SMS

Settings


- Insert or hide Signature (P.10-2)
- Edit Signature (P.10-2)
- Set or cancel Auto Delete for received messages when Received memory is full (P.10-2)
- Set or cancel Auto Delete for sent messages when Sent memory is full (P.10-2)
- Show or hide transmission progress bar (P.10-2)
- Select reply setting (P.10-4)
- Set "reply to" address (P.10-4)
- Set Mail Service Center message expiry time (P.10-5)
- Set Message Center Number (P.10-5)
- Edit Message Center Number (P.10-5)
- Change character code (P.10-5)

Received Messages

Viewing New Messages

When a message is received, notice appears in Standby. Number of messages, sender and reception dates/times appear.

- Complete S! Mail including attachments is automatically received. Note that any applicable charges may apply depending on your subscription. Auto receiving option can be disabled (P.4-8).

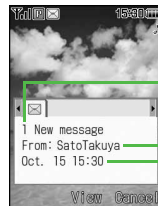


Message Notice Window

Number of messages

Sender


Reception dates/times

1 (View) → Select a folder

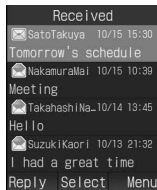

Message List
Window

2 Select a new message

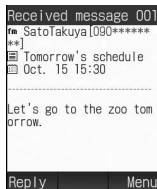


Message Window
(S! Mail)

- If 3D Pictograms confirmation appears, select *Always*, *Only unread* or *Disable*.



• 3D Pictograms

When viewing new/unread messages, message text appears in 3D animation.

If *3D pictograms* (☑P.10-3) is set to other than *Disable*, 3D animation appears. After animation stops or  (Stop) is pressed, Message window appears. Use Menu options in Message window.

• Sender Information in Notification Window

Phone number or mail address appears. If sender is saved in Phonebook, name appears. If incoming image is saved or set for Group, image appears. In *Security*, if *Secret mode* is set to *Hide*, sender name/image does not appear for Secret entries.


- If a file is attached, a file name and thumbnail appear at the bottom of the message.
- If messages are received out of Standby, number of messages, sender numbers or mail addresses (names if saved in Phonebook), etc. scroll across Display top. Afterward  appears (☑P.1-3, P.10-2).
- When a Delivery Report arrives,  flashes and disappears. In Standby, a notification appears.

- Received mail is saved in *Received messages*. If *Auto delete* is *On (Auto delete)* (☑P.10-2) and memory full, received messages are deleted, oldest first (except protected), automatically to make room for new ones. If *Auto delete* is *Off*, memory full confirmation appears. Delete messages and retry.

Receiving Messages Manually

When *Receiving options* (☞P.10-4) is set to *Manual retrieval*, S! Mail is temporarily stored on Mail Server; part of the received message is sent to 7305C as a reception notification. Retrieve complete messages from Mail Server.

- By default, *Auto download* is selected, which automatically retrieves whole message with any attachments.


- 1  → *Received messages*
- 2 **Select a folder** → **Select a notification**
- 3 *Retrieve mail* → **Select a complete message**



Notification
Details

• Message List Indicators


Unread Message Notification

: Priority high

: Priority standard

: Priority low

Read Message Notification

: Priority high

: Priority standard

: Priority low

Replying to Received Messages


Reply to the received messages.

- 1  → *Received messages*
- 2 **Select a folder** → **Select a message to reply to**
- 3  **(Reply)** → *S! Mail, S! Mail (History), SMS or SMS (History)*
 - To remain the received message text, select *S! Mail (History)* or *SMS (History)*.
- 4 **Create a message** (☞P.4-3 **Sending S! Mail** 5)


- *Re:* appears before Reply Subject automatically.

Forwarding Received Messages

Forward the received message to other recipients.

1  → *Received messages* →

Select a folder

2 Highlight a message → 

→ *Forward*

3 Create a message (⊕P.4-3
Sending S! Mail ②)

- *F_W*: appears before forwarded S! Mail Subject automatically.
- To forward received SMS, select S! Mail or SMS.

Advanced

 **Advanced Settings** (ⓘ P.4-18)

- Replying to All
- Forwarding Reception Notification or Server Mail
- Showing 3D Pictograms
- Adding Sender to Phonebook
- Viewing Sender and Recipient
- Copying Message Content
- Deleting Message
- Viewing Message Details
- Setting Attached Picture Appearance
- Setting Font Size
- Setting Character Code

- Setting Scroll Unit
- Moving to Top/Bottom of the Message
- Retrieving Complete Messages
- Stopping Server Mail Retrieval
- Replying to All

Settings

- Change font size (ⓘ P.10-2)
- Change scroll unit (ⓘ P.10-2)
- Request or cancel Delivery Report (ⓘ P.10-2)
- Set received message notice content or hide notice (ⓘ P.10-2)
- Select secret folder message notice setting (ⓘ P.10-3)
- Adjust 3D Pictogram auto play setting (ⓘ P.10-3)
- Select 3D Pictogram color settings (ⓘ P.10-3)
- Select 3D Pictogram display speed (ⓘ P.10-3)
- Set S! Mail receiving options (ⓘ P.10-4)
- Show or hide emotion in received Feeling Mail Notification (ⓘ P.10-4)
- Link External Light to incoming Feeling Mail (ⓘ P.10-4)
- Link Vibration to incoming Feeling Mail (ⓘ P.10-4)
- Set whether to sound 730SC when Feeling Mail arrives (ⓘ P.10-4)
- Linking Ringtone to incoming Feeling Mail (ⓘ P.10-4)
- Set Feeling Mail ringtone duration (ⓘ P.10-5)
- Set attached image appearance (ⓘ P.10-5)
- Set attached image auto playback (ⓘ P.10-5)
- Set attached sound auto playback (ⓘ P.10-5)


Managing & Using Messages

Organize messages by type in five default folders.




 
Folder	Message Type
Received messages	Saved Received Mail
Drafts	Saved Incomplete Mail
Templates	Created Graphic Mail/SMS Templates
Sent messages	Saved Sent Mail
Unsent	Failed/Cancelled/Outgoing Mail

Viewing from Message List

From list of Received messages, Unsent messages or Unsent, view the messages.


1  → *Received messages, Sent messages or Unsent* →
Select a folder as required

2 Select a message

- In *Security*, if *Secret mode* is set to *Hide*, Secret folders do not appear. To show secret folders, press  → *Unlock temporarily* → Enter Phone Password →  (OK).
- In Message window, press  or  for next/previous message.

Message List


These indicators appear in message lists.

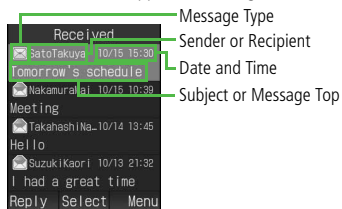


Message List (Received messages)

• Received Message Indicators

 
Unread S! Mail




Read S! Mail

 


Unread Message Notification

 


Read Message Notification

 

Unread SMS

 

Read SMS

 


Receiving



• Draft Message Indicators

 S! Mail




SMS




• Unsent Message Indicators

 S! Mail




SMS

 


• Sent Message Indicators

 
S! Mail



SMS

 

Delivery Report

 


- In *Security*, if Secret mode is set to *Hide*, only number or address appears for messages to/from Secret entries.

Using Message Information

In a Message or Notification, highlight sender, recipient, phone number or mail address to save it to Phonebook, place a call or send mail.


Saving to Phonebook

- 1  → *Received messages* → Select a folder → Select a message → Select phone number, E-mail address or URL → *Add to phonebook*


- Selecting a URL only registers it to Phonebook, but does not connect to the Internet.

- 2 Save a number to Phonebook

■ To save as a new entry


New → Enter each item (ⓅP.2-12) →  (Save)

■ To update existing entry

Update → Search Phonebook and select entry (ⓅP.2-13) → Enter each item (ⓅP.2-12) →  (Save)

Using Page Links

Use sender's address, or a phone number or address embedded in message text.

- 1  → *Received messages* → Select a folder → Select a message

- 2 Use linked information

■ To make a Voice Call

Select a phone number → *Voice call*

■ To edit a number before call

Select a phone number → *Edit before call*

■ To send a message


Select a phone number or an E-mail address → *Create message* → *S! Mail* or *SMS* (ⓅP.4-3 *Sending S! Mail* ⑤, P.4-5 *Sending SMS Messages* ⑤)

- To select a phone number and send a message, select *S! Mail* or *SMS* and create a message.

Deleting Messages or Templates


Deleting Messages

Delete specified messages or all messages in Mailbox.



- 1  → *Received messages, Drafts, Sent messages or Unsent* → Select a folder as required

- 2 Delete message



■ To delete a message

Highlight message →  → *Delete* → *Selected* → *Yes*

■ To delete multiple messages


 → *Delete* → *Multiple* → Check messages →  (Delete) → *Yes*

■ To delete all messages in the selected mailbox

 → *Delete* → *All* → Enter Phone Password →  (OK) → *Yes*

Deleting Templates

Delete specified templates or all saved templates.



1  → *Templates* → *Graphic Mail templates or Text templates*

2 **Delete template**



■ To delete a template

Highlight Graphic Mail template or text template →  → *Delete* → *Selected* → *Yes*

■ To delete multiple templates

 → *Delete* → *Multiple* → Check Graphic Mail templates or text templates →  (Delete) → *Yes*

■ To delete all templates



 
 → *Delete* → *All* → Enter Phone Password →  (OK) → *Yes*

Advanced

Advanced Settings P.4-19

- Editing & Sending Sent/Unsent Messages
- Saving Attached Files to Data Folder
- Saving Received/Sent Graphic Mail as Template
- Adding Address/Number to Phonebook
- Locking/Unlocking Messages
- Switching Message List View
- Sorting Messages
- Changing Messages to Read/Unread
- Moving SMS Messages to 730SC/USIM Card
- Viewing Message or Folder Details
- Saving Graphic Mail as Template
- Sending Saved Graphic Mail Template via S! Mail
- Viewing Saved Graphic Mail Template Details
- Sending Unsent Messages after Editing
- Viewing Unsent Message Details
- Forwarding Server Mail
- Deleting Mail List Messages

Settings

- Change message list view ( P.10-3)
- Change received message view ( P.10-3)
- Change sent message view ( P.10-3)

Managing Folders

Create folders in Received messages and Sent messages, and set a rule to each folder to automatically sort messages. Set Security to personal folders. *Received messages* and *Sent messages* folders cannot be deleted; the settings cannot be changed.


Creating Folders

1  → *Received messages or Sent messages*

2  → *Add new folder*


3 **Edit folder name**

Moving Messages



1  → *Received messages* or *Sent messages*

2 **Move message**


■ **To move a message**

Select a folder → Highlight a message →  → *Move to folder* → *Selected*

■ **To move multiple messages**

Select a folder →  → *Move to folder* → *Multiple* → Check messages →  (Move)

■ **To move all messages**

Select a folder →  → *Move to folder* → *All*

3 **Select a destination folder**

• Received messages are saved to *Received* folder, and sent messages are saved to *Sent* folder. To move back to the original folder after moving messages to another folder, select *Received* or *Sent* folder in Step 3.

Sorting Messages

Sort and save the sent/received messages automatically by phone number, mail address, etc. to the specified folders. Sort messages by S! Mail subject or SMS text. Set up to 20 rules per folder.

1  → *Received messages* or *Sent messages*

2 **Highlight a folder to move to**
→  → *Auto sort*

3 **Set sorting rule**

■ **To select phone number/E-mail address from Phonebook**

Select Rule field → *Sender* or *Recipient* → *From phonebook* → Search Phonebook and select an entry (P.2-13) → Select phone number or E-mail address

■ **To enter phone number/E-mail address directly**

Select Rule field → *Sender* or *Recipient* → *Direct input* → Enter phone number or E-mail address

■ **To select phone number/E-mail address from Group in Phonebook**


Select Rule field → *Sender* or *Recipient* → *From group* → Select a group
• Groups saved on USIM Card cannot be set as a rule.

■ **To select a rule from text**

Select Rule field → *Subject* → Enter text to set as a rule

4  (OK)

Advanced

 **Advanced Settings** (P.4-22)

- Changing Folder Name
- Setting Secret to Folder
- Changing Sorting Rules
- Deleting Folders

 **Settings**

- Change received message view (P.10-3)
- Change sent message view (P.10-3)

Advanced Settings**Sending S! Mail****Entering Address from Other Than Phonebook**

Select Recipient field in S! Mail creation window

■ **To enter address from Call Log records**

Select a record

■ **To enter phone number directly**

Enter Number → Enter phone number

■ **To enter E-mail address directly**

Enter address → Enter mail address

■ **To select phone number from Group in Phonebook**


From group → Select group

- When multiple phone numbers or mail addresses are saved in Phonebook, Selection window for address may appear. Select a phone number or an mail address.


Adding Address

Select Recipient field in S! Mail creation window with address already entered → *Add recipients*


■ **To enter address from Call Log records**

Select a record →  (Done)


■ **To select from Phonebook**

From Phonebook → Search Phonebook and select entry (P.2-13) → Select phone number or E-mail address →  (Done)

■ **To enter phone number directly**


Enter Number → Enter phone number →  (Done)

■ **To enter mail address directly**

Enter address → Enter mail address →  (Done)



■ **To select phone number from Group in Phonebook**

From group → Select group →  (Done)

- When multiple phone numbers or mail addresses are saved in Phonebook, Selection window for address may appear. Select a phone number or an mail address.
- When multiple addresses are saved, the number of addresses appears next to Recipient field  in Create Message window.

Changing Address Type to To, Cc or Bcc



Select Recipient field in S! Mail creation window →

Highlight address →  → *Change to To, Change to Cc or Change to Bcc* →  (Done)



Deleting Address

Select Recipient field in S! Mail creation window

■ **To delete an address**

Highlight address →  → *Remove* → *Selected* →  (Done)

■ **To delete all addresses**

 → *Remove* → *All* → *Yes* →  (Done)

Viewing Attached File



Select Attach field in S! Mail creation window →

Select a file to view

Deleting Attached File

Select Attach field in S! Mail creation window


■ **To delete a file**

Highlight file →  → *Remove* → *Selected* →  (Done)

■ **To delete all files**

 → *Remove* → *All* → *Yes* →  (Done)

Sending Feeling Mail


In S! Mail creation window,  → *Feeling Setting*

→ Select a Feeling → Select pictogram

Resetting Feeling Setting


In S! Mail creation window,  → *Reset feeling*

Saving S! Mail Being Created to Drafts

In S! Mail creation window,  → *Save to Drafts*


- Only messages with recipient, subject, or text entered, or file attached can be saved.

Using Templates to Create S! Mail


In S! Mail creation window,  → *Launch Graphic Mail template* → Select template

- When using a Template, delete text confirmation appears. Choose *Yes* to delete text and open the Template.

 
Deleting All Text

In S! Mail creation window, highlight Enter Text field
→  → *Remove Text* → *Yes*


Setting Scroll Unit in S! Mail Creation Window

In S! Mail creation window, highlight Enter Text field
→  → *Scroll unit* → Select an item


Jumping to Top/Bottom of Text

In S! Mail creation window, highlight Enter Text field
→  → *Scroll jump* → Select an item

Viewing 3D Pictograms before Sending

In S! Mail creation window,  → *3D Pictogram*

Setting Message Actions

In S! Mail creation window,  → *Action settings*

■ To set whether to delete automatically after the other party reads the message

Set auto delete → Select an item

■ To set Reply request

Reply Request → *On/Off* → *On* → Enter Reply request message

- When *On* is set, select *Edit message* from *Reply Request* to edit a message.

■ To restrict message forwarding

Forward NG → *On/Off* → *On* → Enter Forward NG message


- When *On* is set, select *Edit message* from *Forward NG* to edit a message.

■ To restrict message deletion

Delete NG → *On/Off* → *On* → Delete NG message



- When *On* is set, select *Edit message* from *Delete NG* to edit a message.

■ To restrict message access with a question

Quiz → *On/Off* → *Open question* → Select Question field → Enter question → Select Answer field → Enter answer → Select Message (Correct) field → Enter message when answer is correct → Select Message (Incorrect) field → Enter message when answer is incorrect →  (Done)


- To edit question, select *Edit question* from *Quiz*.

■ To restrict message access with a multiple choice question

Quiz → *On/Off* → *Multiple choice question* → Select Question field → Enter question → Highlight Answer field → Use  to select correct number → Select Example1 to 4 field to enter choices → Select Message (Correct) field → Enter message when answer is correct → Select Message (Incorrect) field → Enter message when answer is incorrect →  (Done)


- To edit a question, select *Edit question* from *Quiz*.
- When *Action settings* are set, the recipient's action can be set.

Requesting S! Mail Delivery Report

In S! Mail creation window,  → *Sending options*
→ *Delivery report* → Select an item


- Select *On* to receive a Delivery Report when a message is sent from Mail Server to the other party. This option can be set to the message being created.

Setting Reply Settings


In S! Mail creation window,  → *Sending options*
→ *Reply settings* → Select an item

- Set the address "*Reply to*" address (☞P.10-4).


Setting Message Priority

In S! Mail creation window,  → *Sending options*
→ *Priority* → Select an item


Setting Mail Server Expiry Time

In S! Mail creation window,  → *Sending options*
→ *Expiry time* → Select an item

Setting Delivery Time


In S! Mail creation window,  → *Sending options*
→ *Delivery time* → Select an item

Setting Remote Forward Action

In S! Mail creation window,  → *Sending options*
→ *Remote Fwd Action* → Select an item

- This function is available only when forwarding Server Mail message (☞P.4-21).

Using Graphic Mail Settings

In S! Mail creation window, select Enter Text field →  → *Graphic Mail*

■ To insert BGM from Data Folder

Insert → *Insert BGM* → *Ring songs · tones or Music* → Select a file





 

■ To record BGM to insert

Insert → *Insert BGM* → *Record sound* → (⊕P.7-7 Recording Sound ②)

■ To insert line

Insert → *Insert Line*

Changing Font Color or Font Size

In S! Mail creation window with text entered, Select Enter Text field →  → *Graphic Mail* →  (Select Area) → Use  to move cursor to the first character and  (Start) → Use  to select area →  (End)


■ To change Font color

Font color → Select color


■ To change Font size

Font size → Select size

Using Templates

In S! Mail creation window,  → *Text templates*
→ Select a template

Moving Cursor to Top or End of Text

In S! Mail creation window,  → *Cursor position*
→ Select an item

Setting Conversion

In S! Mail creation window,  → *Conversion*

■ To activate/cancel Prediction

Prediction Off or *Prediction On*

■ To activate/cancel Learning

Learning Off or *Learning On*

■ To reset User's dictionary

Reset learning

■ To clear records of pictograms/symbols

Clear history

Inserting Information into S! Mail

In S! Mail creation window,  → *Advanced*

■ To insert signature

Signature


■ To insert phone number from Phonebook

Phonebook → Search Phonebook and select an entry (⊕P.2-13)


■ To insert Account details

Account details


Adding Words to Dictionary (Japanese)

In S! Mail creation window,  → *Add to dictionary*
→ (⊕P.2-9 Saving to User's Dictionary ②)



Selecting Pictogram Setting

In S! Mail creation window,  → *Pict setting* → Select an item

Entering Address Quickly

In S! Mail creation window,  → *Quick Address List* → Select an item

Using Template to Send S! Mail

 → *Templates* → *Graphic Mail templates* → Select Graphic Mail template →  (Mail) → (⊕P.4-3 Sending S! Mail ②)

Sending SMS

Entering Addresses from Sources

In SMS creation window, select Recipient field

■ To enter address from log

Open log and select a record

■ To enter phone number directly

Enter Number → Enter phone number

■ To select Phonebook Group number in Phonebook


From group → Select group

- When multiple phone numbers or E-mail addresses are saved in Phonebook, Selection window may appear. Select a phone number.
- When E-mail address is set for *Messages* in *Set default number*, the entry cannot be set as recipient.


Adding Recipient

Select Recipient field in SMS creation window with address already entered → *Add recipients*


■ To enter address from log

Select displayed log →  (Done)


■ To select from Phonebook


From Phonebook → Search Phonebook and select entry (☎P.2-13) → Select phone number →  (Done)

■ To enter phone number directly

Enter Number → Enter phone number →  (Done)

■ To select Phonebook Group number



From group → Select group →  (Done)

- When multiple phone numbers or E-mail addresses are saved in Phonebook, Selection window may appear. Select a phone number.
- When E-mail address is set for *Messages* in *Set default number*, the entry cannot be set.
- If multiple addresses are saved, a number appears next to Recipient field  in Create Message window.



Deleting Recipient

In SMS creation window, select Recipient field

■ To delete a recipient

Highlight address →  → *Remove* → *Selected* →  (Done)

■ To delete all addresses

 → *Remove* → *All* → *Yes* →  (Done)

Saving SMS to Drafts


In SMS Mail creation window,  → *Save to Drafts*

- *Save to Drafts* appears in menu only when either recipient or text is entered.

Converting SMS to S! Mail


In SMS creation window,  → *Change to S! Mail*

Requesting SMS Delivery Report


In SMS creation window,  → *Sending options* → *Delivery report* → Select an item

- Select *On* to receive a Delivery Report when a message is sent from Mail Server to the other party. This option can be set to the message being created.


Setting Mail Server Expiry Time

In SMS creation window,  → *Sending options* → *Expiry time* → Select an item



Deleting All Text

In SMS creation window, highlight Enter Text field →  → *Remove Text* → *Yes*

Viewing 3D Pictograms before Sending

In SMS creation window, highlight Enter Text field →  → *3D Pictogram*

Using Template to Send SMS



 → *Templates* → *Text templates* → Highlight template →  → *Send*

Received Messages



Retrieving Messages Manually

 → Retrieve new



Replying to All

 → Received messages → Select folder → Select message →  → Reply to all → Select an item → Create a message (👉P.4-3 Sending S! Mail ②)



Forwarding Reception Notification or Server Mail

 → Received messages → Select folder → Highlight notification →  → Forward → Select an item → Create a message (👉P.4-3 Sending S! Mail ②)

Showing 3D Pictograms

 → Received messages, Sent messages or Unsent → Select folder as required → Select message →  → 3D Pictogram

Adding Sender to Phonebook

 → Received messages → Select folder → Select message →  → Add to phonebook → Select phone number or E-mail address



■ To save as a new entry

New → Enter each item (👉P.2-12 Creating New Entries ②)



■ To update existing entry

Update → Search Phonebook and select entry (👉P.2-13) → Enter each item (👉P.2-12 Creating New Entries ②)

Viewing Sender and Recipient

 → Received messages or Sent messages → Select folder as required → Select message →  → View mail address

Copying Message Content

 → Received messages or Sent messages → Select folder as required → Select message → 

Copy

■ To copy sender or recipient address

Address → Select address to copy



■ To copy subject

Subject (👉P.2-22 Specify Range to Copy/Cut)



■ To copy text

Message txt (👉P.2-22 Specify Range to Copy/Cut)



Deleting Message

 → Received messages, Sent messages or Unsent → Select folder as required → Select message →  → Delete → Yes



Viewing Message Details

 → Received messages, Sent messages or Unsent → Select folder → Select message →  → Details



Setting Attached Picture Appearance

 → Received messages → Select folder → Select message →  → Picture appearance → Select an item



Setting Font Size

 → Received messages, Sent messages or Unsent → Select folder as required → Select message →  → Font size → Select an item


 
Setting Character Code

 → Received messages → Select folder → Select message →  → Char-code → Select an item


Setting Scroll Unit


 → Received messages, Sent messages or Unsent → Select folder as required → Select a message →  → Scroll unit → Select an item

Moving to Top/Bottom of the Message

 → Received messages, Sent messages or Unsent → Select folder as required → Select message →  → Scroll jump → Select an item

Viewing Attachment

 → *Received messages, Sent messages or Unsent* → Select folder as required → Select message → Select file → *Open*

- To save a file to Data Folder before viewing, Select a file in Message window and select *Save*.
- To save attachment to vCard or vCalendar before viewing, select a file in Message window and select *Register to Phonebook* or *Register to Calendar*.
- To save vCard or vCalendar to Phonebook or Calendar after viewing, press  (Register).
- When a file which allows to play/view only once is attached, a confirmation appears.



Retrieving Complete Messages

 → *Received messages* → Select folder → Highlight message →  → *Retrieve*

Stopping Server Mail Retrieval



 → *Received messages* → Select folder → Highlight message →  → *Cancel retrieving*

Replying to All



 → *Received messages* → Select folder → Highlight message →  → *Reply to all* → Select an item → Create a message (👉P.4-3 Sending S! Mail 📧)

Using & Managing Messages

Editing & Sending Sent/Unsent Messages


 → *Sent messages or Unsent* → Select folder as required → Select message →  → *Edit & send* → Create message (👉P.4-3 Sending S! Mail 📧)

Saving Attached Files to Data Folder



 → *Received messages or Sent messages* → Select folder as required → Select message → 

Save items

 
■ To save a file




Highlight a file to save →  (Select)

■ To save multiple files



 → *Save multiple* → Check files to save →  (Save)

■ To save all files

 → *Save All*



- When a message to notify the same file name exists, press  (OK) →  (Select) → Edit file name →  (Save).

Saving Received/Sent Graphic Mail as Template

 → *Received messages or Sent messages* → Select folder as required → Select message →  → *Save as Graphic Mail template* → Enter file name

- Save S! Mail text graphics as a template (👉P.4-4).

Adding Address/Number to Phonebook

 → *Received messages or Sent messages* → Select folder → Highlight message →  → *Add to phonebook* → Select phone number or E-mail address


■ To save as a new entry

New → Enter each item (👉P.2-12 Creating New Entries 📧)

 
■ To update existing entry

Update → Search Phonebook and select entry (👉P.2-13) → Enter each item (👉P.2-12 Creating New Entries 📧)


 

Locking/Unlocking Messages

 → *Received messages, Drafts, Sent messages or Unsent* → Select a folder as required


■ To lock/unlock a message

Highlight a message →  → *Lock or Unlock* → *Selected*



■ To lock/unlock multiple messages

 → *Lock or Unlock* → *Multiple* → Check messages to delete →  (Lock) or  (Unlock)

■ To lock/unlock all messages



 → *Lock or Unlock* → *All*

Switching Message List View

 → *Received messages, Drafts, Sent messages* or *Unsent* → Select folder as required →  → *Message list view* → Select an item

- Message list view setting changed via Menu becomes invalid when Message list window is closed.
- Items in *Message list view* setting vary by folder.


Sorting Messages

 → *Received messages, Drafts, Sent messages* or *Unsent* → Select a folder as required →  → *Sort by* → Select an item


- Sort messages by the following items.
 - By time (*Time* ↓ or *Time* ↑)
 - By sender (*Sender*)
 - By recipient (*Recipients*)
 - By read or unread messages (*Read or Unread*)
 - By message type (*Message type*)
 - By subject (*Subject*)
 - By message size (*Size*)
 - By attachment (*Attach*)
 - By priority (*Priority*)
 - By locked/unlocked message (*Lock*)
- When *Message type* is selected, messages are sorted by the order of S! Mail (including reception notification), SMS saved on USIM Card, and then SMS saved on 730SC.

- When *Sender* or *Subject* is selected, messages are sorted by the order of single-byte symbol, single-byte number, single-byte alphabet, single-byte Katakana, double-byte symbol, double-byte Hiragana, double-byte Katakana, Kanji, double-byte number, and double-byte alphabet. When *Subject* is selected, messages with *no subject* appear first.



Changing Messages to Read/Unread

 → *Received messages* → Select a folder


■ To change a message to Read/Unread

Highlight a message to switch to Read or Unread →  → *Switch to read* or *Switch to unread* → *Selected*



■ To change multiple messages to Read/Unread

Highlight messages to switch to Read or Unread →  → *Switch to read* or *Switch to unread* → *Multiple* → Check messages to switch to Read or Unread →  (Read/Unread)

■ To change all messages to Read/Unread

 → *Switch to read* or *Switch to unread* → *All*



Moving SMS Messages to 730SC/USIM Card

 → *Received messages, Sent messages* or *Unsent* → Select folder as required → Highlight SMS →  → *Move to phone* or *Move to USIM*



- Save up to 10 messages to USIM Card. The number of messages that can be saved varies by the types of USIM Card.
- When moving received SMS messages in a personal folder to USIM Card, a confirmation appears. Choose *Yes* to move to USIM Card.

Viewing Message or Folder Details


■ To view message details

 → *Received messages, Drafts, Sent messages* or *Unsent* → Select a folder as required → Highlight a message →  → *Details*

■ To view folder details



 → *Received messages* or *Sent messages* → Highlight a folder →  → *Details*


Saving Graphic Mail as Template

In S! Mail creation window →  → *Save as Graphic Mail template* → Enter file name

- Save Graphic Mail messages to Templates (P.4-4).

Sending Draft Message





 → *Drafts* → Select a message →  (Send)

- When recipient is not entered,  (Send) does not appear.



Viewing Saved Graphic Mail Templates

 → *Templates* → *Graphic Mail templates* → Select Graphic Mail template

Editing Saved Graphic Mail Template

 → *Templates* → *Graphic Mail templates* → Select saved Graphic Mail template →  (Mail) → Select Enter Text field → Enter text →  (Done) →  → *Save as Graphic Mail template* → Enter file name



Sending Saved Graphic Mail Template via S! Mail

 → *Templates* → *Graphic Mail templates* → Select Graphic Mail template →  → *Send via message* → (P.4-3 Sending S! Mail 2)

Viewing Saved Graphic Mail Template Details



 → *Templates* → *Graphic Mail templates* → Select Graphic Mail template →  → *Details*

Viewing Delivery Report



 → *Sent messages* → Select a folder → Select a message with *Delivery* setting →  (Report)

- Use with SMS/S! Mail addressed to phone number.



Resending Unsent Messages

 → *Unsent* → Highlight a message to resend →  (Resend)


Sending Unsent Messages after Editing



 → *Unsent* → Highlight a message to edit →  → *Edit* → (P.4-3 Sending S! Mail 2)

Viewing Unsent Message Details

 → *Unsent* → Highlight a message to view →  → *Error details*

Retrieving Mail List


 → *Server mail* → *Retrieve mail list* → *Yes*


- To update Mail list after received, press  (Update), or  and select *Retrieve mail list*.

Receiving Mail List Messages

 → *Server mail*

■ To retrieve a selected message

Retrieve mail list → *Yes* → Highlight a message →  (Get)



- Alternatively, highlight a message to retrieve, then press  and select *Get*.

■ To receive all messages


Retrieve all mails

- Alternatively, select *Retrieve mail list* → *Yes* → *Retrieve all*.


Forwarding Server Mail

 → *Server mail* → *Retrieve mail list* → *Yes* → Highlight a message →  → *Remote forward* → Select Recipient field


■ Select recipient from Call Log records

Select a record →  (Send)


■ To select recipient from Phonebook

From Phonebook → Search Phonebook and select entry (P.2-13) → Select phone number or E-mail address →  (Send)


■ To enter phone number directly

Enter Number → Enter phone number →  (Send)

■ To enter E-mail address directly



Enter address → Enter E-mail address →  (Send)

■ To select recipient from Group in Phonebook


From group → Select recipient to enter →  (Send)

- To edit subject or text, select Subject or Enter Text field after entering recipient and edit as required (P.4-3).
- *Fw:* appears before forwarded S! Mail Subject automatically.
- Set whether to delete message from Server after forwarding Server Mail message (P.4-15 Setting Remote Forward Action).


Deleting All Server Mail

 → *Server mail* → *Delete all* → Enter Phone Password →  (OK) → Select an item



Deleting Mail List Messages

 → *Server mail* → *Retrieve mail list* → *Yes*



■ To delete a message

Highlight a message →  → *Delete* → *Selected* → *Yes*


■ To delete multiple messages


 → *Delete* → *Multiple* → Check messages to delete →  (Delete) → *Yes*

■ To delete all messages

 → *Delete* → *All* → Enter Phone password →  (OK) → *Yes*



Viewing Server Mail Status

 → *Server mail* → *Server mail memory*

- To update status, press  (Update).



Viewing Memory Status

 → *Memory Status*





- Received, Drafts, Sent and Unsent Mail memory appears by Size. Press  (Count) to see Mail memory by Count.
- USIM Card SMS appears by Count only.
- To delete contents of current item, press  (Delete) → *Yes* (P.2-28 Deleting Registered/Saved Data).



Folder Management

Changing Folder Name




 → *Received messages* or *Sent messages* → Highlight a folder →  → *Change name* → Enter folder name

Setting Secret to Folder



 → *Received messages* or *Sent messages* → Highlight a folder →  → *Set secret* → Enter Phone Password →  (OK) →  (OK)

- In *Security*, if *Secret mode* is set to *Hide*, Secret folders do not appear. To cancel *Secret mode* temporarily, press  → *Unlock temporarily* → Enter Phone Password →  (OK).


Changing Sorting Rules

 → *Received messages* or *Sent messages* → Highlight a folder →  → *Auto sort* → Highlight Rule field →  → *Replace rule* → (P.4-13 Sorting Messages 3)


Deleting Sorting Rules

 → *Received messages* or *Sent messages* → Highlight a folder containing a rule →  → *Auto sort*




■ To delete a rule

Highlight Rule field →  → *Delete* → *Selected*

■ To delete all rules

 → *Delete* → *All* → *Yes*

Deleting Folders

 → *Received messages* or *Sent messages* → Highlight a folder →  → *Delete* → Enter Phone Password →  (OK) → *Yes*


Camera



Mobile Camera	5-2
Mobile Camera Precautions	5-2
Using Display as Viewfinder	5-3
Camera Mode	5-3
Single Shot	5-4
Capturing Options	5-5
Multi Shot	5-5
Photo Combination	5-5
Capturing Still Images with Frame	5-6
Video Mode	5-6
Recording Video	5-6
Advanced Settings	
Capturing Still Images	5-7
Recording Videos	5-9

Mobile Camera

Capture pictures (still images) or record videos. Capture still images in JPEG or videos in 3GP format.

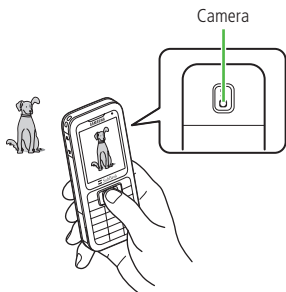


Mobile Camera Precautions

- Use a dry soft cloth to remove debris from camera lens.
- Avoid camera shake; hold 730SC steady or place it on a stable surface and use Self-timer to prevent objectionable image blur.
- Do not expose 730SC to devices with static electricity at use of camera.
- Mobile Camera employs high precision technology, however, some pixels may seem brighter or darker than others.
- Leaving 730SC in a hot place for an extended period before image capture/save may affect image quality.
- Exposing lens to direct sunlight may affect color filter.
- When battery is low, camera may be unavailable.

Using Display as Viewfinder

Initial Viewfinder appears in Portrait.

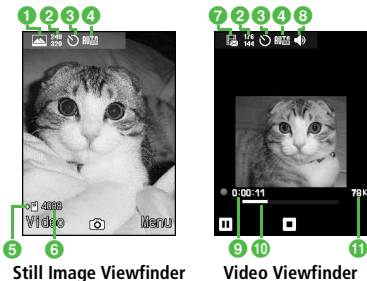

1 Shooting mode

- : Single shot
- : Multi-shot (6 shots)
- : Multi-shot (9 shots)
- : Photo Combination
- : Frame shot
- : Night

2 Shooting Size

Still Image

- : 1.3M (960 x 1280)
- : VGA (480 x 640)
- : Standby (240 x 320)

Video

- : 176 x 144
- : 128 x 96

3 Self-timer

- : Off
- : 3 seconds
- : 5 seconds
- : 10 seconds

4 White balance

- : Auto
- : Daylight
- : Incandescent
- : Fluorescent
- : Cloudy

5 Save to

- : Phone

6 Available remaining shooting number

7 Recording time

- : For S! Mail
- : Normal

8 Record sound

- : Sound On
- : Sound Off

9 Elapsed recording time

10 Progress bar

11 Total data size (For S! Mail)/Total recording time (Normal)

Camera Mode

Select Camera mode that is best-suited for your subject when taking still pictures.

Set Camera mode to *Normal* for taking pictures one by one, *Multi-shot* or *Photo Combination* for continuous shooting, *Frame shot* for a still image with Frame or *Night* for taking portraits in the dark scene at dusk or night.

Captured images are saved to *Pictures*.






 
 
 





Shooting Size

Shooting size can be selected from 1.3M (960 x 1280), VGA (480 x 640) or Standby (240 x 320).

Shooting Mode

Shooting Mode	Description
Single shot	Capture single images, select size for purpose; attach images to S! Mail, save as Wallpaper, etc.
Multi-shot	Press shutter once to capture six or nine sequential images.
Photo Combination	Capture sequential images manually. Select Frame to automatically combine images into a composite image.
Frame shot	Capture a still image with Frame.
Night	Capture a portrait in the dark scene at dusk or night.

Single Shot

 
 




- 
 - Press  (Photo) for Camera mode.
 - Alternatively, press  → *Camera* → *Take photo*.
 - Adjust settings before capturing as required.
- Frame image in Viewfinder**
 - Press / or / to enlarge or reduce image.
 - Use  or  to brighten or darken image.
-  ()
 - To redo, press .
-  (Save)



Still Image Save Confirmation Window

Shortcut Key Operations

Press assigned key to change settings. Available shortcuts vary by mode or setting status.

Key	Item	Description
	Shooting mode	Single shot, Multi-shot (6 shots), Multi-shot (9 shots), Photo Combination, Frame shot and Night
	Self-timer	Off, 3 seconds, 5 seconds and 10 seconds
	Quick view	—
	Mode switch	—
	Zoom	—
	Brightness	—

- Pressing keys while taking a picture does not make operation tone.

Advanced

Advanced Settings (P.5-7)

- Switching Shooting Mode
- Setting Shooting Size
- Setting Self-timer
- Setting White Balance
- Setting Effect (Color Tone)
- Viewing Captured Pictures
- Viewing Capturing Shortcut Key Assignments
- Entering File Name of Captured Still Image
- Setting Captured Still Image as Wallpaper etc.
- Enlarging Captured Still Image
- Deleting Images Displayed by Quick Play
- Setting Still Image Displayed by Quick Play as Wallpaper etc.
- Viewing Quick Play Image Details

Settings

- Show or hide Indicators (P.10-7)
- Activate or cancel Auto Save (P.10-7)
- Show or hide menu item guidance (P.10-7)
- Select Quality (P.10-7)
- Set ISO (P.10-7)
- Set Exposure metering (P.10-7)
- Show or hide Guideline (P.10-7)
- Set Shutter sound (P.10-7)

Capturing Options

Multi Shot







 

 











 









 


- 1 
 - Press  (Photo) for Camera mode.
- 2  → **Highlight**  → **Multi-shot** → **Select image count**
 - Adjust settings before capturing as required.
- 3 **Frame image in Viewfinder**
 - Press / or / to enlarge or reduce image.
 - Use  or  to brighten or darken image.
- 4  ()
 - To redo, press .
- 5 **Check images to save** →  (Save)

Photo Combination

- 1 
 - Press  (Photo) for Camera mode.
- 2  → **Highlight**  → **Photo Combination**
 - Press  (View) to enable  for viewing each frame; press  (List) to return to list view.
- 3 **Select a frame**
 - Adjust settings before capturing as required.
- 4 **Frame image in Viewfinder** → **Apply selected frame and press**  ()
 - Press / or / to enlarge or reduce image.
 - Use  or  to brighten or darken image.
- 5 **Repeat step 4 to capture images** →  ()
 - To redo, press .
- 6  (Save)

Capturing Still Images with Frame

- 1
- Press (Photo) for Camera mode.

- 2 → **Highlight** →

Frame shot

- Press (View) to enable for viewing each frame; press (List) to return to list view.

- 3 **Select a frame**

- Adjust settings before capturing as required.

- 4 **Frame image in Viewfinder**

- Press / or / to enlarge or reduce image.
- Use or to brighten or darken image.

- 5 ()

- To redo, press (CLEAR / F4).

- 6 (Save)

Video Mode

Capture clips easily. Files are saved in 3GP format to *Videos* folder in Data Folder. When recording a video to attach to or insert into an S! Mail, set Recording time to *For S! Mail* (P.5-9).

Recording Video

- 1 → **Camera** → **Record video**

- Adjust settings before capturing as required.

- 2 **Frame a capturing object on Viewfinder**

- Press / or / to enlarge or reduce image.
- Use or to brighten or darken image.

- 3 ()

- Press () to pause recording. Press () to resume recording.

- 4 ()

- Capturing ends. When recordable time has elapsed, recording automatically ends.

- 5 (Save)



Video Save Confirmation Window

- Pressing keys while pausing or resuming recording does not make operation tone.

Shortcut Key Operations

Press assigned key to change settings. Available shortcuts vary by mode or setting status.

Key	Item	Description
	Shooting mode	For S! Mail, Normal
	Self-timer	Off, 3 seconds, 5 seconds and 10 seconds
	Record sound	Sound On, Sound Off
	Switch Photo/Video	—
	Zoom	—
	Brightness	—

- Pressing keys while recording video does not make operation tone.

Advanced

Advanced Settings (☞ P.5-9)

- Setting Recording Time
- Setting Shooting Size
- Setting Self-timer
- Setting White Balance
- Setting Effect (Color Tone)
- Setting Sound Recording
- Viewing Recorded Video
- Viewing Recording Shortcut Key Assignments
- Viewing Recorded Video before Saving
- Entering File Name of Recorded Video

Settings

- Show or hide Indicators (☞ P.10-7)
- Activate or cancel Auto Save (☞ P.10-7)
- Show or hide menu item guidance (☞ P.10-7)
- Select Quality (☞ P.10-7)

Advanced Settings

Capturing Still Images

Switching Shooting Mode

→ → Highlight → Select an item

Setting Shooting Size

→ → Highlight → Select an item

- For details on available items, see "Shooting Size" (☞ P.5-3).

Setting Self-timer

→ → Highlight → Select an item

Setting White Balance

→ → Highlight → Select an item

Setting Effect (Color Tone)

→ → Highlight → Select an item

Viewing Captured Pictures

→ → Highlight → *Data Folder* → Select a file

Viewing Capturing Shortcut Key Assignments

→ → Highlight

Entering File Name of Captured Still Image

→ Frame a capturing object on Viewfinder → Capture an image → → *Rename & Save* → Enter file name

Setting Captured Still Image as Wallpaper etc.

→ Frame a capturing object on Viewfinder → Capture an image → → *Set as*

■ To set image to Wallpaper

Wallpaper → Use (Rotate) to adjust position as required → Use or to adjust size as required → (Set)

■ To set image to Incoming image

Caller ID → Search Phonebook and select entry (ⓂP.2-13) → (Set)

Enlarging Captured Still Image

→ Frame a capturing object on Viewfinder → Capture an image → → *Zoom*

- Press or to enlarge or reduce image.
- Press to change position.

Sending Captured Still Images

→ Frame a capturing object on Viewfinder → Capture an image → (Send)

■ To send via message

Via message → (ⓂP.4-3 Sending S! Mail)

- A captured still image is saved to Data Folder when exceeding 300 KB in size. Resize the image to attach to a message. (ⓂP.4-3 Attaching Files)

■ To send via infrared

Via infrared (ⓂP.9-3)

Viewing Still Images by Quick Play

→ → Use to view images

- Alternatively, press or to view previous and next still images.
- Press (Zoom) to enlarge still image.

Sending Still Images Displayed by Quick Play

→ → Use to view images → (Send)

■ To send via message

Via message → (ⓂP.4-3 Sending S! Mail)

■ To send via infrared

Via infrared (ⓂP.9-3)

Deleting Images Displayed by Quick Play

→ → Use to view images → → *Delete* → *Yes*

Setting Still Image Displayed by Quick Play as Wallpaper etc.

→ → Use to view images → → *Set as*

■ To set image to Wallpaper

Wallpaper → Use (Rotate) to adjust position as required → Use or to adjust size as required → (Set)

■ To set image to Incoming image

Caller ID → Search Phonebook and select entry (ⓂP.2-13) → (Set)

Enlarging Still Images Displayed by Quick Play

→ → Use to view images → (Zoom)

- Press or to enlarge or reduce.
- Press to change position.


Viewing Quick Play Image Details

→ → Use to view images → → *Details*

Recording Videos

Setting Recording Time


 → *Camera* → *Record video* →  →

Highlight  → Select an item

- *Normal*: record video up to one hour.
- *For S! Mail: Economy* is automatically set.


Setting Shooting Size

 → *Camera* → *Record video* →  →

Highlight  → Select an item


Setting Self-timer

 → *Camera* → *Record video* →  →

Highlight  → Select an item


Setting White Balance

 → *Camera* → *Record video* →  →

Highlight  → Select an item


Setting Effect (Color Tone)

 → *Camera* → *Record video* →  →

Highlight  → Select an item

Setting Sound Recording

 → *Camera* → *Record video* →  →

Highlight  → Select an item

Viewing Recorded Video

 → *Camera* → *Record video* →  →

Highlight  → *Data Folder* → Select a file


- Open *Videos*.

Viewing Recording Shortcut Key Assignments

 → *Camera* → *Record video* →  →

Highlight 

Viewing Recorded Video before Saving

 → *Camera* → *Record video* → Record video

→  → *Play*

Entering File Name of Recorded Video

 → *Camera* → *Record video* → Record video

→  → *Rename & Save* → Enter file name

Sending Recorded Video

 → *Camera* → *Record video* → Use Display to

frame subject →  (●) →  (□) → 

(Send)

■ To send via message

Via message → (P.4-3 Sending S! Mail ②)

■ To send via Infrared

Via infrared → (P.9-3)

Media Player




Media Player	6-2
Playable File Formats	6-2
Media Player Music Window	6-2
Media Player Video Window	6-3
Playing Music	6-3
Playing Video	6-5
Using Playlist	6-6
Creating Playlist	6-6
Playing Playlist	6-7
Advanced Settings	
Music Playback	6-7
Video Playback	6-8
Playlist	6-9

Media Player

Play sound/video files in Data Folder.

- Use Stereo Earphone Microphone with Media Player. Insert Connector as shown below. Remove Connector to use Speaker. (If Stereo Earphone Microphone is disconnected in Manner mode, Speaker is muted).

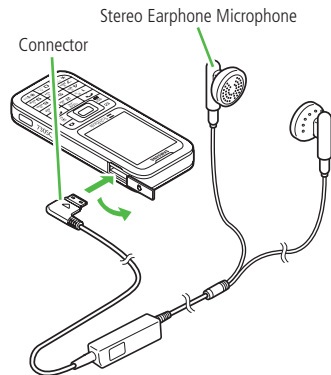

- Use Stereo Earphone Microphone to accept Voice Calls. When handset rings/vibrates, press Stereo Earphone Microphone switch for 1+ seconds to answer the call.

Note

- Music files cannot be downloaded from the Internet or PCs. Instead, transfer music files to 7305C via Infrared or attach to messages.

Playable File Formats


Player	File (Extension)
Music	MPEG4 Audio (mp4, m4a, aac or 3gp (sound only)) SoftBank Music Contents (smc)
Video	MPEG4 or H.263 (mp4, 3gp)

- To play a music file in a format other than above, select it from *Ring songs · tones*. Even compatible files must be saved in *Ring songs · tones* to play.

Note

- Video files exceeding 176 x 144 in resolution cannot be played.

Media Player Music Window

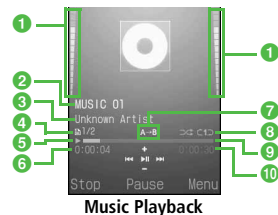

- 1 Volume level
- 2 Title (File name when title is unknown)
- 3 Artist's name
- 4 File no./Total number of files
- 5 Playing status : Play/Pause/Stop
- 6 Elapsed playing time
- 7 Repeat section
⏮ : Repeat all
⏪ : Off
⏩ : One
⏭ : Shuffle
- 8 Repeat mode
- 9 Progress bar
- 10 Total playing time

Media Player Video Window



- 1 Volume level
- 2 Title and artist's name (File name when the video title information is unknown)
- 3 Playing status : Play/Pause/Stop
- 4 Elapsed playing time
- 5 File no./Total number of files
- 6 Progress bar
- 7 Total playing time
- 8 Repeat mode/Repeat section/Playback speed

Playing Music

1 → *Media Player* →

Music

2 **Play a file**

■ **To play most recently played file**

Last played

■ **To select from all files**

All music → Highlight a file → (Play)

■ **To play Playlist**

Playlist → Highlight a Playlist → (Play)

■ **To select from list of recently played files**

Recent music → Highlight a file → (Play)

■ **To select from list of often played files**

Most played music → Highlight a file → (Play)

■ **To select from list of Artists**

Artists → Highlight a file → (Play)

■ **To select from list of Albums**

Albums → Highlight a file → (Play)

■ **To select from list of Genres**

Genres → Highlight a file → (Play)

- To set music file to Ringtone, highlight a paused file or one from list and press (Set as) (P.2-27). Valid only for compatible files.
- To end playback and return to list, press (Stop) and then . In Menu, press to return to previous window or close Menu.
- During playback, press for the next file. Press to restart the file. Press at the beginning for the previous file.
- To play a specified section repeatedly, during playback, press at the start point and at the end point. Press again to cancel.
- If a call arrives while a file is playing, playback pauses and 730SC rings. After call ends, paused Player window returns.
- If Alarm time arrives while a file is playing, playback pauses, Alarm sounds and indicator appears. Press any key to stop Alarm, then another key to clear the indicator.

Music Folder

Folder structure is as follows.

Folder	Description
Last played	Last played file
All music	Up to 9999 <i>Music</i> files
Playlist	View playable file on <i>Music</i> in created folders
Recent music	100 recently played files (Most recent first)
Most played music	100 most frequently played files (Most frequent first)
Artist	All <i>Music</i> files by Artist
Album	All <i>Music</i> files by Artist Album
Genre	All <i>Music</i> files by Artist Genre

- Show/hide in *Music menu* (P.10-6).









 

Note

- **Changing or deleting *All music* files affects files in *Music* or *Ring songs* • tones.**

Shortcut Key Operations

Press the assigned key to perform operations.

Available shortcuts vary by playback status or file type.

Key	Description
	Play/Pause
	Next music
	Previous music
	Volume up
	Volume down
	Stop
	Menu
	Repeat section
	Repeat mode
	Time search

Advanced

Advanced Settings (P.6-7)

- Searching Files by Text
- Adding Files to Playlist
- Sending Files
- Sorting Files
- Deleting Files
- Renaming File
- Protecting File
- Viewing File Details
- Changing Order of Files in Playlist.
- Renaming Playlist
- Deleting Playlist
- Playing from Specified Point
- Viewing Music Player Shortcut Key Assignments
- Viewing Lyric

Settings

- Set Repeat mode (P.10-6)
- Adjust Tone volume level (P.10-6)
- Set Music sub folders (P.10-6)

Playing Video

1  → *Media Player* →

Movie

2 Play a file

■ To play most recently played file

Last played

■ To select from all files

All videos → Highlight a file →

 (Play)

■ To play Playlist

Playlist → Highlight a Playlist →

 (Play)

■ To select from list of recently played files


Recent video → Highlight a file →

 (Play)

■ To select from list often played files

Most played video → Highlight a

file →  (Play)

- To set video file to Ringtone, highlight a paused file or one from list and press  (Set as) (P.2-27). Valid only for compatible files.

Movie Folder

Folder structure is as follows.

Folder	Description
Last played	Play most recently played file
All videos	View all playable file on <i>Movie</i> up to 9,999
Playlist	View playable file on <i>Movie</i> in created folders
Recent video	View up to 100 recently played file (Most recently played file appears first)
Most played video	View up to 100 frequently played file (Most frequently played file appears first)

- Set folder show/hide in *Video menu* (P.10-6).

Note
















- If deleting or changing setting of files in *All videos* folder, files in *Movie* are also deleted or changed.

Shortcut Key Operations







 




Press the assigned key to perform operations.

Available shortcuts vary by playback status or file type.

In Normal Screen View

Key	Description
	Play/Pause
	Next video
	Previous video
	Volume up
	Volume down
	Stop
	Menu
	Repeat section
	Repeat mode
	Full screen view
	Time search
	Resolution
	Capture frame
	Play faster
	Play slower

In Full Screen View






Key	Description
	Play/Pause
	Volume up
	Volume down
	Previous video
	Next video
	Repeat section
	Repeat mode
	Normal screen view
	Capture frame
	Play faster
	Play slower

Advanced

Advanced Settings P.6-8

- Searching Files by Text
- Adding Files to Playlist
- Sending Files
- Sorting Files
- Deleting Files
- Renaming File
- Protecting File to Restrict Editing File Name and Deleting File
- Viewing File Details
- Changing Order of Files in Playlist
- Renaming Playlist
- Deleting Playlist
- Playing Video in Full Screen View
- Changing Resolution
- Playing from Specified Point
- Capturing Still Image from Video and Saving to Pictures
- Changing Playback Speed
- Viewing Video Player Shortcut Key Assignments


Settings

- Set Repeat mode ( P.10-6)
- Adjust Tone volume level ( P.10-6)
- Set Backlight ( P.10-6)
- Set Video sub folders ( P.10-6)
- Show or hide Video thumbnails ( P.10-6)



Using Playlist

Creating Playlist

Create up to 20 Playlists, containing up to 100 files each.

- 1  → *Media Player* → *Music or Movie* → *Playlist* →  → *Create playlist*
- 2 **Enter Playlist name**
- 3 **Select the created Playlist**
- 4  → *Add* → *Files*
- 5 **Check files to save** →  (Save)

Playing Playlist

- 1  → *Media Player* → *Music or Movie* → *Playlist*
- 2 **Highlight a Playlist** →  (Play)

Advanced




Advanced Settings P.6-9

- Creating Playlist Including All Tracks in Existing Playlist




Advanced Settings

Music Playback



Searching Files by Text

-  → *Media Player* → *Music* → *All music* →  → *Search files* → Check *Title* or *Artist* → Select Search field → Enter title or artist name →  (Search)



Adding Files to Playlist

-  → *Media Player* → *Music* → *All music*
- **To add a file**
Highlight file →  → *Add to playlist* → *Selected* → Select Playlist
- **To add multiple files**
 → *Add to playlist* → *Multiple* → Check files to add →  (Save) → Select Playlist






Sending Files

-  → *Media Player* → *Music* → Select a folder → Highlight a file →  → *Send*
- **To send via message**
Via message → (📧P.4-3 *Sending S! Mail* ②)
- **To send via infrared**
Via infrared (📡P.9-3)



Sorting Files

-  → *Media Player* → *Music* → *All music* →  → *Sort by* → *Title, Date* or *Artist*



Deleting Files

-  → *Media Player* → *Music* → Select a folder
- **To delete a file**
Highlight a file →  → *Delete* → *Selected* → *Yes*
- **To delete multiple files**
 → *Delete* → *Multiple* → Check files to delete →  (Delete) → *Yes*
- **To delete all files**
 → *Delete* → *All* → *Yes*
- To delete all files in *All music* folder, enter Phone Password.




Renaming File

-  → *Media Player* → *Music* → *All music* → Highlight a file →  → *Rename* → Enter file name





Protecting File

-  → *Media Player* → *Music* → *All music* → Highlight a file →  → *Lock* or *Unlock*

Viewing File Details

-  → *Media Player* → *Music* → Select a folder → Highlight a file →  → *Details*
- Alternatively, during playback, press  → *Details*.

Changing Order of Files in Playlist.

-  → *Media Player* → *Music* → *Playlist* → Select Playlist → Highlight a file →  → *Move track in playlist* → Use  to highlight destination →  (OK)

Renaming Playlist

→ *Media Player* → *Music* → *Playlist* → Highlight a Playlist → → *Rename* → Enter Playlist name

Deleting Playlist

→ *Media Player* → *Music* → *Playlist*

■ To delete a list

Highlight Playlist → → *Delete* → *Selected* → *Yes*

■ To delete all lists

→ *Delete* → *All* → Enter Phone Password → (OK) → *Yes*

Playing from Specified Point

→ *Media Player* → *Music* → Select a folder → Highlight a file → (Play) → → *Time search* → Enter time → (Play)

Viewing Music Player Shortcut Key Assignments

→ *Media Player* → *Music* → Select a folder → Highlight a file → (Play) → → *Shortcut*

Viewing Lyric

→ *Media Player* → *Music* → Select a folder → Highlight a file → (Play) → → *View lyric*

Video Playback

Searching Files by Text

→ *Media Player* → *Movie* → *All videos* → → *Search files* → Check *Title* or *Artist* → Select Search field → Enter title or artist name → (Search)

Adding Files to Playlist

→ *Media Player* → *Movie* → *All videos*

■ To add a file

Highlight a file → → *Add to playlist* → *Selected* → Select Playlist

■ To add multiple files

→ *Add to playlist* → *Multiple* → Check files to add → (Save) → Select Playlist

Sending Files

→ *Media Player* → *Movie* → Select a folder → Highlight a file → → *Send*

■ To send via message

Via message → (P.4-3 Sending S! Mail)

■ To send via infrared

Via infrared (P.9-3)

Sorting Files

→ *Media Player* → *Movie* → *All videos* → → *Sort by* → *Title, Date* or *Author*

Deleting Files

→ *Media Player* → *Movie* → Select a folder

■ To delete a file

Highlight a file → → *Delete* → *Selected* → *Yes*

■ To delete multiple files

→ *Delete* → *Multiple* → Check files to delete → (Delete) → *Yes*

■ To delete all files

→ *Delete* → *All* → *Yes*

- To delete all files in *All videos* folder, enter Phone Password.

Renaming File

→ *Media Player* → *Movie* → *All videos* → Highlight a file → → *Rename* → Enter file name

Protecting File to Restrict Editing File Name and Deleting File



 

→ *Media Player* → *Movie* → *All videos* → Highlight a file → → *Lock* or *Unlock*

Viewing File Details



→ *Media Player* → *Movie* → Select a folder → Highlight a file → → *Details*

- Alternatively, during playback, press → *Details*.


Changing Order of Files in Playlist

 → *Media Player* → *Movie* → *Playlist* →
 Select Playlist → Highlight a file →  → *Move*
track in playlist → Use  to highlight destination
 →  (OK)


Renaming Playlist

 → *Media Player* → *Movie* → *Playlist* →
 Highlight Playlist →  → *Rename* → Enter Playlist
 name



Deleting Playlist

 → *Media Player* → *Movie* → *Playlist*




■ To delete a list

Highlight Playlist →  → *Delete* → *Selected*
 → *Yes*




■ To delete all lists

 → *Delete* → *All* → Enter Phone Password
 →  (OK) → *Yes*





Playing Video in Full Screen View

 → *Media Player* → *Movie* → Select a folder
 → Highlight a file →  (Play) →  → *Full*
screen view





Changing Resolution

 → *Media Player* → *Movie* → *All videos* →
 Highlight a file →  (Play) →  → *Resolution*
 → Select an item




Playing from Specified Point

 → *Media Player* → *Movie* → Select a folder
 → Highlight a file →  (Play) →  → *Time*
search → Enter time →  (Play)




Capturing Still Image from Video and Saving to Pictures

 → *Media Player* → *Movie* → Select a folder
 → Highlight a file →  (Play) →  → *Capture*
frame →  (Save)

Changing Playback Speed

 → *Media Player* → *Movie* → Select a folder
 → Highlight a file →  (Play) →  →
Playback speed → Select an item
 • Sound is muted while changing speed.



Viewing Video Player Shortcut Key Assignments

 → *Media Player* → *Movie* → Select a folder
 → Highlight a file →  (Play) →  → *Shortcut*



Playlist

Creating Playlist Including All Tracks in Existing Playlist

■ To create music Playlist

 → *Media Player* → *Music* → *Playlist* →
 Select Playlist →  → *Add* → *Playlist* →
 Select Playlist

■ To create video Playlist

 → *Media Player* → *Movie* → *Playlist* →
 Select Playlist →  → *Add* → *Playlist* →
 Select Playlist

Handy Extras



Saving Calendar Entries	7-2
Opening Calendar	7-2
Saving Schedule	7-2
Viewing Schedule	7-3
Alarms	7-3
Setting Alarms	7-3
Calculator	7-4
Currency or Unit Converter	7-4
Converting Currencies	7-4
Converting Units	7-5
World Clock	7-5
Viewing World Clock	7-5
Selecting Areas	7-5
Notepad	7-5
Adding Notepad	7-5
Viewing Notepad	7-5
Tasks	7-6
Saving Tasks	7-6
Viewing Tasks	7-6
Voice Recorder	7-6
Voice Recorder Window	7-6
Recording Sound	7-7
Playing Sound	7-7
Stopwatch	7-7

Advanced Settings

Calendar	7-8
Alarm	7-10
Currency/Unit Conversion	7-11
World Clock	7-11
Notepad	7-11
Tasks	7-12
Voice Recorder	7-13

Saving Calendar Entries

Opening Calendar




Viewing Calendar

Select from three view modes. Select a date in Monthly view or Weekly view to open Daily view.



Monthly View

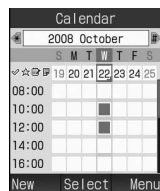

Weekly View

: Display position


Light blue: Today*

Blue: Saturday

Red: Holiday/Sunday

* Only weekdays appear in light blue. Saturday or Sunday/Holidays appear in blue or red.

▾ (Blue): Schedule registered

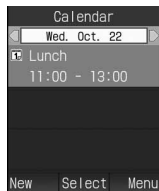

Daily View

- : Schedule (No category)
- : Schedule (Appointment)
- : Schedule (Meeting)
- : Schedule (Business)
- : Schedule (Holiday)
- : Schedule (Anniversary)
- : Schedule (Birthday)
- : Schedule (Phone call)
- : Schedule (Date)
- : Schedule (Travel)
- : Schedule (Miscellaneous)
- : Holiday
- : Alarm set
- : Repetition set

• To change Monthly view window for previous/next month, press or , or highlight Year/Month field and press .

• To change Weekly view window for previous/next week, press or , or highlight Year/Month field and press .

Saving Schedule

 

Save up to 200 events including Tasks.
Example: Saving Title, Start date & time.


- For other items, see "Saving to Schedule" (P.7-8).



- In Calendar, place cursor on target date before Step 2, to enter the date in Start date or End date field.

Viewing Schedule

- 1 
- 2 Move cursor to the day to view →  (Select)
- 3 Select a schedule

- To check the status of Calendar items registered, press  in Calendar or Schedule list, and select *Memory status* to view the registered number of Schedule and Task.

Advanced

Advanced Settings P.7-8

- Switching View Mode
- Opening a Specific Date
- Viewing Schedule by Category
- Sending Schedule
- Deleting Schedule
- Viewing Secret Schedule
- Checking Missed Alarm Event
- Viewing Calendar Memory Status
- Sending Schedule as vFile
- Saving Schedule as vFile



Alarms



Save up to five Alarms. Use Alarm activation to activate or cancel alarm settings. Set alarms to repeat on specific days of the week or everyday.

Setting Alarms

Example: Setting Alarm time

- For other items, see "Saving Alarm" (☞P.7-10).

- 1  → *Tools* → *Alarms*
- 2 Select from *Alarm1* to *Alarm5*
- 3 Enter Alarm time
- 4  (Save)

- At Alarm Time, tone sounds and indicator appears. Handset vibrates if Vibration is not *Off*. Press any key to stop Alarm. Press again to clear indicator.
- During a call or while dialing (*Connecting...* or *Dialling...* appears) at Alarm time, a tone sounds and an indicator appears. When *Alerts on call* on *System sounds* is unchecked, only indicator appears during a call or connection. Press any key twice to clear indicator. When Snooze is set to other than *Off*, press  (End).
- When Alarm is set,  appears in Standby.
- If multiple alarms are set for the same time, first one set sounds first. If Schedule or Tasks alarm is set for the same time as Alarm (*Tools*), Alarm sounds first.
- When Manner mode is active, setting in *For manner mode* (☞P.7-10) applies.
- If Camera or Voice Recorder is active at Alarm Time, Alarm sounds upon operation termination.

Advanced

Advanced Settings P.7-10

- Setting Volume or Vibration in Manner Mode

Calculator

Perform arithmetic operations up to 13 digits.

1 → *Tools* → *Calculator*

2 Use keypad, and to enter equations

- To enter +, -, × or ÷, press , , or or .
- To view the result, press .
- To toggle symbols to enter decimal numbers, (or), press (.).).
- To move cursor to left/right, press or .
- To erase a symbol in a mathematical expression, place cursor after a symbol to erase and press .
- To erase mathematical expression and the result at once, press (C) or hold for 1+ seconds.

Currency or Unit Converter

Convert various currencies or units of measure.


Converting Currencies

1 → *Tools* → *Converter* → *Currency*

2 Select Original currency field → Select currency



3 Highlight Original currency value field → Enter value

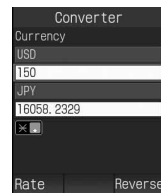



- To enter a decimal point, press .


 

4 Select Target currency field → Select currency

5 View result in Converted currency value field

- To toggle the original currency and target currency, press (Reverse).

Converting Units

- 1  → *Tools* → *Converter* → *Length, Weight, Volume, Area or Temperature*
- 2 Select Original unit field → Select currency
- 3 Highlight Original unit value field → Enter value
 - To enter a decimal point, press .
- 4 Select Target unit field → Select unit
- 5 View result in Converted value field

- To toggle original and target unit, press  (Reverse).
- To enter/delete "-" when converting temperature, press .
- To erase value, press  (Clear).

Advanced

 **Advanced Settings**  P.7-11

World Clock




See current time in world's major cities.

Viewing World Clock



- 1  → *Tools* → *World clock*

Selecting Areas

Save a second time zone to see the time in World clock.

- 1  → *Tools* → *World clock*
- 2 Highlight Area 1 or Area 2 field → Use  to select city
- 3  (Save)


Advanced

 **Advanced Settings**  P.7-11



Notepad

Add up to 20 memos. Memos can be added even during calls (☎P.3-16).



Adding Notepad

- 1  → *Tools* → *Notepad*
- 2 <Add new> → Enter text

Viewing Notepad

- 1  → *Tools* → *Notepad* → Highlight the target →  (View)

Advanced

 **Advanced Settings**  P.7-11

- Deleting Notepad
- Sending Notepad
- Viewing Notepad Memory Status




Tasks

Save up to 200 Tasks and Schedule and manage by list.

Saving Tasks


Example: Saving Title, Due date & time

• For other items, see "Saving Task" (P.7-12).

- 1  → **Tools** → **Tasks**
- 2  → **Add new**
- 3 **Enter a title**
- 4 **Highlight Due date & time field** → Enter date and time
- 5  **(Save)**


Viewing Tasks

- 1  → **Tools** → **Tasks**

• In Tasks, press  to toggle *All tasks*, *Completed tasks*, *Uncompleted tasks* and *Expired tasks*.


Marking a Task as Completed

- 1  → **Tools** → **Tasks**

- 2 **Highlight a Task (Status)** →  → **Completed**

• To unmark a Task, select *Uncompleted*.

Advanced

 **Advanced Settings** (P.7-12)


- Saving Task
- Sending Tasks as vFile
- Sorting Tasks
- Opening Task for a Specific Date
- Deleting Tasks
- Saving Tasks as vFile
- Viewing Secret Schedule
- Viewing Missed Alarm Event
- Viewing Task Item Status

Voice Recorder

Record up to 60 minutes; activate from Tools, or via Menu in Data Folder, Create Message window or during a call.

Voice Recorder Window


Use Softkeys and Multi Selector operations to control Voice Recorder.

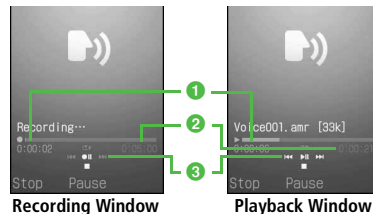




- 1 Elapsed time
- 2 Recordable time (recording)/Playback time (playback)
- 3 Multi Selector operations


Recording Sound





 Recorded sound is saved to *Ring songs · tones* in Data Folder.

1  → *Tools* → *Voice recorder*

2  (Record)


3  (Stop) or 


- Recording ends. When recordable time has elapsed, recording automatically ends.
- Press  (Pause) to pause recording.


- To quickly confirm the recorded content, press  (Play). Press  (Pause) again to pause playback.
- To start the next recording, press  and then  (Record).

Playing Sound


Play a sound file saved in Data Folder.

1  → *Tools* → *Voice recorder*

2  → *My sounds*

3 Highlight a sound file →  (Play)

Advanced

 **Advanced Settings**  P.7-13

- Recording Continuously
- Sending Recorded Sound File
- Deleting Recorded Sound File
- Editing Recorded Sound File Name
- Protecting Recorded Sound File
- Viewing Recorded Sound File Details


Stopwatch

Use 7305C as a stopwatch; record up to 10 lap times and total time.

1  → *Tools* → *Stopwatch*

2  (Start)

3  (Stop)

- While Stopwatch is running, press  (Lap) to mark a lap.

Advanced Settings

Calendar

Saving to Schedule

→ (New) → Enter title → Highlight Start date & time field → Enter date & time

To set End date & time

Select End date & time field → Highlight End date & time field → Enter date and time → (Save)

To set Schedule for all day

Select Start or End date & time field → (Check) → (OK) → (Save)

To set Category

Select Category field → Select a Category → (Save)

To set Alarm

Select Alarm field → Select Alarm time field → Select time → Select Duration field → Select Duration → Select Alert tone/video field → Select folder → Highlight file → (Play) → (Select) → Select Volume field → Use to adjust volume → (OK) → Select Vibration field → Select a vibration pattern → (Done) → (Save)

To repeat a set Schedule

Select Repeat field → Select an item → Enter a number of times to repeat → (Save)

To set Location

Select Location field → Enter content → (Save)

To automatically delete Schedule

Select Expiry field → Select an item → (Save)

- Upon expiry, schedule is automatically deleted from Calendar (e.g. if Expiry is *After 1 year* and Repetition is unset, schedule is deleted one year from event end date. If Repetition is set, schedule is deleted one year after last repetition.). Select *Off* to cancel auto delete.

To set Details

Select Details field → Enter content → (Save)

To set Secret

Select Secret field → Select an item → (Save)

Editing Schedule

→ Select a date → Select a schedule → (Edit) → Edit in the same way as on registration → (Save)

Switching View Mode

→ → *View mode* → *Monthly, Daily* or *Weekly*

Opening a Specific Date

→ → *Go to*

To show today's date

Today

To toggle to a specified date

Date → Enter date

Viewing Schedule by Category

→ → *List by category* → Select a Category

Sending Schedule

→ → *Send via infrared* → Check a schedule → (Send) → *Yes* (P.9-3)

Deleting Schedule



To delete an entry

Select a date → Highlight a schedule → → *Delete* → *Selected* → *Yes*

To delete all schedules of selected date

Highlight a date → → *Delete* → *All this day* → *Yes*

To delete schedules for a specified period of time

→ *Delete* → *Periods* → Enter start date and end date → (Delete) → *Yes*

To delete schedules of currently displayed month or week

→ *Delete* → *This month* or *This week* → *Yes*

To delete all schedules before the highlighted date

→ *Delete* → *All past data* → Enter Phone Password → (OK) → *Yes*

To delete all schedules

→ *Delete* → *All* → Enter Phone Password → (OK) → *Yes*

To delete multiple schedules listed by category

→ *List by category* → Select a category → → *Delete* → *Multiple* → Check schedules → (Delete) → *Yes*

■ To delete all schedules in a category

→ *List by category* → Select a category →
 → *Delete* → *All (This category)* → *Yes*

Setting Holiday

→ → *Settings* → *Set holiday* → Select a field → Enter title → Enter Date → Select frequency → (Save)

Setting Holiday Display

→ → *Settings* → *Set holiday* → Check an item to set → (Save)

Editing Added Holiday

→ → *Settings* → *Set holiday* → Highlight an entry → → *Edit* → Edit the entry → (Save)

Deleting Added Holiday

→ → *Settings* → *Set holiday* → Highlight an entry → → *Delete*

Setting the Beginning of a Week

→ → *Settings* → *Starting day* → Select an item

Setting Default Calendar View

→ → *Settings* → *Default view mode* → Select an item

Setting Reminder

→ → *Settings* → *Reminder* → Select On/Off field → *On*

■ To set remind time

Select Time field → Enter a time → (Save)

■ To set Alarm sound duration

Select Duration field → Select an item → (Save)

• When selecting *Other*, enter duration.

■ To set Alarm sound or video

Highlight Alert tone/video field → Select folder → Highlight file → (Play) → (Select) → (Save)

■ To adjust Alarm volume

Select Volume field → Use to adjust volume → (Play) → (OK) → (Save)

■ To set Vibration

Select Vibration field → Select a vibration pattern → (Save)

Viewing Secret Schedule

→ → *Unlock temporarily* → Enter Phone Password → (OK)

Checking Missed Alarm Event

→ → *Missed alarm event* → Select a schedule

Viewing Calendar Memory Status

→ → *Memory status*

Sending Schedule as vFile

→ Select a date → Highlight a schedule → → *Send*

■ To send via message

Via message → (Ⓜ)P.4-3 Sending S! Mail (2)

■ To send via infrared


Via infrared (Ⓜ)P.9-3)

Saving Schedule as vFile


→ Select a date → Highlight a schedule → → *Save to Data Folder* → *Yes*

Alarm


Saving Alarm

 → *Tools* → *Alarms* → *Alarm1 to Alarm5* → Enter Alarm time



■ To edit Alarm name

Select Alarm name field → Enter Alarm name →  (Save)




■ To set Alarm every day or once only

Select Repeat field → *Once only* or *Everyday* →  (Save)





■ To set Alarm for a specific day

Select Repeat field → *Selected day* → Check day to set →  (Done) →  (Save)


■ To set Alarm sound or video

Highlight Alert tone/video field → Select folder → Highlight file →  (Play) →  (Select) →  (Save)


■ To adjust Alarm volume



Select Volume field → Use  to adjust volume →  (Play) →  (OK) →  (Save)



■ To set Vibration

Select Vibration field → Select a vibration pattern →  (Save)

■ To set Snooze


Select Snooze field → Select an item →  (Save)

- When Snooze is other than *Off*, alarm sounds at the specified interval until Snooze is canceled. Alarm repeats specified times. If no handset operations take place, or any key except  and  (End) is pressed while alarm sounds, alarm stops, and resets to sound again at specified interval.


To cancel Snooze, press  or  (End).

- For *Other*, enter duration.

■ To set Snooze repeat time(s)



Select Snooze repeat times field → Select a repeat time(s) →  (Save)

■ To set Alarm duration time

Select Duration field → Select duration →  (Save)

- For *Other*, enter duration.

Setting/Canceling Alarm

 → *Tools* → *Alarms* → Highlight an Alarm →  (On/Off)


Resetting Alarm

 → *Tools* → *Alarms*



■ To reset an entry

Highlight an Alarm →  → *Reset this*




■ To reset all entries

 → *Clear all*

Setting Volume or Vibration in Manner Mode

 → *Tools* → *Alarms* → Highlight an Alarm →  → *For manner mode*

■ To set Alarm volume

Alarm volume → Use  to adjust volume →  (Play) →  (OK)

■ To set Vibration




Vibration → Select an item

Currency/Unit Conversion




Viewing Exchange Rate


 → *Tools* → *Converter* → *Currency* →
Highlight Original currency field →  (Rate)

Changing Exchange Rate

 → *Tools* → *Converter* → *Currency* →
Highlight Original currency field →  (Rate) →
Highlight a currency →  (Edit) → Enter rate





Adding Currency Unit

 → *Tools* → *Converter* → *Currency* → 
(Rate) →  (Add) → Enter currency unit and
exchange rate

- To delete an added currency unit, highlight a rate and press , and select *Delete*.


World Clock

Setting Daylight Saving Time


 → *Tools* → *World clock* →  (DST) →
Check an area to set daylight saving time → 
(Done) →  (Save)

Notepad



Deleting Notepad

 → *Tools* → *Notepad*



■ To delete a notepad

Highlight a notepad →  → *Delete* →
Selected → *Yes*




■ To delete multiple entries

Highlight a notepad →  → *Delete* →
Multiple → Check entries →  (Delete) →
Yes



■ To delete all entries

Highlight a notepad →  → *Delete* → *All* →
Enter Phone Password →  (OK) → *Yes*



Sending Notepad

 → *Tools* → *Notepad* → Select a notepad →
 → *Send memo* → (P.4-3 Sending S! Mail )

Viewing Notepad Memory Status

 → *Tools* → *Notepad* →  → *Memory*
status

Editing Notepad

 → *Tools* → *Notepad* → Highlight a notepad →
 (Edit) → Edit the notepad

Tasks

Saving Task

■ → Tools → Tasks → 📁 → Add new → Enter title → Highlight Due date & time → Enter Due date and time

■ Setting Alarm

Select Alarm field → Select Alarm time field → Select Alarm time → Select Duration field → Select Duration → Select Alert tone/video field → Select a location of sound or video file → Highlight the file → 📁 (Play) → 📁 (Select) → Select Volume field → Use 🗲 to adjust volume → ■ (OK) → Select Vibration field → Select a vibration pattern → 📁 (Done) → 📁 (Save)

- At Alarm Time, tone sounds and indicator appears. Press any key to stop Alarm. Press (OK) to clear indicator. If no key is pressed, Missed Alarm message appears. Press ■ (View) to view the event.
- During a call or while dialing (*Connecting...* or *Dialling...* appears) at Alarm time, a tone sounds and an indicator appears. When *Alerts on call* on *System sounds* is unchecked, only indicator appears during a call or connection. Press ■ to clear an indicator.

■ To set Priority

Select Priority field → Select an item → 📁 (Save)

■ To set Details

Select Details field → Enter content → 📁 (Save)

■ To activate or cancel Secret

Select Secret field → Select an item → 📁 (Save)

Sending Tasks as vFile

■ → Tools → Tasks → Select a task to send → 📁 → Send

■ To send via message

Via message → 📞P.4-3 Sending S! Mail 📞

■ To send via infrared

Via infrared 📞P.9-3

Sorting Tasks

■ → Tools → Tasks → 📁 → Sort by → Select an item

Opening Task for a Specific Date

■ → Tools → Tasks → 📁 → Go to

■ To show today's task

Today

■ To enter a date to view a task

Date → Enter date

Deleting Tasks

■ → Tools → Tasks

■ To delete a task

Highlight a task → 📁 → Delete → Selected → Yes

■ To delete multiple tasks

📁 → Delete → Multiple → Check tasks → 📁 (Delete) → Yes

■ To delete all tasks

📁 → Delete → All tasks → Enter Phone Password → ■ (OK) → Yes

Saving Tasks as vFile

■ → Tools → Tasks → Select a task → 📁 → Save to Data Folder → Yes

Viewing Secret Schedule

■ → Tools → Tasks → 📁 → Unlock temporarily → Enter Phone Password → ■ (OK)

Viewing Missed Alarm Event

■ → Tools → Tasks → 📁 → Missed alarm event → Select a missed task to check

Viewing Task Item Status





■ → Tools → Tasks → 📁 → Memory status

Editing Tasks





■ → Tools → Tasks → Select a task to edit → ■ (Edit) → Select an item to edit → Edit item → 📁 (Save)

Voice Recorder





Setting Recorded Sound File for Ringtone, etc.

 → Tools → Voice recorder →  (Record)
→  (Stop) →  (Set as) → Select a ringtone

Recording Continuously

 → Tools → Voice recorder →  (Record)
→  (Stop) →  → Record

Sending Recorded Sound File

 → Tools → Voice recorder →  (Record)
→  (Stop) →  → Send




 
■ To send via message

Via message → (📧P.4-3 Sending S! Mail 2)





■ To send via infrared

Via infrared (📡P.9-3)




 
Deleting Recorded Sound File

 → Tools → Voice recorder →  (Record)
→  (Stop) →  → Delete → Yes




 
Editing Recorded Sound File Name

 → Tools → Voice recorder →  (Record)
→  (Stop) →  → Rename → Enter file name



Protecting Recorded Sound File

 → Tools → Voice recorder →  (Record)
→  (Stop) →  → Lock or Unlock



Viewing Recorded Sound File Details

 → Tools → Voice recorder →  (Record)
→  (Stop) →  → Details

Changing Default Name at Saving

 → Tools → Voice recorder →  →
Recording settings → Default name → Enter file name

Changing Recording Time

 → Tools → Voice recorder →  →
Recording settings → Recording time → Select duration

Handset Security




Changing Phone Password	8-2
Setting PINs	8-2
PIN Certification	8-2
Changing PIN/PIN2	8-2
Canceling PIN Lock	8-3
Setting USIM Lock	8-3
Locking & Restricting Handset Operations	8-3
Phone Lock	8-3
Auto Keypad Lock	8-3
Password Lock	8-4
Application Lock	8-4
Secret Mode	8-4
Secret Folders	8-5
Mobile Tracker	8-5
Restoring Default Settings	8-6
Clearing Phone Memory	8-6
Resetting Settings	8-6
All Reset	8-6


Changing Phone Password

By default, Phone password is set to "9999".

- 1  → **Settings** → **Security** → **Change password**

- 2 **Enter current Phone Password**
→  (OK)




- 3 **Enter new Phone Password (4 digits)** →  (OK)


- 4 **Enter new Phone Password again** →  (OK)

Advanced

Settings


- Change Phone Password ( P.10-12)

Setting PINs

PINs are security codes for USIM Card. For details, see "USIM Card" ( P.11-4).

PIN Certification


To activate PIN certification each time the power is turned on, set this function to *On*.


- 1  → **Settings** → **Security** → **PIN certification**


- 2 **On or Off**

- 3 **Enter PIN** →  (OK)

Changing PIN/PIN2

- 1  → **Settings** → **Security** → **Change PIN or Change PIN2**

• When *PIN certification* ( P.8-2) is set to *Off*, PIN cannot be changed.




- 2 **Enter current PIN or PIN2** →  (OK)

- 3 **Enter new PIN or PIN2 (4 to 8 digits)** →  (OK)

- 4 **Enter new PIN or PIN2 (4 to 8 digits)** →  (OK)

Canceling PIN Lock

If PIN or PIN2 is incorrectly entered three consecutive times, PIN lock or PIN2 lock is activated to restrict handset operations. To cancel PIN lock or PIN2 lock, perform following operations.

- 1 In PUK Code entry window, enter PUK Code →  (OK)
- 2 Enter new PIN or PIN2 (4 to 8 digits) →  (OK)
- 3 Enter new PIN or PIN2 (4 to 8 digits) →  (OK)

Note

- For more information about PUK and PUK2, contact Customer Service (☎P.11-22).
- Entering incorrect PUK Code 10 consecutive times locks USIM Card (turning 7305C off does not reset the count).
- Once locked, USIM Card cannot be unlocked. Contact Customer Service (☎P.11-22).



Advanced


Settings

- Activate or cancel PIN Certification (☞P.10-12)
- Change PIN (☞P.10-12)
- Change PIN2 (☞P.10-12)

Setting USIM Lock

Activate this function to require USIM Password entry to use 7305C with a different USIM Card.

- 1  → *Settings* → *Security* → *USIM lock*
- 2 *On* or *Off*
- 3 Enter USIM Password (4 to 8 digits) →  (OK)

- To set to *On*, enter USIM password (4 to 8 digits) again and press  (OK).

- USIM Password is dedicated to USIM Card authentication. If USIM Password matches, another USIM Card can be used in 7305C. Change USIM Password each time *USIM lock* is set to *On*.
- If you forget USIM Password, insert USIM Card with *USIM lock* set to *On* and reset all settings (☎P.8-6).

Advanced



Settings

- Activate or cancel USIM Lock (☞P.10-12)

Locking & Restricting Handset Operations

Phone Lock


Activate this function to require Phone Password entry each time 7305C is powered on.

- 1  → *Settings* → *Security* → *Phone lock*
- 2 *On* or *Off*
- 3 Enter Phone Password →  (OK)

- All operations including receiving calls cannot be performed until Phone Password is entered.



Auto Keypad Lock

When this function is set to *On*, keypad lock is automatically activated when Display turns off.

- 1  → *Settings* → *Phone settings* → *Auto keypad lock*
- 2 *On* or *Off*

Password Lock




Lock 730SC in Standby. Activate this function to require Phone Password entry to use 730SC.

- 1  → *Settings* → *Security* → *Password lock*
- 2 *On or Off*
- 3 Enter Phone Password →  (OK)

- Operations except for receiving calls etc, cannot be performed until Phone Password is entered.
- Upon Password Lock activation, Standby returns. Press any key for Phone Password entry window. Enter Phone Password to cancel Password Lock. Password lock remains *Off*.



Application Lock

Activate this function to require Phone Password entry to open Phonebook, Calendar, Notepad, Tasks, Messaging, Call log or Data Folder.

- 1  → *Settings* → *Security* → *Application lock*
- 2 Check functions to lock →  (Save)
- 3 Enter Phone Password →  (OK)

Secret Mode



Select *Hide* to activate this function and hide Secret Phonebook entries, Messaging folders, Calendar schedules or Tasks.

- 1  → *Settings* → *Security* → *Secret mode*
- 2 Enter Phone Password →  (OK)
- 3 *Show or Hide*

- Powering 730SC off then back on activates Secret mode.

Secret Folders

Activate Secret mode to see Secret folders within Data Folder.

- 1  → **Settings** → **Security** → **Secret data folder**
- 2 **Enter Phone Password** →  (OK)
- 3 **Show or Hide**

 
• Powering 730SC off then back on activates Secret mode.


Mobile Tracker

Activate this function to send SMS notification to a specified address when a different USIM Card is inserted. Specify up to 2 addresses.

- 1  → **Settings** → **Security** → **Mobile tracker**
- 2 **Enter Phone Password** →  (OK)
- 3 **Select Activation field** → **On**
- 4 **Select Recipients field**
- 5 **Select To field** → **Enter address** →  (Save)
 - To enter an address from Phonebook, highlight To field →  → **Phonebook** → Search Phonebook and select entry (P.2-13) → Select a phone number.
- 6 **Select Sender field** → **Enter sender name**
- 7  (Save) → **Confirm message**








8 (Agree)

• Not to agree the message, press  (Reject).

- When a different USIM Card is inserted, SMS notification is sent to the specified address upon 730SC activation. Nothing appears on 730SC. If Phone Password is incorrectly entered three consecutive times when trying to set Mobile Tracker, SMS notification is also sent.
- To delete a recipient address, press  and select **Delete** in Step 5.

  Advanced




Settings

- Activate or cancel Auto keypad lock ( P.10-11)
- Activate or cancel Phone Lock ( P.10-12)
- Activate or cancel Password Lock ( P.10-12)
- Activate or cancel Application Lock ( P.10-12)
- Activate or cancel Secret mode ( P.10-12)
- Create or cancel Secret folders in Data Folder ( P.10-12)
- Activate Mobile Tracker ( P.10-12)

Restoring Default Settings

Clearing Phone Memory



Clear Data Folder, Messaging, 7305C Phonebook, Calendar, Notepads, Tasks or User's dictionary. Alternatively, clear all 7305C files at once.

- 1  → **Settings** → **Memory settings** → **Phone memory** → **Clear phone memory**
- 2 Check items →  (Delete)
- 3 Enter Phone Password →  (OK) → **Yes**

Resetting Settings



Clear saved contents/settings regarding Settings and Alarms in Tools, then restore default settings. The following settings are not affected.

Item	Unaffected Settings
Call settings	<i>Edit black list contents Voice mail on settings Call forwarding on setting Call waiting setting Call barring settings</i>
Phonebook	<i>Entry details, Group settings</i>
Security	<i>USIM lock, PIN certification, Change PIN, Change PIN2</i>
Tools	<i>Calendar contents and settings</i>

- 1  → **Settings** → **Security** → **Reset** → **Reset settings**
- 2 Enter Phone Password →  (OK) → **Yes**

All Reset

Restore 7305C to defaults and delete Phonebook (Phone), Messaging, and Data Folder contents/settings. However, preinstalled files are not deleted.

- 1  → **Settings** → **Security** → **Reset** → **All reset**
- 2 Enter Phone Password →  (OK) → **Yes**

Advanced

Settings

- Delete Phonebook entries, messages, etc. (☞ P.10-12)
- Restore Settings to default values (☞ P.10-12)

Connectivity



- Infrared 9-2**
 - Getting Started 9-2
 - Infrared Precautions 9-2
- Infrared Data Transmission 9-2**
 - Sending Data 9-3
 - Receiving One by One 9-3
 - Transferring All 9-4
 - Receiving All 9-4

Infrared


Exchange files wirelessly with infrared-compatible handsets, PCs or other devices.

Getting Started

- 730SC Infrared is based on IrMC1.1. Transmission may be unavailable for some functions, even when IrMC1.1 is supported on the other party's handset.
- Infrared data transmission is unavailable while sending/receiving message.
- Calling or sending mail are unavailable during Infrared transmissions.
- Transmissions may be inhibited in direct sunlight, under fluorescent lighting or near infrared devices.
- Authorization Code is the 4-digit password used to allow transmissions between infrared devices. Enter same Authorization Code on both devices when transmitting all files at once.

Infrared Precautions

- Place devices within 30 cm. Align device ports. Do not place objects in between devices.

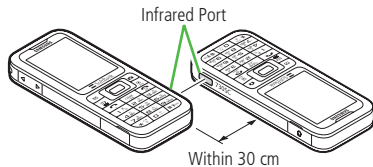

- Maintain port alignment until transmission ends.
- A soiled port may inhibit transmission. Clean port with a soft cloth beforehand.
- If transmission fails, a confirmation appears. Review precautions, choose *Yes* to try again.

Infrared Data Transmission

Send and receive Phonebook, Account details, Schedules, Tasks, still images, videos, sound files, music files and others.

Send either all Phonebook entries, Schedules or Tasks in a single transfer.

Note

- **Infrared is unavailable while Media Player is in use or while editing mail/files.**
- **Some received files cannot be saved on 730SC.**

Transmission Types

Transfer files via Infrared as follows.

Transmission Type	Description
Transfer Each	Receive single files/send multiple files. Received files are automatically saved to the appropriate location by file type.
Transfer All	Receive/send all files by function at once.

- Most received files are saved to the appropriate location by file type, however, some may be saved to *Other documents* in Data Folder.

Sending Data


First, activate Infrared on the other device.

1 Send data

■ To send from Data Folder, Tasks or Phonebook


In list,  → *Send* → *Via infrared*
→ Select data →  (Send)

■ To send from Calendar

Highlight item →  → *Send* → *Via infrared*

- Some functions allow sending from Details/ Playback window.

Receiving One by One



1  → *Settings* → *Connectivity* → *Infrared* → *Infrared On/Off* → *On* (3 min.)

- 730SC is ready to receive data.

2 **Begin sending from other device within 3 minutes**

3 **Cancel Calling confirmation appears, choose *Yes***

4 **Receive and Save confirmation appears, choose *Yes***




- To save pictograms, select *Pictures* or *My Pictograms*.
- Press  (Cancel) to cancel receiving.
- Press  to terminate data reception.

- vCard over 51 KB cannot be saved in Phonebook. If vCard contains incoming image over 40KB, 730SC deletes the image then saves vCard.






Note

- Receive files in Standby. Files cannot be received when Password Lock is active or All Keys locked.

Transferring All



- 1  → *Settings* → *Connectivity* → *Infrared* → *Transfer all*
- 2 Enter Phone Password →  (OK)
- 3 *Phonebook or Calendar*
 - For *Phonebook*, choose *Yes* to transfer images
- 4 Enter Authorization Code (4 digits) →  (OK)

Receiving All

- 1  → *Settings* → *Connectivity* → *Infrared* → *Infrared On/Off* → *On (3 min.)*
 - 730SC is ready to receive files.
- 2 Begin sending from other device within 3 minutes
- 3 No Calling confirmation appears, choose *Yes*
- 4 Enter Authorization Code (4 digits) →  (OK)
 - Enter same Authorization Code as sender.
- 5 Select a saving method
 - To add files as new entries
Add New
 - To overwrite current entries
Overwrite → *Yes* → Enter Phone Password →  (OK)
 - Receiving all entries deletes existing 730SC entries except Account details. Receiving Account details deletes existing Account details except handset phone number.
 - Press  (Cancel) to cancel receiving.
 - Press  to terminate reception.

Advanced

Settings

- Activate or cancel Infrared transmission ( P.10-16)
- Transfer Phonebook or Calendar entries at once ( P.10-16)

Handset Customization



Messaging Settings	10-2
S! Mail & SMS	10-2
S! Mail	10-4
SMS	10-5
Media Player Settings	10-6
Music	10-6
Movie	10-6
Mobile Camera Settings	10-7
Camera & Video	10-7
Photo	10-7
Video	10-7
Phonebook Settings	10-8
Sounds & Alerts Settings	10-8
Manner Mode Settings	10-9
Display Settings	10-9
Phone Settings	10-10
Security Settings	10-12
Call Settings	10-13
Mode Settings	10-16
Connectivity Settings	10-16
Infrared	10-16
Network	10-16
Memory Settings	10-16

Messaging Settings

S! Mail & SMS

Start Here



→ *Settings* → *Universal settings*

Change font size	Default Standard	<i>Font size</i> → Select an item
Change scroll unit	Default Single line	<i>Scroll unit</i> → Select an item
Request or cancel Delivery Report	Default Off	<i>Delivery report</i> → Select an item <ul style="list-style-type: none"> • <i>On</i>: Receive a message confirming successful delivery of a sent message.
Insert or hide Signature	Default Off	<i>Signature</i> → <i>Auto insert</i> → Select an item
Edit Signature		<i>Signature</i> → <i>Edit</i> → Enter a signature
Set or cancel Auto Delete for received messages when Received memory is full	Default On (Auto delete)	<i>Auto delete</i> → <i>Received messages</i> → Select an item <i>On (Auto delete)</i> : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is <i>Off</i> , memory full confirmation appears. Delete messages and retry. <i>Off</i> : Memory full confirmation appears. Delete messages and retry.
Set or cancel Auto Delete for sent messages when Sent memory is full	Default On (Auto delete)	<i>Auto delete</i> → <i>Sent messages</i> → Select an item <i>On (Auto delete)</i> : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is <i>Off</i> or <i>Unsent</i> is full, memory full confirmation appears. Delete messages and retry. <i>Off</i> : Memory full confirmation appears. Delete messages and retry.
Show or hide transmission progress bar	Default Show	<i>Sending progress settings</i> → <i>Sending progress</i> → Select an item
Always show or hide send result (progress bar hidden)		<i>Sending progress settings</i> → <i>Sending result notice</i> → Select an item <ul style="list-style-type: none"> • <i>Sending result</i> notice is only selectable when <i>Sending progress</i> is set to <i>Do not show</i>.
Set received message notice content or hide notice	Default Sender	<i>Message notice</i> → <i>View setting</i> → Select an item <ul style="list-style-type: none"> • Received message notice scrolls above active function windows.

Select secret folder message notice setting	Default Show	<p><i>Message notice</i> → <i>Secret folder</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select an item</p> <ul style="list-style-type: none"> • <i>Not show</i>: Incoming message notice window for messages sorted to secret folders or <i>Message notice</i> does not appear.
Change message list view	Default 2 line	<i>Message list view</i> → Select an item
Change received message view	Default Folder view	<i>Received messages view</i> → Select an item
Change sent message view	Default Folder view	<i>Sent messages view</i> → Select an item
Adjust 3D Pictogram auto play setting	Default Always	<p><i>3D pictograms</i> → <i>3D Picto. Auto play</i> → Select an item</p> <p><i>Always</i>: Show 3D Pictogram for all messages</p> <p><i>Only unread</i>: Show 3D Pictogram for unread messages only</p> <p><i>Disable</i>: Hide 3D Pictogram</p> <ul style="list-style-type: none"> • The first time a received message is viewed <i>3D Picto., Auto play</i> confirmation appears.
Select 3D Pictogram color settings	Default Pattern1	<p><i>3D pictograms</i> → <i>Color settings</i> → Use <input type="checkbox"/> to show target pattern → <input type="checkbox"/> (Select)</p> <ul style="list-style-type: none"> • In <i>Color settings</i>, press <input type="checkbox"/> (Preview) for current settings.
Select 3D Pictogram display speed	Default Standard	<p><i>3D pictograms</i> → <i>Display speed</i> → Select an item</p> <ul style="list-style-type: none"> • In <i>Display speed</i>, press <input type="checkbox"/> (Preview) for current settings.



S! Mail

Start Here











→ Settings → S! Mail settings

Set message sending priority	Default Normal	<i>Sending options</i> → <i>Priority</i> → Select an item
Set sent message Mail Service Center expiry	Default Maximum	<i>Sending options</i> → <i>Expiry time</i> → Select an item • When the expiry time has elapsed, S! Mails are automatically deleted from Mail Server.
Set time to send a message via Mail Service Center	Default Immediately	<i>Sending options</i> → <i>Delivery time</i> → Select an item • When set time has elapsed, Mail Service Center sends S! Mail message.
Set S! Mail receiving options	Default Auto download	<i>Receiving options</i> → Select an item <i>Auto download</i> : Mail Service Center sends complete S! Mail messages automatically <i>From number only</i> : Mail Service Center sends complete S! Mail sent to handset number <i>Manual retrieval</i> : Mail Service Center sends S! Mail Notice; retrieve complete message
Select reply setting	Default Off	<i>Reply settings</i> → Select an item <i>On</i> : Replies to sent messages are automatically addressed to "Reply to" address <i>Off</i> : Replies to sent messages are addressed to 730SC number/mail address • Set address that appears in To: field of replies to messages sent from 730SC.
Set "reply to" address		"Reply to" address → Select an item → Specify settings as required • Select <i>Phonebook</i> → select an entry (☛P.2-13) → highlight number or address → <input type="checkbox"/> (Select). • Alternatively, select <i>Enter address</i> and enter an address.
Show or hide emotion in received Feeling Mail Notification	Default On	<i>Link to feeling</i> → <i>Idle screen Info.</i> → Select an item
Link External Light to incoming Feeling Mail	Default On	<i>Link to feeling</i> → <i>External light</i> → <i>On/Off</i> → Select an item
Link Vibration to incoming Feeling Mail	Default On	<i>Link to feeling</i> → <i>Vibration pattern</i> → Select an item
Set whether to sound 730SC when Feeling Mail arrives	Default On	<i>Link to feeling</i> → <i>Ringtone</i> → <i>On/Off</i> → Select an item
Linking Ringtone to incoming Feeling Mail	Default Happy/Glad: One Fine Day.mp4, OK/Good: Sunny day.mp4, Sad/Sorry: Jazzy House_Pleasure.mp4, NG/Bad: MinimalTone.mp4, Important/Notice: On my way home.mp4	<i>Link to feeling</i> → <i>Ringtone</i> → <i>Assign tone</i> → Select an emotion → Select folder → Highlight a file → (Play) → (Select)

Set Feeling Mail ringtone duration	Default 5 seconds	<i>Link to feeling</i> → <i>Ringtone</i> → <i>Duration</i> → Enter time
Set attached image appearance	Default Normal	<i>Picture appearance</i> → Select an item
Set attached image auto playback	Default On	<i>Auto play file</i> → <i>Picture</i> → Select an item
Set attached sound auto playback	Default Off	<i>Auto play file</i> → <i>Sound</i> → Select an item
SMS		
	Start Here	 → <i>Settings</i> → <i>SMS settings</i>
Set Mail Service Center message expiry time	Default None	<i>Expiry time</i> → <i>None, 1 hour, 6 hours, 12 hours, 1 day or 3 days</i> • Upon expiry Mail Service Center SMS messages are automatically deleted.
Set Message Center Number	Default Setting 1 +819066519300	<i>Message center</i> → Select an item
Edit Message Center Number	Default +819066519300	<i>Message center</i> → Highlight item →  (Edit) → Edit Message center number
Change character code	Default Unicode	<i>Char-code</i> → Select an item

Media Player Settings

Music		Start Here	 → <i>Media Player</i> → <i>Settings</i> → <i>Music</i>
Set Repeat mode	Default Off		<i>Repeat mode</i> → Select an item • Play a single track repeatedly, all music or all files in Playlist randomly or repeatedly.
Adjust Tone volume level	Default 70		<i>Tone volume</i> → Use  to adjust volume →  (Save)
Set Music sub folders	Default Recent music, Most played music, Artist		<i>Music menu</i> → Check a folder you want to display →  (Save) • Select folders to appear in <i>Music</i> .
Movie		Start Here	 → <i>Media Player</i> → <i>Settings</i> → <i>Movie</i>
Set Repeat mode	Default Off		<i>Repeat mode</i> → Select an item • Play a single file repeatedly, all videos or all files in Playlist randomly or repeatedly.
Adjust Tone volume level	Default 70		<i>Tone volume</i> → Use  to adjust volume →  (Save)
Set Backlight	Default Normal		<i>Backlight</i> → Select an item
Set Video sub folders	Default Recent video, Most played video		<i>Video menu</i> → Check a folder you want to display →  (Save) • Select folders to appear in <i>Video</i> .
Show or hide Video thumbnails	Default On		<i>Video thumbnail display</i> → Select an item

Mobile Camera Settings







Camera & Video		Start Here	 →  → Settings → General
Show or hide Indicators	Default On	<i>Indicators</i> → Select an item • <i>On</i> : Indicators appear.	
Activate or cancel Auto Save	Default Off	<i>Auto Save</i> → Select an item • <i>On</i> : Images or video is automatically saved after capturing or recording.	
Show or hide menu item guidance	Default On	<i>Help</i> → Select an item • <i>On</i> : Guidance information appears for selected menu item.	











Photo		Start Here	 →  → Settings → Photo
Select Quality	Default Normal	<i>Quality</i> → Select an item	
Set ISO	Default Auto	<i>ISO</i> → Select an item	
Set Exposure metering	Default Normal	<i>Exposure metering</i> → Select an item	
Show or hide Guideline	Default Off	<i>Guideline</i> → Select an item	
Set Shutter sound	Default Pattern1	<i>Shutter sound</i> → Select an item	

Video		Start Here	 →  → Settings → Video
Select Quality	Default Economy	<i>Quality</i> → Select an item	




Phonebook Settings Start Here → Phonebook → Settings

Select Phonebook Save Location Default Phone	<i>Save settings</i> → Select an item • <i>Ask each time</i> : A confirmation appears each time a new entry is saved.
Change Phonebook preference (Phone/USIM) Default Phone	<i>Change view</i> → Select an item
Change Search Method Default A-ka-sa-ta-na	<i>Search method</i> → Select an item
Backup Phonebook entries	<i>Backup</i> → Select an item → <i>Yes</i>
Change Phonebook font size Default Standard	<i>Font size</i> → Select an item

Sounds & Alerts Settings Start Here → Settings → Sounds & Alerts










Adjust volume Default Level 3	<i>Volume</i> → Select an item → Use  to adjust volume →  (Play) →  (Select) • There is no <i>Play</i> option to sample <i>Phone sounds</i> .
Set Ringtone for Voice Call Default Samsung Tune.mp4	<i>Ringtone</i> → <i>Voice call</i> → Select save location for a file → Highlight a file →  (Play) →  (Select)
Set ringtone other than Voice Call Default Message: Samsung Tune.mp4, Missed call notification/Delivery report: BusinessTone.mp4	<i>Ringtone</i> → Select an item → <i>Assign tone</i> → Select save location for a file → Highlight a file →  (Play) →  (Select)
Set ringtone duration other than Voice Call Default 5 Seconds	<i>Ringtone</i> → Select an item → <i>Duration</i> → Enter duration
Set Vibration Default Off	<i>Vibration</i> → Select an item → Select a vibration pattern →  (Play) →  (Select)
Set Keypad tones Default Off	<i>Phone sounds</i> → <i>Keypad tones</i> → Select an item
Set system sounds Default Several tones on	<i>Phone sounds</i> → <i>System sounds</i> → Check item to set →  (Save)
Illuminate External Light for incoming transmissions Default Voice call/Message/Missed call notification: On, Delivery report: Off	<i>External light</i> → <i>Incoming</i> → Select an item → <i>On or Off</i>
Illuminate External Light for missed calls Default On	<i>External light</i> → <i>Notification</i> → Select an item → <i>On or Off</i>





 

 
 

 


Manner Mode Settings Start Here → Settings → Manner mode settings

Set vibration Default Pattern 1	<i>Vibration</i> → Select an item → Select a vibration pattern →  (Play) →  (Select)
Set system sounds Default Alerts on call	<i>System sounds</i> → Check item to set →  (Save)
Illuminate External Light for incoming transmissions Default Voice call/Message/Missed call notification: On, Delivery report: Off	<i>External light</i> → <i>Incoming</i> → Select an item → <i>On</i> or <i>Off</i>
Set External Light to flash for missed calls Default On	<i>External light</i> → <i>Notification</i> → Select an item → <i>On</i> or <i>Off</i>
Set Answering Machine Default On	<i>Answering machine</i> → Select an item









• Changes to *Manner mode* settings apply when *Manner* is selected in *Mode setting*.








 
 






Display Settings Start Here → Settings → Display settings

Change Wallpaper Default Preset pictures	<i>Wallpaper</i> → (P.2-4 Wallpaper )
Set Menu style Default Silver	<i>Main menu style</i> → Use  to choose color • Change menu appearance.
Set Standby Display appearance Default Off	<i>Clock/Calendar</i> → Select an item and edit as required →  (OK) • To set clock type, select <i>Digital clock</i> → Use  to select clock type →  (OK). • <i>Dual clock</i> : 2 clocks appear in Standby. Local time (set in <i>Date & Time</i>) appears on top. To set clock below it, <i>Dual clock</i> → highlight Time zone field → Use  to specify an area → highlight Daylight saving field to check as required → press  (OK).
Change font size for menu list Default Large	<i>Font size</i> → <i>List font</i> → Select an item
Change font size for Phonebook menu Default Standard	<i>Font size</i> → <i>Phonebook</i> → Select an item
Change font size for text entry window Default Standard	<i>Font size</i> → <i>Editor</i> → Select an item
Change Message text font size Default Standard	<i>Font size</i> → <i>Messages</i> → Select an item
Adjust Display brightness Default 3	<i>Backlight</i> → <i>Brightness</i> → Use  to adjust brightness →  (OK)





 















 




Set Backlight time Default On: 15 seconds, Dim: 15 seconds	<i>Backlight</i> → <i>Backlight time</i> → Select On field → Select duration → Select Dim field → Select duration →  (Save) <ul style="list-style-type: none"> • When Backlight time is set to <i>Off</i>, Display becomes dim. • Display becomes dimmer when Backlight time elapses and turns off when <i>Dim</i> time elapses.
Set Dialing window font type Default Font type: Normal	<i>Dialling display</i> → <i>Font type</i> → Use  to change the type →  (OK)
Set Dialing window font size Default Standard	<i>Dialling display</i> → <i>Font size</i> → Use  to change the size →  (OK)
Set Dialing window font color Default Basic	<i>Dialling display</i> → <i>Font color</i> → Use  to change color →  (OK) <ul style="list-style-type: none"> • For <i>Monochrome</i>, use  to highlight Color field → Use  to change color →  (OK)
Set Dialing window background color	<i>Dialling display</i> → <i>Background color</i> → Use  to change color →  (OK)
Set Operator name Default Off	<i>Operator name</i> → Select an item

Phone Settings → *Settings* → *Phone settings*


 
Change user interface language Default 日本語	<i>言語選択</i> → Select an item <ul style="list-style-type: none"> • <i>中文</i> (Chinese) and <i>Português</i> (Portuguese) only support menu display in those languages. Entering characters or displaying received messages in those languages are not supported.
Set Time zone updating Default Prompt first	<i>Date & Time</i> → Select Time zone updating field → Select an item →  (Select) →  (Save) <ul style="list-style-type: none"> • <i>Automatic</i>: A confirmation appears. Choose <i>Yes</i> to restart 7305C. • <i>Time zone updating</i> is disabled even when the setting is changed.
Change Home time zone Default GMT+09:00	<i>Date & Time</i> → Select Home zone field → Use  to toggle areas →  (Select) →  (Save) <ul style="list-style-type: none"> • Select the zone closest to your locality. Complete this setting before selecting <i>Dual clock</i>.
Activate or cancel Daylight savings time adjustment Default Unchecked	<i>Date & Time</i> → Select Home zone field → Check <i>Daylight saving</i> →  (OK) →  (Save)
Set time	<i>Date & Time</i> → Highlight Time field → Enter time →  (Save) <ul style="list-style-type: none"> • Some functions are disabled when time is not set.
















Set AM/PM (when Time format is set to 12H)		<i>Date & Time</i> → Highlight <i>AM</i> or <i>PM</i> in Time field → Use  to toggle setting →  (Save)
Set date		<i>Date & Time</i> → Highlight Date field → Enter date →  (Save) • Some functions are disabled until date is set.
Change Time format	Default 24H	<i>Date & Time</i> → Select Time format field → Select an item →  (Save)
Change Date format	Default YYYY/MM/DD	<i>Date & Time</i> → Highlight Date format field → Select an item →  (Save)
Save entries to User's Dictionary		<i>User's dictionary</i> → <i>New entry</i> → Select Word field → Enter word or sentence → Select Reading field → Enter reading →  (Save)
Edit User's Dictionary entries		<i>User's dictionary</i> → <i>Edit entry</i> → Select entry to edit → Edit word or reading →  (Save)
Delete User's Dictionary entries		<i>User's dictionary</i> → <i>Delete all</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Reset entry history to default		<i>User's dictionary</i> → <i>Reset learning</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i> • Previous Kanji conversions appear first for predicted/conversion alternatives. This action clears conversion history.
Activate or cancel Auto keypad lock	Default Off	<i>Auto keypad lock</i> → Select an item
Activate or cancel Simple Search	Default Off	<i>Simple search</i> → Select an item • <i>On</i> : In Standby, press keys assigned to characters used in Phonebook entry Readings.
Set Side Keys to activate Reject Call or mute ringer	Default Silence	<i>Side key</i> → Select an item • Set handset action when  or  is pressed for 1+ seconds during incoming transmission.
Set Any key answer	Default Off	<i>Any key answer</i> → Select an item • <i>On</i> : Press any key except  , <input type="checkbox"/> ,  ,  ,  and  to answer a call.
Set Keypad Light illumination mode	Default Normal mode	<i>Keypad light</i> → Select an item • <i>Normal mode</i> : Keypad Light illuminates for Backlight Time duration. • <i>Saving mode</i> : Keypad Light turns off for set duration. • To set <i>Saving mode</i> , select Starting time field → Enter time → Ending time field → Enter time →  (Save).









Security Settings **Start Here** → *Settings* → *Security*

Activate or cancel Phone Lock	Default Off	<i>Phone lock</i> → Select an item → Enter Phone Password →  (OK)
Activate or cancel Password Lock	Default Off	<i>Password lock</i> → Select an item → Enter Phone Password →  (OK)
Activate or cancel USIM Lock	Default Off	<i>USIM lock</i> → Select an item → Enter USIM password (4 to 8 digits) →  (OK) → Enter USIM password again as required →  (OK)
Activate or cancel Application Lock	Default Unlock all	<i>Application lock</i> → Check item to lock →  (Save) → Enter Phone Password →  (OK)
Activate or cancel Secret mode	Default Hide	<i>Secret mode</i> → Enter Phone Password →  (OK) → Select an item
Create or cancel Secret folders in Data Folder	Default Hide	<i>Secret data folder</i> → Enter Phone Password →  (OK) → Select an item
Delete Phonebook entries, messages, etc.		<i>Reset</i> → <i>All reset</i> → Enter Phone Password →  (OK) → <i>Yes</i>
Restore Settings to default values		<i>Reset</i> → <i>Reset settings</i> → Enter Phone Password →  (OK) → <i>Yes</i>
Activate or cancel PIN Certification	Default Off	<i>PIN certification</i> → Select an item → Enter PIN →  (OK)
Change PIN		<i>Change PIN</i> → Enter current PIN →  (OK) → Enter new PIN →  (OK) → Enter new PIN again →  (OK)
Change PIN2		<i>Change PIN2</i> → Enter current PIN2 →  (OK) → Enter new PIN2 →  (OK) → Enter new PIN2 again →  (OK)
Change Phone Password	Default 9999	<i>Change password</i> → Enter current password →  (OK) → Enter new password →  (OK) → Enter new password again →  (OK)
Activate Mobile Tracker	Default Off	<i>Mobile tracker</i> → Enter Phone Password →  (OK) → Select Activation field → <i>On</i> → Select Recipients field → Select To field → Enter a recipient →  (Save) → Select Sender field → Enter sender name →  (Save) → Confirm entries →  (Agree) or  (Reject)


Call Settings Start Here → Settings → Call settings

Forward all calls to Voice Mail (7305C does not ring)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail on</i> → <i>Always(0 sec.)</i>
Forward unanswered calls to Voice Mail (specify ring time)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail on</i> → <i>No reply(5 to 30 sec.)</i> → Select call duration
Activate and set Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Call forwarding on</i> → Select a setting → Select an item → Enter number as required
Cancel Voice Mail/Call Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Deactivate All</i> → <i>Yes</i>
Confirm current Voice Mail/Call Forwarding settings	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Get status</i>
Listen to Voice Mail message	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Listen to voice mail</i> → 
Activate or cancel Call Waiting	<i>Optional services</i> → <i>Call waiting</i> → Select an item
Confirm current Call Waiting settings	<i>Optional services</i> → <i>Call waiting</i> → <i>Get status</i>
Set Outgoing Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Outgoing call</i> → Select an item → <i>On or Off</i> → Enter Network Password → <input type="checkbox"/> (OK)
Activate or cancel Incoming Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Incoming call</i> → <i>Bar all incoming calls</i> → Select an item → Enter Network Password → <input type="checkbox"/> (OK)
Cancel all Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Cancel all barring</i> → Enter Network Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Confirm current Call Barring settings	<i>Optional services</i> → <i>Call barring</i> → <i>Get status</i> → Select an item
Change Network Password	<i>Optional services</i> → <i>Call barring</i> → <i>Set security code</i> → Enter current Network Password in Old field <input type="checkbox"/> (OK) → Enter new Network Password in New field → <input type="checkbox"/> (OK) → Enter new Network Password again in Cnf field → <input type="checkbox"/> (OK)
Set Missed Call Notification	<i>Optional services</i> → <i>Missed call notification</i> →  (Call)
Save International Code Default 0046010	<i>Optional services</i> → <i>International call</i> → <i>International code</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Enter an international code

Add/change/delete Country Number Default 1: 日本 (Japan), 2: 韓国 (KOR), 3: イギリス (GBR), 4: イタリア (ITA), 5: スイス (CHE), 6: スペイン (ESP), 7: ドイツ (DEU), 8: ポルトガル (PRT), 9: オランダ (NLD), 0: フランス (FRA), *: モナコ (MCO), #: アメリカ合衆国 (USA), スウェーデン (SWE), オーストラリア (AUS), 中国 (CHN), 香港 (HKG), 台湾 (TWN)	<i>Optional services</i> → <i>International call</i> → <i>Country number</i> → Add, change or delete item ● To add/save, highlight an item from Country code →  (Change) → select Country name field → enter country name → highlight Enter country code field → enter country number →  ● To delete, highlight item →  (Delete) → Yes.
Check Call Time	<i>Call time & cost</i> → <i>All calls</i> ● To reset call time,  (Reset) → Enter PIN2 →  (OK).
Check last Call Time	<i>Call time & cost</i> → <i>Last call</i> ● To reset last call time, press  (Reset).
Check Data Counter	<i>Call time & cost</i> → <i>Data counter</i> ● Total sizes of sent and received data are displayed. ● To reset sent/received data counter, press  (Reset).
Activate or cancel Answering Machine Default Off	<i>Answering machine</i> → <i>Setting</i> → Select an item
Set Answering Machine response time Default 18 seconds	<i>Answering machine</i> → <i>Ringling duration</i> → Select an item →  (Select) ● When <i>Other (0-30secs)</i> is selected, press  to enter time.
Play Answering Machine records	<i>Answering machine</i> → <i>Recordings</i> → Highlight a record →  (Play) ● To delete one record, highlight it →  (Delete) → Yes. ● To delete all records, in list, press  (Delete all) → Enter Phone Password →  (OK) → Yes.
Set Answering Machine response language Default 日本語	<i>Answering machine</i> → <i>Sound language</i> → Select an item ● Press  (Play) to hear response in the selected language.
Accept or reject calls from specified phone numbers Default Off	<i>Reject incoming calls</i> → <i>Reject list</i> → <i>On/Off</i> → Select an item ● When a call from Reject list arrives, a caller hears a busy tone and call is not connected. <i>Rejected</i> appears in Standby. Press  (View) to check missed call.


Create or edit Black List		<p><i>Reject incoming calls</i> → <i>Reject list</i> → <i>Edit black list</i> →  → <i>Add</i> → Add an entry →  (Save)</p> <ul style="list-style-type: none"> To delete saved phone numbers, select <i>Edit black list</i> → highlight phone number →  → <i>Delete</i> → <i>Selected</i> or <i>All</i> → <i>Yes</i>. When <i>All</i> is selected, enter Phone Password.
Accept or reject calls from unknown numbers	Default Off	<i>Reject incoming calls</i> → <i>Unknown</i> → Select an item
Accept or reject calls when number is withheld	Default Off	<i>Reject incoming calls</i> → <i>Withheld</i> → Select an item
Accept or reject calls from payphones	Default Off	<i>Reject incoming calls</i> → <i>Payphone</i> → Select an item
Accept or reject calls when number is unavailable	Default Off	<i>Reject incoming calls</i> → <i>Unavailable</i> → Select an item
Activate or cancel Offline mode	Default Off	<i>Offline</i> → Select an item
Show or hide your own number when placing calls		<p><i>Show my number</i> → <i>On/Off</i> → Select an item</p> <ul style="list-style-type: none"> To check current status, select <i>Get status</i>.
Set 730SC to automatically redial busy numbers	Default Off	<p><i>Auto redial</i> → Select an item</p> <ul style="list-style-type: none"> On: 730SC automatically disconnects call and redials busy numbers. Auto redial repeats up to 10 times until  (Cancel) or  is pressed. If called party uses Call Forwarding or Voice Mail, call is forwarded accordingly.
Activate or cancel automatic ringer reduction	Default On	<p><i>Ringtone reducer</i> → Select an item</p> <ul style="list-style-type: none"> When ringtone volume level is high, the volume level is reduced to Level 1 for the first two seconds, then returns to the set level.
Enable or disable calling via Stereo Earphone Microphone	Default Earphone call: Off	<p><i>Earphone call</i> → <i>Earphone call activate</i> → Select an item → <i>Call number</i> → Add an entry →  (Save)</p> <ul style="list-style-type: none"> On: Press Stereo Earphone Microphone switch for 1+ seconds to call specified number. To change specified number, repeat setup operation, saving the new number.
Adjust Earpiece volume		<i>Hearing volume</i> → Use  to adjust volume →  (Select)



Mode Settings **Start Here** → Settings → Mode settings

Change mode	<i>Normal, Manner, Drive, Meeting or Outdoor</i> • To change settings for each mode, highlight a mode, press  (Edit) and set each item.
-------------	---

Connectivity Settings

Infrared

Start Here  → Settings → Connectivity → Infrared




Activate or cancel Infrared transmission	Default Off <i>Infrared On/Off</i> → Select an item
Transfer Phonebook or Calendar entries at once	<i>Transfer all</i> → Enter Phone Password →  (OK) → Select an item → Enter Authorization Code (4 digits) →  (OK) • For <i>Phonebook</i> , choose <i>Yes</i> to transfer images.

Network

Start Here  → Settings → Connectivity

Retrieve Network Information manually	<i>Retrieve NW info</i> → Yes or No
---------------------------------------	-------------------------------------

Memory Settings **Start Here** → Settings → Memory settings

Confirm total or remaining Phone Memory	<i>Phone memory</i> → <i>Phone memory details</i> • View Phone memory capacity or remaining memory.
Clear Phone Memory	<i>Phone memory</i> → <i>Clear phone memory</i> → Check item to delete →  (Delete) → Enter Phone Password →  (OK) → Yes
View Memory status	<i>Memory status</i> → Select an item • To delete viewed memory, press  (Delete) (➔ P.2-28 Deleting Registered/Saved Data).

Appendix



Battery & Charger	11-2
Before Using Battery or Charger	11-2
Inserting & Removing Battery	11-3
USIM Card	11-4
Information & Precautions	11-4
Inserting & Removing USIM Card	11-5
PIN	11-6
Troubleshooting	11-6
Function List	11-9
Key List for Text Entry	11-10
Symbols	11-11
Memory List	11-12
Specifications	11-12
Index	11-14
Objective Index	11-18
Advanced Settings Index	11-20
Warranty & Service	11-21
Customer Service	11-22

Battery & Charger

Before Using Battery or Charger

Charge battery before first use of 730SC or after long periods of disuse.

Charging Battery

- Long periods of disuse may affect battery's ability to hold a full charge. Charge battery at least once every six months while not in use. Otherwise, battery may become unusable.
- Depending on usage, bulges may appear near end of battery life; this does not affect safety.
- 730SC uses a lithium-ion battery; charge battery in anytime without damaging its ability to hold a charge.
- Do not charge battery under the following conditions:
 - In ambient temperatures beyond 5°C - 40°C
 - In high levels of humidity, vibration or dust (May cause malfunction)
 - Near a radio receiver (May cause feedback)
- 730SC or Charger may warm while charging. This is normal, however, should they become very hot to the touch, stop charging and contact Customer Service (☎P.11-22).

- Battery is a consumable; replace it if operating time shortens noticeably.

Note

- **Use specified Charger only. Do not use it for devices other than 730SC.**
- **Battery must be inside 730SC to charge it.**
- **When not in use, unplug Charger from outlet.**

Battery Life

Battery time/life may be reduced by any of the following:

- Environmental Factors
 - Storing/using 730SC beyond 5°C - 40°C
 - Using 730SC when signal is poor/out-of-range
 - Debris on 730SC, battery or Charger Port
- Operational Factors
 - Camera use
 - Media Player use
 - Heavy Keypad use (e.g., for messaging)
- Settings
 - Increasing *Brightness* or *Backlight time*
 - Using Media Player with Backlight set to *Always on*

Battery Disposal

Do not dispose of exhausted batteries with ordinary refuse. Tape over battery terminals before disposal or take to a SoftBank shop. Follow any and all local regulations regarding battery disposal. Lithium-ion batteries are recyclable.

When Battery Runs Out

When battery is weak, a warning appears and 730SC beeps. Charge or replace battery; otherwise 730SC will automatically turn off.


Inserting & Removing Battery

Inserting


- 1 Press and slide Battery Cover as shown




- 2 Remove Battery Cover

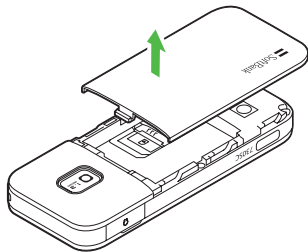

- 3 Fit battery into 730SC as shown

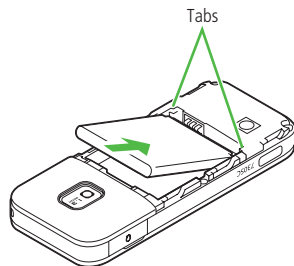

- 4 Replace Battery Cover

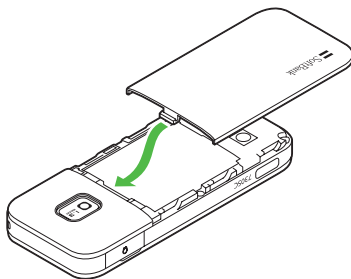


Note

- Remove battery cover with care; stress on tabs may damage them.
- Gently insert battery to avoid damaging 730SC tabs.


Removing

Always turn 730SC off before removing battery. Never remove battery while AC Charger is connected.


- 1 Press and slide Battery Cover as shown

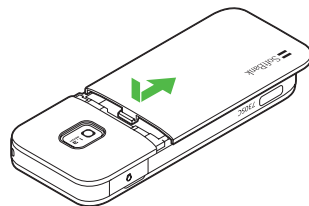

2 Remove Battery Cover

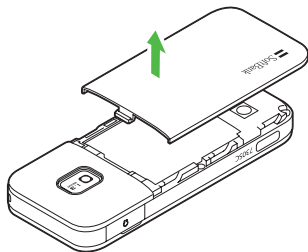


3 Lift battery up and remove as shown

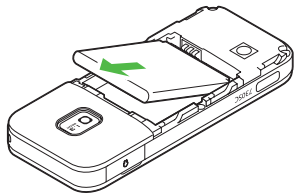

USIM Card

Information & Precautions

 Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number and limited storage for Phonebook entries and SMS. Install USIM Card to use 730SC; turn 730SC power off to insert/remove USIM Card.



USIM Card

Insert USIM Card into another compatible handset to access SMS and Phonebook entries saved on USIM Card. Note the following precautions regarding USIM Card usage and care (see USIM Card User Guide for details):

- Avoid using excessive force when inserting/removing USIM Card.
- SoftBank is not liable for damage resulting from inserting USIM Card into IC card readers or other third party devices.

- Always keep USIM Card IC chip clean.
- Clean USIM Card IC chip with a soft, dry cloth.
- Do not attach labels to USIM Card; malfunction may result.

Note


- **USIM Card is the property of SoftBank.**
- **If USIM Card is lost or damaged, you will be charged for reissuing it.**
- **Return USIM Card to SoftBank upon termination of subscription.**
- **Returned USIM Cards are recycled.**
- **USIM Card specifications may change without prior notice.**
- **If USIM Card or 730SC with USIM Card inserted is lost or stolen in Japan or abroad, immediately contact Customer Service (☎P.11-22) to suspend service.**
- **Handset/USIM Card repairs, replacement or upgrades may deactivate Chaku-Uta[®], Chaku-Uta Full[®] or video files on handset.**
- **Back-up USIM Card files. SoftBank is not liable for lost files.**

Inserting & Removing USIM Card


Always turn power off before opening 730SC to remove battery or insert/remove USIM Card.

Inserting

- 1 Remove battery (ⓍP.11-3)
- 2 With IC chip down, insert USIM Card into card slot as shown in the illustration

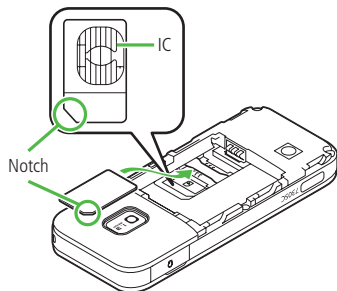


- 3 Push in USIM Card until it stops and locks

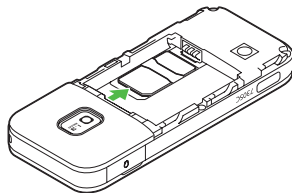

Removing

- 1 Remove battery (ⓍP.11-3)
- 2 Press down on USIM Card and gently slide it out

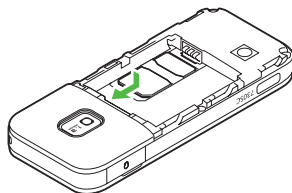

Note

- Inserting USIM Card with excessive force may damage it or 730SC.
- Do not misplace a removed USIM Card.
- To prevent damaging it, avoid touching the IC chip when inserting or removing USIM Card. Do not touch battery contacts.

PIN

USIM Card features 2 security codes: PIN and PIN2.

PIN

Use PIN (4- to 8-digit) to prevent unauthorized use of 730SC by others.

- Modify PIN (ⓘP.8-2).
- When PIN lock is activated, PIN entry is required each time 730SC is turned on or whenever USIM Card is re-inserted (ⓘP.8-2).

PIN2

PIN2 (4- to 8-digit) is required for Reset Call Cost or Edit Cost Limit, etc.

- Modify PIN2 (ⓘP.8-2).

Canceling PIN Lock (PUK/PUK2 Code)

Incorrectly entering PIN or PIN2 three consecutive times activates PIN Lock and limits 730SC function access. Enter PUK (PIN Unlocking Key) Code to cancel PIN Lock.

For more information, contact Customer Service (ⓘP.11-22).

Note

- Entering PUK or PUK2 incorrectly ten consecutive times locks USIM Card and deactivates 730SC. Take a note of PUK and PUK2.
- A locked USIM Card cannot be unlocked. Contact Customer Service (ⓘP.11-22).

Troubleshooting

730SC does not turn on

- Is battery empty?
 - ➔ Replace or charge battery.
- Is battery installed in 730SC?
 - ➔ Install battery correctly.

When power is turned on, PIN entry window appears

- Is *PIN certification* set to *On*?
 - ➔ If *PIN certification* is *On*, enter PIN.

When power is turned on, USIM password entry window appears

- Is *USIM lock* set to *On*?
 - ➔ If *USIM lock* is *On*, enter USIM password.

■ **Please insert USIM card, Incorrect USIM or USIM card failed appears when 730SC is turned on or executing a function**

- ☑ Is USIM Card correctly installed?
 - ➔ Check to see if USIM Card is correctly installed. If the message appears even though USIM Card is correctly installed, it may be damaged.
- ☑ Is USIM Card still being loaded?
 - ➔ Try again after a while.
- ☑ Is an incorrect USIM Card used?
 - ➔ Check to see if correct USIM Card is used. Use USIM Card specified by SoftBank.
- ☑ Is there debris on USIM Card IC chip?
 - ➔ Remove debris with a clean, dry cloth, and then install USIM Card correctly.


■ **圏外 or Out appears and no calls can be made**

- ☑ 730SC is out-of-range.
 - ➔ Move to a place where the signal is stronger and try again.

■ **Calls are interrupted or disconnected**

- ☑ Does 圏外 or **Out** appear?
 - ➔ Move to a place where the signal is stronger and try again.
- ☑ Is battery empty?
 - ➔ Replace or charge battery.

■ **Unable to make a call**

- ☑ Is Call Barring set?
 - ➔ Deactivate Call Barring.
- ☑ Is *Offline* set to *On*? ( appears)
 - ➔ Set *Offline* to *Off*.
- ☑ Has prepaid card or balance expired?
 - ➔ Register a new prepaid card to add airtime.

■ **Unable to open Phonebook entry, Data Folder, Call Log, Calendar or Messaging**

- ☑ Is *Application lock* set?
 - ➔ Cancel *Application lock*.

■ **Clicking noise is heard during a call**

- ☑ Noise may be generated when signal is weak or while moving between coverage areas.

■ **Unable to charge battery**

- ☑ Is AC Charger Connector securely inserted?
 - ➔ Insert AC Charger Connector securely.
- ☑ Is AC Charger plug securely inserted?
 - ➔ Insert AC Charger plug securely.
- ☑ Is battery installed in 730SC?
 - ➔ Install battery correctly.
- ☑ Are 730SC terminals and AC Charger clean?
 - ➔ Clean contacts with a dry cotton swab.
- ☑ Was battery charged in ambient temperature below 5 °C or above 40 °C?
 - ➔ Charge battery in ambient temperature between 5 °C and 40 °C.
- ☑ Battery may need to be replaced.
 - ➔ Install a new battery.
- ☑ Does battery always lose its charge quickly after being charged?
 - ➔ Battery life has expired. Replace with a new battery.
- ☑ Does 730SC or battery become very warm during charging?
 - ➔ If the temperature rises too much, charging may stop. After 730SC and battery are cool, retry charging.

■ Devices become hot

- ☑ During charging, AC Charger may heat up.
- ☑ 730SC may heat up during charging/long calls.
- ➔ If 730SC is safe to touch, heat level is normal. If it is too hot to touch, immediately stop charging and contact Customer Service (☎P.11-22).

■ Battery drains quickly

- ☑ Battery may drain quickly depending on the operating environment (Ambient temperature, charging conditions or signal strength), operations and settings.
- ➔ Use 730SC in an appropriate environment and reduce operations requiring high power (☎P.11-2).

■ Display flickers

- ☑ Is 730SC used near a fluorescent light?
- ➔ Use 730SC as far away from a fluorescent light as possible.

■ Display is dim or unlit

- ☑ This may be due to the characteristics of Display and not a problem. The time (seconds) until Display is dimmed or unlit can be changed by adjusting the Backlight time.


■ Unable to play music via speaker

- ☑ Is *Manner mode* set?
 - ➔ Cancel *Manner mode*.
- ☑ Is the stereo earphone microphone connected?
 - ➔ Disconnect the connector for the stereo earphone microphone from 730SC.

■ Too many applications are already running. appears

- ☑ Too many functions are active.
 - ➔ Close some.

■ Phonebook entry, Message folder, schedule event in Calendar, or Tasks do not appear

- ☑ In *Security*, is *Secret mode* set to *Hide*?
 - ➔ In *Security*, set *Secret mode* to *Show*.
- ☑ Is *Secret* of each function set to *On*?
 - ➔ Press  and select *Unlock temporarily* on the window you want to display information.

■ Sending failed appears

- ☑ If send fails, error message and reason appear.
 - ➔ Confirm reason and try again.

■ Service not allowed appears

- ☑ 730SC is outside the service area.
 - ➔ Send from within the service area.

■ Offline mode set. appears

- ☑ In Offline mode, handset transmissions are disabled.
 - ➔ Cancel Offline mode then try again.

■ Storage space short by ** bytes. Edit data folder files? appears

- ☑ 730SC memory is full.
 - ➔ Delete unnecessary files and try again.

■ Unable to call via Stereo Earphone Microphone

- ☑ Is *Earphone call activate* set to *Off*?
 - ➔ Even if *Earphone call* number is saved, if *Earphone call activate* is set to *Off* it will not be dialed. Set *Earphone call activate* to *On*.

Function List

Main Menu Item	Page
Messaging	
Received messages	P.4-8, P.4-9
Create new	P.4-3
Retrieve new	P.4-18
Drafts	P.4-9, P.4-20
Templates	P.4-9, P.4-16, P.4-17
Sent messages	P.4-9
Unsent	P.4-9
Server mail	P.4-21
Create new SMS	P.4-5
Settings	P.10-2
Memory Status	P.2-20
Call log	
Received calls	P.3-6
Dialed calls	P.3-6

Main Menu Item	Page
Media Player	
Music	P.6-3
Movie	P.6-5
Settings	P.10-6
Calendar	P.7-2
Camera	
Take photo	P.5-4
Record video	P.5-6
Data Folder	
Pictures	P.2-16
My Pictograms	P.2-16
Ring songs · tones	P.2-16
Music	P.2-16
Videos	P.2-16
Graphic Mail templates	P.2-16
Other documents	P.2-16
Memory status	P.2-16
Tools	
Alarms	P.7-3
Calculator	P.7-4
Converter	P.7-4
World clock	P.7-5
Notepad	P.7-5
Tasks	P.7-6

Main Menu Item	Page
Tools	
Voice recorder	P.7-6
Stopwatch	P.7-7
Phonebook	
Phonebook	P.2-13
Create new entry	P.2-12
Group settings	P.2-25
Account details	P.2-15
Speed dial	P.3-5
Settings	P.10-8
Memory status	P.2-24
Settings	
Sounds & Alerts	P.10-8
Manner mode settings	P.10-9
Display settings	P.10-9
Phone settings	P.10-10
Security	P.10-12
Call settings	P.10-13
Mode settings	P.10-16
Connectivity	P.10-16
Memory settings	P.10-16

Key List for Text Entry

Multiple characters are assigned to each key. Press a key repeatedly until the target character appears.

Key	Kanji/Hiragana	Katakana	Alphanumerics	Numbers
	あいうえお あいうえお 1	アイウエオ アイウエオ 1	.@_/:~ ¹ 1	1
	かきくけこ 2	カキクケコ 2	ABCabc2	2
	さしすせそ 3	サシスセソ 3	DEFdef3	3
	たちつとっ 4	タチツテト 4	GHIghi4	4
	なにぬねの 5	ナニヌネノ 5	JKLjkl5	5
	はひふへほ 6	ハヒフヘホ 6	MNOmno6	6
	まみむめも 7	マミムメモ 7	PQRSpqrs7	7
	やゆよゃゅょ 8	ヤユヨヤ ヨ 8	TUVtuv8	8
	らりるれろ 9	ラリルレロ 9	WXYZwxyz9	9
	わをん、。 - 0	ワヲン、。 - 0	,.-_!? <Space> 0	0
	<ul style="list-style-type: none"> • Add ° /° to unfixed, convertible kana • Toggle Pictograms, Emoticons 		• Toggle Pictograms, Emoticons	
	• Toggle Double-byte Symbols, Single-byte Symbols			
	• Reverse toggle characters assigned to the same key before finalizing character selection			—
	• Toggle upper/lower-case			

¹ When double-byte, "~~" cannot be used ("~" appears on Display).

Memory List

S! Mail/SMS (Phone memory)	Received messages	Up to 1000 messages or 5MB
	Drafts	Up to 20 messages or 1MB
	Sent messages	Up to 250 messages or 1MB
	Unsent	Up to 20 messages or 1MB
SMS	USIM card	Up to 10 messages
Data Folder	Pictures	Up to 999 items (files/subfolders) per folder or 36MB (all folders)
	My Pictograms	
	Ring songs · tones	
	Music	
	Videos	
	Graphic Mail templates	
	Other documents	

Specifications

730SC specifications may change without prior notice.

SoftBank 730SC

Item	Specification
Weight	95.9 g*
Continuous Talk Time	Voice Call: 270 minutes*
Continuous Standby Time (Turning off Display)	500 hours*
Dimensions (W x H x D)	44.5 x 107.9 x 14.7 mm*
Maximum Output	0.25 W

*Approximate Value

- 730SC with battery installed.
- Battery Time is calculated by SoftBank under stable signal conditions. Calling in poor signal conditions or leaving 730SC on out-of-range will consume more power and may reduce Battery Time by more than half.
- Frequent 730SC operations requiring Backlight may reduce Continuous Talk Time and Continuous Standby Time.
- Using video for Wallpaper may significantly reduce Continuous Talking and Continuous Standby Times.
- Continuous Talk Time is an average measured with a battery in stable signal conditions. Continuous Standby Time is an average measured with a new, fully charged battery with 730SC without calls or operations, in Standby, in stable signal conditions. Alternating between usage and Standby shortens Continuous Talk Time and Continuous Standby Time. Talk Time/Standby Time may vary by environment (battery status, ambient temperature, etc.).

Battery

Item	Specification
Voltage	3.7 V
Type	Lithium-ion
Capacity	880 mAh
Dimensions (W x H x D)	36.0 x 43.6 x 5.5 mm* (without protruding parts)

* Approximate Value

Index

A

AC Charger	1-4
Account details	2-15
Reset	2-26
Alarms	7-3
All reset	8-6
Answering Machine	3-4
Cancel	3-4
Play recordings	3-4
Set	3-4
Any key answer	10-11
Application lock	8-4
Auto Keypad Lock	8-3, 10-11
Auto redial	10-15

B

Battery	11-2
---------	------

C

Calculator	7-4
Calendar	7-2
Delete schedule	7-8
Display settings	7-9
Holiday	7-9
Schedule	7-2, 7-8

View schedule	7-3, 7-8
Call barring service	3-8, 3-12
Call forwarding service	3-7, 3-10
Call log	3-6
Check	3-6
Delete	3-7
Call time & cost	3-5
Check	3-6
Reset	3-6
Call waiting service	3-7, 3-11
Camera	5-2
Attach to message for sending still image	5-8
Attach to message for sending video	5-9
Capture video	5-6
Effect	5-7, 5-9
Frame shot	5-6
Multi-shot	5-5
Normal	5-3
Photo Combination	5-5
Quick play	5-8
Self-timer	5-7, 5-9
Send a still image via infrared	5-8
Send video via infrared	5-9
Settings	10-7
Shortcut operations	5-4, 5-7
Viewfinder	5-3
Cancel PIN lock	8-3
Center access code	1-12
Change mode	1-8

Change mode settings	1-9
Phone sounds	1-9, 1-12
Phone sounds volume	1-9
Volume	1-9
Change PIN	8-2
Change PIN2	8-2
Charge	1-4
Charger Port	1-3
Clear memory	8-6
Convert currency or unit	7-4
Copy item	2-24, 2-26
Country number	10-14

D

Data Folder	2-16
Date & Time	10-10
Daylight saving time	7-11
Display	1-3
Backlight	10-10
Brightness	10-9
Clock/Calendar	10-9
Dialing display	10-10
Font size	10-9
Operator name	10-10
Wallpaper	2-4
Display language	10-10

E

Earphone call	10-15
Emergency call	1-13
Emergency Location Report	1-13
External light	1-9

F

File	2-17
Copy	2-19
Delete	2-20
Details	2-26
Displayed icon	2-16, 2-17
Lock/Unlock	2-27
Rename file	2-18
Set image to Wallpaper etc.	2-27
Set Ringtone	2-27
Sort	2-26
Folder	2-18
Copy	2-19
Create	2-18
Delete	2-20
Rename folder	2-18

G

Group call	3-8, 3-12
Group call operations	3-12

H

Hearing volume	3-15, 10-15
----------------	-------------

I

International code	10-13
--------------------	-------

K

Key Lock	1-6
----------	-----

M

Make a call	3-2
Make international call	3-15
Manner mode	1-7
Media Player	6-2
Add to Playlist	6-7, 6-8
Adjust Tone volume	10-6
Create Playlist	6-6
Play music	6-3
Play Playlist	6-7
Play video	6-5
Repeat mode	10-6
Settings	10-6
Shortcut operations	6-4, 6-5
Video resolution	6-9
Memory Status	2-16, 2-20
Message	4-2
Action settings	4-15
Add new folder	4-12

Add text template	2-21
Attach a file	4-3
Change folder name	4-22
Character code	4-18
Create	4-3, 4-5
Delete	4-11, 4-18
Delete messages in server	4-22
Delete template	2-21
Details	4-18
Draft message indicators	4-10
Drafts	4-9
Feeling Setting	4-14
Forward	4-9
Forward messages in server	4-21
Graphic mail	4-4, 4-16
Indicators for attached files	4-4
Lock	4-19
Mail Server	4-2, 4-8
Mailbox	4-9
Memory status	4-22
Message list view	4-20, 10-3
Message notice	10-2
Move	4-13
Picture appearance	4-18
Receive server mail	4-21
Received message indicators	4-10
Received messages	4-9
Reply	4-8, 4-19
Retrieve all mails	4-21
Retrieve mail list	4-21

Retry function	4-2	Mute	1-9	PIN2	11-6
Save attachment	4-19	N		Power On/Off	1-6
Save to drafts	4-14	Network password	1-13	Prediction On/Off	2-22
Scroll jump	4-18	Change	3-14	PUK Code	8-3
Scroll unit	4-15, 4-18	Notepad	7-5	R	
Send from Drafts	4-20	O		Receive a call	3-3
Send Graphic template	4-16	P		Record	3-16
Send unsent message	4-21	Offline mode	1-7	Reject incoming calls	10-14
Sending options	4-15, 4-17	Password lock	8-4	Edit black list	10-15
Sent message indicators	4-10	Phone lock	8-3	Payphone	10-15
Sent messages	4-9	Phone Password	1-12, 8-2	Reject list	10-14
Server mail	4-21	Phonebook	2-10	Side key	10-11
Server mail memory	4-22	Copy	2-24	Unavailable	10-15
Set secret	4-22	Default number	2-24	Unknown	10-15
SMS	4-2, 4-17	Delete	2-15	Withheld	10-15
Sort	4-13	Edit	2-25	Reset settings	8-6
Sort by	4-20	Group	2-23	Ringtone reducer	10-15
S! Mail	4-2	Save	2-12	S	
Templates	4-9	Search	2-13	Secret data folder	8-5
Unlock	4-19	Set Secret mode	2-22	Secret mode	8-4
Unsent	4-9	Setting search method	2-14	Security code	1-12
Unsent message indicators	4-10	Picture browser	2-17	Select function from Main Menu	2-2
View	4-6, 4-9	PIN	11-6	Select function with Switch Bar	2-3
View attachment	4-19	PIN Certification	8-2	Select item with keypad	2-2
3D Pictogram display	4-15, 4-18	PIN lock	8-3	Send DTMF	3-16
3D Pictograms	4-7			Shortcuts	2-3
3D pictogram display setting	10-3				
Missed call	3-3				
Mobile tracker	8-5				
Multi Selector Operations	vi				

Show my number	3-8, 3-14
Side key	10-11
Simple search	2-14, 10-11
Slide show	2-26
Softkey	v
Sounds & Alerts	1-9
Speaker phone call	3-15
Speed dial	3-5
Stopwatch	7-7

T

Tasks	7-6, 7-12
Delete	7-12
Text	2-5
Text entry	2-5
Copy	2-22
Cursor position	2-22
Cut	2-22
Delete	2-9
Edit	2-9
Enter emoticon	2-7
Enter pictogram	2-7
Enter symbol	2-7
Entry Mode	2-5
Paste	2-22
Quick Address List	2-23
Undo	2-22
Time zone	10-10

U

User's dictionary	2-9
Add	2-9
USIM Card	11-4
Insert/remove	11-5
USIM lock	8-3
USIM password	8-3

V

vFile	2-16, 2-27
Via infrared	9-2
Authorization Code	9-2
Receive data	9-3, 9-4
Send data	9-3, 9-4
Vibration	1-9, 2-23, 7-10
View Account details	2-15
Voice Call	3-2
Adjust ringtone volume	3-3
Put a call on hold	3-15
Voice mail service	3-7, 3-8
Voice recorder	7-6
Lock/Unlock sound files	7-13
Play sound files	7-7
Record settings	7-13
Record sound	7-7
Send sound files	7-13

W

World clock	7-5
-------------	-----

Objective Index

Adjust volume

Hearing volume	3-15, 10-15
Media Player	10-6
Phone sounds	1-9
Ringtone volume	1-9, 3-3

Cancel/Unlock

Answering Machine	3-4
Call forwarding	3-10
Call waiting	3-11
File lock	2-27
Locked messages	4-19
Manner mode	1-8
Offline mode	1-7
Phonebook Secret mode	2-22
PIN lock	8-3
Voice mail	3-9

Change

Font size	10-9
Mode	1-8
Network Password	3-14
Phone Password	8-2
PIN	8-2
PIN2	8-2

Copy

File/Folder	2-19
Items	2-24, 2-26
Phonebook	2-24
Text	2-22

Delete/Clear

Calendar	7-8
File/Folder	2-20
Messages	4-11, 4-22
Phonebook	2-15
Tasks	7-12

Edit

Calendar	7-8
Phonebook	2-25
Text	2-9

Insert/Remove

Battery	11-3
USIM Card	11-5

Make

Emergency call	1-13
International call	3-15
Voice Call	3-2

Play

Voice recorder	7-7
Answering Machine	3-4
Media Player	6-3, 6-5

Protect/Lock

File	2-27
Messages	4-19
Phonebook Secret mode	2-22

Receive

Messages	4-10, 4-21
Via infrared	9-3, 9-4

Reset

Account details	2-26
All reset	8-6
Call time & cost	3-6
Reset settings	8-6

Save

Messages	2-21, 4-19
Phonebook	2-10, 2-12
User's dictionary	2-9

Search

Phonebook	2-13
-----------	------

Send

Messages	4-3, 4-5
Via infrared	9-3, 9-4

Set

All keys lock	1-6
Answering Machine	3-4
Any key answer	10-11
Calendar	7-9
Call barring	3-8, 3-12
Call forwarding	3-10
Call waiting	3-11
Clock/Calendar	10-9
Date & Time	10-10
Images	2-27
International code	10-13
Manner mode	1-8

Media Player	10-6
Mode	1-9
Offline mode	1-7
Phone lock	8-3
Phone sounds	1-9
Phonebook	2-14
Photo/Video	10-7
Reject incoming calls	10-14, 10-15
Secret mode	8-4
Side key	10-11
Simple search	10-11
Sounds & Alerts.	1-9
Voice mail	3-8

Show

Calendar	7-2
Call log	3-6
Data Folder	2-16

View

Account details	2-15
Calendar	7-3
Call log	3-6
Call time & cost	3-6
Memory status	2-20
Messages	4-6, 4-9, 4-19, 4-22

Advanced Settings Index

Account Details	2-26	Voice Call	3-14
Alarm	7-10	Voice Recorder	7-13
Auto Keypad Lock	8-3	World Clock	7-11
Basic Operations	2-21		
Calendar	7-8		
Call Log Records	3-16		
Capturing Still Images	5-7		
Currency/Unit Conversion	7-11		
File/Folder Management	2-26		
Folder Management	4-22		
Group Call	3-17		
Memory Status	2-28		
Music Playback	6-7		
Notepad	7-11		
Phonebook	2-22		
Playlist	6-9		
Received Messages	4-18		
Sending S! Mail	4-14		
Sending SMS	4-17		
Tasks	7-12		
Text Entry	2-21		
User's Dictionary	2-22		
Using & Managing Messages	4-19		
Video Playback	6-8		
Viewing Files	2-26		

Warranty & Service

Warranty

730SC purchase includes Warranty.

- Confirm shop name and date of purchase.
- Read through the contents of the Warranty and keep it in a safe place.
- The warranty period can be found in the Warranty.

SoftBank is not liable for damage to you or a third party from missed calls, etc. due to handset failure or malfunction, etc.

Repair Requests

Before submitting 730SC for repair, consult the "Troubleshooting" for a solution. If a problem persists, contact Customer Service (☎P.11-22) or the nearest SoftBank shop; be prepared to describe problem in detail.

- During the warranty period, repairs will be made under the terms and conditions described in the warranty.
- After the warranty period, repairs will be upon request; if said repairs can be made, you will be charged for them.

Note

- 730SC files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. like Phonebook entries. SoftBank is not liable for damage resulting from accidental loss or alteration of 730SC files (Phonebook, Data Folder, etc.) or settings.
- Disassembling or modifying this product may be a violation of the Radio Law. Note that SoftBank will not accept repair requests for disassembled or modified products.

Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.









SoftBank Customer Center

From a SoftBank handset, dial 157 for General Information, or 113 for Customer Assistance, toll free

SoftBank Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(Please take care to dial correctly. International charges will apply.)

Call these numbers toll free from landlines.

Subscription Areas	Contact	
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	 0088-240-157
	Customer Assistance	 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	 0088-241-157
	Customer Assistance	 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	 0088-242-157
	Customer Assistance	 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	 0088-250-157
	Customer Assistance	 0088-250-113

SoftBank 730SC User Guide

September 2008, First Edition

SOFTBANK MOBILE Corp.



モバイル・リサイクル・ネットワーク
携帯電話・PHSのリサイクルにご協力を。

To help protect the environment and recycle valuable resources, mobile phone, and PHS shops displaying the above mark accept mobile phones, batteries, and chargers of all manufacturers.

Mobile phones, batteries, and chargers collected for recycling cannot be returned.

To protect your privacy, delete any personal information (telephone numbers, call log records, messages, etc.) beforehand.

For more information, please visit your nearest SoftBank Shop.

Model Name: SoftBank 730SC

Manufacturer: Samsung Electronics Co., Ltd.
