

Internet Services




Internet	5-2
Secured Communication (SSL/TLS)	5-2
Opening Saved Pages	5-2
Yahoo! Keitai	5-3
Yahoo! Keitai Main Menu	5-3
Yahoo! Keitai Menu List	5-3
Entering URL	5-3
Entering URL from History	5-3
PC Site Browser	5-4
PC Site Browser Homepage	5-4
Entering URL	5-4
Entering URL from History	5-4
Page Operations	5-5
Selecting Menu	5-5
Entering Text	5-5
Page Zoom	5-5
Multi Page (Tab)	5-5
Buttons and Check Boxes	5-6
Bookmarks & Saved Pages	5-7
Saving Bookmarks	5-7
Accessing Bookmarks	5-7
Saving Pages	5-7
Opening Saved Pages	5-7
Advanced Settings	
Yahoo! Keitai	5-8
PC Site Browser	5-10
Page Operations	5-12
Bookmarks	5-13
Saved pages	5-15

Internet

Access Mobile sites via Yahoo! Keitai or Internet sites via PC Site Browser.

View Web page contents or download media files.

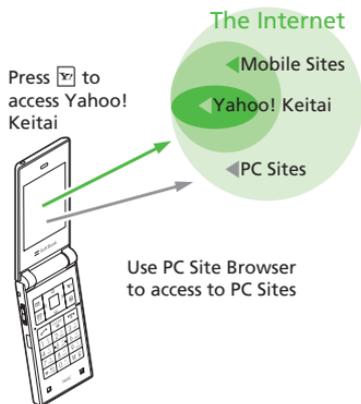

- In this guide, "Yahoo! Keitai" refers to the SoftBank Mobile Internet portal and service itself. "PC sites" are sites accessible via PC Site Browser. "Internet" refers to both Internet and Mobile Internet sites.
- A separate subscription is required for Internet services.
- Before using Internet, retrieve Network information.

Note

- Internet connections incur Packet Communication fees.

Secured Communication (SSL/TLS)

Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols for secure Internet transmissions of important/sensitive information (credit card numbers, etc.) and authentication.

Confirm electronic certificates saved on handset (☞ P.5-9, P.5-12).

Note

- Using SSL/TLS
When a security notice appears, subscribers must decide whether or not to open a page. Opening secure pages constitutes agreement to the terms of usage, SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co., Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust Systems Co.,Ltd. are not liable for the security of SSL/TLS. No liability is assumed for any damage associated with SSL/TLS use.

Opening Saved Pages

Retrieved Mobile Internet pages are temporarily saved in Cache. Cache remains even after a session ends or handset is turned off. When Cache is full, oldest pages are automatically deleted to make room for new ones.

When a saved page is opened again, it may open from Cache. For the latest content, reload the page.

- When another USIM Card is inserted, Cache contents are automatically deleted.
- When a page with an expiry date is saved, page is automatically deleted upon expiry.

Yahoo! Keitai

Use Yahoo! Keitai to view page contents or download image/music files.

Alternatively, access Yahoo! Keitai from Main menu, Menu list or Access History, or by entering URL.

Yahoo! Keitai Main Menu

Access Mobile sites via Yahoo! Keitai main menu.

1 

2 Select an item

- When accessing Mobile Internet for the first time, Retrieve NW info window appears after Step 1. Retrieve Network information to open a page.
- To change to a PC Site Browser from Yahoo! Keitai page, press  on Yahoo! Keitai page → **Manage content** → **Switch to PC site browser** → **This page** or **link** → If a warning appears, press  (OK) → Choose **Yes** or **No**.

Note

- When **Send referer** is set to **Not send**, pages may not appear (P.5-9).

Yahoo! Keitai Menu List

Access Mobile sites via Yahoo! Keitai menu list.

1  → **Yahoo!** → **Menu list**

2 Select an item

Entering URL

Enter URL from Yahoo! Keitai Enter URL window to access target page.

1  → **Yahoo!** → **Enter URL**

- "http://" is set in URL field by default.

2 Enter URL

Entering URL from History

Accessed URLs from Yahoo! Keitai are saved in Yahoo! Keitai Access History.

Select site from Access History to access target page.

1  → **Yahoo!** → **History**

2 Select site

Advanced

 **Advanced Settings** (P.5-8)

- Moving to Next Page
- Copying Text
- Refreshing Page
- Entering URL to Open Another Site/Page
- Entering URL Quickly
- Entering URL from History
- Sending Access History
- Deleting Access History
- Moving to Main Menu
- Exiting Browser

 **Settings**

- Change page font size (P.13-6)
- Set page scroll unit (P.13-6)
- Show or hide page images (P.13-6)
- Play or mute page sounds (P.13-6)
- Delete cache/Cookie/certificates (P.13-6)
- Show or hide Manufacture Number (P.13-6)
- Send or hide Referer (P.13-6)
- Select Cookie setting (P.13-6)
- Select Script setting (P.13-6)
- Confirm Root Certificate (P.13-6)
- Set Certificate retention period (P.13-6)
- Initialize Browser (P.13-6)
- Reset settings (P.13-6)

PC Site Browser

Use PC Site Browser to view page contents or download image/music files from PC sites. Alternatively, access PC sites from Main menu, Access History, or by entering URL.

PC Site Browser Homepage

Access PC sites via PC Site Browser Homepage.

1 → *Yahoo!* → *PC site browser* → *Homepage*

- If a warning message appears, press  (OK) and choose *Yes* or *No*.

2 Select an item

- Activate PC Site Browser,  appears.
- Some sites may not appear correctly.
- To open Yahoo! Keitai page, press  → *Manage content* → *Switch to Yahoo! Keitai* → *This page* or *link* → If a warning message appears, press  (OK) → Choose *Yes* or *No*.

Note

- When *Send referer* is set to *Not send*, pages may not open (⊕P.5-11).
- Viewing rich content sites may incur high Packet Communication fees.

Entering URL

Enter URL from PC Site Browser Enter URL window to access target page.

1 → *Yahoo!* → *PC site browser* → *Enter URL*

- "http://" is set in URL field by default.

2 Enter a URL

- If a warning appears, press  (OK) and choose *Yes* or *No*.

Entering URL from History

Accessed URLs from PC Site Browser are saved in History.

Select site from History to access target page.

1 → *Yahoo!* → *PC site browser* → *History*

2 Select site

- If a warning appears, press  (OK) and choose *Yes* or *No*.

Advanced

Advanced Settings (ⓘ P.5-10)

- Moving to Next Page
- Copying Text
- Refreshing Page

- Entering URL to Open Another Site/Page
- Entering URL Quickly
- Entering URL from History
- Sending Access History
- Deleting Access History
- Opening Main Menu
- Changing Page Layout
- Exiting Browser

Settings

- Change page font size (ⓘ P.13-7)
- Set page scroll unit (ⓘ P.13-7)
- Show or hide page images (ⓘ P.13-7)
- Play or mute page sounds (ⓘ P.13-7)
- Delete cache/Cookie/certificates (ⓘ P.13-7)
- Show or hide Manufacture Number (ⓘ P.13-7)
- Send or hide Referer (ⓘ P.13-7)
- Select Cookie setting (ⓘ P.13-7)
- Select Script setting (ⓘ P.13-7)
- Confirm Root Certificate (ⓘ P.13-7)
- Set Certificate retention period (ⓘ P.13-7)
- Show or hide warning (ⓘ P.13-7)
- Initialize Browser (ⓘ P.13-7)
- Reset settings (ⓘ P.13-7)

Page Operations

Text and pictures shown in page can be zoomed in/out.

Alternatively, select menu to link target page, set function with radio button.

Selecting Menu



Yahoo! Keitai Window

1 Use to scroll up, to scroll down

- Press  or  to scroll up or down by multiple lines.
- When a horizontal scroll bar appears, use  or  to scroll to the left or right.

2 Highlight the target menu → (Select)

- Press  (Back) or  with no previous page, you are prompted to close Internet connection. Choose **Yes** to close it.
- Press  (Back) or  to return previous page.
- Highlight a link and press  (Select); move to target page.
-  → Select **Next** to back to the status before pressing  (Back) or  (Clear).

Entering Text



1 Select Text field

2 Enter text

Note

- Text entry and item selection varies by page.

Page Zoom

1 → **Manage content** → **Zoom in/out**

2 Use to select a magnification → (Save)



Multi Page (Tab)

Use tabs at top of Display to open pages. Open up to three pages simultaneously.



1 Display a page

To open in a new tab

Highlight a link to display →  → *Tab menu* → *Open new tab*

To switch tabs

 → *Tab menu* → *Switch to other tabs* → Use  to switch to a tab to display →  (Select)

To close a selected tab


 → *Tab menu* → *Close selected tab*

To select and close a tab

 → *Tab menu* → *Close other tabs* → Use  to switch to a tab to close →  (Select)

- Yahoo! Keitai and PC sites cannot be open simultaneously.
- Some pages may open in a new tab automatically.
- When multiple tabs are open, some pages may be partially obscured. Close unnecessary tabs.

Buttons and Check Boxes

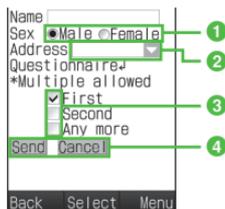

- 1** Radio button
Select an item only.
Highlight an item with  →  (Select)
(Appearing as )
- 2** Menu field
Open a menu and select an item.
Highlight a menu →  (Select) →
Highlight an item →  (Select)
- 3** Check box
Select multiple items. Highlight items with  →  (Select) (Appearing as )
- 4** Command button
Perform operations assigned to a button.
Highlight a command button →  (Select)

Advanced

 *Advanced Settings* (☞ P.5-12)

 *Settings*

- Change page font size (☞ P.13-6, P.13-7)
- Set page scroll unit (☞ P.13-6, P.13-7)
- Show or hide page images (☞ P.13-6, P.13-7)
- Play or mute page sounds (☞ P.13-6, P.13-7)
- Change font size for menu list (☞ P.13-12)
- Set text size in Yahoo! Keitai pages (☞ P.13-12)
- Set text size in PC Site Browser (☞ P.13-12)

Bookmarks & Saved Pages

Save site URLs to Bookmarks. Save page content to Saved Pages. Open pages without establishing an Internet connection.

Saving Bookmarks

Save up to 50 bookmarks for Yahoo! Keitai and PC Site Browser, each.

- 1 Open a page
- 2  → *Bookmarks* → *Save*
- 3 Enter title

Accessing Bookmarks

- 1  → *Yahoo!* → *Bookmarks*
 - To access from the bookmark of PC Site Browser,  → *Yahoo!* → *PC site browser* → Select *Bookmarks*.

- 2 Select a bookmark

Note

- Internet connections may incur Packet Communication fees.

Saving Pages

Save pages to view without connecting to the Internet.

Save up to 30 Yahoo! Keitai and PC site pages, each.

- 1 Open a page
- 2  → *Saved pages* → *Save*
- 3 Enter title

Opening Saved Pages

- 1  → *Yahoo!* → *Saved pages*
 - To open a saved PC site page,  → *Yahoo!* → *PC site browser* → Select *Saved pages*.

- 2 Select a saved page

Note

- If USIM Card inserted when pages was saved is replaced, saved page will not open.

Advanced

 **Advanced Settings** (P.5-13)

- Saving Bookmark by Direct Entry
- Sending Bookmark URL via message
- Sending Bookmark URL via Infrared
- Changing Bookmark Order
- Saving Bookmark to Data Folder
- Viewing Bookmark Details
- Deleting Yahoo! Keitai Bookmark
- Deleting PC Site Browser Bookmark
- Renaming Saved Pages
- Changing Order of Saved Pages
- Deleting Yahoo! Keitai Saved Pages
- Deleting PC Site Browser Saved Pages

Advanced Settings

Yahoo! Keitai

Moving to Next Page

In a page, **[Yr]** → *Next*

Copying Text

In a page, **[Yr]** → *Copy text*

To copy selected text

Use **[X]** to move cursor to the first character to copy and press **[S]** (Start) → Use **[X]** to specify a range → **[E]** (End)

To copy all text in text entry window

[Yr] (All)

Refreshing Page

In a page, **[Yr]** → *Refresh*

Entering URL to Open Another Site/Page

In a page, **[Yr]** → *Enter URL* → Enter URL

Entering URL Quickly

In URL entry window, **[Yr]** → *Quick address list*
→ Select an item

Entering URL from History

In URL entry window, **[Yr]** → *Enter URL logs*
→ Select a URL

- In URL entry window, enter URL from History. Up to 10 URL logs appear, newest first. When limit is reached, the oldest page is deleted automatically.

Switching Browser

In a page, **[Yr]** → *Manage content* → *Switch to PC site browser* → Select an item

- If a warning appears, press **[S]** (OK) and choose *Yes* or *No*.
- *Link* can be selected only when a link in a page is selected.

Searching Text

In a page, **[Yr]** → *Manage content* → *Search* → Enter a word to search for

- Words that match are highlighted. Press **[P]** (Prev.) or **[N]** (Next) to search for the previous or next match. To return to a page, press **[Yr]** (Cancel).

Moving to Top/Bottom of Page

In a page, **[Yr]** → *Manage content* → *Jump to top* or *Jump to bottom*

Sending URL

In a page, **[Yr]** → *Manage content* → *Send URL* → *S! Mail* or *SMS* → (P.4-4 S! Mail ②, P.4-7 SMS ②)

Opening Previously Viewed Page

From Yahoo! Keitai

[S] → *Yahoo!* → *History* → Select a URL to open

From a page

In a page, **[Yr]** → *Manage content* → *History* → Select a URL to open

- Up to 50 accessed URLs are saved.

Sending Access History

[S] → *Yahoo!* → *History* → Select a URL to send → **[Yr]** → *Send URL* → *S! Mail* or *SMS* → (P.4-4 S! Mail ②, P.4-7 SMS ②)

- Alternatively, in a page, **[Yr]** → *Manage content* → *History* → Highlight a URL to send → **[S]** → *Send URL* → Select *S! Mail* or *SMS*.

Deleting Access History

[S] → *Yahoo!* → *History*

To delete an item

Highlight a URL to delete → **[Yr]** → *Delete* → *Selected* → *Yes*

To delete multiple items

[Yr] → *Delete* → *Multiple* → Check histories to delete → **[S]** (Delete) → *Yes*

To delete all items

[Yr] → *Delete* → *All* → Enter Phone Password → **[S]** (OK) → *Yes*

- Alternatively, in a page, press **[Yr]** → *Manage content* → *History* → Highlight a URL to delete → **[S]** → Select *Delete*.

Viewing Only Selected Frame

In a page,  → *Manage content* → *Frame in*

- Some pages may be divided into multiple sections. Such a section is referred to as a "Frame".
- To return to the normal display,  → *Manage content* → Select *Frame out*.

Viewing Page Details

In a page,  → *Manage content* → *Details*

■ To view Page information

Page information

■ To view Server certificate

Server Certificate

Moving to Main Menu

In a page,  → *Yahoo! Keitai*

Changing Font Size

In a page,  → *Settings* → *Font size* → Select an item

Changing Character Code

In a page,  → *Settings* → *Encoding* → Select an item

- If page text appears garbled, changing character encoding may solve the problem.

Changing Scroll Unit

In a page,  → *Settings* → *Scroll unit* → Select an item

Setting Show/Play of Image/Sound

In a page,  → *Settings* → *Downloads*

■ To set image

Display image → Select an item

■ To set sound

Play sounds → Select an item

Clearing Cache

In a page,  → *Settings* → *Memory manager* → *Clear cache* → *Yes*

Deleting Cookies

In a page,  → *Settings* → *Memory manager* → *Delete cookies* → *Yes*

Deleting Certificates

In a page,  → *Settings* → *Memory manager* → *Delete certificates* → *Yes*

Setting Manufacture Number Notification

In a page,  → *Settings* → *Security* → *Manufacture number* → Select an item

Sending/Not Sending Referrer Information

In a page,  → *Settings* → *Security* → *Send referrer* → Select an item

- Referrer is a link source URL information. It is sent to Web server when accessing websites.

Enabling Cookies

In a page,  → *Settings* → *Security* → *Cookies* → Select an item

- Select *Confirm* for acceptance confirmation every time before a Cookie is saved.
- Cookie automatically saves identification information of visitors in handset. Cookies contain user information that allows sites to recognize users and track preferences.

Enabling Script

In a page,  → *Settings* → *Security* → *Script* → Select an item

Checking Root Certificates

In a page,  → *Settings* → *Security* → *Root certificates* → Select a certificate

- View electronic certificate preinstalled on handset.

Certificate Retention

In a page,  → *Settings* → *Security* → *Certificate retention* → Select an item

Initializing Saved Information

In a page,  → *Settings* → *Initialized browser* → Enter Phone Password →  (OK) → *Yes*

- Initialize browser settings or information such as Bookmarks or Saved Pages.

Resetting Yahoo! Keitai Settings

In a page, **[Yr]** → **Settings** → **Reset settings** → Enter Phone Password → **[OK]** (OK) → **Yes**

Exiting Browser

In a page, **[Yr]** → **Exit**

PC Site Browser

Moving to Next Page

In a page, **[Yr]** → **Next**

Copying Text

In a page, **[Yr]** → **Copy text**

■ To copy selected text

Use **[F2]** to move cursor to the first character to copy and press **[Start]** → Use **[F2]** to select a range → **[End]**

■ To copy all text in text entry window

[Yr] (All)

Refreshing Page

In a page, **[Yr]** → **Refresh**

Entering URL to Open Another Site/Page

In a page, **[Yr]** → **Enter URL** → Enter a URL

Entering URL Quickly

In URL entry window, **[Yr]** → **Quick address list** → Select an item

Entering URL from History

In URL entry window, **[Yr]** → **EnterURL logs** → Select a URL

- In URL entry window, enter URL from History. Up to 10 URL logs appear, newest first. When limit is reached, the oldest page is deleted automatically.

Switching Browser

In a page, **[Yr]** → **Manage content** → **Switch to PC site browser** → Select an item

- If a warning appears, press **[OK]** (OK) and choose **Yes** or **No**.
- **Link** appears only if a page link is selected.

Searching Text

In a page, **[Yr]** → **Manage content** → **Search** → Enter a word to search for

- Matching words are highlighted. Press **[Prev.]** or **[Next.]** to search for previous or next match. To return to a page, press **[Cancel]**.

Moving to Top/Bottom of Page

In a page, **[Yr]** → **Manage content** → **Jump to top** or **Jump to bottom**

Sending URL

In a page, **[Yr]** → **Manage content** → **Send URL** → **S! Mail** or **SMS** → (P.4-4 S! Mail **2**), P.4-7 SMS **2**)

Opening Previously Viewed Page

■ From PC Site Browser

[OK] → **Yahoo!** → **PC site browser** → **History** → Select a URL to open

■ From a page

In a page, **[Yr]** → **Manage content** → **History** → Select a URL to open

- Up to 50 accessed page URLs are saved.

Sending Access History

■ → **Yahoo!** → **PC site browser** → **History** → Select a URL to send → [Y] → **Send URL** → **S! Mail** or **SMS** → (P.4-4 S! Mail ②, P.4-7 SMS ②)

- Alternatively, in a page, [Y] → **Manage content** → **History** → Highlight a URL to send → [Y] → **Send URL** → **S! Mail** or **SMS**.

Deleting Access History

■ → **Yahoo!** → **PC site browser** → **History**

■ To delete an item

Highlight a URL to delete → [Y] → **Delete** → **Selected** → **Yes**

■ To delete multiple items

[Y] → **Delete** → **Multiple** → Check histories to delete → [X] (Delete) → **Yes**

■ To delete all items

[Y] → **Delete** → **All** → Enter Phone Password → [OK] (OK) → **Yes**

- Alternatively, in a page, press [Y] → **Manage content** → **History** → Highlight a URL to delete → [Y] → Select **Delete**.

Viewing Only Selected Frame

In a page, [Y] → **Manage content** → **Frame in**

- Some pages may be divided into multiple sections. Such a section is referred to as a "Frame".
- To return to the normal display, [Y] → **Manage content** → Select **Frame out**.

Viewing Page Details

In a page, [Y] → **Manage content** → **Details**

■ To view Page information

Page information

■ To view Server certificate

Server certificate

Opening Main Menu

In a page, [Y] → **Homepage**

Changing Font Size

In a page, [Y] → **Settings** → **Font size** → Select an item

Changing Character Code

In a page, [Y] → **Settings** → **Encoding** → Select an item

- If page text appears garbled, changing character encoding may solve the problem.

Changing Scroll Unit

In a page, [Y] → **Settings** → **Scroll unit** → Select an item

Setting Show/Play of Image/Sound

In a page, [Y] → **Settings** → **Downloads**

■ To set image

Display image → Select an item

■ To set sound

Play sounds → Select an item

Clearing Cache

In a page, [Y] → **Settings** → **Memory manager** → **Clear cache** → **Yes**

Deleting Cookies

In a page, [Y] → **Settings** → **Memory manager** → **Delete cookies** → **Yes**

Deleting Certificates

In a page, [Y] → **Settings** → **Memory manager** → **Delete certificates** → **Yes**

Setting Manufacture Number Notification

In a page, [Y] → **Settings** → **Security** → **Manufacture number** → Select an item

Sending/Not Sending Referer Information

In a page, [Y] → **Settings** → **Security** → **Send referer** → Select an item

- Referer is a link source URL information. It is sent to Web server when accessing websites.

Enabling Cookies

In a page, [Y] → **Settings** → **Security** → **Cookies** → Select an item

- Select **Confirm** for acceptance confirmation every time before a Cookie is saved.
- Cookie automatically saves identification information of visitors in handset. Cookies contain user information that allows sites to recognize users and track preferences.

Enabling Script

In a page,  → **Settings** → **Security** → **Script**
→ Select an item

Checking Root Certificates

In a page,  → **Settings** → **Security** → **Root certificates** → Select an item

- View electronic certificate preinstalled on handset.

Certificate Retention

In a page,  → **Settings** → **Security** → **Certificate retention** → Select an item

Setting to Show Warning Messages

In a page,  → **Settings** → **Warning messages**
→ **Activate PC site browser** or **Switch to Yahoo! Keitai** → Select an item

- Always show or hide warning when activating PC Site Browser, or switching between Yahoo! Keitai and PC Site Browser or vice versa.

Initializing Saved Information

In a page,  → **Settings** → **Initialized browser**
→ Enter Phone Password →  (OK) → **Yes**

- Initialize browser settings or information such as Bookmarks or Saved Pages.

Resetting PC Site Browser

In a page,  → **Settings** → **Reset settings** →
Enter Phone Password →  (OK) → **Yes**

Changing Page Layout

In a page,  → **Small screen** or **PC screen**

Exiting Browser

In a page,  → **Exit**

Page Operations

Saving Phone Number/E-mail Address

In a page containing phone number/E-mail address → **Save Number** → **Phone** or **USIM**

■ To save as a new entry

New → (📞P.2-15 Saving as A New Entry ②)

■ To update entry

Update → Search Phonebook and select entry (📞P.2-17) → Enter each item (📞P.2-15 Saving as A New Entry ②)

- Available phone numbers, mail addresses appear underlined.

Sending Mail to Number/Mail Address

In a page containing phone number/E-mail address → **Create Message** → **S! Mail** or **SMS**
→ (📞P.4-4 S! Mail ⑤, P.4-7 SMS ⑤)

- Available phone numbers, mail addresses appear underlined.

Calling Phone Number

In a page containing phone number, select phone number → **Voice Call**

- Available phone numbers appear underlined.

Using URL to Open Another Page

In a page, select URL

- Available URLs appear underlined.

Saving Images or Other Files from Pages

To save page images

In a page that shows images,  → *Save files* → *Save items* → Select an image to save → *Save* or *Save to Pictograms*

- For Yahoo! Keitai, if multiple images appear, select image to save.

To save background images

In a page with background images,  → *Save files* → *Save BG image* → *Save*

To save background sound

In a page with background sound,  → *Save files* → *Save items* →  (Save)

- Cannot be saved with PC Site Browser.

To save linked page

In a page including links, highlight a file link to save →  (Select) → *Save*

- For Auto Save files, select the link to save files.
- The following operations are available when you highlight a link and press  (Select) or save a file (Available options vary by file type).

Display: Open files

Play: Play files (e.g., media file)

Set as: Save file to Wallpaper or Ringtone

Details: Show file details

Back to browser: Return to page

- If files with same name exist, warning appears, choose **Yes** to save it with a different name. Choose **No** to edit the file name.

Bookmarks

Opening Bookmarked Site

In a page,  → *Bookmarks* → *Open list* → Select a bookmark to open

- To open in a new tab, highlight bookmark →  → Select *Open new tab*.

Editing Bookmark Title or URL

In Yahoo! Keitai

 → *Yahoo!* → *Bookmarks* → Highlight bookmark →  (Edit) → Select Title field → Edit title → Select URL field → Edit URL →  (Save)

In PC Site Browser

 → *Yahoo!* → *PC site browser* → *Bookmarks* → Highlight bookmark →  (Edit) → Select Title field → Edit title → Select URL field → Edit URL →  (Save)

In a page

In a page,  → *Bookmarks* → *Open list* → Highlight bookmark →  (Edit) → Select Title field → Edit title → Select URL field → Edit URL →  (Save)

Saving Bookmark by Direct Entry

In Yahoo! Keitai

 → *Yahoo!* → *Bookmarks* →  → *Add bookmark* → Select Title field → Enter title → Select URL field → Enter URL →  (Save)

In PC Site Browser

 → *Yahoo!* → *PC site browser* → *Bookmarks* →  → *Add bookmark* → Select Title field → Enter title → Select URL field → Enter URL →  (Save)

In a page

In a page,  → *Bookmarks* → *Open list* →  → *Add bookmark* → Select Title field → Enter title → Select URL field → Enter URL →  (Save)

Sending Bookmark URL via message

In Yahoo! Keitai

 → *Yahoo!* → *Bookmarks* → Highlight bookmark →  → *Send* → *Via message* → *S! Mail* or *SMS* → (☎P.4-4 S! Mail , P.4-7 SMS )

In PC Site Browser

 → *Yahoo!* → *PC site browser* → *Bookmarks* → Highlight bookmark →  → *Send* → *Via message* → *S! Mail* or *SMS* → (☎P.4-4 S! Mail , P.4-7 SMS )

In a page

In a page,  → *Bookmarks* → *Open list* → Highlight bookmark →  → *Send* → *Via message* → *S! Mail* or *SMS* → (☎P.4-4 S! Mail , P.4-7 SMS )

Sending Bookmark URL via Infrared

In Yahoo! Keitai

▣ → *Yahoo!* → *Bookmarks* → Highlight bookmark →  → *Send* → *Via infrared* (ⓅP.12-3)

In PC Site Browser

▣ → *Yahoo!* → *PC site browser* → *Bookmarks* → Highlight bookmark →  → *Send* → *Via infrared* (ⓅP.12-3)

In a page

In a page,  → *Bookmarks* → *Open list* → Highlight bookmark →  → *Send* → *Via infrared* (ⓅP.12-3)

Changing Bookmark Order

In Yahoo! Keitai

▣ → *Yahoo!* → *Bookmarks* → Highlight bookmark →  → *Change order* → Use  to move cursor to a destination →  (Select)

In PC Site Browser

▣ → *Yahoo!* → *PC site browser* → *Bookmarks* → Highlight bookmark →  → *Change order* → Use  to move cursor to a destination →  (Select)

In a page

In a page,  → *Bookmarks* → *Open list* → Highlight bookmark →  → *Change order* → Use  to move cursor to a destination →  (Select)

Saving Bookmark to Data Folder

In Yahoo! Keitai

▣ → *Yahoo!* → *Bookmarks* → Highlight bookmark →  → *Save to data folder* → *Phone* or *Memory card* → *Yes*

In PC Site Browser

▣ → *Yahoo!* → *PC site browser* → *Bookmarks* → Highlight bookmark →  → *Save to data folder* → *Phone* or *Memory card* → *Yes*

In a page

In a page,  → *Bookmarks* → *Open list* → Highlight bookmark →  → *Save to data folder* → *Phone* or *Memory card* → *Yes*

- To save a file to *Memory Card*, insert Memory Card.

Viewing Bookmark Details

In Yahoo! Keitai

▣ → *Yahoo!* → *Bookmarks* → Highlight bookmark →  → *Details*

In PC Site Browser

▣ → *Yahoo!* → *PC site browser* → *Bookmarks* → Highlight bookmark →  → *Details*

In a page

In a page,  → *Bookmarks* → *Open list* → Highlight bookmark →  → *Details*

Deleting Yahoo! Keitai Bookmark

▣ → *Yahoo!* → *Bookmarks*

To delete an item

Highlight bookmark →  → *Delete* → *Selected* → *Yes*

To delete multiple items

 → *Delete* → *Multiple* → Check bookmark →  (Delete) → *Yes*

To delete all items

 → *Delete* → *All* → Enter Phone Password →  (OK) → *Yes*

- Alternatively, in a page,  → *Bookmarks* → *Open list* → Highlight bookmark →  → Select *Delete*.

Deleting PC Site Browser Bookmark

▣ → *Yahoo!* → *PC site browser* → *Bookmarks*

To delete an item

Highlight bookmark →  → *Delete* → *Selected* → *Yes*

To delete multiple items

 → *Delete* → *Multiple* → Check bookmark →  (Delete) → *Yes*

To delete all items

 → *Delete* → *All* → Enter Phone Password →  (OK) → *Yes*

- Alternatively, in a page,  → *Bookmarks* → *Open list* → Highlight bookmark →  → Select *Delete*.

Saved pages

Opening Saved Pages in a Page

In a page,  → *Saved pages* → *Open list* → Select a saved page to open

- To open in a new tab, highlight saved page →  → Select *Open new tab*.

Renaming Saved Pages

In Yahoo! Keitai

 → *Yahoo!* → *Saved pages* → Highlight entry →  → *Rename* → Enter a name

In PC Site Browser

 → *Yahoo!* → *PC site browser* → *Saved pages* → Highlight entry →  → *Rename* → Enter a name

In a page

In a page,  → *Saved pages* → *Open list* → Highlight entry →  → *Rename* → Enter a name

Changing Order of Saved Pages

In Yahoo! Keitai

 → *Yahoo!* → *Saved pages* → Highlight entry →  → *Change order* → Use  to move cursor to a destination →  (Select)

In PC Site Browser

 → *Yahoo!* → *PC site browser* → *Saved pages* → Highlight entry →  → *Change order* → Use  to move cursor to a destination →  (Select)

In a page

In a page,  → *Bookmarks* → *Open list* → Highlight entry →  → *Change order* → Use  to move cursor to a destination →  (Select)

Deleting Yahoo! Keitai Saved Pages

 → *Yahoo!* → *Saved pages*

To delete an item

Highlight entry →  → *Delete* → *Selected* → *Yes*

To delete multiple items

 → *Delete* → *Multiple* → Check entry →  (Delete) → *Yes*

To delete all items

 → *Delete* → *All* → Enter Phone Password →  (OK) → *Yes*

- Alternatively, in a page,  → *Saved pages* → *Open list* → Highlight entry →  → Select *Delete*.

Deleting PC Site Browser Saved Pages

 → *Yahoo!* → *PC site browser* → *Saved pages*

To delete an item

Highlight entry →  → *Delete* → *Selected* → *Yes*

To delete multiple items

 → *Delete* → *Multiple* → Check entry →  (Delete) → *Yes*

To delete all items

 → *Delete* → *All* → Enter Phone Password →  (OK) → *Yes*

- Alternatively, in a page,  → *Saved pages* → *Open list* → Highlight entry →  → Select *Delete*.

