

Entertainment

Entertainment	8-2
S! Information Channel	8-3
Service Registration	8-3
New Received Information	8-3
Using Weather Indicator	8-3
Free Contents	8-3
Advanced Settings	
S! Information Channel	8-4




Entertainment

View or download various content by accessing the Internet. Alternatively, retrieve information automatically by registering content. In this chapter, methods of downloading and using contents are described.

Note

Following content require a separate subscription.

- S! Information Channel
- S! Addressbook Back-up

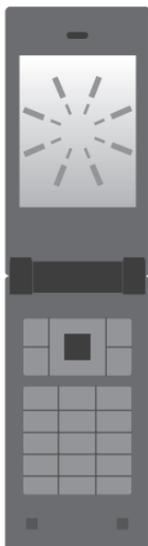

S! Information Channel/Weather (⊕P.8-3)



Free Contents (⊕P.8-3)



S! Addressbook Back-up (⊕P.12-7)

S! Information Channel

S! Information Channel delivers subscribed content such as news overnight. Weather Indicator appears in Standby.

- This service is only available in Japan.
- S! Information Channel requires a separate subscription.

Service Registration

1  → *Entertainment* → *S! Information Channel/Weather* → *Registration/Cancel*

2 Follow onscreen instruction

New Received Information

S! Information Channel content is received automatically; notification appears in Standby.

1 While notification is displayed,  (View)

2 Follow onscreen instruction

- Operations are the same as Yahoo! Keitai.

Using Weather Indicator

Upon subscription to S! Information Channel, Weather Indicator appears in Standby.

-  : Clear skies (daytime)
-  : Clear skies (nighttime)
-  : Cloudy
-  : Rain
-  : Snow
-  : Thunderstorm
-  : and then
-  : with some

Example:    → Cloudy with some rain

- In addition to the above, other information such as rainfall probability or seasonal information appears.

Note

- When using S! Information Channel, Packet Communication fees apply.

Advanced

 **Advanced Settings**  P.8-4

 **Settings**

- Show or hide Weather Indicator ( P.13-8)
- Set Weather Indicator update notification ( P.13-8)
- Set Weather Indicator automatic update ( P.13-8)

Free Contents

Access Free Contents download site (no Information fees) from preinstalled shortcut. Download Graphic Mail items.

1  → *Entertainment* → *Free Contents*

2 *Tada-Deco (Graphic Mail)*

3 Follow onscreen instructions

- Operations are the same as Yahoo! Keitai.

Note

- Packet Communication fees apply for downloading Free Contents.

Advanced Settings

S! Information Channel

Viewing after Indicator Disappears

■ → *Entertainment* → *S! Information Channel/Weather* → *What's new?*

Viewing Previously Received Information

■ → *Entertainment* → *S! Information Channel/Weather* → *History* → Select an item

Receiving Information You Failed to Receive

■ → *Entertainment* → *S! Information Channel/Weather* → *Get latest contents* → *Yes*

Displaying Weather Indicator

■ → *Entertainment* → *S! Information Channel/Weather* → *Weather Indicator* → *Weather*

Updating Weather Indicator Manually

■ → *Entertainment* → *S! Information Channel/Weather* → *Weather Indicator* → *Manual update* → *Yes*