

Handset Customization




Messaging Settings	13-2
Custom Mail Address	13-2
S! Mail & SMS	13-2
S! Mail	13-4
SMS	13-5
Internet Settings	13-6
Yahoo! Keitai	13-6
PC Site Browser	13-7
Entertainment Setting	13-8
S! Information Channel	13-8
Camera Settings	13-8
Camera & Video Camera	13-8
Photo	13-8
Video	13-9
Media Player Settings	13-9
Music	13-9
Movie	13-10
Phonebook Function Settings	13-10
Phonebook Settings	13-10
Sounds & Vibrator & External Light Settings	13-11
Sounds & Vibrator	13-11
External Light Settings	13-12
Display Settings	13-12
Phone Settings	13-14
Handset Setting	13-14
Security Settings	13-16
Call Settings	13-17
Manner Mode Settings	13-21

Connectivity Settings	13-21
Infrared	13-21
Card Reader	13-21
Network	13-21
Memory Settings	13-22
Backup Settings	13-22
Backup Settings	13-22


Messaging Settings

Custom Mail Address

Customize or change handset mail address	 → <i>Settings</i> → <i>Custom mail address</i> → Follow onscreen instructions <ul style="list-style-type: none">• Change mail account name (alphanumerics before @). Random alphanumerics set by default.
--	---

S! Mail & SMS

Start Here

 → *Settings* → *Universal settings*

Change font size	Default Standard	<i>Font size</i> → Select an item
Change scroll unit	Default Single line	<i>Scroll unit</i> → Select an item
Request or cancel Delivery Report	Default Off	<i>Delivery report</i> → Select an item <ul style="list-style-type: none">• On: Receive a message confirming successful delivery of a sent message.
Insert or hide Signature	Default Off	<i>Signature</i> → <i>Auto insert</i> → Select an item
Edit Signature		<i>Signature</i> → <i>Edit</i> → Enter signature
Set or cancel Auto Delete for received messages when Received memory is full	Default On (Auto delete)	<i>Auto delete</i> → <i>Received msg.</i> → Select an item <ul style="list-style-type: none">• Set if messages are automatically deleted when memory space of <i>Received msg.</i> is full. On (Auto delete): Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is Off, memory full confirmation appears. Delete messages and retry. Off: Memory full confirmation appears. Delete messages and retry.
Set or cancel Auto Delete for sent messages when Sent memory is full	Default On (Auto delete)	<i>Auto delete</i> → <i>Sent msg.</i> → Select an item <ul style="list-style-type: none">• Set whether to delete messages automatically when memory space of <i>Sent msg.</i> or <i>Unsent messages</i> is full. On (Auto delete): Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is Off or <i>Unsent</i> is full, memory full confirmation appears. Delete messages and retry. Off: Memory full confirmation appears. Delete messages and retry.

Show or hide transmission progress bar	Default Show	<i>Sending progress settings</i> → <i>Sending progress</i> → Select an item
Always show or hide send result (progress bar hidden)	Default With notice	<i>Sending progress settings</i> → <i>Sending result notice</i> → Select an item <ul style="list-style-type: none"> • <i>Sending result notice</i> is only selectable when <i>Sending progress</i> is set to Do not show.
Set received message notice content or hide notice	Default Sender	<i>Message notice</i> → <i>View setting</i> → Select an item <ul style="list-style-type: none"> • Received message notice scrolls above active function windows.
Select secret folder message notice setting	Default Show	<i>Message notice</i> → <i>Secret folder</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select an item <ul style="list-style-type: none"> • Not show: Incoming message notice window for messages sorted to secret folders or <i>Message notice</i> does not appear.
Change message list view	Default 2 line	<i>Message list view</i> → Select an item
Change received message view	Default Folder view	<i>Received msg. view</i> → Select an item
Change sent message view	Default Folder view	<i>Sent msg. view</i> → Select an item
Adjust 3D Pictogram auto play setting		<i>3D pictograms</i> → <i>3D Picto. Auto play</i> → Select an item <i>Always</i> : Show 3D Pictogram for all messages <i>Only unread</i> : Show 3D Pictogram for unread messages only <i>Disable</i> : Hide 3D Pictogram <ul style="list-style-type: none"> • The first time a received message is viewed <i>3D Picto., Auto Play</i> confirmation appears.
Select 3D Pictogram color settings	Default Pattern 1	<i>3D pictograms</i> → <i>Color settings</i> → Use <input type="checkbox"/> to change patterns → <input type="checkbox"/> (Select) <ul style="list-style-type: none"> • In <i>Color settings</i>, press <input type="checkbox"/> (Preview) for current settings.
Select 3D Pictogram display speed	Default Standard	<i>3D pictograms</i> → <i>Display speed</i> → Select an item <ul style="list-style-type: none"> • In <i>Display speed</i>, press <input type="checkbox"/> (Preview) for current settings.



S! Mail

Start Here




→ *Settings* → *S! Mail settings*


Set message sending priority	Default Normal	<i>Sending options</i> → <i>Priority</i> → Select an item
Set sent message Mail Service Center expiry	Default Maximum	<i>Sending options</i> → <i>Expiry time</i> → Select an item <ul style="list-style-type: none"> When the expiry time has elapsed, S! Mails are automatically deleted from Mail Server.
Set time to send a message via Mail Service Center	Default Immediately	<i>Sending options</i> → <i>Delivery time</i> → Select an item <ul style="list-style-type: none"> When set time has elapsed, Mail Service Center sends S! Mail message.
Set S! Mail receiving options	Default Auto download	<i>Receiving options</i> → <i>Home auto settings</i> → Select an item <i>Auto download</i> : Receive S! Mail messages automatically. <i>From number only</i> : Receive only S! Mail messages sent by a phone number. <i>Manual retrieval</i> : Receive only S! Mail reception notification.
Set S! Mail receiving options during roaming	Default Auto download	<i>Receiving options</i> → <i>Roaming auto settings</i> → Select an item <i>Auto download</i> : Receive S! Mail messages automatically. <i>Manual retrieval</i> : Receive only S! Mail reception notification. <ul style="list-style-type: none"> When you set <i>Auto download</i>, an entire message including any attachments will be automatically downloaded, resulting in high Packet Communication charges for your messaging overseas.
Select reply setting	Default Off	<i>Replay settings</i> → Select an item <i>On</i> : Replies to sent messages are automatically addressed to " <i>Reply to</i> " address <i>Off</i> : Replies to sent messages are addressed to handset number/mail address <ul style="list-style-type: none"> Set address that appears in To: field of replies to messages sent from handset.
Set "reply to" address		" <i>Reply to</i> " address → Enter an item → Enter address
Show or hide emotion in received Feeling Mail Notification	Default On	<i>Link to feeling</i> → <i>Idle screen Info.</i> → Select an item
Link External Light to incoming Feeling Mail	Default On	<i>Link to feeling</i> → <i>External light</i> → <i>On/Off</i> → Select an item
Link Vibration to incoming Feeling Mail	Default On	<i>Link to feeling</i> → <i>Vibration pattern</i> → Select an item
Set whether to sound handset when Feeling Mail arrives	Default On	<i>Link to feeling</i> → <i>Ringtone</i> → <i>On/Off</i> → Select an item

Linking Ringtone to incoming Feeling Mail Default Happy/Glad: One fine Day.mp4, OK/Good: Sunny day.mp4, Sad/Sorry: Jazzy House_Pleasure.mp4, NG/Bad: Minimal Tone.mp4, Important/Notice: On my way home.mp4	<i>Link to feeling</i> → <i>Ringtone</i> → <i>Assign tone</i> → Select a feeling → Select a save location → Highlight a Ringtone →  (Play) →  (Select)
Set Feeling Mail ringtone duration Default 5 seconds	<i>Link to feeling</i> → <i>Ringtone</i> → <i>Duration</i> → Enter time
Set attached image appearance Default Normal	<i>Picture appearance</i> → Select an item
Set attached image auto playback Default On	<i>Auto play file</i> → <i>Picture</i> → Select an item
Set attached sound auto playback Default Off	<i>Auto play file</i> → <i>Sound</i> → Select an item

SMS

Start Here

 → *Settings* → *SMS settings*

Set Mail Service Center message expiry time Default None	<i>Expiry time</i> → Select an item <ul style="list-style-type: none"> • Upon expiry Mail Service Center SMS messages are automatically deleted.
Set Message Center Number Default Setting 1 +819066519300	<i>Message center</i> → Select an item
Edit Message Center Number Default +819066519300	<i>Message center</i> → Highlight text to edit →  (Edit) → Edit Message Center number
Change character code Default Unicode	<i>Char-code</i> → Select an item

Internet Settings

Yahoo! Keitai

Start Here



→ *Yahoo!* → *Browser settings*

Change page font size	Default Standard	<i>Font size</i> → Select an item
Set page scroll unit	Default Single line	<i>Scroll unit</i> → Select an item
Show or hide page images	Default On	<i>Downloads</i> → <i>Display image</i> → Select an item ● Select <i>Off</i> to help reduce download time.
Play or mute page sounds	Default On	<i>Downloads</i> → <i>Play sounds</i> → Select an item ● Select <i>Off</i> to help reduce download time.
Delete cache/Cookie/certificates		<i>Memory manager</i> → Select an item → <i>Yes</i>
Show or hide Manufacture Number	Default On	<i>Security</i> → <i>Manufacture number</i> → Select an item ● <i>On</i> : Handset automatically sends Manufacture Number to websites upon request as user ID.
Send or hide Referer	Default Send	<i>Security</i> → <i>Send referer</i> → Select an item
Select Cookie setting	Default Enabled	<i>Security</i> → <i>Cookies</i> → Select an item
Select Script setting	Default Ask NW access	<i>Security</i> → <i>Script</i> → Select an item
Confirm Root Certificate		<i>Security</i> → <i>Root certificates</i> → Select a certificate
Set Certificate retention period	Default Per browsing	<i>Security</i> → <i>Certificate retention</i> → Select an item
Initialize Browser		<i>Initialized browser</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Reset settings		<i>Reset settings</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>

PC Site Browser

Start Here

→ *Yahoo!* → *PC site browser* → *PC site browser settings*

Change page font size	Default Standard	<i>Font size</i> → Select an item
Set page scroll unit	Default Single line	<i>Scroll unit</i> → Select an item
Show or hide page images	Default On	<i>Downloads</i> → <i>Display image</i> → Select an item <ul style="list-style-type: none"> • Select <i>Off</i> to help reduce download time.
Play or mute page sounds	Default On	<i>Downloads</i> → <i>Play sounds</i> → Select an item <ul style="list-style-type: none"> • Select <i>Off</i> to help reduce download time.
Delete cache/Cookie/certificates		<i>Memory manager</i> → Select an item → <i>Yes</i>
Show or hide Manufacture Number	Default On	<i>Security</i> → <i>Manufacture number</i> → Select an item <ul style="list-style-type: none"> • <i>On</i>: Handset automatically sends Manufacture Number to websites upon request as user ID.
Send or hide Referer	Default Send	<i>Security</i> → <i>Send referer</i> → Select an item
Select Cookie setting	Default Enabled	<i>Security</i> → <i>Cookies</i> → Select an item
Select Script setting	Default On	<i>Security</i> → <i>Script</i> → Select an item
Confirm Root Certificate		<i>Security</i> → <i>Root certificates</i> → Select a certificate
Set Certificate retention period	Default Per browsing	<i>Security</i> → <i>Certificate retention</i> → Select an item
Show or hide warning	Default Activate PC browser: On, Switch to Yahoo! Keitai: On	<i>Warning messages</i> → <i>Activate PC site browser</i> or <i>Switch to Yahoo! Keitai</i> → Select an item <ul style="list-style-type: none"> • Show or hide PC Site Browser activation, or Yahoo! Keitai/PC Site Browser switching warning.
Initialize Browser		<i>Initialized browser</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Reset settings		<i>Reset settings</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>

Entertainment Setting

S! Information Channel

Start Here




 → *Entertainment* → *S! Information Channel/Weather* → *Weather Indicator* → *Settings*

Show or hide Weather Indicator	Default On	<i>Display setting</i> → Select an item
Set Weather Indicator update notification	Default On	<i>Missed event setting</i> → Select an item
Set Weather Indicator automatic update	Default On	<i>Auto update</i> → Select an item

Camera Settings

Camera & Video Camera




Start Here

 → *Camera* → *Camera or Video camera* →  → *Highlight*  → *Settings* → *General* tab

Show or hide Indicators	Default On	<i>Indicators</i> → Select an item <ul style="list-style-type: none"> ● <i>On</i>: Indicator icon appears.
Activate or cancel Auto Save	Default Off	<i>Auto save</i> → Select an item <ul style="list-style-type: none"> ● <i>On</i>: Images or video is automatically saved after capturing or recording. ● <i>Off</i>: Save image or video each time capturing or recording.
Show or hide menu item guidance	Default On	<i>Help</i> → Select an icon <ul style="list-style-type: none"> ● <i>On</i>: Guidance information appears for selected menu item.

Photo

Start Here

 → *Camera* → *Camera or Video camera* →  → *Highlight*  → *Settings* → *Photo* tab

Select Quality	Default Normal	<i>Quality</i> → Select an item
Set ISO	Default Auto	<i>ISO</i> → Select an item
Set Exposure metering	Default Center-weight	<i>Exposure metering</i> → Select an item

Set save location when Memory Card is inserted	Default Phone	<p><i>Save to</i> → Select an item</p> <ul style="list-style-type: none"> When image size is set to 240 × 320, <i>Digital camera</i> is unselectable. Memory Card must be inserted to select it as save location. If Memory Card is not inserted, images are automatically saved to handset.
Show or hide Guideline	Default Off	<i>Guideline</i> → Select an item
Set Shutter sound	Default Pattern 1	<i>Shutter sound</i> → Select an item

Video

Start Here



→ *Camera* → *Camera* or *Video camera* → → Highlight → *Settings* → *Video* tab

Select Quality	Default Economy	<p><i>Quality</i> → Select an item</p> <ul style="list-style-type: none"> When <i>For S! Mail</i> is set, quality is automatically set to <i>Economy</i>.
Set save location	Default Phone	<p><i>Save to</i> → Select an item</p> <ul style="list-style-type: none"> When Memory Card is not inserted, images are automatically saved to handset.

Media Player Settings

Music

Start Here



→ *Media* → *Settings* → *Music*




Set Repeat mode	Default All	<p><i>Repeat mode</i> → Select an item</p> <ul style="list-style-type: none"> Play a single track repeatedly, all music, or all files in playlist randomly repeatedly.
Adjust Tone volume level	Default 7	<i>Tone volume</i> → Adjust volume with → (Save)
Set Music sub folders	Default Recent music, Most played music, Artist	<p><i>Music menu</i> → Check folder to open → (Save)</p> <ul style="list-style-type: none"> Select folders to appear in <i>Music</i>.

Movie

Start Here



→ *Media* → *Settings* → *Movie*

Set Repeat mode	Default All	<i>Repeat mode</i> → Select an item <ul style="list-style-type: none">● Play a single file repeatedly, all videos, or all files in playlist repeatedly.
Adjust Tone volume level	Default 7	<i>Tone volume</i> → Adjust volume with  →  (Save)
Set Backlight	Default Always On	<i>Backlight</i> → Select an item
Set Video sub folders	Default Recent movie, Most played movie	<i>Movie menu</i> → Check folder to open →  (Save) <ul style="list-style-type: none">● Select folders to appear in <i>Movie</i>.
Show or hide Video thumbnails	Default On	<i>Movie thumbnail display</i> → Select an item
Access or ignore linked information	Default On	<i>Web link</i> → Select an item <ul style="list-style-type: none">● <i>On</i>: After playing a file with linked info, access confirmation appears.

Phonebook Function Settings

Phonebook Settings

Start Here



→ *Phone* → *Settings*

Select Phonebook Save Location	Default Phone	<i>Save settings</i> → Select an item <ul style="list-style-type: none">● <i>Ask each time</i>: A confirmation appears each time a new entry is saved.
Change Phonebook preference (Phone/USIM)	Default Phone	<i>Change view</i> → Select an item
Change Search Method	Default A-ka-sa-ta-na	<i>Search method</i> → Select an item
Backup Phonebook entries		<i>Backup</i> → Select an item → <i>Yes</i>
Change Phonebook font size	Default Standard	<i>Font size</i> → Select an item

Sounds & Vibrator & External Light Settings

Sounds & Vibrator

Start Here

☐ → Settings → Sound settings

Adjust Volume Default Level 3	<p>Volume → Select an item → Adjust volume with → (Play) → (Select)</p> <ul style="list-style-type: none"> • If Phone sounds is selected, playback is unavailable. • If Ringtone reducer is On, ringtone volume is reduced to Level 1 for the first four seconds, regardless of Ringtone volume set for Voice/Video Call. • Use to adjust ringtone volume while handset rings. • To mute Voice/Video Call or Message tones, set Volume and Vibration to Off respectively. appears.
Set Ringtone for Voice Call Default Samsung Tune.mp4	<p>Ringtone → Voice call → Select save location for a file → Highlight a file → (Play) → (Select)</p>
Set Ringtone other than Voice Call Default Message: Samsung Tune.mp4, Missed call notification/Delivery report: BusinessTone.mp4	<p>Ringtone → Message/Missed call notification/Delivery report → Assign tone → Select save location for a file → Highlight a file → (Play) → (Select)</p>
Set Ringtone Duration other than Voice Call Default 5 seconds	<p>Ringtone → Message/Missed call notification/Delivery report → Duration → Enter time</p>
Search Machi-Uta™	<p>Machi-Uta → Music search → Follow onscreen instructions</p>
Set Machi-Uta™	<p>Machi-Uta → Settings → Follow onscreen instructions</p>
Activate/cancel Machi-Uta™	<p>Machi-Uta → Register/Cancel → Follow onscreen instructions</p>
View Machi-Uta™ explanation	<p>Machi-Uta → What's Machi-Uta</p>
Set Vibration Default Off	<p>Vibration → Select an item → Highlight a pattern → (Play) → (Select)</p>
Set Keypad tones Default Off	<p>Phone sounds → Keypad tones → Select an item</p>
Set system sounds Default Several tones on	<p>Phone sounds → System sounds → Check items to set → (Save)</p>

- Open **Sound settings** in **Settings** to change sounds for Normal mode. Settings cannot be changed for other modes.

External Light Settings


Start Here










 *Settings* → *Sound settings* → *External light*













Illuminate External Light for incoming transmissions etc.	Default On	<i>Incoming</i> → Select an item → <i>On</i> or <i>Off</i>
Illuminate External Light for missed call, etc.	Default On	<i>Notification</i> → Select an item → <i>On</i> or <i>Off</i> <ul style="list-style-type: none"> ● <i>Missed alarm</i> is the setting used for the light to notify you of missed schedules (☎P.9-3) or tasks (☎P.9-7) (not for a normal alarm (☎P.9-4) or Schedule/Tasks alarm).

Display Settings

Start Here

 *Settings* → *Display settings*


Change Wallpaper	Default Preset pictures	<i>Wallpaper</i> → Select save location for a file → Select a file →  (Set)
Change Main Menu settings	Default Standard	<i>Main menu style</i> → Select a style → Use  to select color to set →  (Select)
Set Standby Display appearance	Default Off	<i>Clock/Calendar</i> → Select an item and edit as required <ul style="list-style-type: none"> ● Select clock type in <i>Digital clock</i>. To set clock type, select <i>Digital clock</i> → Use  to select clock type →  (OK). ● <i>Dual clock</i>: 2 clocks appear in Standby. Local time (set in <i>Date & Time</i>) appears on top. To set clock below it, <i>Dual clock</i> → Highlight Time zone field → Use  to specify an area → Highlight and check Daylight saving as required →  (OK).
Set time display in Standby	Default Time & Date	<i>Mini clock</i> → Select an item <ul style="list-style-type: none"> ● Set the time display on the top-right of Standby.
Change font size for menu list	Default Large	<i>Font size</i> → <i>List font</i> → Select an item
Set text size in Yahoo! Keitai pages	Default Standard	<i>Font size</i> → <i>Yahoo! Keitai</i> → Select an item
Set text size in PC Site Browser	Default Standard	<i>Font size</i> → <i>PC site browser</i> → Select an item
Change Phonebook font size	Default Standard	<i>Font size</i> → <i>Phonebook</i> → Select an item
Change font size in text entry window	Default Standard	<i>Font size</i> → <i>Editor</i> → Select an item
Change Message text font size	Default Standard	<i>Font size</i> → <i>Messages</i> → Select an item
Adjust Display brightness	Default 3	<i>Backlight</i> → <i>Brightness</i> → Use  to adjust brightness →  (OK)






 







Set Backlight time Default On: 15 seconds, Dim: 15 seconds	<p><i>Backlight</i> → <i>Backlight time</i> → Select On field → Select time → Select Dim field → Select time →  (Save)</p> <ul style="list-style-type: none"> • When <i>Backlight time</i> is set to <i>Off</i>, Display becomes dim. • Display becomes dimmer when set time in <i>Backlight time</i> elapses and turns off when set time in Dim elapses.
Set Dialing window font type Default Normal	<p><i>Dialling display</i> → <i>Font type</i> → Use  to change font type →  (OK)</p>
Set Dialing window font size Default Standard	<p><i>Dialling display</i> → <i>Font size</i> → Use  to change font size →  (OK)</p>
Set Dialing window font color Default Basic	<p><i>Dialling display</i> → <i>Font color</i> → Use  to change font color →  (OK)</p> <ul style="list-style-type: none"> • For <i>Monochrome</i>, Press  to highlight color selection field → Use  to change color → Press  (OK).
Set Dialing window background color	<p><i>Dialling display</i> → <i>Background color</i> → Use  to change color →  (OK)</p>
Set Operator name Default Off	<p><i>Operator name</i> → Select an item</p>













Phone Settings

Handset Setting

Start Here

 → *Settings* → *Phone settings*

Change user interface language	Default 日本語	<p>言語選択 → Select an item</p> <ul style="list-style-type: none"> • 中文 (Chinese) and <i>Português</i> (Portuguese) only support menu display in those languages. Entering characters or displaying received messages in those languages are not supported.
Set Time zone updating	Default Prompt first	<p><i>Date & Time</i> → Select Time zone updating field → Select an item →  (Save)</p> <ul style="list-style-type: none"> • <i>Automatic</i>: A confirmation message for rebooting appears. Choose <i>Yes</i> to reboot handset. • <i>Time zone updating</i> is disabled even when the setting is changed.
Change Home time zone	Default GMT+09:00	<p><i>Date & Time</i> → Highlight Home zone field → Use  to change target area →  (Select) →  (Save)</p> <ul style="list-style-type: none"> • Select date and time zone closest to you locality. Complete this setting before selecting <i>Dual clock</i>.
Activate or cancel Daylight savings time adjustment	Default Unchecked	<p><i>Date & Time</i> → Select Home zone field → Highlight and check <i>Daylight saving</i> →  (OK) →  (Save)</p>
Set time		<p><i>Date & Time</i> → Highlight Time field → Enter time →  (Save)</p> <ul style="list-style-type: none"> • Some functions are disabled when time is not set.
Set AM/PM (when Time format is set to 12H)		<p><i>Date & Time</i> → Highlight <i>AM</i> or <i>PM</i> in Time field → Use  to change settings →  (Save)</p>
Set date		<p><i>Date & Time</i> → Highlight Date field → Enter date →  (Save)</p> <ul style="list-style-type: none"> • Some functions are disabled until date is set.
Change Time format	Default 24H	<p><i>Date & Time</i> → Select Time format field → Select an item →  (Save)</p>
Change Date format	Default YYYY/MM/DD	<p><i>Date & Time</i> → Highlight Date format field → Select an item →  (Save)</p>
Save entries to User's Dictionary		<p><i>User's dictionary</i> → <i>New entry</i> → Select Word field → Enter word or sentence → Select Reading filed → Enter reading →  (Save)</p>

Edit User's Dictionary entries		<i>User's dictionary</i> → <i>Edit entry</i> → Select content to edit → Edit phrase or reading →  (Save)
Delete User's Dictionary entries		<i>User's dictionary</i> → <i>Delete all</i> → Enter Phone Password →  (OK) → <i>Yes</i>
Reset entry history to default		<i>User's dictionary</i> → <i>Reset learning</i> → Enter Phone Password →  (OK) → <i>Yes</i> <ul style="list-style-type: none"> • Previous Kanji conversions appear first for predicted/conversion alternatives. This action clears conversion history.
Activate or cancel Simple Search	Default Off	<i>Simple search</i> → Select an item <ul style="list-style-type: none"> • <i>On</i>: In Standby, press keys assigned to characters used in Phonebook entry Readings.
Set Side Keys to activate Reject Call or mute ringer	Default Silence	<i>Side key</i> → Select an item <ul style="list-style-type: none"> • Set operation when  or  is pressed for 1+ seconds during incoming transmission.
Set Any Key answer	Default Off	<i>Any key answer</i> → Select an item <ul style="list-style-type: none"> • <i>On</i>: Press any keys except , , , ,  and  to answer a call.
Answer incoming call by opening handset	Default Off	<i>Active folder</i> → Select an item <ul style="list-style-type: none"> • <i>On</i>: Open the handset to answer an incoming call.
Set Keypad Light illumination mode	Default Normal mode	<i>Keypad light</i> → Select an item <i>Normal mode</i> : Keypad Light illuminates for Backlight Time duration. <ul style="list-style-type: none"> • When <i>Saving mode</i> is set, select Starting time field → Enter time → Select Ending time field → Enter time → Press  (Save). • <i>Saving mode</i>: Keypad light turns off for set duration.

Security Settings

Start Here

☐ → *Settings* → *Security*

Activate or cancel Phone Lock	Default Off	<i>Phone lock</i> → Select an item → Enter Phone Password → ☐ (OK)
Activate or cancel Password Lock	Default Off	<i>Password lock</i> → Select an item → Enter Phone Password → ☐ (OK)
Activate or cancel USIM Lock	Default Off	<i>USIM lock</i> → Select an item → Enter USIM password (4 to 8 digits) → ☐ (OK) → Enter USIM password again as required → ☐ (OK)
Activate or cancel Function Lock	Default Unlock all	<i>Application lock</i> → Check an item to lock → ☑ (Save) → Enter Phone Password → ☐ (OK)
Activate or cancel Secret mode	Default Hide	<i>Secret mode</i> → Enter Phone Password → ☐ (OK) → Select an item
Create or cancel Secret folders in Data Folder	Default Hide	<i>Secret data folder</i> → Enter Phone Password → ☐ (OK) → Select an item
Restore handset to defaults		<i>Reset</i> → <i>All reset</i> → Enter Phone Password → ☐ (OK) → <i>Yes</i>
Restore Settings to default values		<i>Reset</i> → <i>Reset settings</i> → Enter Phone Password → ☐ (OK) → <i>Yes</i>
Activate or cancel PIN Certification	Default Off	<i>PIN certification</i> → Select an item → Enter PIN → ☐ (OK)
Change PIN		<i>Change PIN</i> → Enter current PIN → ☐ (OK) → Enter new PIN → ☐ (OK) → Enter new PIN again → ☐ (OK)
Change PIN2		<i>Change PIN2</i> → Enter current PIN2 → ☐ (OK) → Enter new PIN2 → ☐ (OK) → Enter new PIN2 again → ☐ (OK)
Change Phone Password	Default 9999	<i>Change password</i> → Enter current password → ☐ (OK) → Enter new password → ☐ (OK) → Enter new password again → ☐ (OK)
Activate Mobile Tracker	Default Off	<i>Mobile tracker</i> → Enter Phone Password → ☐ (OK) → Select Activation field → <i>On</i> → Select Recipients field → Select To field → Enter address → ☑ (Save) → Select Sender field → Enter sender name → ☑ (Save) → Confirm entries → ☐ (Agree) or ☒ (Reject)

Call Settings











Start Here

→ *Settings* → *Call settings*

Forward all calls to Voicemail (Handset does not ring)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail on</i> → <i>Always (0 sec.)</i>
Forward unanswered calls to Voicemail (specify ring time)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail on</i> → <i>No reply (5 to 30 sec.)</i> → Select an item
Activate and set Call Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Call forwarding on</i> → Select a setting → Select an item → Set number to forward <ul style="list-style-type: none"> When <i>No reply (5 to 30 sec.)</i> is selected, select duration time.
Cancel Voicemail/Call Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Deactivate All</i> → <i>Yes</i>
Confirm current Voicemail/Call Forwarding settings	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Get status</i>
Listen to Voicemail message	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Call voice mail</i> → <input type="checkbox"/> (Call)
Activate or cancel Call Waiting	<i>Optional services</i> → <i>Call waiting</i> → <i>On or Off</i>
Confirm current Call Waiting settings	<i>Optional services</i> → <i>Call waiting</i> → <i>Get status</i>
Set Outgoing Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Outgoing call</i> → Select an item → <i>On or Off</i> → Enter Network Password → <input type="checkbox"/> (OK)
Activate or cancel Incoming Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Incoming call</i> → Select an item → <i>On or Off</i> → Enter Network Password → <input type="checkbox"/> (OK)
Cancel all Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Cancel all barring</i> → Enter Network Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Confirm current Call Barring settings	<i>Optional services</i> → <i>Call barring</i> → <i>Get status</i> → Select an item
Change Network Password	<i>Optional services</i> → <i>Call barring</i> → <i>Set security code</i> → Enter current Network Password in Old field → <input type="checkbox"/> (OK) → Enter new Network Password in New field → <input type="checkbox"/> (OK) → Enter the new Network Password again → <input type="checkbox"/> (OK)
Set Missed Call Notification	<i>Optional services</i> → <i>Missed call notification</i> → <input type="checkbox"/> (Call)
Switch Network Mode Default Automatic	<i>Optional services</i> → <i>International call</i> → <i>Select network</i> → Select an item <ul style="list-style-type: none"> If <i>Manual</i> is set, select from <i>3G/GSM</i>, <i>3G</i> or <i>GSM</i>.

Save International Code Default 0046010	<i>Optional services</i> → <i>International call</i> → <i>International code</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Enter an international code
Add/change/delete Country Number Default 日本 (Japan), 韓国 (KOR), イギリス (GBR), イタリア (ITA), スイス (CHE), スペイン (ESP), ドイツ (DEU), ポルトガル (PRT), オランダ (NLD), フランス (FRA), モナコ (MCO), アメリカ合衆国 (USA), スウェーデン (SWE), オーストラリア (AUS), 中国 (CHN), 香港 (HKG), 台湾 (TWN)	<i>Optional services</i> → <i>International call</i> → <i>Country number</i> → Add, change, or delete item <ul style="list-style-type: none"> To add/change, highlight an item from Country code → <input type="checkbox"/> (Change) → Select Country name field → Enter country name → Highlight Enter country code field → Enter country code → Press <input type="checkbox"/> (Save). To delete, highlight item → <input type="checkbox"/> (Delete) → Choose <i>Yes</i>.
Select network to access Default Automatic	<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Automatic</i> or <i>Manual</i> <ul style="list-style-type: none"> When you set <i>Manual</i>, select a network.
Insert preferred network from list	<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Preferred network</i> → <i>Set preferred</i> → Move the cursor to a position to insert → <input type="checkbox"/> → <i>Insert</i> → <i>Network list</i> → Highlight a network to insert → <input type="checkbox"/> (Insert)
Add preferred network from list	<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Preferred network</i> → <i>Set preferred</i> → <input type="checkbox"/> → <i>Add</i> → <i>Network list</i> → Highlight network to add → <input type="checkbox"/> (Add) <ul style="list-style-type: none"> Network is added at the bottom of the list.
Delete preferred network from list	<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Preferred network</i> → <i>Set preferred</i> → Highlight network to delete → <input type="checkbox"/> → <i>Delete</i> → <i>Yes</i>
Add a new preferred network	<i>Optional services</i> → <i>International call</i> → <i>Select operator</i> → <i>Preferred network</i> → <i>Add operator</i> → Enter country code → Enter Network code → Select an item <ul style="list-style-type: none"> Network is added at the top of the list. To enter a new network and insert or add it, follow the steps: <i>Optional services</i> → <i>International call</i> → <i>Select Operator</i> → <i>Preferred network</i> → <i>Set preferred</i> → <input type="checkbox"/> → <i>Insert/Add</i> → <i>New network</i> → Highlight Enter Country code field → Enter country code → Highlight Enter network code field → Enter network code → Select Enter network name → Enter network name → Select Select operator field → <i>GSM</i> or <i>3G</i> → <input type="checkbox"/> (Insert/Add)
Check Call Time/Cost	<i>Call time & cost</i> → <i>All calls</i> <ul style="list-style-type: none"> To reset call time/cost, <input type="checkbox"/> (Reset) → Enter PIN2 → Select <input type="checkbox"/> (OK).

Check last Call Time/Cost		<p><i>Call time & cost</i> → <i>Last calls</i></p> <ul style="list-style-type: none"> To reset last call time/cost, select <input type="checkbox"/> (Reset).
Check Data Counter		<p><i>Call time & cost</i> → <i>Data counter</i></p> <ul style="list-style-type: none"> To reset sent/received data counter, select <input type="checkbox"/> (Reset).
Show or hide Call Time/Cost after calls	Default Off	<p><i>Call time & cost</i> → <i>Show charge after call</i> → Select an item</p> <ul style="list-style-type: none"> This function may not be available.
Change Call Cost Currency		<p><i>Call time & cost</i> → <i>Set currency</i> → Enter PIN2 → <input type="checkbox"/> (OK) → Select Price field → Enter rate to the yen → Select Currency field → Enter currency unit → <input type="checkbox"/> (Save)</p>
Set Call Cost Limit		<p><i>Call time & cost</i> → <i>Set max cost limit</i> → <input type="checkbox"/> (Edit) → Enter PIN2 → <input type="checkbox"/> (OK) → Select Upper limit after changing field → Enter upper limit → <input type="checkbox"/> (Save)</p> <ul style="list-style-type: none"> After reaching the call cost limit, only emergency calls can be made; messaging, web connections (fee-based operations) are disabled. When <i>Show charge after call</i> is not available, this function is also unavailable.
Cancel Call Cost Limit		<p><i>Call time & cost</i> → <i>Set max cost limit</i> → <input type="checkbox"/> (Release) → Enter PIN2 → <input type="checkbox"/> (OK)</p>
Activate or cancel Answering Machine	Default Off	<p><i>Answering machine</i> → <i>Setting</i> → Select an item</p>
Set Answering Machine response time	Default 18 seconds	<p><i>Answering machine</i> → <i>Ringling duration</i> → Select an item</p> <ul style="list-style-type: none"> If <i>Other (0-30sec.)</i> is selected, enter time.
Play Answering Machine records		<p><i>Answering machine</i> → <i>Recordings</i> → Highlight an item → <input type="checkbox"/> (Play)</p> <ul style="list-style-type: none"> To delete one record, highlight it → <input type="checkbox"/> (Delete) → Choose <i>Yes</i>. To delete all records, in the list window, press <input type="checkbox"/> (Delete all) → Enter Phone Password → <input type="checkbox"/> (OK) → Choose <i>Yes</i>.
Set Answering Machine response language	Default 日本語	<p><i>Answering machine</i> → <i>Sound language</i> → Select an item</p> <ul style="list-style-type: none"> Press <input type="checkbox"/> (Play) to hear a message.
Accept or reject calls from specified phone numbers	Default Off	<p><i>Reject incoming calls</i> → <i>Reject list</i> → <i>On/Off</i> → Select an item</p> <ul style="list-style-type: none"> When a call from Reject list arrives, a caller hears a busy tone and call is not connected. <i>Rejected</i> appears in Standby. Press <input type="checkbox"/> (View) to check missed call.

Create or edit Black List		<p><i>Reject incoming calls</i> → <i>Reject list</i> → <i>Edit black list</i> →  → <i>Add</i> → Select an item → Register phone number</p> <ul style="list-style-type: none"> To edit registered phone numbers, select <i>Edit black list</i> → Highlight a phone number to edit →  (Select) → Edit phone number →  (OK) → Press  (Save). To delete saved phone numbers, select <i>Edit black list</i> → Highlight phone number →  → <i>Delete</i> → <i>Selected</i> or <i>All</i> → Choose <i>Yes</i>. When <i>All</i> is selected, enter Phone Password.
Accept or reject calls from unknown numbers	Default Off	<i>Reject incoming calls</i> → <i>Unknown</i> → Select an item
Accept or reject calls when number is withheld	Default Off	<i>Reject incoming calls</i> → <i>Withheld</i> → Select an item
Accept or reject calls from payphones	Default Off	<i>Reject incoming calls</i> → <i>Payphone</i> → Select an item
Accept or reject calls when number is unavailable	Default Off	<i>Reject incoming calls</i> → <i>Unavailable</i> → Select an item
Activate or cancel Offline mode	Default Off	<i>Offline</i> → Select an item
Show or hide your own number when calls		<p><i>Show my number</i> → <i>On/Off</i> → Select an item</p> <ul style="list-style-type: none"> To check current status, select <i>Get status</i>.
Set handset to automatically redial busy numbers	Default Off	<p><i>Auto redial</i> → Select an item</p> <ul style="list-style-type: none"> <i>On</i>: Handset automatically disconnects call and redials busy numbers. Auto redial repeats up to 10 times until  (Cancel) or  is pressed. If called party uses Call Forwarding or Voicemail, call is forwarded accordingly.
Activate or cancel automatic ringer reduction	Default On	<p><i>Ringtone reducer</i> → Select an item</p> <ul style="list-style-type: none"> When ringtone volume level is high, the volume level is reduced to Level 1 for the first four seconds, then returns to the set level.
Enable or disable calling via Earphone Microphone	Default Earphone call activate: Off	<p><i>Earphone call</i> → <i>Earphone call activate</i> → Select an item → <i>Call number</i> → Select an item → Register phone number →  (Save)</p> <ul style="list-style-type: none"> <i>On</i>: Press Earphone Microphone switch for 1+ seconds to call specified number. To change specified number, repeat setup operation, saving the new number.
Adjust Earpiece volume	Default Level 5	<i>Hearing volume</i> → Use  to adjust volume →  (Select)

Manner Mode Settings

Switch Manner Mode

- → *Settings* → *Manner mode settings* → Select an item
- To change settings for each mode, highlight a mode →  (Edit) → Set each item.

Connectivity Settings

Infrared

Start Here

■ → *Settings* → *Connectivity* → *Infrared*

Activate or cancel Infrared transmission

Default Off

Infrared On/Off → Select an item

Transfer Phonebook or Calendar entries, and Bookmarks at once

- Transfer all* → Enter Phone Password → ■ (OK) → Select an item → Enter Authorization Code (4 digits) → ■ (OK)
- For *Phonebook*, choose *Yes* to transfer images.

Card Reader

Start Here

■ → *Settings* → *Connectivity*

Activate Mass Storage

Mass storage → Enter Phone Password → ■ (OK) → Connect handset to a PC with USB cable → Load data from PC

Network

Start Here

■ → *Settings* → *Connectivity*

Retrieve Network Information manually

Retrieve NW info → *Yes* or *No*

Memory Settings

Start Here

→ *Settings* → *Memory settings*

Check Memory Card details	<p><i>Memory card</i> → <i>Memory card details</i></p> <ul style="list-style-type: none"> • Check Memory Card name, memory capacity, or remaining memory.
Format Memory Card	<p><i>Memory card</i> → <i>Format memory card</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i></p>
Rename Memory Card	<p><i>Memory card</i> → <i>Rename memory card</i> → Enter name</p>
Confirm total or remaining Phone Memory	<p><i>Phone memory</i> → <i>Phone memory details</i></p> <ul style="list-style-type: none"> • View Phone memory capacity or remaining memory.
Clear Phone Memory	<p><i>Phone memory</i> → <i>Clear phone memory</i> → Check an item to clear → <input type="checkbox"/> (Delete) → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i></p>
Set Default Memory to Phone or Memory Card	<p>Default Phone</p> <p><i>Set default memory</i> → Select an item</p> <ul style="list-style-type: none"> • With Memory Card inserted, select handset (Phone) or Memory Card. Available when saving S! Mail attachments, downloading files, etc. • When <i>Memory card</i> or <i>Always ask</i> is selected with no Memory Card inserted, files are automatically saved to handset.
View Memory status	<p><i>Memory status</i> → Select an item</p> <ul style="list-style-type: none"> • To delete viewed memory, press <input type="checkbox"/> (Delete) (P.11-13 Deleting Registered/Saved Data).

Backup Settings

Backup Settings

Start Here

→ *Settings* → *Backup & Restore*

Backup Memory	<p><i>Backup</i> → <i>Yes</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select an item → <i>Yes</i></p>
Restore Memory	<p><i>Restore</i> → <i>Yes</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select an item → Select a file → <i>Add</i> or <i>Overwrite</i></p>