

Appendix



Troubleshooting	14-2
Software Update	14-5
Function List	14-6
Main Menu	14-6
Text Entry Key Assignments	14-8
Symbols List	14-9
Double-byte Symbols	14-9
Single-byte Symbols	14-9
Symbol Conversions	14-9
Pictograms	14-10
Memory List	14-11
Specifications	14-11
SoftBank 740SC	14-11
Battery	14-12
Index	14-13
Objective Index	14-18
Advanced Settings Index	14-20
Warranty & Service	14-21
Warranty	14-21
Repair Requests	14-21
Customer Service	14-22

Troubleshooting

■ Handset does not turn on

- ☑ Is battery empty?
 - ➔ Replace or charge battery.
- ☑ Is battery installed in handset?
 - ➔ Install battery correctly.

■ When power is turned on, PIN entry window appears

- ☑ Is *PIN certification* set to *On*?
 - ➔ If *PIN certification* is *On*, enter PIN.

■ When power is turned on, USIM password entry window appears

- ☑ Is *USIM lock* set to *On*?
 - ➔ If *USIM lock* is *On*, enter USIM password.

■ Please insert USIM card, Incorrect USIM or USIM card failed appears when handset is turned on or executing a function

- ☑ Is USIM Card correctly installed?
 - ➔ Check to see if USIM Card is correctly installed. If the message appears even though USIM Card is correctly installed, it may be damaged.
- ☑ Is USIM Card still being loaded?
 - ➔ Try again after a while.
- ☑ Is an incorrect USIM Card used?
 - ➔ Check to see if correct USIM Card is used. Use USIM Card specified by SoftBank.

- ☑ Is there debris on USIM Card IC chip?
 - ➔ Remove debris with a clean, dry cloth, and then install USIM Card correctly.

■ 圏外 or OUT appears and no calls can be made

- ☑ Handset is out-of-range.
 - ➔ Move to a place where the signal is stronger and try again.

■ Calls are interrupted or disconnected

- ☑ Does 圏外 or OUT appear?
 - ➔ Move to a place where the signal is stronger and try again.
- ☑ Is battery empty?
 - ➔ Replace or charge battery.

■ Unable to make a call

- ☑ Is Call Barring set?
 - ➔ Deactivate Call Barring.
- ☑ Is *Offline mode* set to *On*? (📴 appears)
 - ➔ Set *Offline mode* to *Off*.

■ Unable to open Phonebook entry, Data Folder, Call Log, Calendar, or Messaging

- ☑ Is *Application lock* set?
 - ➔ Cancel *Application Lock* (🔒 P.10-5).

■ Clicking noise is heard during a call

- ☑ Noise may be generated when signal is weak or while moving between coverage areas.

■ Unable to charge battery

- ☑ Is AC Charger Connector securely inserted into handset?
 - ➔ Insert AC Charger Connector securely.
- ☑ Is AC Charger plug securely inserted?
 - ➔ Insert AC Charger plug securely.
- ☑ Is battery installed in handset?
 - ➔ Install battery correctly.
- ☑ Are handset terminals and AC Charger clean?
 - ➔ Clean contacts with a dry cotton swab.
- ☑ Was battery charged in ambient temperature below 5 °C or above 40 °C?
 - ➔ Charge battery in ambient temperature between 5 °C and 40 °C.
- ☑ Battery may need to be replaced.
 - ➔ Install a new battery.
- ☑ Does battery always lose its charge quickly after being charged?
 - ➔ Battery life has expired. Replace with a new battery.
- ☑ Does handset or battery become very warm during charging?
 - ➔ If the temperature rises too much, charging may stop. After handset and battery are cool, retry charging.

■ Devices become hot

- ☑ During charging, AC Charger may heat up.
- ☑ Handset may heat up during charging/long calls.
 - ➔ If handset is safe to touch, heat level is normal. If it is too hot to touch, immediately stop charging and contact Customer Service (☎P.14-22).

■ Battery drains quickly

- ☑ Battery may drain quickly depending on the operating environment (Ambient temperature, charging conditions, or Signal Strength), operations, and settings.
 - ➔ Use handset in an appropriate environment and reduce operations requiring high power (☎P.1-7).

■ Display flickers

- ☑ Is handset used near a fluorescent light?
 - ➔ Use handset as far away from a fluorescent light as possible.

■ Display is dim or unlit

- ☑ This may be due to the characteristics of Display and not a problem. The time until Display is dimmed or unlit can be changed by adjusting the Backlight time (☎P.13-13).

■ Unable to play music via speaker

- ☑ Is *Manner mode* set?
 - ➔ Cancel *Manner mode*.
- ☑ Is the earphone microphone (Sold separately) connected?
 - ➔ Disconnect the connector for the earphone microphone (Sold separately) from handset.

■ Too many applications are already running. appears

- ☑ Too many functions are active.
 - ➔ Close some.

Unable to establish USB connections using Samsung New PC Studio

- Is the USB driver installed?
 - ➔ If communications are executed connecting to a personal computer with USB cable, installing the driver is required. Download USB Driver Installer from SAMSUNG website (<http://jp.samsungmobile.com/pc/lineup/740download.html>) and install the driver.
- Is the connection method set correctly on the personal computer?
 - ➔ Set the connection method to **USB** on the Connection Manager of Samsung New PC Studio or the Connection Wizard for the communication in use.
- Are PC USB connection port and Samsung New PC Studio the same?
 - ➔ Make sure port settings match those set for Samsung New PC Studio Connection Manager or Connection Wizard.

Phonebook entry, Message folder, schedule event in Calendar, or Tasks do not appear

- In **Security**, is **Secret mode** set to **Hide**?
 - ➔ In **Security**, set **Secret mode** to **Show** (☺P.10-5).
- Is **Secret** under each function set to **On**?
 - ➔ Press in intended window → Select **Unlock temporarily**.

Sending message failed appears

- If send fails, error message and reason appear.
 - ➔ Confirm reason and try again.

Service not allowed appears

- Handset is outside 3G service area.
 - ➔ Send from within the service area.

Sending operation cannot be operated in offline mode appears

- In **Offline mode**, handset transmissions are disabled.
 - ➔ Set **Offline mode** to **Off** (☺P.1-14).

Storage space short by * * bytes. Edit data folder files? appears

- Handset memory is full.
 - ➔ Delete unnecessary files and try again.

Cannot download. File corrupt. appears

- File cannot be downloaded; cancel download.

Unable to call via Earphone Microphone (Sold separately)

- Is **Earphone call** set to **Off**?
 - ➔ Even if **Earphone call** number is saved, if **Earphone call** is set to **Off** it will not be dialed. Set **Earphone call** to **On** (☺P.13-20).

Software Update

SoftBank releases firmware updates. Download as required. Choose *Update* or *Schedule update*.

1 → **Tools** → **Software update**

2 (Yes)

- Handset connects to network by pressing (Yes).

3 **Read Terms of Use and then Agree**

- Read through Terms of Use before selecting *Agree*.

4 **Enter Center Access Code**
(☎P.1-18) → (OK) → (OK)


- Update result appears.

5 **Select one from the following updating methods**

■ To update immediately

Update now


- Update starts. When complete, handset powers off and restarts; Notification appears.

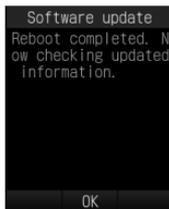

■ To schedule later update

Schedule update → (Yes) → Select schedule date → Select schedule time → (OK)

- For procedures, contact SoftBank Mobile Customer Service.
- Confirming/downloading updates does not incur fees.
- At scheduled update time, message appears. Press (OK) or wait approximately 10 seconds. Update will not start while handset is in use. When operation ends, a message window appears. However if operation does not end within ten minutes of scheduled update time, scheduled update is automatically canceled.

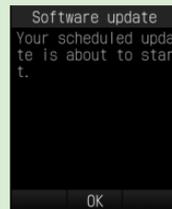

- To cancel Schedule update, perform Steps 1 to 4, then select **Cancel schedule** and press (Yes).

Note

- Charge battery beforehand; if low, update may fail.
- If Scheduled update time arrives while handset is out-of-range, Software Update is canceled.
- Remain within strong, stable signal conditions.
- Handset Phonebook entries, media files, and other contents are not affected by software updates, but always back-up important information (note that some files cannot be copied). SoftBank is not liable for damage from lost information, etc.
- Handset transmissions are disabled during update.
- Update may take some time to complete.
- Update failure may disable handset. Contact SoftBank Customer Center, Customer Assistance (☎P.14-22).
- If updated handset fails to restart, remove and reinsert battery then power on. If this fails, call SoftBank Mobile Customer Center, Customer Assistance (☎P.14-22).

Function List

Main Menu

To display the below items, press  in Standby.

Main Menu Item	Page
Messaging	
Received msg.	P.4-10, P.4-13
Create new	P.4-4
Retrieve new	P.4-23
Drafts	P.4-13, P.4-19
Templates	P.4-13, P.4-19
Sent msg.	P.4-13
Unsent msg.	P.4-13
Server mail	P.4-26
Create new SMS	P.4-7
Settings	P.13-2
Memory status	P.11-13
Yahoo!	
Yahoo! Keitai	P.5-3
Menu list	P.5-3
Bookmarks	P.5-7
Saved pages	P.5-7
Enter URL	P.5-3, P.5-4
History	P.5-3, P.5-4
PC site browser	P.5-4
Browser settings	P.13-6

Main Menu Item	Page
Infrared	
Infrared On/Off	P.12-4
Transfer all	P.12-3
Entertainment	
S! Information Channel/ Weather	P.8-3
Free Contents	P.8-3
S! Addressbook Back-up	P.12-7
Camera	
Camera	P.6-5
Video camera	P.6-9
Alarm	P.9-4
Tools	
Calculator	P.9-5
Converter	P.9-5
World clock	P.9-6
Notepad	P.9-7
Tasks	P.9-7
Voice recorder	P.9-8
Stopwatch	P.9-9
Dictionary	P.9-11
Software update	P.14-5

Main Menu Item	Page
Data Folder	
Pictures	P.11-2
My Pictograms	P.11-2
Ring songs · tones	P.11-2
Music	P.11-2
Videos	P.11-2
Graphic Mail templates	P.11-2
Other documents	P.11-2
Memory status	P.11-2
Media	
Music	P.7-4
Movie	P.7-7
Settings	P.13-9
Calendar	P.9-3
Phone	
Phonebook	P.2-17
Create new entry	P.2-15
Call log	P.3-10
Play answering machine	P.3-10
Call voice mail	P.3-15
Account details	P.1-13
S! Addressbook Back-up	P.12-7
Group settings	P.2-23
Speed dial	P.3-6
Settings	P.13-10
Memory status	P.13-22

Main Menu Item	Page
Settings	
Sound settings	P.13-11
Display settings	P.13-12
Phone settings	P.13-14
Security	P.13-16
Call settings	P.13-17
Manner mode settings	P.13-21
Connectivity	P.13-21
Memory settings	P.13-22
Backup & Restore	P.13-22

Text Entry Key Assignments

Multiple characters are assigned to each key. Press a key repeatedly until the target character appears.


Press  to change text entry mode.

Press  to switch to Symbols,  to toggle Pictograms and Emoticons.

Key	Kanji/Hiragana	Katakana	Alphanumerics	Numbers
	あいうえおあいうえお 1	アイウエオアイウエオ 1	.@-_:~^1	1
	かきくけこ 2	カキクケコ 2	ABCabc2	2
	さしすせそ 3	サシスセソ 3	DEFdef3	3
	たちつとっ 4	タチツテトッ 4	GHghi4	4
	なにぬねの 5	ナニヌネノ 5	JKLjkl5	5
	はひふへほ 6	ハヒフヘホ 6	MNOmno6	6
	まみむめも 7	マミムメモ 7	PQRSpqrs7	7
	やゆよゃゅょ 8	ヤユヨャュョ 8	TUVtuv8	8
	らりるれろ 9	ラリルレロ 9	WXYZwxyz9	9
	わをん、。 - 0	ワヲン、。 - 0	„_! ? <Space> 0	0
	<ul style="list-style-type: none"> ● Add ° / ° to unfixed, convertible kana ● Toggle Pictograms, Emoticons 		<ul style="list-style-type: none"> ● Toggle Pictograms, Emoticons ● Toggle upper/lower-case (only before fixing and convertible character for entering alphabets) 	
	<ul style="list-style-type: none"> ● Toggle Double-byte Symbols, Single-byte Symbols 			
	<ul style="list-style-type: none"> ● Reverse toggle characters assigned to the same key before finalizing character selection 			—
	<ul style="list-style-type: none"> ● Change entry mode 			

1 When double-byte, "--" cannot be used (" ~ " appears on Display).

Pictograms

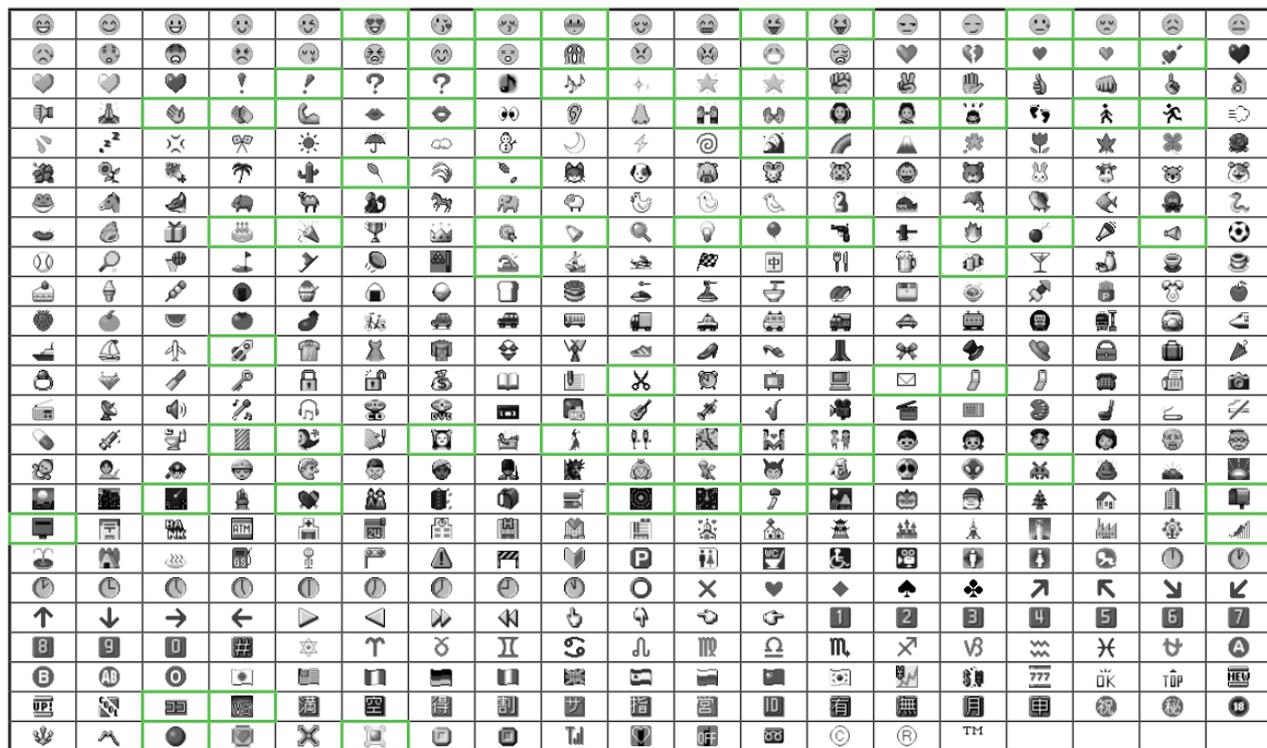

- Pictograms with  are animated.
- Some pictograms and animated pictograms may not appear properly on some models of SoftBank handsets or other devices.

Memory List

S! Mail/ SMS (Phone memory)	Received messages	Up to 1000 messages or 5MB
	Drafts	Up to 20 messages or 1MB
	Sent messages	Up to 250 messages or 1MB
	Unsent	Up to 20 messages or 1MB
SMS	USIM card	Up to 10 messages
Data Folder	Pictures	Up to 999 items (files/subfolders) per folder
	My Pictograms	
	Ring songs · tones	
	Music	
	Videos	
	Message templates	
	Other documents	

Specifications

Handset specifications may change without prior notice.

SoftBank 740SC

Item	Specification
Weight	107 g*
Continuous Talk Time	Voice Call: 250 minutes (3G)*/ 350 minutes (GSM)*
Continuous Standby Time (Display off)	500 hours (3G)*/450 hours (GSM)*
Charging time	AC Charger: 120 min.* In-Car Charger: 120 min.*
Dimensions (W x H x D)	50.5 x 100.0 x 14.9 mm *
Maximum Output	0.25 W

* Approximate value

- Handset with battery installed.
- Battery Time is calculated by SoftBank Mobile under stable signal conditions. Calling in poor signal conditions or leaving handset on out-of-range will consume more power and may reduce Battery Time by more than half.
- Frequent handset operations requiring Backlight (e.g., Yahoo! Keitai) may reduce Continuous Talk Time and Continuous Standby Time.
- Using video for Wallpaper may significantly reduce Continuous Talking and Continuous Standby Times.

- Continuous Talk Time is an average measured with a battery in stable signal conditions. Continuous Standby Time is an average measured with a new, fully charged battery without calls or operations with handset closed, in Standby, in stable signal conditions. Alternating between usage and Standby shortens Continuous Talk Time and Continuous Standby Time. Talk Time/Standby Time may vary by environment (battery status, ambient temperature, etc.).

Battery

Item	Specification
Voltage	3.7 V
Type	Lithium-ion
Capacity	800 mAh
Dimensions (W x H x D)	4.3 x 33.9 x 53.2 mm (without protruding parts)

Index

A

AC Charger	1-10
Account Details	1-13
Reset	1-19
Alarms	9-4
All Reset	10-7
Answering Machine	
Cancel	3-8
Delete records	3-8
Play records	3-8
Set	3-8
Any key answer	13-15
Application lock	10-5
Auto redial	13-20

B

Battery	1-7, 1-8
Inserting & Removing	1-8
Bookmark	5-7
Delete	5-14
Internet connection	5-7
Save	5-7
Send URL	5-13

C

Cache	5-2
Calculator	9-5
Calendar	9-3
Delete schedule	9-11
Save schedule	9-3, 9-11
Schedule	9-3
View schedule	9-4, 9-12
Call barring service	3-13, 3-18
Call forwarding service	3-13, 3-15
Call log	3-10
Check	3-10
Delete	3-10
Call time & cost	
Check	3-11
Reset	3-11
Show charge after call	13-18
Call waiting service	3-13, 3-16
Camera	6-2
Attach to message for sending still image	6-10
Attach to message for sending video	6-12
Capture video	6-9
Effects	6-10, 6-11
Frame shot	6-6
Multi shot	6-5
Night shot	6-6
Photo combination	6-5
Quick Play	6-6
Send a still image via Infrared	6-10
Send video via Infrared	6-12
Settings	13-8, 13-9

Shoot still image	6-3
Shortcut operations	6-4, 6-8
Timer	6-10, 6-11
Viewfinder	6-3, 6-7
Cancel PIN lock	10-4
Center Access Code	1-18
Change mode	1-15
Change PIN	10-3
Change PIN2	10-3
Charger Port	1-4
Charging Battery	1-9
Clear memory	10-7
Conference call service	3-13, 3-17
Confirm Handset Number	1-13
Convert currency or unit	9-5
Copy item	1-19, 2-22
Country number	13-18

D

Data Folder	11-2
Dictionary	9-11
Display	1-4
Backlight	13-13
Brightness	13-12
Clock/Calendar	13-12
Dialing display	13-13
Font size	13-12
Main menu style	13-12
Operator name	13-13
Wallpaper	2-6

Display Language	13-14
Download Content Key	7-9, 7-10

E

Earphone call	13-20
Emergency call	3-7
Emergency Location Report	3-7
External Device Port	1-4
External light	1-17

F

File	11-3, 11-4
Copy	11-6
Delete	11-6
Details	11-10
Icon	11-2, 11-3
Lock/Unlock	11-12
Rename	11-5
Set images as Wallpaper etc.	11-12
Set Ringtone	11-12
Sort	11-10
File Viewer	9-9
Folder	
Copy	11-6
Create	11-4
Delete	11-7

G

Global Roaming	3-12
----------------	------

H

Hearing volume	3-5
History	
Delete	5-8, 5-11
Internet connection	5-3, 5-4
S! Addressbook Back-up	12-9
Hold incoming call	3-5

I

Icon	
Attached file	4-5
Call Log Record	3-10
Data Folder	11-2
Display	1-4
File list	11-3
Message	4-11
Message list	4-10
Mode	1-15
Music Window	7-3
Play video	7-6
Schedule	9-3
Shooting mode (still image)	6-3
Shooting mode (video)	6-7
Weather	8-3
Infrared	12-3
Authentication Code	12-4
Receive data	12-4
Send data	12-3
International Code	13-18
Internet	5-2

Internet page	5-2, 5-5
Font size	5-9, 5-11
Shortcuts Key	2-4

K

Key Lock	1-14
-----------------	-------------

L

Language	13-14
Lock	10-3
Functional lock	10-5
Key Lock	1-14
Phone Lock	10-3
PIN	10-4
USIM Lock	10-4

Log

Call log	3-10
----------	------

M

Machi-Uta™	13-11
Mailbox	4-13
Drafts	4-13
Received message	4-13
Sent message	4-13
Templates	4-13
Unsent message	4-13
Make a call	3-4
Phonebook	2-17
Make international calls	3-11, 3-21
Manner Mode	1-15

Mass storage	12-5, 13-21
Media Player	7-2
Add to playlist	7-8
Adjust Tone volume	13-9, 13-10
Create playlist	7-8
Download	7-3
Play music	7-4
Play video	7-7, 7-8
Repeat mode	13-9, 13-10
Settings	13-9
Video resolution	7-10, 7-11
Memory Card	11-7
Initialize	11-8
Insert/Remove	11-8
Memory card backup	12-6
Memory Status	11-2, 11-9
Menu Operations	iii
Message	4-2
3D Pictogram display	4-19, 4-22, 4-23
3D Pictograms	4-9, 13-3
Action settings	4-19
Attach files	4-5
Change folder name	4-28
Create	4-4, 4-7
Create folder	4-16
Custom mail address	4-4
Delete	4-15, 4-24
Delete folder	4-28
Delete Graphic templates	4-15
Delete server mail	4-27
Delete templates	4-15
Details	4-24

Draft message icon	4-11
Feeling settings	4-19
Font size	4-24
Forward	4-12
Forward messages in server	4-27
Graphic mail	4-6
Indicators for attached files	4-5
Lock/Unlock	4-14
Mail Server	4-10
Memory status	4-27
Message list view	4-24, 13-3
Message notice	13-3
Move	4-16
Move SMS	4-25
Received message icon	4-11
Receive server mail	4-26
Reply	4-12, 4-23
Retrieve all mails	4-26
Retrieve mail list	4-26
Save attachment	4-16
Save Graphic as template	4-19
Save text templates	4-26
Save to drafts	4-19, 4-22
Send from Drafts	4-25
Send Graphic templates	4-8
Sending options	4-20, 4-22
Send text templates	4-8
Send unsent messages	4-25
Sent message icon	4-11
Server mail	4-27
Server mail memory	4-27
Set Secret	4-28
S! Mail	4-2

SMS	4-2
Sort	4-17, 4-24
Unsent message icon	4-11
View	4-8, 4-10
View Attachment	4-23
Missed call	3-5
Mobile tracker	10-6
Mode settings	1-15
Multi Selector	iii
Mute	2-5, 3-20

N

Network mode	3-12
Network Password	1-18
Change	3-19
Notepad	9-7

O

Offline Mode	1-14
-------------------------------	-------------

P

Password lock	10-4
PC Site Browser	5-4
Copy text	5-10
Details	5-11
Enter URL	5-4
Font size	13-12
Manufacture number	13-7
PC screen	5-12
Root certificates	13-7

Script	13-7
Search	5-10
Send URL	5-10
Phonebook	2-13
Copy	2-22
Create Message	2-21
Default number	2-23
Delete	2-18
Edit	2-23
Save	2-15
Search	2-17
Set Secret mode	2-20
Phone Lock	10-3
Phone Password	1-18, 10-3
Picture browser	11-3
PIN	10-4
PIN2 Code	1-19
PIN Certification	10-4
PIN Code	1-19
PIN lock	10-4
Power On/Off	1-12
Preferred network	3-12
PUK Code	1-19, 10-4

R

Receive a call	3-4
Record	3-5
Reject incoming calls	3-8
Edit black list	3-21
Payphone	3-9

Set reject number	3-9
Unavailable	3-9
Unknown	3-9
Withheld	3-9
Reset settings	10-7
Ringtone	1-16
Ringtone reducer	13-20

S

S! Addressbook Back-up	12-7
History	12-9
Sync mode	12-8
Saved pages	5-7
Change page name	5-15
Delete	5-15
Save	5-7
View	5-7
Secret data folder	10-6
Secret mode	10-5
Security Code	1-2, 1-18
Select function from Main Menu	2-3
Select function with Switch Bar	2-3
Send DTMF	3-21
Set default memory	13-22
Show my number	3-14, 3-19
Simple search	2-18, 13-15
S! Information Channel	8-3
New Received Information	8-3
Weather Indicator	8-3

S! Information Channel/Weather

Service Registration	8-3
Settings	13-8
Slide show	11-10
Softkey	ii
Software update	14-5
Sounds & Alerts	2-5
Speaker phone call	3-20
Speed dial	3-6
SSL/TLS	5-2
Stopwatch	9-9
Symbols	14-9
System sounds	1-16

T

Tasks	9-7
Delete	9-16
Text entry	2-7
Copy	2-19
Cut	2-19
Delete	2-12
Edit	2-12
Emoticon	2-10
Entry Mode	2-8
Line Break	2-10
Paste	2-19
Pictograms	2-10
Quick Address List	2-11
Symbol	2-10
Undo	2-20
Time zone	13-14

U

USB connection	12-5
User's Dictionary	2-12
Add	2-12
Delete	2-20
USIM Card	1-5
Insert/remove	1-6
USIM Lock	10-4
USIM Password	1-19, 10-4

V

vFile	11-2, 11-12
Vibration	1-16, 2-6, 9-14
Voice Call	3-4
Adjust ringer volume	3-4
Adjust volume	3-5
Mute	3-20
Put a call on hold	3-5
Speaker phone call	3-20
Whisper	3-20
Vicemail service	3-13, 3-14
Voice recorder	9-8
Play sound files	9-9
Protect/Unprotect sound files	9-17
Record settings	9-16
Record sound	9-8
Send sound files	9-16
Volume	1-16

W

Window	
Calendar	9-3
Movie Window	7-6
Music Window	7-4
Phonebook	2-15
Standby Window	1-14
Still image viewer	6-3
Text Entry Window	2-8
Video Viewfinder	6-7
Voice recorder	9-8
World Clock	9-6

Y

Yahoo! Keitai	5-3
Copy text	5-8
Details	5-9
Enter URL	5-3
Font size	13-12
Manufacture number	13-6
Menu list	5-3
Refresh	5-8
Root certificates	13-6
Script	13-6
Search	5-8
Send URL	5-8

Number

3G/GSM	3-12, 13-17
-------------------------	--------------------

Objective Index

Adjust volume

Hearing volume	3-5, 13-20
Media Player	13-9, 13-10
Ringtone volume	3-4

Backup

Memory Card	12-6
Phonebook	12-7

Cancel/Unlock

Answering Machine	3-8
Call barring	3-18
Caller ID	3-19
Call forwarding	3-16
Call waiting	3-16
Infrared	13-21
Manner mode	1-15
Message Lock	4-14
Offline mode	1-14
Phone Lock	10-3
PIN Lock	10-4
Secret mode	10-5
Voice mail	3-15

Change

Mail address	4-4
Mode	1-15
Network Password	3-19
Phone Password	10-3
PIN	10-3
PIN2	10-3

Copy

File/Folder	11-6
-------------	------

Items	1-19, 2-22
Message content	4-24
Phonebook	2-22
Text	2-19
Text in page	5-8, 5-10

Delete/Clear

Call log	3-10
File/Folder	11-6
Memory	10-7
Messages	4-15, 4-24, 4-27
Notepad	9-15
Phonebook	2-18
Records (Answering Machine)	3-8
Schedule	9-12
Tasks	9-16
Text	2-12
User's Dictionary	13-14

Edit

Account Detail	1-13
Phonebook	2-23
Schedule	9-11
Tasks	9-15
Text	2-12

Initialize

Browser	5-9, 5-12
Memory Card	11-8

Insert/Remove

Battery	1-8
Memory Card	11-8
USIM Card	1-6

Make a call

Emergency call	3-7
International calls	3-11

Voice call	3-4
------------	-----

Play

Media Player	7-4, 7-7
Records (Answering Machine)	3-8
Sound	5-9, 5-11
Voice recorder	9-9

Protect/Lock

File	11-12
Function Lock	10-5
Message	4-14

Receive

Infrared	12-4
Message	4-10, 4-26
USB connection	12-5

Reset

Account details	1-19
All Reset	10-7
Call time & cost	3-11
Reset settings	10-7

Save

Mail address	4-4
Message	4-19, 4-26
Phonebook	2-13, 2-15
User's Dictionary	2-12

Search

Phonebook	2-17
-----------	------

Send

File	11-10
Infrared	12-3
Message	4-4, 4-7
Notepad	9-15
Tasks	9-15

URL	5-8, 5-10
USB connection	12-5
Set/Activate	
Alarm	9-4
Answering Machine	3-8
Any key answer	13-15
Black list	3-9, 13-20
Call barring	3-18
Caller ID	3-19
Call forwarding	3-16
Call waiting	3-16
Camera & Video Camera	13-8
Date & Time	13-12
File	11-12
Font	13-12
Infrared	13-21
International Code	13-18
Key Lock	1-14
Manner mode	1-15
Media Player	13-9
Missed call notification	3-15
Mode	1-14
Offline mode	1-14
Operator	3-12
Phone Lock	10-3
Phone sounds	13-11
Secret mode	10-5
Side key	13-15
Simple search	13-15
Sounds & Vibration	2-5
Vibration	2-6
Voicemail	3-14

View

Answering Machine	3-8
Calendar	9-3
Call log	3-10
Call time & cost	3-11
Captured Pictures	6-6
Cost after call	13-18
Data Folder	11-3
Data in Memory Card	11-9
Memory Status	11-9
Message	4-9, 4-10, 4-23, 4-26, 4-27
Owner Number (Account Detail)	1-13
Recorded Video	6-9
Schedule	9-4
Tasks	9-7

Advanced Settings Index

Account Details	1-19	Standby Image	2-19
Alarm	9-13	Tasks	9-15
Bookmarks	5-13	Text Entry	2-19
Calendar	9-11	User's Dictionary	2-20
Call	3-20	Using/Managing Messages	4-23
Call Logs	3-21	Video Playback	7-10
Capturing Still Images	6-10	Viewing Files	11-10
Conference Call	3-22	Voice Recorder	9-16
Currency/Unit Conversion	9-14	World Clock	9-14
File Viewer	9-17	Yahoo! Keitai	5-8
Folder Management	4-28		
Main Menu	2-19		
Managing Files/Folders	11-10		
Memory Status	11-13		
Music Playback	7-8		
Notepad	9-15		
Page Operations	5-12		
PC Site Browser	5-10		
Phonebook	2-20		
Playlist	7-11		
Received Messages	4-23		
Recording Videos	6-11		
S! Addressbook Back-up	12-9		
Saved pages	5-15		
Sending S! Mail	4-17		
Sending SMS	4-21		
S! Information Channel	8-4		

Warranty & Service

Warranty

7405C purchase includes Warranty.

- Confirm shop name and date of purchase.
- Read through the contents of the Warranty and keep it in a safe place.
- The warranty period can be found in the Warranty.

SoftBank Mobile is not liable for damage to you or a third party from missed calls, etc. due to handset failure or malfunction, etc.

Repair Requests

Before submitting handset for repair, consult the "Troubleshooting" (P.14-2) for a solution. If a problem persists, contact Customer Service (P.14-22) or the nearest SoftBank shop; be prepared to describe problem in detail.

- During the warranty period, repairs will be made under the terms and conditions described in the warranty.
- After the warranty period, repairs will be upon request; if said repairs can be made, you will be charged for them.

Note

- Handset files and settings may be lost or altered due to accidents or repairs. Keep a copy of important files, etc. like Phonebook entries. SoftBank Mobile is not liable for damage resulting from accidental loss or alteration of handset files (Phonebook, Data Folder, etc.) or settings.
- Disassembling or modifying this product may be a violation of the Radio Law. Note that SoftBank Mobile will not accept repair requests for disassembled or modified products.

Customer Service

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

SoftBank Mobile Customer Center

From a SoftBank handset, dial 157 for General Information, or
113 for Customer Assistance, toll free

SoftBank Mobile Global Call Center

From outside Japan, dial +81-3-5351-3491
(Please take care to dial correctly. International charges will apply.)

Call these numbers toll free from landlines.

Subscription Areas	Contact	
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎ 0088-240-157
	Customer Assistance	☎ 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎ 0088-241-157
	Customer Assistance	☎ 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎ 0088-242-157
	Customer Assistance	☎ 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎ 0088-250-157
	Customer Assistance	☎ 0088-250-113