

Thank you for purchasing SoftBank 830SH s.  
SoftBank 830SH s Quick Guide introduces major functions and operations.  
For proper handset use, read this guide and  
830SH s User Guide beforehand; keep both for reference.

Read "Safety Precautions" in 830SH s User Guide.

Key Assignments .....	2	Manner Mode .....	13
Display Indicators .....	3	Sending S! Mail .....	14
Charging Battery .....	4	Opening Mail & Replying .....	16
Handset Power On/Off .....	5	Capturing & Opening Images .....	18
Main Menu & My Details .....	6	Capturing & Sending Images .....	20
Change Menu .....	7	Wallpaper .....	22
Calling .....	8	Text Entry .....	24
Call Log .....	9	ヘルスノート (Health Note) S! Application .....	30
Creating Phone Book Entries .....	10	Customer Service .....	31
Dialing from Phone Book .....	12		

## Center Key

- Open Main Menu
- Execute operation/function

## Multi Selector

- Select items
- Move cursor

: Press up/down/left/right

: Press up/down

: Press up

"•" indicates key press point

## Mail Key

- Create S! Mail (Long Press)

## Shortcuts & A/a Key


- In text entry windows, toggle upper/lower case roman letters
- Open Shortcuts menu

## Start Key

- Initiate or answer calls

## Keypad

- Enter numbers/text

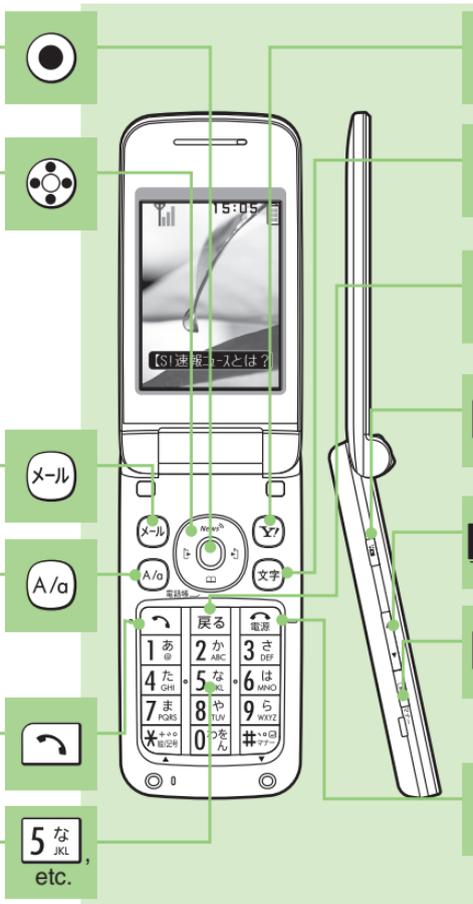

## Yahoo! Keitai Key

- Open Yahoo! Keitai Main Menu



## Text Key

- Open Dictionary
- Open Change Menu window (Long Press)



## Back Key

- Return to previous window
- Delete entries



## S! Circle Talk Key

- Open S! Circle Talk member list (handset open)



## Volume Keys

- Adjust Earpiece Volume



## Multi Job & Manner Key

- Activate/cancel Manner mode (Long Press)
- Toggle active functions



## Power On/Off Key

- Turn handset on/off (Long Press)
- End calls
- Exit functions

	Manner mode active
	Drive mode active
	Original mode active

	Signal strength (The more bars the better.)
	Out-of-range

	Unread mail
	Unread Delivery Report
	Mail memory low
	Receiving mail
	Sending mail
	Answer Phone active
	Answer Phone active & message recorded
	Answer Phone canceled & message recorded
	New Voicemail



## Time

	Battery strength (  may appear instead.)
---	--

	Alarm set
	Schedule/Task (Alarm set)
	Schedule/Task (Alarm unset)

	Memory Card inserted
	Memory Card unusable/ misinserted
	Memory Card in use
	Memory Card formatting
	Infrared transmission ready
	Infrared file transfer in progress


### Softkeys

Functions/operations assigned to ,  and  appear at the bottom.

**Options View Check**

Together with Desktop Holder, use specified AC Charger ZTDAA1 (sold separately) only.

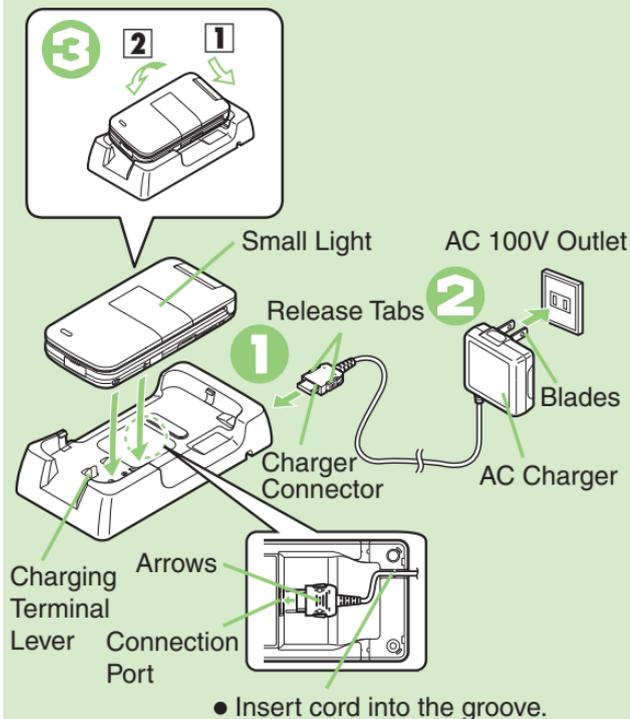

## 1 Insert AC Charger connector into Desktop Holder

- Connection Port is on the back of Desktop Holder.
- With arrows down, insert connector until it clicks.

## 2 Plug AC Charger into AC outlet


## 3 Place handset onto Desktop Holder

- Fit tabs into slots as shown in **1** and push handset as indicated in **2** until it clicks into place (resting flat).
- Small Light illuminates red while charging, then goes out when battery is full.

### ↓ After Charging

## Disconnect 830SH s from Desktop Holder, then unplug AC Charger

- Pull AC Charger straight out.
- Squeeze release tabs when removing AC Charger connector.

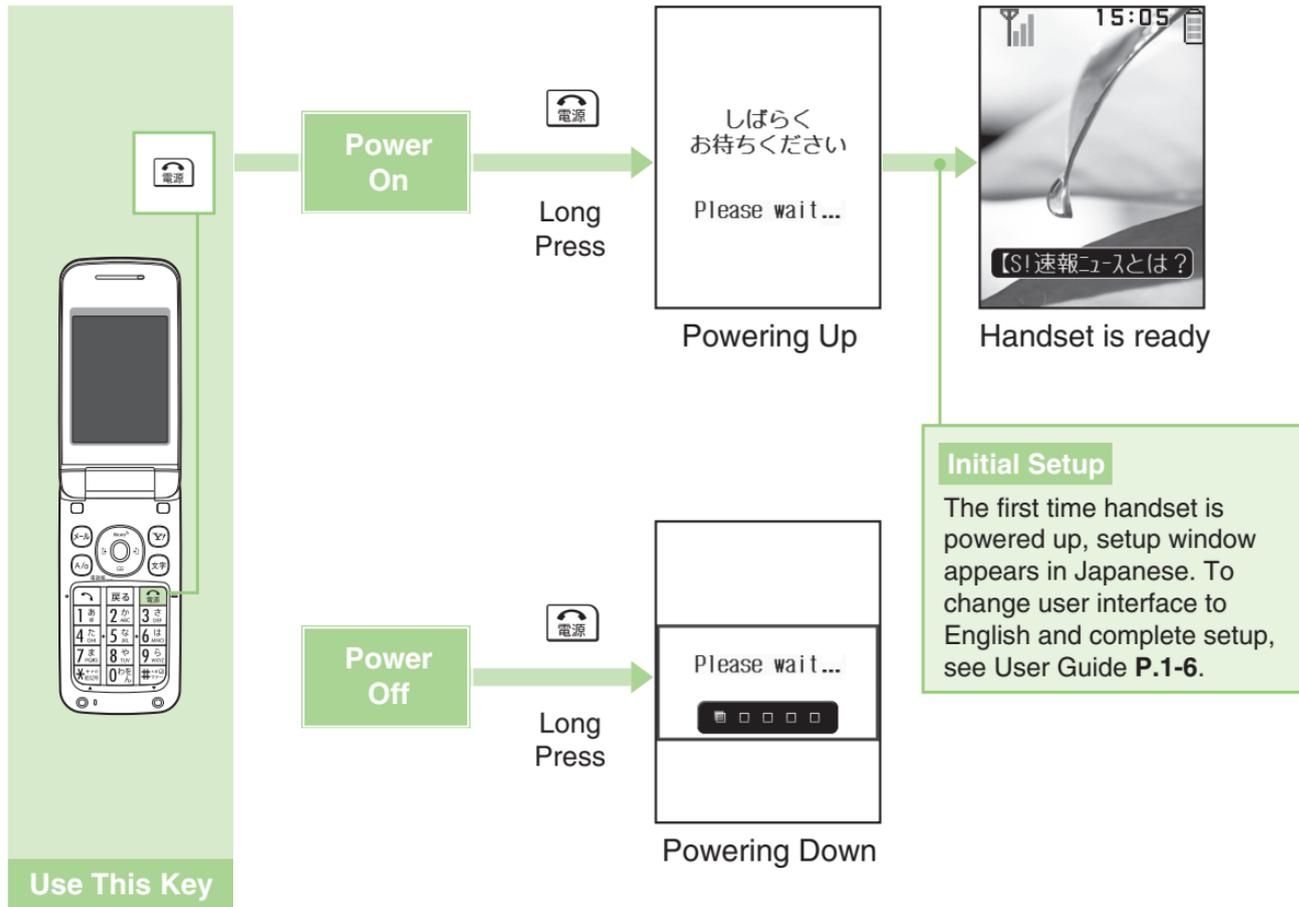

**In Standby**

Use These Keys

0 わをん  
戻る

戻る

Main Menu opens

戻る

Select an item

戻る

Sub Menu opens  
(Viewfinder appears for Camera)

Press to exit

Open My Details


0 わをん

Options View Edit

Handset phone number appears

**In Standby**

Use These Keys

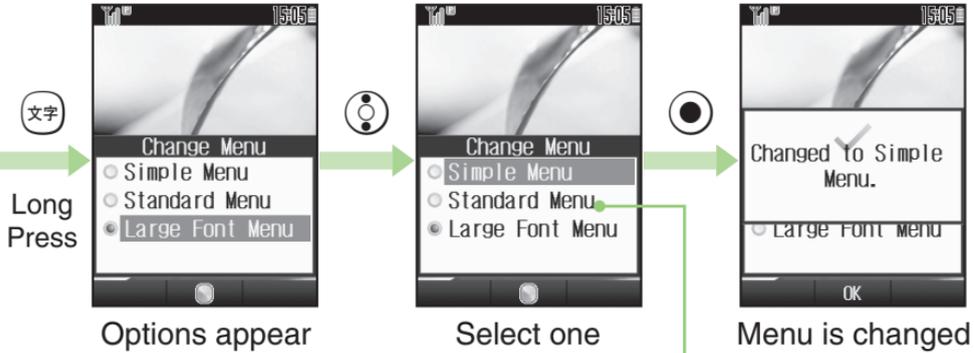


### Handset Menu Options

<b>Simple Menu</b>	Simplified menus in large fonts
<b>Standard Menu</b>	All menus in <b>Standard</b> fonts
<b>Large Font Menu</b>	All menus in large fonts (default)





Simple Main Menu

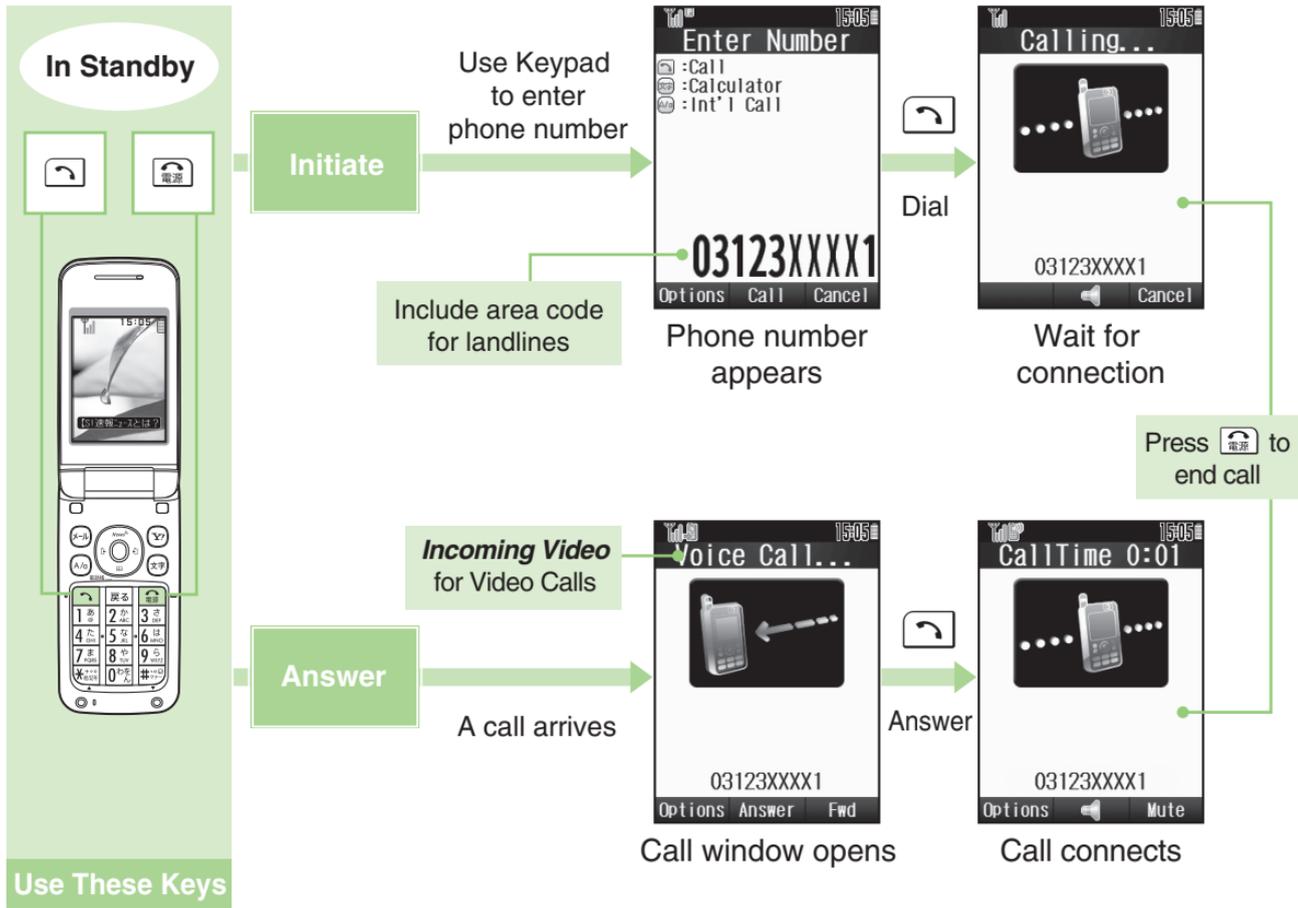

**In Standby**







Use These Keys

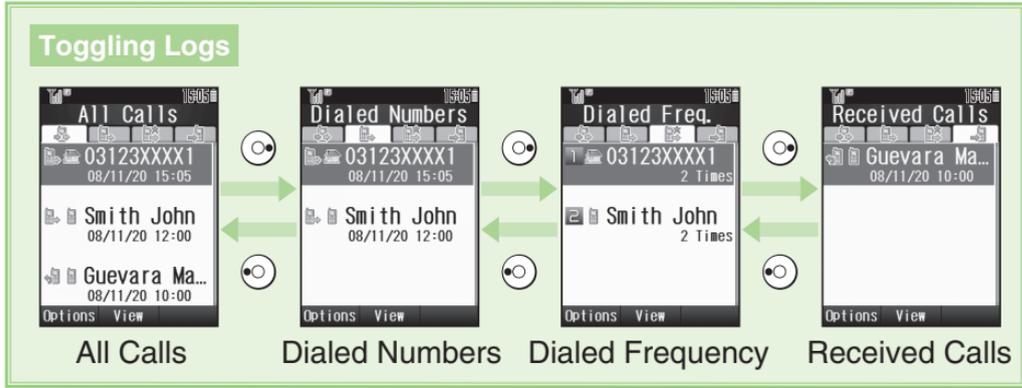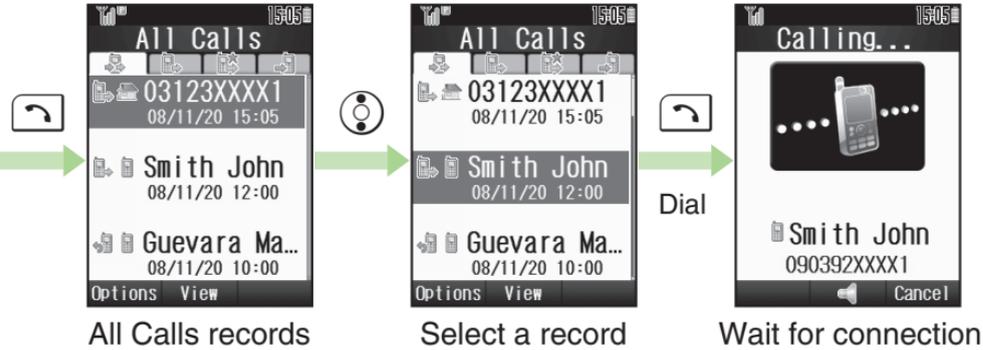

**In Standby**

Use These Keys

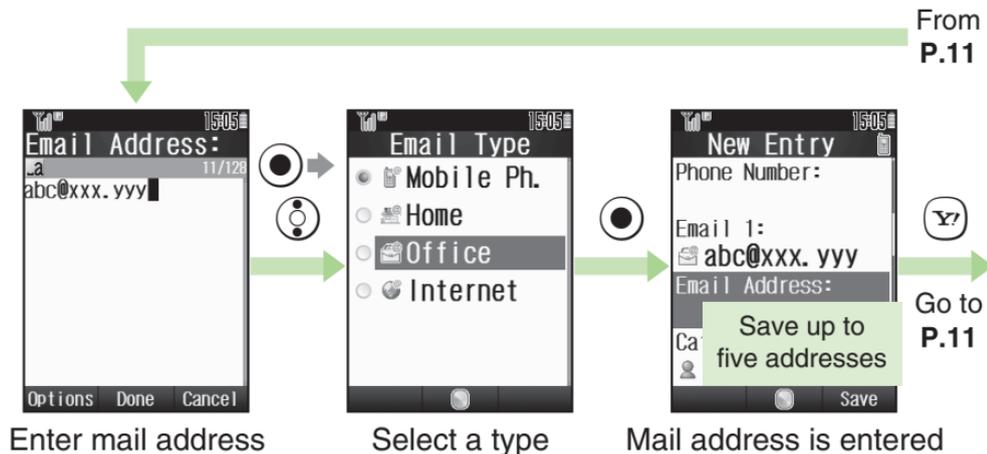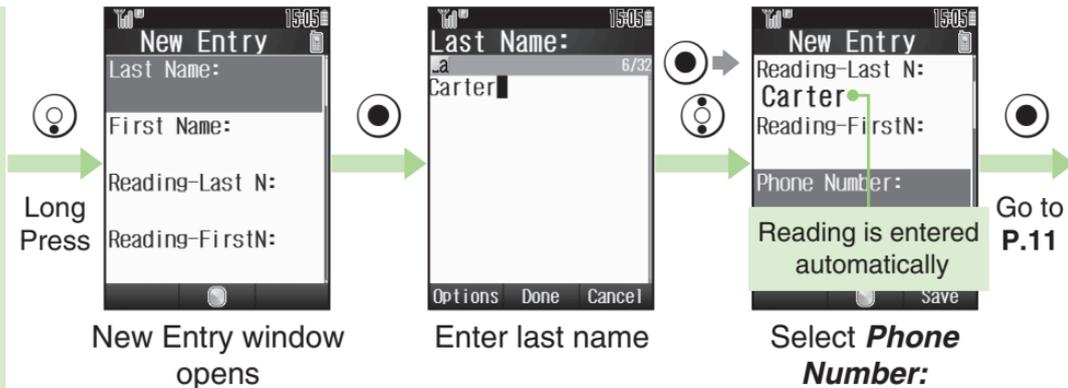


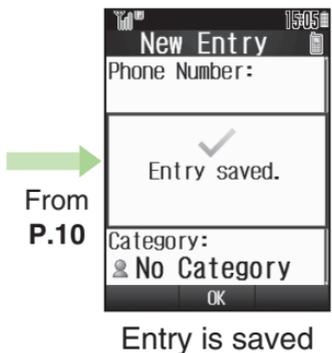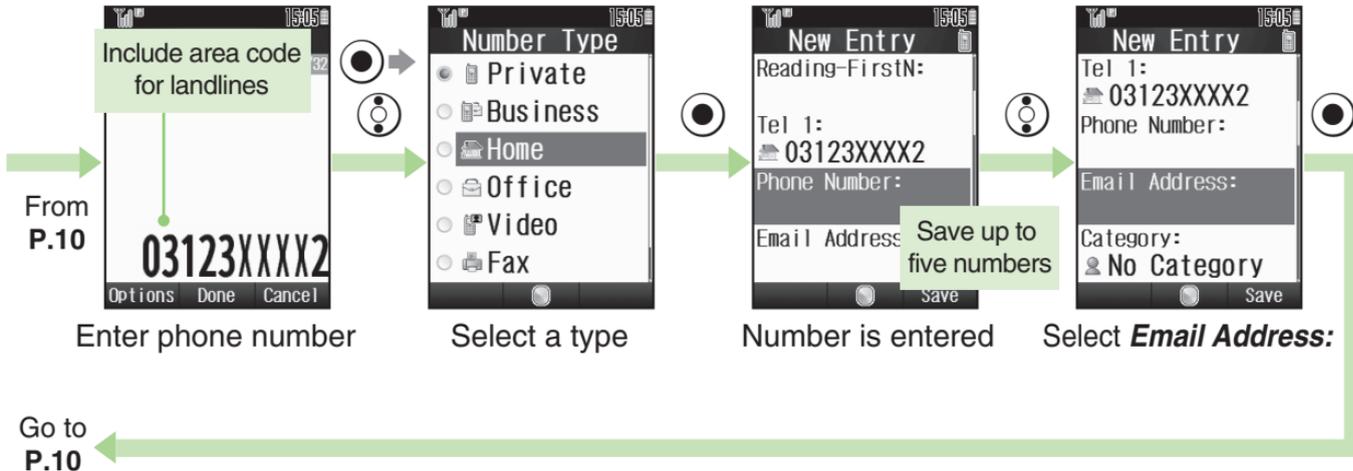

**Other Entry Items**

<b>Category</b>	Sort entries into Categories
<b>Picture</b>	Set an image to appear for incoming calls/mail
<b>Tone</b>	Set ringtone/ringvideo by caller/sender
<b>Vib.</b>	Set vibration by caller/sender
<b>Secret</b>	Restrict access to Phone Book entries

- Save address, birthday, and more in addition to the above items.

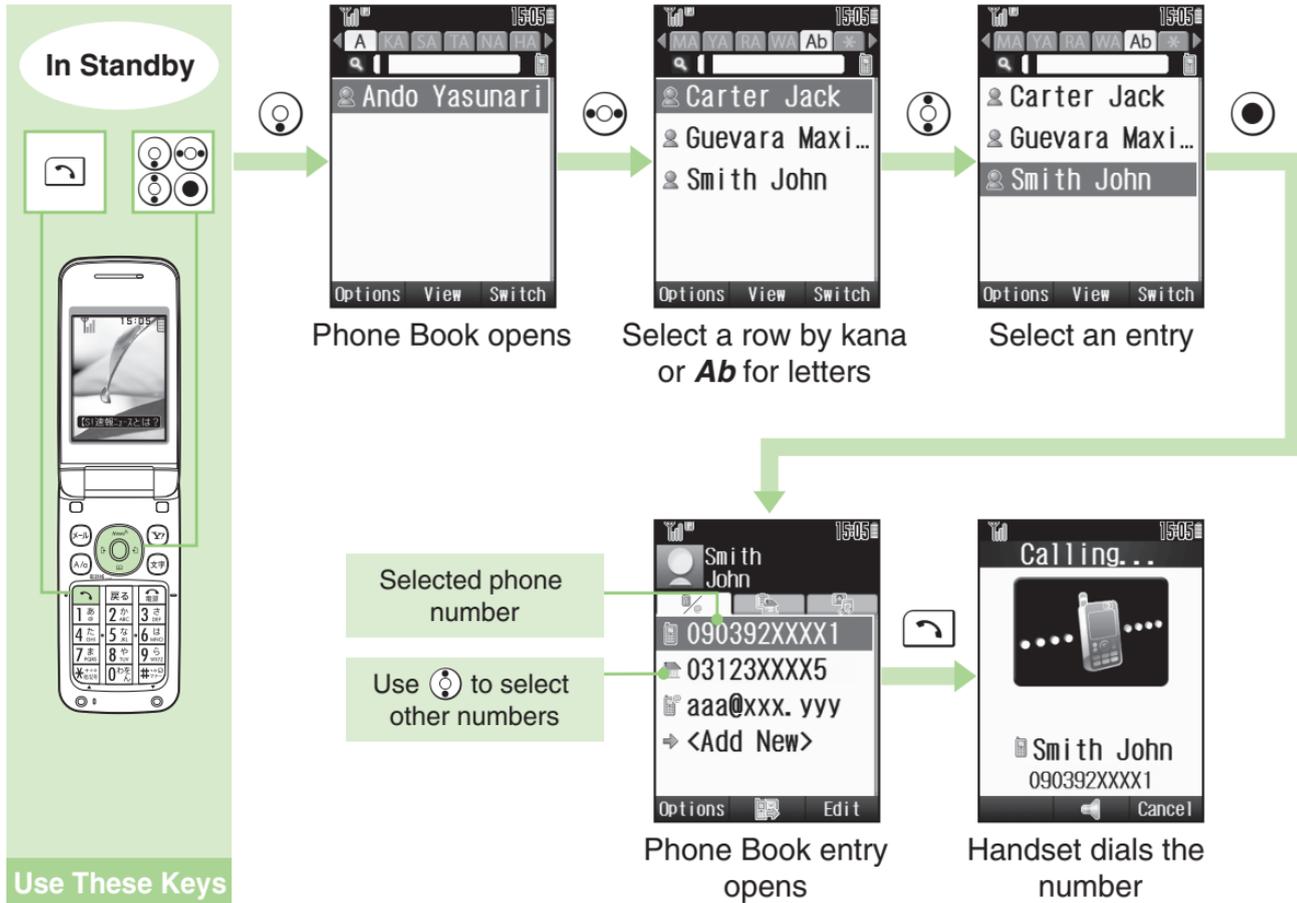

In Standby



Use This Key

Activate



Long Press



lightbulb appears

Manner Mode is set

When Manner Mode is Active

Ringtones, Keypad tones, etc. are muted, however, Shutter click still sounds.

Cancel



Long Press




lightbulb disappears


Manner Mode is canceled

**In Standby**

メール    ㏻


Use These Keys

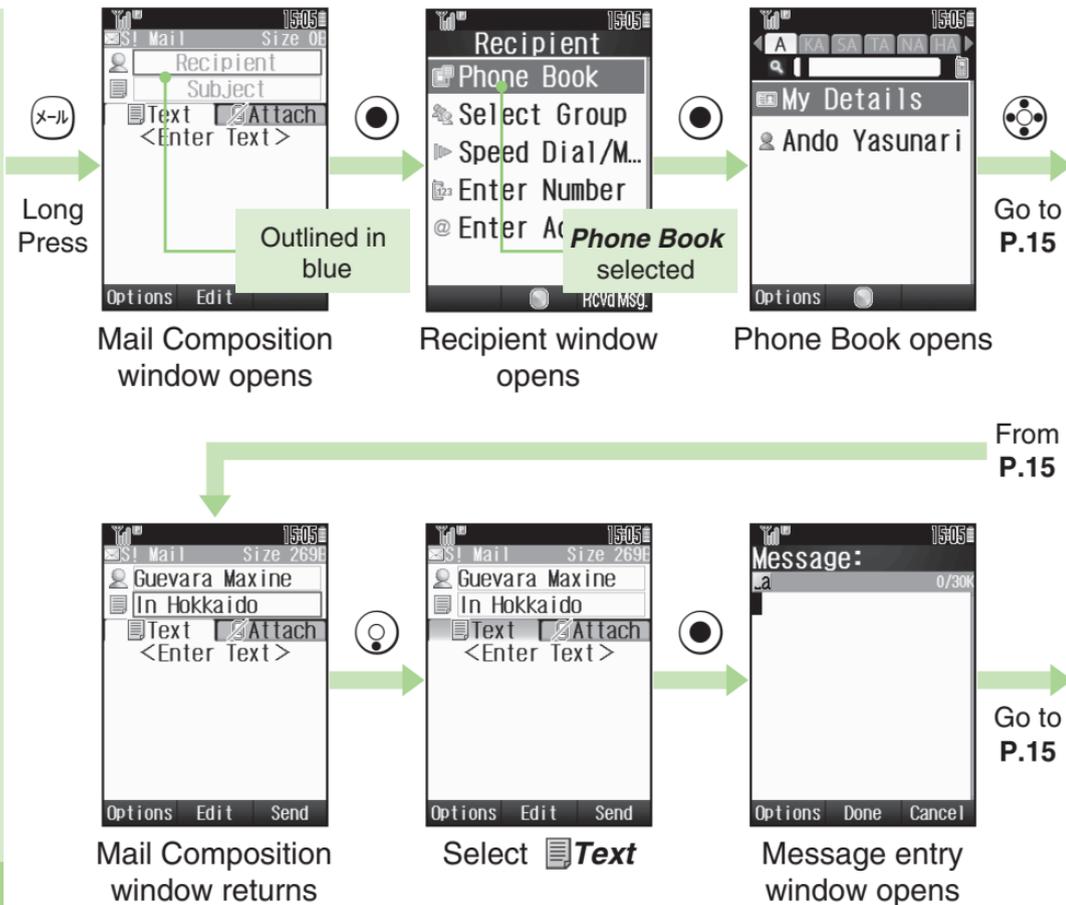

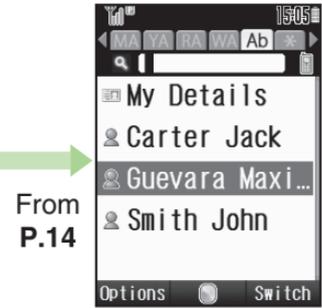


From P.14

Select a recipient

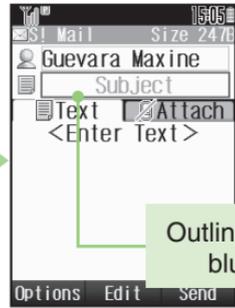

Mail Composition window returns

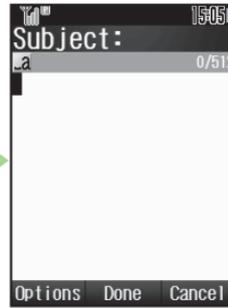


Subject entry window opens



Enter subject

Go to P.14

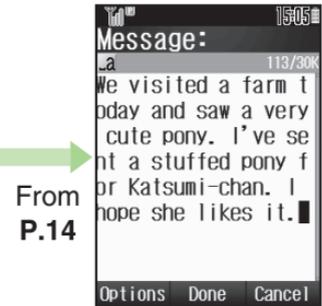

From P.14

Enter a message




S! mail is created





S! mail is sent

### Editing before Sending

Before pressing , select a field and press  to edit recipient, subject or message text.

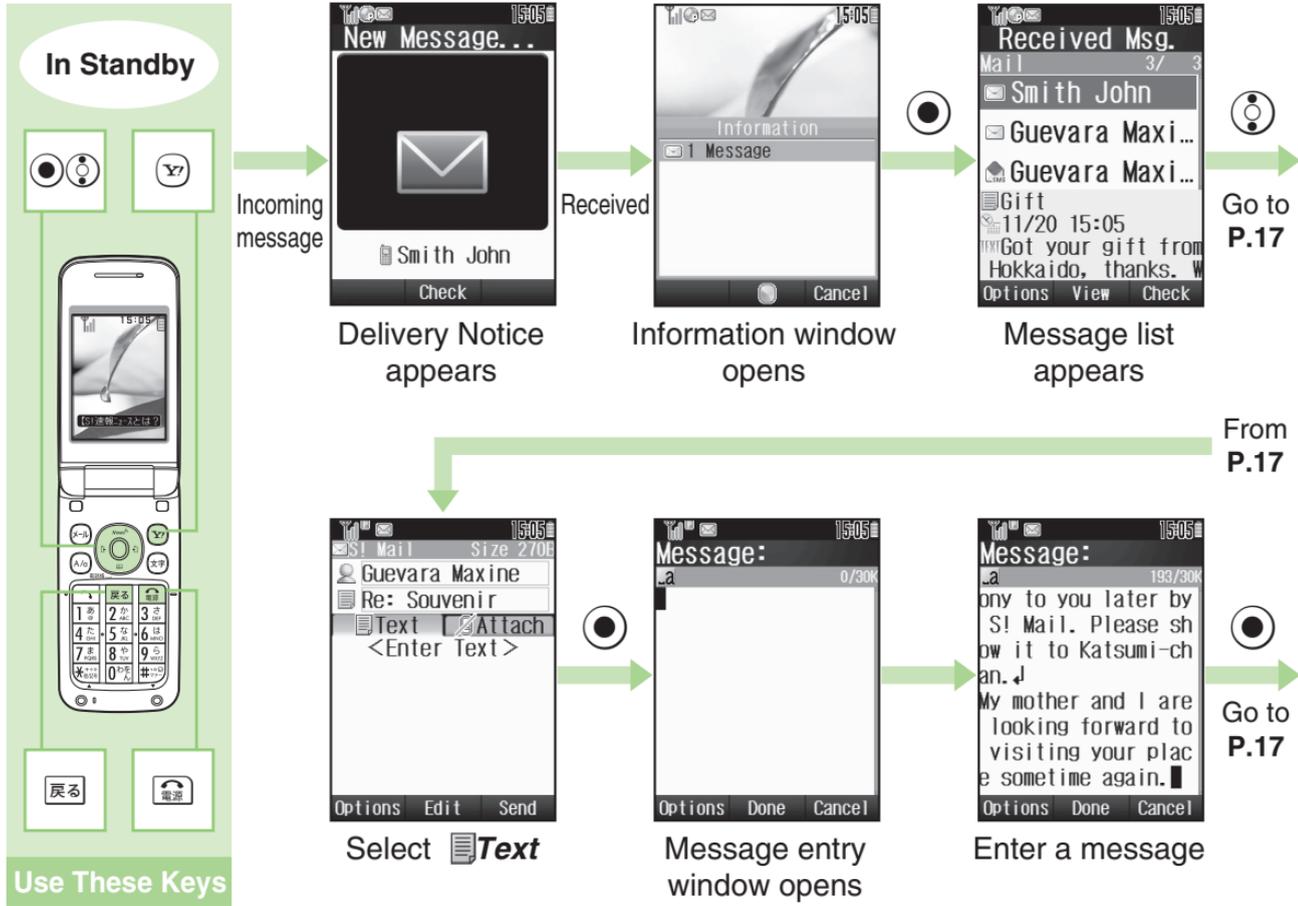

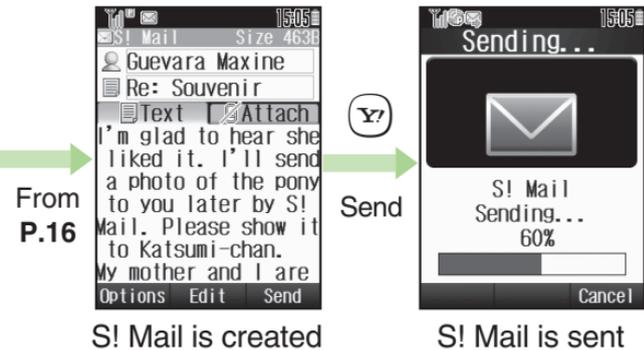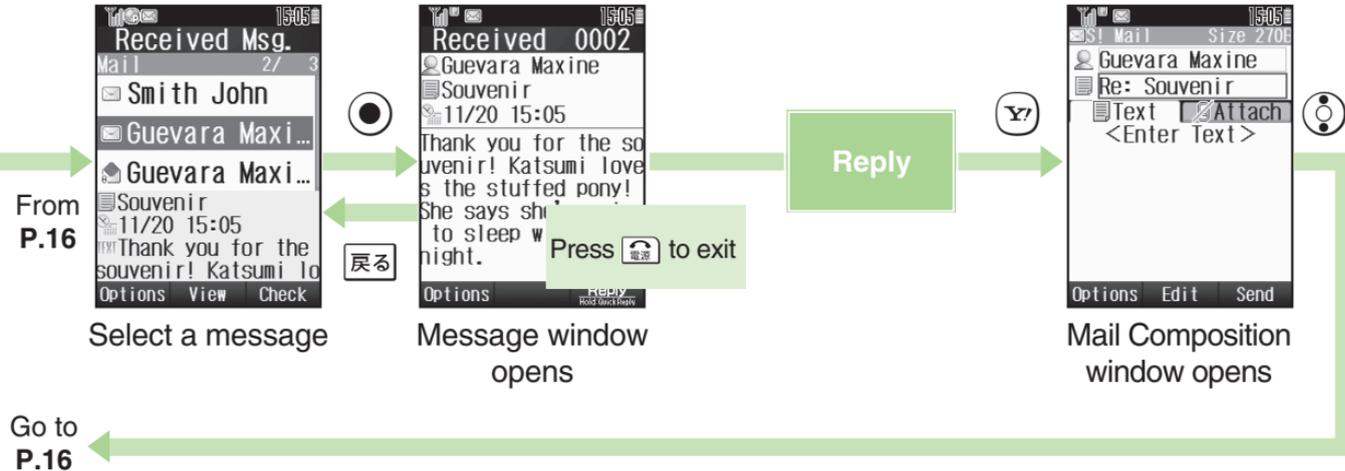

**3D Pictogram**

When a message is opened for the first time, message text appears in 3D animation, then confirmation to enable or disable 3D Pictogram appears.

**Subject**

Entered prefaced with **Re:**. To edit it, select the field and press [Return].

# Capturing & Opening Images



Capture Images



Main Menu opens



Viewfinder appears

Capture  
Go to  
P.19

Open Images



Main Menu opens



Select **Data Folder**

Go to  
P.19



From P.18

Shutter clicks and image is captured


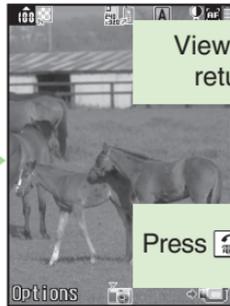


Image is saved

**Help**

While Viewfinder appears, press to view a summary of key assignments. (Use to scroll.)

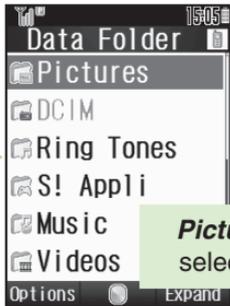

From P.18

Data Folder opens






Select an image



Image appears


# Capturing & Sending Images

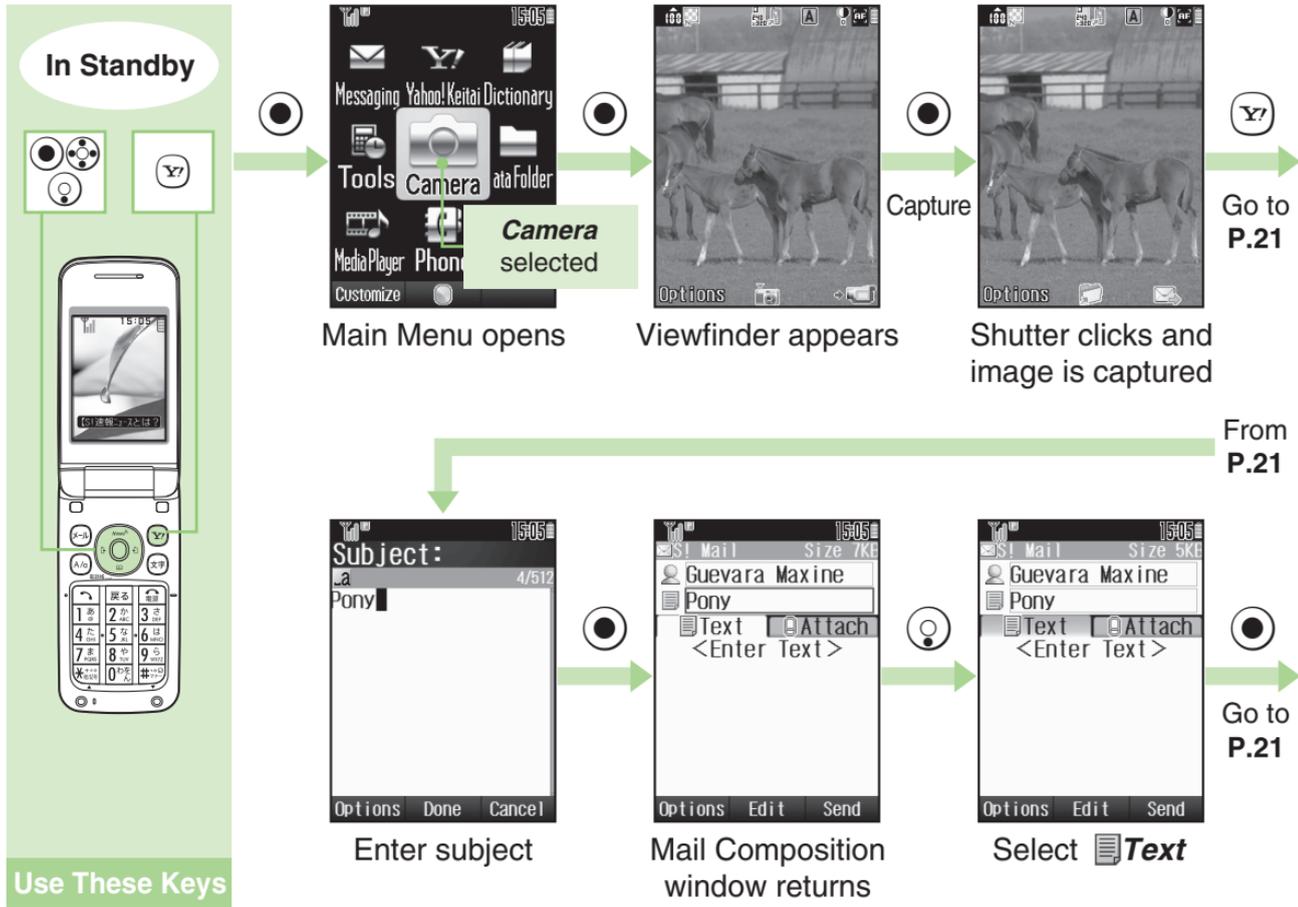

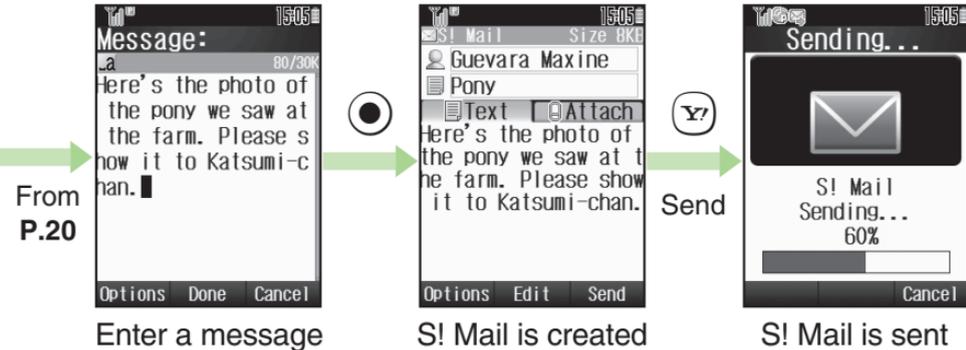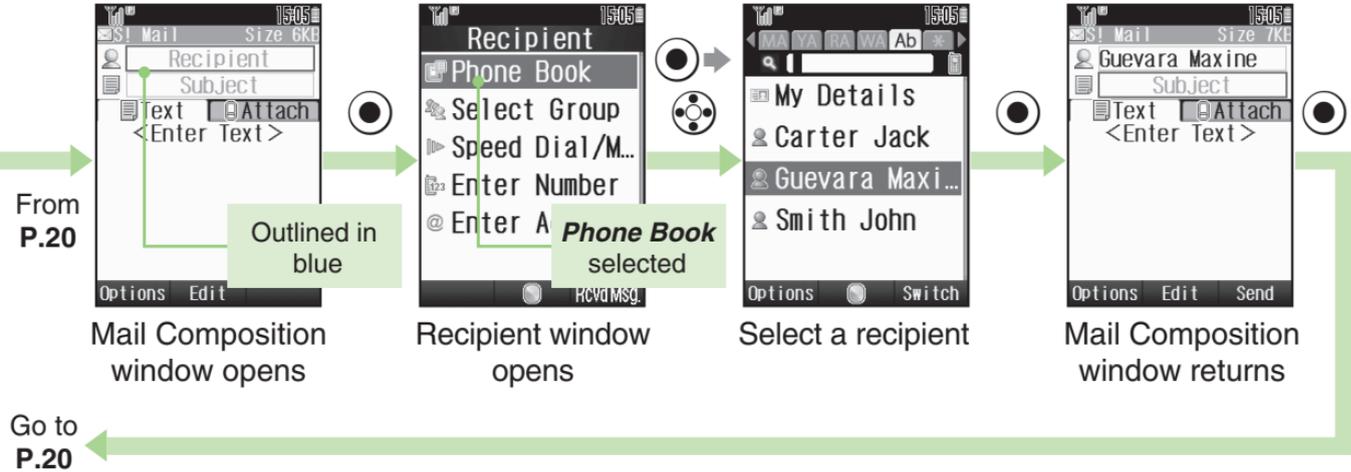

In Standby


Use These Keys

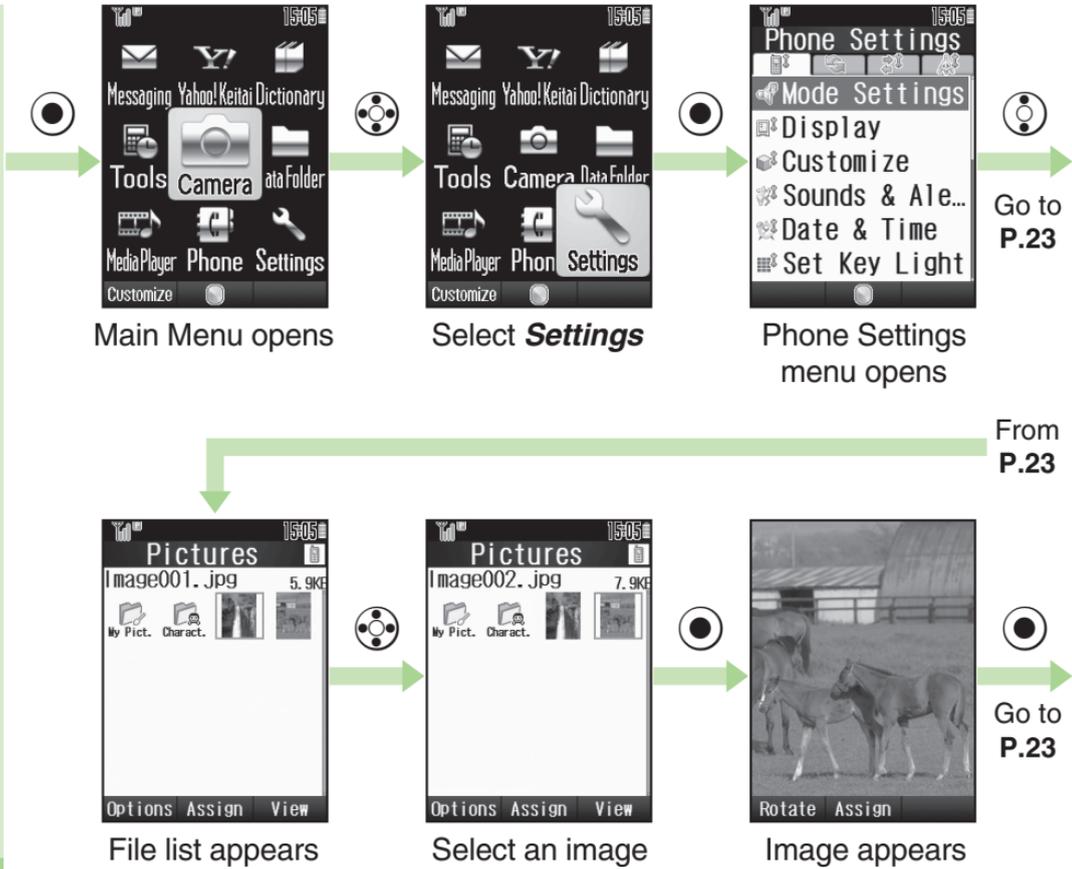




From  
P.22


Select **Display**

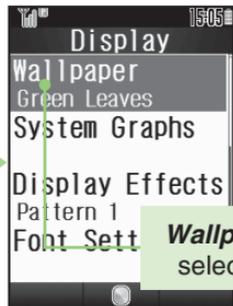

Display menu  
opens

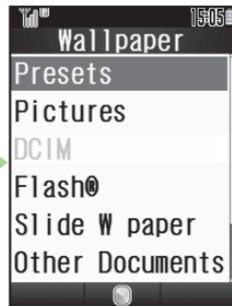


Folders appear

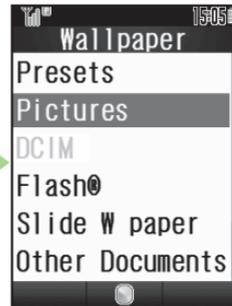

Select **Pictures**

Go to  
P.22

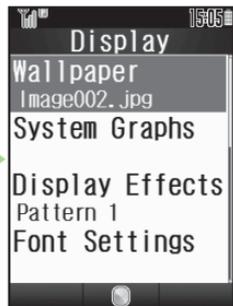

From  
P.22

Wallpaper is set



Standby returns;  
Wallpaper appears



### Major Display-Related Settings



<b>System Graphs</b>	Show specified images for incoming calls, etc.
<b>Customized Screen</b>	Set an image to appear for incoming calls/mail
<b>Backlight</b>	Set Display Brightness or Backlight illumination time
<b>言語選択 (Language)</b>	Switch interface between Japanese and English

**In a Text Entry Window**

**Use These Keys**

Multiple characters are assigned to each key (P.29). Press a key to toggle between character options for that key.

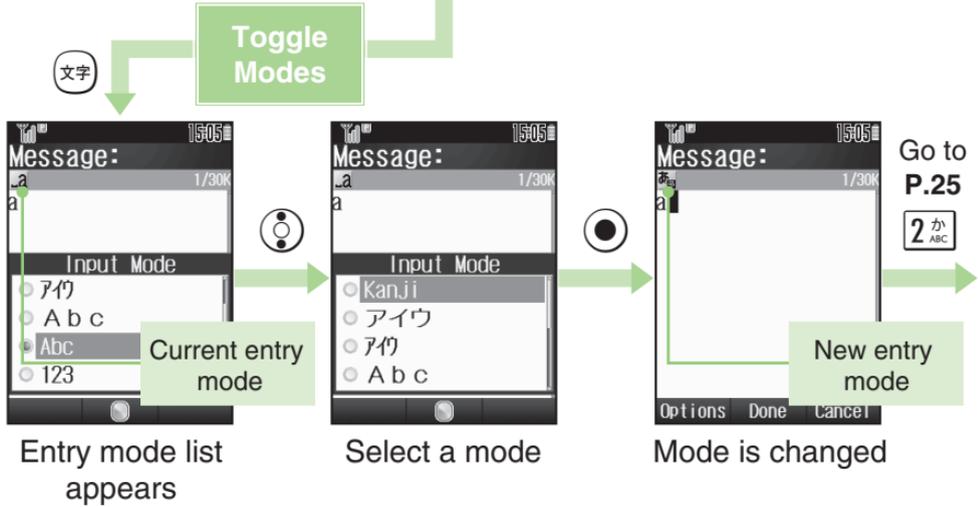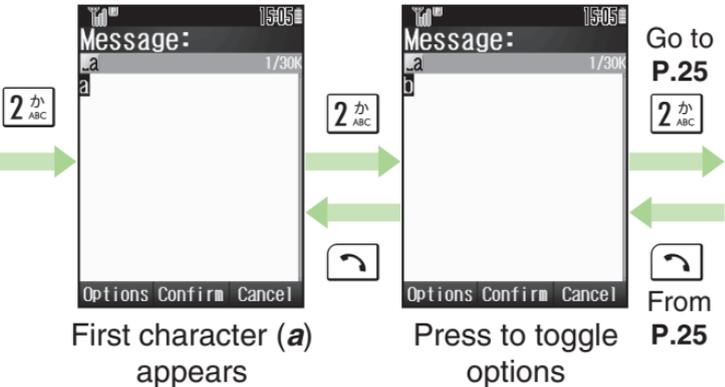

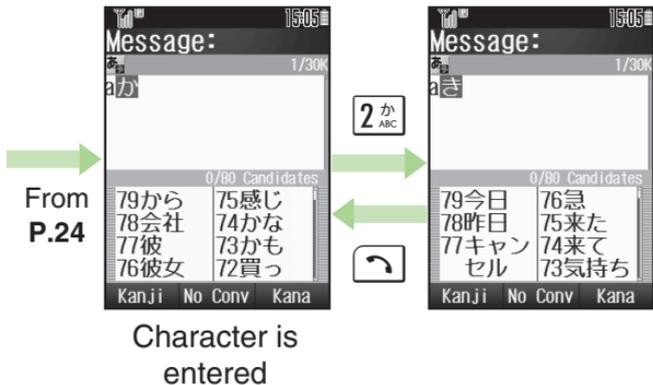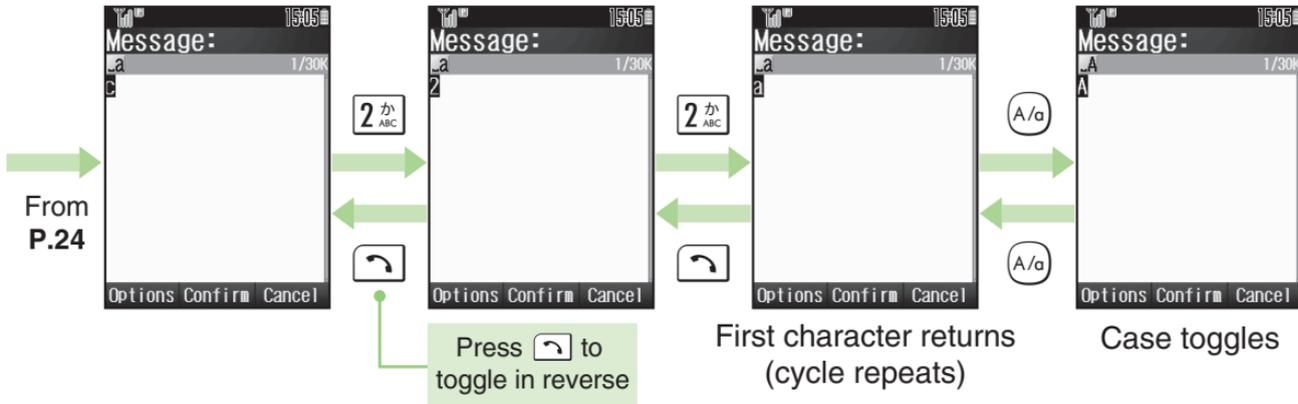


## Entry Modes

<b>Kanji</b>	Kanji (hiragana)
<b>アイウ</b>	Double-byte katakana
<b>アヅ</b>	Single-byte katakana
<b>A b c</b>	Double-byte alphanumerics
<b>Abc</b>	Single-byte alphanumerics
<b>123</b>	Single-byte number
<b>Pictogram</b>	Pictogram (list)
<b>Symbols</b>	Symbol (list)
<b>Character Code</b>	Character Code

Switch to kanji (hiragana) entry mode first.

**In a Text Entry Window**

**Use These Keys**

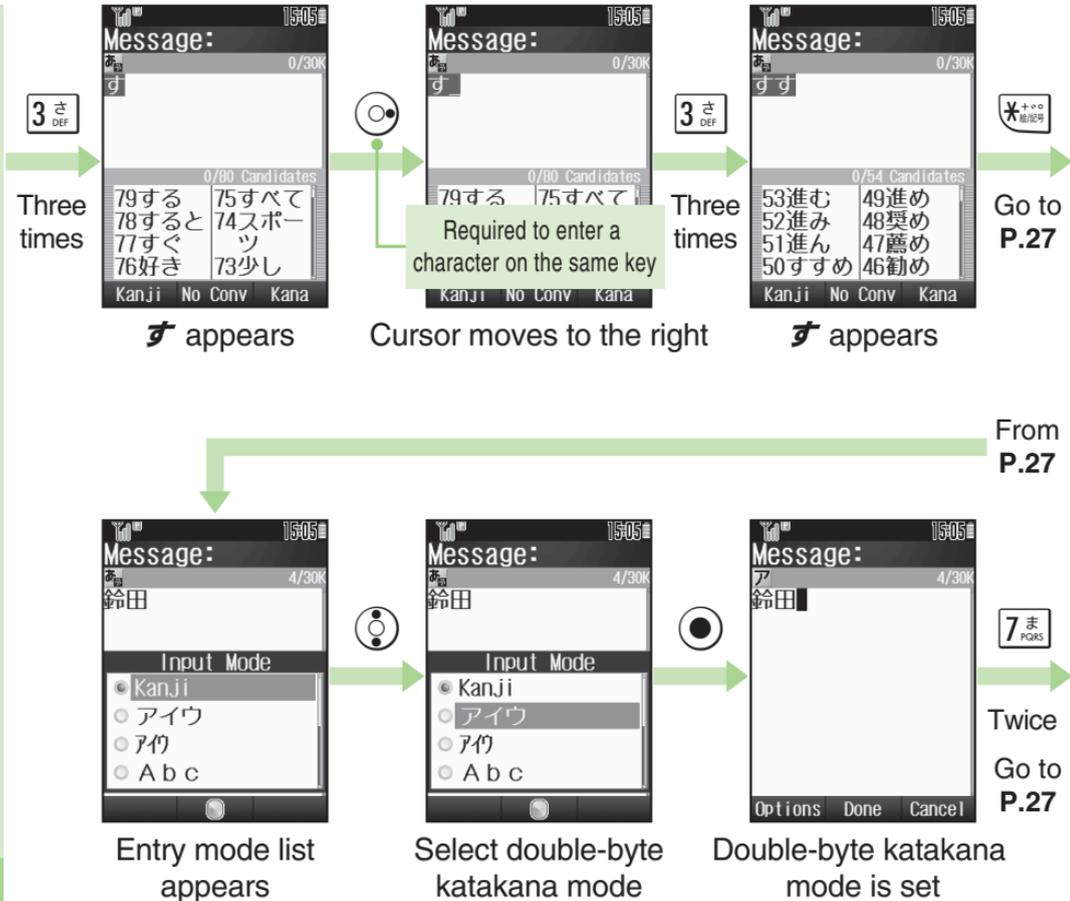



From P.26

す changes to ず

4 た GHI



すずた is entered



Select 鈴田



鈴田 is entered

文字

Go to P.26



From P.26

≡ appears

2 か ABC



カ appears






ミカ is entered



Text entry is complete

# Text Entry (Symbols & Pictograms)

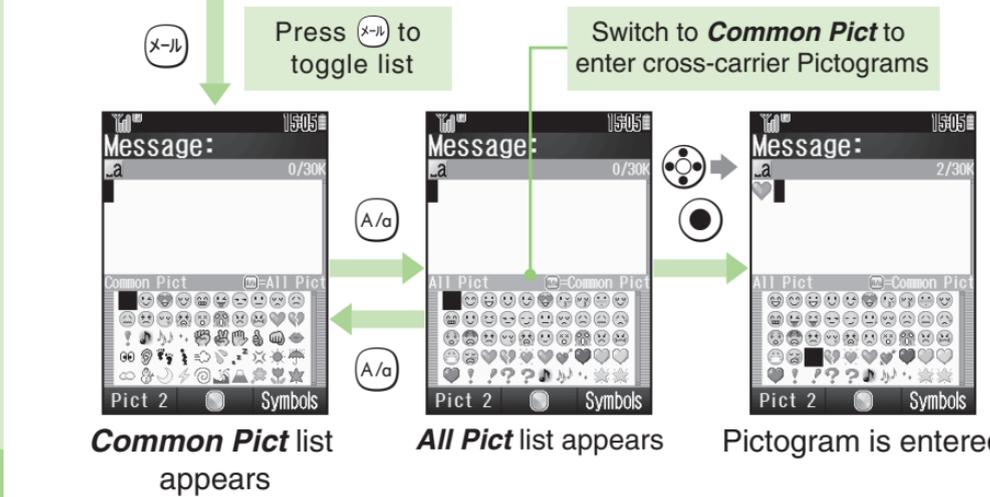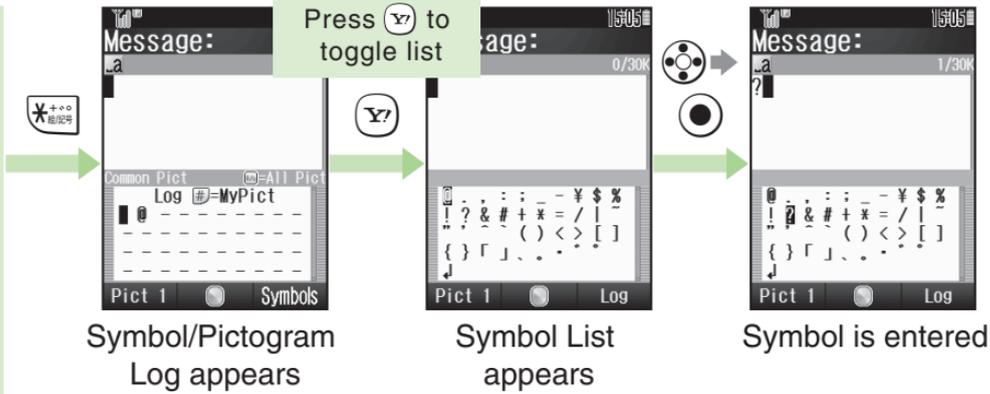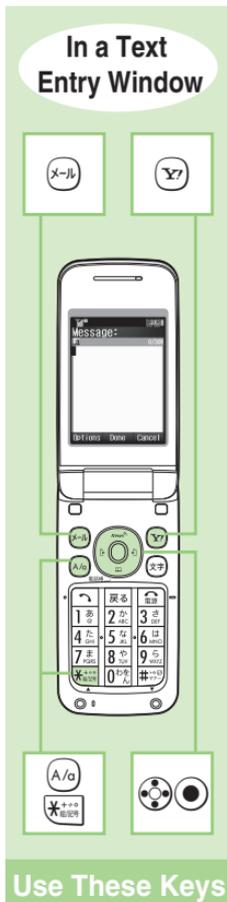

	Kanji (Hiragana) [Double-byte]	Katakana [Double & Single-byte]	Alphanumerics [Double & Single-byte]	Numbers [Single-byte]	Character Codes
1 あ	あいうえお あいうえお	アイウエオ アイウエオ	@. / _ — 1 □ (space)	1	1
2 か	かきくけこ	カキクケコ	A B C a b c 2	2	2
3 さ	さしすせそ	サシスセソ	D E F d e f 3	3	3
4 た	たちつとっ	タチツテトツ	G H I g h i 4	4	4
5 な	なにぬねの	ナニヌネノ	J K L j k l 5	5	5
6 は	はひふへほ	ハヒフヘホ	M N O m n o 6	6	6
7 ま	まみむめも	マミムメモ	P Q R S p q r s 7	7	7
8 や	やゆよやゆよ	ヤユヨヤユヨ	T U V t u v 8	8	8
9 ら	らりるれろ	ラリルレロ	W X Y Z w x y z 9	9	9
0 わ	わをんー	ワヲンー	0	0	0
* かな	・	・ ・ - 1	—	✕+P (pause) ? - 2, 3	—
	Log, Pictogram List (double-byte), Symbol List <sup>3</sup>				
# かな	・	・ ・	#	#	—
	↓ (line break) ? ! □ (space)				

<sup>1</sup>- is available only in single-byte katakana entry.

<sup>2</sup>Available for phone number entry.

<sup>3</sup>Some characters may not be enterable in some windows.

Use **ヘルスノート** (Health Note) S! Application to help manage your health.  
(Japanese ability is required to use this application.)

#### 体重・歩数メモリー (Weight/Step Memory)

Records body weight and step count.

#### 体重歩数推移グラフ (Weight/Step Graph)

View changes in body weight and step count.

#### 肥満度チェック (Overweight Test)

Enter your height and weight to calculate Body Mass Index (BMI). The application also shows ideal body fat percentage and ideal body weight.

#### データ出力 (Data Output)

Export saved data to Data Folder as a text file.

#### BMI & Body Fat Percentage

Though estimated as overweight by BMI, a person may not be so estimated by body fat percentage. Conversely, though estimated not overweight by BMI, one may be so estimated by body fat percentage. Discrepancies arise because BMI is calculated by statistics, and body fat percentage by measured data.

#### NOTE

Estimations are based on statistics sampled from Japanese subjects.

#### Ideal Body Fat Percentage

Provided by Tanita Corporation.

This index is designed specifically for Tanita's body composition monitor based on the evidences at WHO and Japan Society for the Study of Obesity.

For SoftBank handset or service information, call General Information. For repairs, call Customer Assistance.

### SoftBank Customer Centers

General Information: From a SoftBank handset, dial **157 (toll free)**

Customer Assistance: From a SoftBank handset, dial **113 (toll free)**

### SoftBank Global Call Center

From outside Japan, dial **+81-3-5351-3491**

**(international charges apply)**

■ Call these numbers toll free from landlines.

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎0088-240-157
	Customer Assistance	☎0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎0088-241-157
	Customer Assistance	☎0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎0088-242-157
	Customer Assistance	☎0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎0088-250-157
	Customer Assistance	☎0088-250-113



Mind your mobile manners when carrying a handset.