Using This Manual

9	i i i i i i i i i i i i i i i i i i i
Manual Overview	Contents······ Chapter Contents: First page of each chapter······
Function & Service Search	Contents ······ Index: Try searching by various terms. ······
Objective Search	Objective Search······
Feature Search	Feature Search ····································
Display Indicators	Display Indicators ····· Menu Operations ·····
Solving Problems	Troubleshooting ······ Warranty & After Sales Service ····

Page vi Page 1-1 to 14-1	
Page vi Page 14-33	
Page ii Page 14-33	
Page iv Page vi	
Page 1-4 Page 2-2	
Page 14-7	

Getting Started	1
Basic Operations	2
Call	3
Messaging	4
Internet	5
TV	6
Camera/Picture Editing	7
Media Player/S! Appli	8
Tools	9
Communication Services	10
Security	11
File Transfer/Backup	12
Customization	13
Appendix	14

Objective Search

Using Handset Phone Number/Mail Address

Checking Handset Number

Check your phone number on handset.

My Phone Number ⇒ Page 3-3

Customizing Mail Address

Customizing handset address can help reduce spam.

Customizing Handset Address ⇒ Page 4-3

Customizing Handset

Ringtone

Select a music file, movie file or Chaku-Uta® from ringtone settings.

Ringtone ⇒ Page 13-11

Downloading Chaku-Uta®

Download your favorite songs from the Chaku-Uta® site.

Obtaining Music and Videos ⇒ Page 8-3

Understanding Basics

Basic Operations

Using keys and accessing functions.

Softkeys and Multi Selector ⇒ Page xi Menu Operations ⇒ Page 2-2

Making Calls

Make voice calls and Video Calls. Use call functions such as Speed Dial or Answering Machine

Voice Call ⇒ Page 3-4 Video Call ⇒ Page 3-7

Using Advanced Features

Watching TV

Watch One Seg Digital TV on handset. No additional fees required.

 $TV \Rightarrow Page 6-2$

Listening to Music

Use Media Player to listen to downloaded music.

Media Player ⇒ Page 8-2

Saving Address to Handset

Saving your new address to My Details is convenient for exchanging information with others.

My Details ⇒ Page 3-12

Sharing Address with Friends

Share your new address by sending a message to multiple addresses simultaneously.

Sending Messages ⇒ Page 4-4, Page 4-6 Adding Recipients ⇒ Page 4-13

Sharing Address via Infrared

Share your e-mail address by infrared transfer. Save your e-mail address prior to transfer.

Infrared ⇒ Page 12-14

Wallpaper

Set images captured with handset camera as wallpaper.

Wallpaper ⇒ Page 2-7

Changing Font Size

Change font size for menus and web pages. Font color pattern can also be changed.

Setting Font Size ⇒ Page 13-5, Page 13-21

Setting Twinkle Light

Set or create your own Twinkle Light that notifies you of incoming calls, messages, etc.

Twinkle Light ⇒ Page 13-6

Text Entry

Enter text when creating Phone Book entries or messages.

Text Entry ⇒ **Page 2-10**

S! Mail/SMS

Select S! Mail or SMS according to your purpose.

S! Mail ⇒ Page 4-4 SMS ⇒ Page 4-6

Accessing the Mobile Internet

Use Yahoo! Keitai to access Mobile Internet sites tailored for SoftBank customers.

Yahoo! Keitai ⇒ Page 5-3

Digital Camera/Digital Video

Shoot pictures and videos with handset camera.

Taking Pictures ⇒ Page 7-3 Recording Videos ⇒ Page 7-5

Using Handset as a Gaming Device

Play preinstalled S! Appli games or download games from Yahoo! Keitai.

S! Appli ⇒ Page 8-8

Using Handset as a Wallet

Payments are quick and easy without needing small change. Hold handset up to a reader/writer at checkout counters.

Osaifu-Keitai[®] ⇒ Page 9-10

Feature Search

830T Features	Handset supports One Seg Digital TV for mobile phones and information terminals. You can also browse data broadcasts and use view timer. →Page 6-2	Files can be transferred using Bluetooth® communication. Page 12-5
SoftBank Features	Yahoo! Keitai Sites A special portal site for SoftBank handsets is available to enhance your Internet browsing experience. →Page 5-3	Graphic Mail/Feeling Mail Send Graphic Mail (HTML mail) or Feeling Mail. →Page 4-5
Convenient Features	Phone Book/S! Addressbook Back-up Save contact information to Phone Book and back up data on S! Addressbook Server. →Page 2-16, Page 12-12	Alarm/Event Schedule Use the alarm to wake you in the morning. Save and manage event schedule on Calendar that can be interfaced with phone/mail functions. →Page 9-4, Page 9-18
PC-related Features	PC Site Browser View PC-based websites with PC Site Browser.	Card Reader Mode (for use with PC) Use the USB cable to connect handset to a PC and access microSD/microSDHC memory card data from the PC.
	⇒Page 5-4	⇒Page 2-24, Page 12-9

1.96 Megapixel Camera

Handset is equipped with a 1.96 megapixel camera.

⇒Page 7-2

microSD/microSDHC Memory Card

Handset supports compact high-capacity microSD/microSDHC memory cards. This makes exchanging files with a PC quick and easy.

⇒Page 2-24

Electronic Books

Use BookSurfing® and e-Book Viewer to read e-books.

⇒Page 9-24

S! Town/S! Loop/S! Information Channel

Enjoy these SoftBank communication services.

⇒Page 9-23, Page 10-2

S! Friend's Status/S! Circle Talk

These two functions facilitate communication. Send your mood/availability to your friends and check their statuses, or talk to a group of people.

⇒Page 10-3, Page 10-6

S! GPS Navi

Use the GPS function to check your position on a map. This function can also guide you to your destination.

⇒Page 9-14

Barcode Reader

Access a variety of information such as e-mail addresses and URLs using QR codes.

→Page 9-25

Voice Recorder

Use handset as a recorder. Recordings can be sent via mail and set as ringtone.

⇒Page 9-9

Optional Services

A complete line of services, including Call Forwarding and Voice Mail.

→Page 3-10

Media Player

for use with PC

Play music files on handset.

⇒Page 8-2, Page 12-8

Contents

Introduction viii Package Contents ix Using This Manual x Safety Precautions xii Trademarks and Patents xxxi SAR xxxiv 1 Getting Started	3 Call Making Calls 3-2 Voice Call 3-4 Video Call 3-7 Call Log 3-9 Optional Services 3-10 Advanced Features 3-12	View Timer 6-6 Advanced Features 6-7 7 Camera/Picture Editing Camera 7-2 Taking Pictures 7-3 Recording Videos 7-5 Camera Functions 7-7
Handset Parts & Functions	4 Messaging Messaging4-2	Picture Editing 7-8 Advanced Features 7-10
Outer Panel and Inner Sheets	Sending Messages	8 Media Player/S! Appli Playing Music and Videos
Codes 1-16	5 Internet	Advanced Features 8-10
2 Basic Operations	Internet 5-2	9 Tools
Menu Operations 2-2 Simple Mode 2-5 Display 2-7 Text Entry 2-10 Word List (Japanese) 2-15 Phone Book 2-16 Data Folder 2-21 Memory Card 2-24 Advanced Features 2-26	Yahoo! Keitai 5-3 PC Site Browser 5-4 Web Page Operations 5-5 Bookmarks/Screen Memo 5-6 Advanced Features 5-7 6 TV TV 6-2 Watching TV 6-3	Tools

World Clock 9-19 Calculator/Dictionary 9-20 Kitchen Timer 9-21 S! Quick News 9-22 S! Information Channel 9-23 Electronic Books 9-24 Barcode Reader 9-25 Ku-man's Room (Japanese) 9-26 Advanced Features 9-27	D Irr S M Irr C
10 Communication Services	C
S! Town (Japanese)/S! Loop (Japanese) 10-2 S! Friend's Status	N S R T
11 Security	V
Changing Handset Code	
12 File Transfer/Backup	В
Infrared	S T S S

Advanced Features
13 Customization
Display Settings 13-2 Incoming Event Settings 13-9 Sound Settings 13-11 Mail Settings 13-14 Internet Settings 13-19 Call Settings 13-22 Camera Settings 13-25 TV Settings 13-28 Media Player Settings 13-31 S! Appli Settings 13-32 Reset 13-33 Text Entry/Phone Book 13-34 File Transfer 13-36 Various Tools 13-38 Communications 13-44
14 Appendix
USIM Card 14-2 Battery 14-4 Software Update 14-6 Troubleshooting 14-7 Text Entry Keys 14-9 Simple Mode Function List 14-11 Specifications 14-17

Default Settings	14-24
Glossary	
Index	14-33
Warranty & After Sales Service	14-47
Customer Service	14-48

Introduction

Thank you for purchasing SoftBank 830T handset.

- To ensure proper usage, read this manual thoroughly before using SoftBank 830T handset.
- After reading this manual, retain it for later reference.
- If this manual is lost or damaged, contact SoftBank General Information (page 14-48).
- Accessible services may be limited because of contract conditions.

SoftBank 830T handset is compatible with the 3G and GSM systems.

Caution

- · Unauthorized copying of any part of this manual is prohibited.
- The contents of this manual are subject to change without prior notice.
- Steps have been taken to ensure the accuracy of descriptions in this manual. If you find inaccurate or missing information, contact SoftBank Customer Center, General Information (page 14-48).

User Guide (Japanese), Start Book (Japanese) and First Step Guide included in the package are also available online from SOFTBANK MOBILE Corp. Website:

http://www.softbank.jp/mb/r/support/830t/

Package Contents

● Handset	• Battery (TSBBM1)	Battery Cover
● Start Book (Japanese)	• User Guide (Japanese)	● First Step Guide
● Outer Panel	• Inner Sheets	• Frame Remover*
* Complimentary sample not available for purchase.		

- Use only SoftBank specified AC Charger (sold separately) to charge battery.
- For information about AC Charger and other accessories, contact SoftBank Customer Center, General Information (page 14-48).
- Battery is available for separate purchase.
- Handset accepts microSD/microSDHC Memory Card (not included). Purchase microSD/microSDHC Memory Card to use related functions.
- microSD/microSDHC Memory Card is referred to as "memory card" in this manual.
- USB cable (not included) can be used with handset. Purchase a SoftBank specified USB cable to use related functions.

Using This Manual

In this manual, SoftBank 830T is referred to as "handset."

Chapters

Chapter 1 "Getting Started": Basic handset information.

Chapter 2 "Basic Operations": Basic handset operations.

Chapters 3 to 12: Handset functions. Each chapter starts with basic operation descriptions, followed by advanced operation descriptions.

Chapter 13 "Customization": Handset settings.

Chapter 14 "Appendix": Default settings, Index, etc.



Advanced features are listed under this icon. Refer to the indicated page to access "Advanced Features" at the end of the chapter. **Creating Messages**

(page 4-13)

Message Creation Settings

Available settings are listed here. Go to indicated page in Chapter 13 "Customization" for description.

(page 13-14) Add Recipients to Simple Input List

Symbols

→ , → and ➤ navigate you to the next action/item.

Press Center Key
to confirm your selection. Some operations are described in an abbreviated format.

Screenshots and Keys


Screenshots may differ from actual appearance. Key graphics are simplified to facilitate explanation.

Japanese Functions & Services

When "(Japanese)" appears in a title, Japanese ability is required to use full range of function and service.

Softkeys

Use Softkeys to perform operations indicated at the bottom of Display.

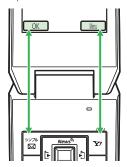

- Press 🖾 to select OK.
- Press 🖙 to access Option menu.
- Softkey operations vary by the current function.
 In this manual, Softkey operations are described as below.
 ☆ (OK) / → (②) / → (▽)

Multi Selector

The following notations are used to indicate Multi Selector operations.

Notation/Operation	Function
Press up	Enables Active Window operations* Increases volume Moves cursor up
Press down	Accesses Phone Book* Decreases volume Moves cursor down
Press left	Accesses Dialed* Moves cursor left
Press right	Accesses Received* Moves cursor right
Press center	Accesses Main Menu Confirms the selected item or performs the selected operation Acts as the camera shutter-release

^{*} Functions accessible from Standby can be changed by changing Multi Selector shortcuts (page 2-3).

Safety Precautions

- To ensure proper usage, be sure to read the Safety Precautions thoroughly before using your handset. Always keep this manual available for future reference.
- Be sure to follow the safety information contained in the instruction manuals and indicated on the product to prevent injury to the user and other persons, as well as damage to property.
- When a child uses handset, it is recommended that a parent or guardian reads the instruction manuals thoroughly and provides proper instructions to the child.
- The following describes the meaning of safety symbols and signal words. Be sure to understand their meanings before proceeding to read this manual.

Pictographs

Pictograph	Meaning	
Danger	Indicates an imminently hazardous operation that could result in death or serious injury¹ of the user.	
Warning	Indicates a potentially hazardous operation that could result in death or serious injury ¹ of the user.	
Caution	Indicates a potentially hazardous operation that could result in minor or moderate injury ² to the user or damage to property ³ .	

1 Serious injury includes loss of sight, wounds, high temperature burns, low temperature burns (burns causing reddish areas, blistering and other damage to the skin as a result of heat exceeding the body temperature contacting your skin for a prolonged time), electric shock, fractures and poisoning requiring hospitalization or long-term medical treatment.

- 2 Injury includes wounds, burns and electric shock not requiring hospitalization or long-term medical treatment.
- 3 Damage to property includes extensive damage to homes and household property, as well as livestock and pets.

Symbols

Symbol	Meaning
Prohibited	indicates a prohibited action. The prohibited action is indicated graphically or described in text in or near the symbol.
Compulsory	• indicates a compulsory action that must be carried out. The compulsory action is indicated graphically or described in text in or near the symbol.

Limitation of Liability

- SoftBank and Toshiba accept no liability whatsoever for any damages arising from natural disasters such as earthquakes, lightning, storms and floods, as well as fires through no fault of SoftBank and Toshiba, acts by third parties, other accidents, improper use by the user, whether intentionally or negligently, or use under other abnormal conditions.
- SoftBank and Toshiba accept no liability whatsoever for incidental damages arising out of the use or inability to use the product, including, but not limited to, corruption or loss of data, lost business revenue or suspension of business operations.
- SoftBank and Toshiba accept no liability whatsoever for any damages arising from improper use not conforming to the instructions in the instruction manuals.
- SoftBank and Toshiba accept no liability whatsoever for any damages arising from malfunctions caused by use in combination with connection equipment or software that is not authorized for use by SoftBank and Toshiba.
- Image data recorded with the camera, downloaded data and other data may be corrupted or lost due to malfunction, repair or other improper handling of the product. SoftBank and Toshiba accept no liability whatsoever for the restoration of corrupted or lost data, as well as any damages or lost revenue and profits.
- SoftBank and Toshiba accept no liability whatsoever for corruption or loss of stored data resulting from failures or malfunctions of the product, regardless of the cause. Be sure to keep a separate memo of important data to limit damage caused by data corruption or loss to a minimum.

⚠ Danger



Do not disassemble, modify or repair handset, battery, charger (sold separately) or Stereo Earphone, Microphone (sold separately)

Doing so may cause overheating, rupturing, fire, electric shock, injury or malfunction. Modification of handset is prohibited by Japanese Radio Law. For repair, contact your nearest SoftBank Shop or SoftBank Customer Assistance (page 14-48).



Do not charge, use or leave handset, battery, charger (sold separately) or Stereo Earphone-Microphone (sold separately) in hot places such as near a fire or heater

If they are exposed to water, do not dry them artificially in heating equipment (microwave oven, etc.)

Doing so may cause overheating, rupturing, fire or malfunction

A Danger



Do not expose handset, battery, charger (sold separately) and Stereo Earphone-Microphone (sold separately) to fluids such as water, perspiration or seawater

Do not leave them outdoors, in a bathroom or wherever water or any other fluid is used Do not place them near cups, vases or other containers of fluids

Doing so may cause overheating, rupturing, fire, electric shock or malfunction. If handset is dropped accidentally in water or any other fluid, immediately turn off handset and remove the battery. If handset, battery or charger is exposed to fluids such as water during charging, remove the power plug from the outlet immediately. Do not charge the wet battery. If the battery gets wet, contact your nearest SoftBank Shop or SoftBank Customer Assistance (page 14-48).



Do not use excessive force when inserting the battery into handset or connecting handset to the charger (sold separately)

Do not connect any cords with reverse polarity

Doing so may cause the battery to leak, rupture, overheat or catch fire, as well as cause electric shock or malfunction.



Do not touch the battery terminal (metal parts) with any metal objects (necklace, hairpin, etc.)

Doing so may cause the battery to overheat, rupture or catch fire, as well as the metal object to overheat.



Do not use a battery other than one supplied with or designated for handset

Compulsory Do not use the battery for any other handset Doing so may cause overheating, rupturing, fire or malfunction.

Use the charger (sold separately) designated for handset to charge the battery

Compulsory Use the charger (sold separately) only for charging handset's battery

Failing to do so may cause overheating, rupturing, fire or malfunction.

If electrolyte fluid leaking from the battery comes into contact with your skin or clothes, wash it immediately with Compulsory clean water as this may hurt your body

> And if it gets into your eyes, do not rub them, and have them immediately treated by an ophthalmologist after washing them with clean water

> If the fluid sticks to the equipment, wipe it out without touching it directly

If the fluid is left as it is, your skin may get irritated or there may be fear of losing your sight.



Do not use handset while driving Do not make or receive a call and do not use other functions (messaging, game, camera, TV, video, music, Mobile Light, etc.)

Doing so may cause a traffic accident. Use of handset while driving is prohibited by law. Before using handset, stop the vehicle in a safe area where parking is permitted.



Be sure to turn off your SoftBank handset before entering places such as gas stations where flammable gases may be produced

Also do not charge handset in those places

The gases may be ignited.

Be sure to turn off handset before using Osaifu-Keitai® compatible reader/writer within gas stations, etc. (When IC Card Lock is set, turn off handset after unlocking the setting.)



Do not swing handset by its strap, USB cable (sold separately), Stereo Earphone Conversion Cable (sold separately) or Stereo Earphone-Microphone (sold separately)

Doing so may cause an injury, accident or damage.



Turn off handset while you are near any precision electronic equipment

Radio waves may adversely affect the operation of electronic equipment. Examples of such equipment: medical electronic

equipment such as cardiac pacemakers and hearing aids or fire alarms and automatic doors. If you use medical electronic equipment, consult with the equipment manufacturer or distributor about the influence of radio waves.



Remove the power plug from the outlet if AC Charger (sold separately) is not to be used for a long period of time or before cleaning

Failing to do so may cause an electric shock, fire or malfunction.



Turn off handset wherever its use is prohibited such as on an aircraft

Compulsory Failing to do so may adversely affect the operation of electronic equipment and cause an accident.



Check your surroundings to confirm that it is safe to make/receive calls, send/receive messages, take Compulsory pictures, record videos or watch TV

> Failing to do so may cause you to trip over or cause a traffic accident.



Do not use handset with any power voltage other than the specified voltage

Compulsory Doing so may cause a fire. The power voltages are 100 to 240 V AC for AC Charger (sold separately) and 12 or 24 V DC (for a negative ground car only) for In-Car Charger (sold separately).



Wipe away any dust on the plug of AC Charger (sold separately) with a dry cloth after removing the plug Compulsory from the outlet

Dust on the plug or outlet may cause a fire.



Follow the instructions below when installing and wiring in-vehicle devices

- Make sure that devices do not interfere with driving and safety equipment such as airbags
- Make sure that wires are not caught in seatbelt buckles, doors or other moving parts

Any wire caught around a foot, brake pedal, accelerator pedal, etc. may interfere with driving and cause a traffic accident. If any part of an in-vehicle device drops onto the floor, it may startle you into abrupt braking or steering, leading to a traffic accident.



When thunder is heard outside, stop using handset immediately

Turn off handset and do not touch it

Failing to do so may attract lightning and cause electric shock. When thunder is heard, stop using handset and move to a safe place such as inside a building.



If the battery fails to charge in the specified time, stop charging immediately

Compulsory Failing to do so may cause overheating, rupturing or fire. Contact your nearest SoftBank Shop or SoftBank Customer Assistance (page 14-48).



When inserting the plug of AC Charger (sold separately) into an AC household outlet, make sure Compulsory that a metal strap or any other metal object does not touch the plug

Failing to do so may cause electric shock, short circuit or fire.



If something unusual happens to handset, battery or charger (sold separately); for example, it emits smoke or an unusual odor or is damaged, perform the following steps immediately

- If the battery is charging, unplug AC Charger (sold separately) from the AC household outlet or unplug In-Car Charger (sold separately) from the cigarette lighter socket.
- 2. Make sure that handset is not hot, then turn it off and remove the battery.

Failing to do so and continuing use (charging) may cause the battery to overheat, rupture or catch fire or handset to overheat. If something unusual happens, contact your nearest SoftBank Shop or SoftBank Customer Assistance (page 14-48).



Do not drop handset or battery or subject it to excessive shock

Prohibite

d Doing so may cause overheating, rupturing, fire or malfunction.



Do not sit down with handset in your trousers pocket Excess weight may damage Display, battery or other parts resulting in overheating, fire or injury.

Compulsor

If handset is used near an implanted cardiac pacemaker, defibrillator or other electronic medical sory equipment, radio waves may interfere with such a device or equipment

Observe the following guidelines

- If you have an implanted cardiac pacemaker or defibrillator, carry and use handset at a distance of at least 22 centimeters away from the implanted device.
- Turn off handset in crowded places such as packed trains because a person with an implanted cardiac pacemaker or defibrillator may be nearby. Radio waves can interfere with the operation of a cardiac pacemaker or other medical device.
- 3. Follow the precautions below in medical institutions.
 - Do not bring handset into an operating room, intensive care unit or coronary care unit.
 - · Turn off handset in a hospital ward.
 - Turn off handset in a lobby or other location close to medical equipment.
 - Observe the instructions of individual medical institutions and do not use handset in or bring it into prohibited areas.

4. When using electronic medical devices other than an implanted cardiac pacemaker or defibrillator outside of medical institutions (such as at home), consult with the individual medical device manufacturer about the possible influence of radio waves.

The above information conforms to "The Guidelines on Use of Mobile Phones and Other Devices to Prevent Electromagnetic Wave Interference with Electronic Medical Equipment" (Electromagnetic Compatibility Conference Japan), as well as refers to "The Investigative Research Report on the Influence of Electromagnetic Waves on Medical Equipment" (Association of Radio Industries and Businesses, March 2001).



Do not use AC Charger (sold separately) with any power supply other than a 100 to 240 V AC household power supply

Doing so may result in a fire, as well as cause the charger to overheat, catch fire or malfunction.

⚠ Caution



Do not use or leave handset or battery in places where it will be exposed to direct sunlight or in hot places such as inside a car in the sun

Doing so may cause overheating, fire or malfunction.



Keep handset, battery, charger (sold separately), Outer Panels, Inner Sheets, Frame and Frame Remover away from infants and small children

Failing to do so may result in the battery or memory card being accidentally swallowed or cause damage or injury.



Make sure that the terminals (metal parts) of the charger (sold separately) do not come into contact with wires or other metal objects

Failing to do so may cause overheating or burns.



Do not pull the cord when unplugging AC Charger (sold separately) or In-Car Charger (sold separately) from an AC household outlet or socket

Damage to the cord may cause electric shock, overheating or fire. Hold the plug when unplugging AC Charger (sold separately) or In-Car Charger (sold separately).



Do not pull, bend with excessive force or twist the cords of AC Charger (sold separately) and In-Car Charger

Do not damage or modify them
Do not place objects on them
Do not apply heat and keep them away from heaters
Damage to a cord may cause electric shock, overheating or fire.



Do not plug or unplug AC Charger (sold separately) with wet hands

lo wet nands

Doing so may cause electric shock or malfunction.



Do not attach or remove Outer Panel and Inner Sheet with wet hands

No wet

Doing so may cause electric shock or malfunction.



Keep magnetic cards away from handset and make sure that a magnetic card is not trapped when closing handset

Failing to do so may cause the magnetic data on a cash card, credit card, telephone card or floppy disk to be lost.

↑ Caution



Do not use handset in a vehicle if it affects in-vehicle electronic devices

Use of handset in some types of vehicles may, in some rare cases, affect in-vehicle electronic devices and interfere with safe driving.



Do not place handset on an unstable or unlevel surface

Doing so may result in handset falling and causing injury or malfunction. Be particularly careful when vibration is set.



Do not dispose of the used battery with ordinary garbage

Insulate the terminal with tape and then dispose of the used battery separately from ordinary garbage or take it to your nearest SoftBank Shop. Be sure to observe local regulations on the separate collection of used batteries, wherever applicable.



Do not touch handset with sweaty hands or place it into a pocket of sweaty clothes

Sweat and humidity may erode the internal components of handset and cause overheating or malfunction.



Do not use In-Car Charger (sold separately) when the car engine is not running

Doing so may result in a flat battery.



If the fuse for In-Car Charger (sold separately) blows, replace it with a designated fuse

Replacing the fuse with other than a designated fuse may cause overheating and fire.

> For details on replacing the fuse, refer to the instruction manual of In-Car Charger (sold separately).



Use handset in well-lighted places and with an appropriate distance between your eyes and its Compulsory screen when you watch TV

Failing to do so may cause decreased vision.



If your skin becomes irritated, immediately stop using handset and consult with a dermatologist

The following materials and surface treatments have been used for handset. Some of these materials may cause itching, irritation, eczema, etc. in **Compulsory** some rare cases depending on the individual's constitution and physical condition.

Part	Material (Surface Treatment)		
Outer housing (front face of Display side)	PC resin (UV cured acrylic coating)		
Outer housing (Frame, hinge cover)	PC resin (UV cured acrylic coating)*		
Outer housing (keypad side, external side of lower section)	PC resin (UV cured acrylic coating)		
Outer housing (Outer Panel)	Acrylic resin (in-mold UV foil), PC resin (UV cured acrylic coating)		
Outer housing (battery cover)	PC resin (UV cured acrylic coating)		
Display panel	Tempered glass with polyester film (UV cured acrylic processing)		
External Display panel	Acrylic resin (in-mold UV foil)		
External panel of lower section (battery cover side)	PET film		
Clearance retainer on internal side of lower section	Acrylic urethane resin		
Keypad	PC resin (PET sheet)		
Side Keys	PC resin (UV cured acrylic coating)		
Camera panel	Acrylic resin		
Infrared Port	Acrylic resin		
External Device Port cover	Elastomer resin, PC resin (UV cured acrylic coating)		
Earphone Microphone Jack cover	Elastomer resin, PC resin (UV cured acrylic coating)		
Charger Terminals	Stainless steel (gold plating, nickel undercoat)		
Screws	Steel (nickel coating)		
Earpiece plate	Acrylic resin		
Panel attachment spring	Stainless steel		
Light shielding panel, earpiece cover	Stainless steel		
Inner Sheet	PET film		
Frame Remover	ABS resin		

^{*} PC resin (discontinuous deposition, UV cured acrylic coating) for Black and Gold models

⚠ Caution



Before using handset, make sure that no metal objects (such as pins) are stuck to the earpiece or speaker

Compulsory Failing to do so may result in a metal object causing an ear or hand injury, etc.



If you have a weak heart, be careful with the call vibration and ringtone volume settings

Compulsory Failing to do so may startle you and may be harmful to your heart.



Do not use Mobile Light for purposes other than taking pictures, recording videos or lighting

Doing so may harm the eyes and cause impaired vision or other injury.



Make sure things like paper, cloth and bedding are not placed on handset during a Video Call or while drarging using a USB connection, In-Car Charger (sold separately), AC Charger (sold separately), etc.

Failing to do so may cause overheating, fire, burns or malfunction.



Do not turn the volume up too high while using Stereo Earphone-Microphone (sold separately)

Do not use Stereo Earphone-Microphone (sold separately) continuously for long periods of time

Exposure to high sound levels may impair hearing and prolonged use may cause hearing defect regardless of the volume level. Sound leakage may annoy other people and surrounding sounds may not be heard clearly resulting in an accident.



Do not insert objects other than the memory card into Memory Card Slot

ohibited Doing so may cause overheating, electric shock or malfunction.



Keep your face away from Memory Card Slot when inserting or removing the memory card

Keep the memory card out of the reach of small children

If the memory card is let go of suddenly, it may fly out and hit your face resulting in injury.



Do not subject the memory card to vibration or shock or remove it from the slot or turn off handset while data is being written to or read from the memory card

Doing so may cause data loss or malfunction.



Use only the memory card supported by handset

Failing to do so may cause data loss or malfunction. Handset supports microSD memory cards with a storage capacity of up to 2 GB, and microSDHC memory cards with a storage capacity of up to 8 GB (as of September 2008).



Do not let children use cables such as USB cable (sold separately), Stereo Earphone Conversion Cable (sold separately) and Stereo Earphone-Microphone (sold separately) unsupervised and keep cables out of infant's reach

An injury may be caused if, for instance, the cable is wrapped around a neck



Do not point the infrared beam at anyone's eye during infrared communication

Doing so may cause eye damage.



Do not use Mobile Light close to eyes

Doing so may cause eye damage. Be especially careful not to take pictures or record videos with Mobile Light too close to the eves of infants.



Do not use excessive force when inserting or removing USIM Card

Doing so may cause a malfunction. Be careful not to injure a hand or finger when removing the card.



Use only a USIM Card designated for handset

Failing to do so may cause data loss or malfunction.



Be careful not to trap your fingers or objects when closing handset and not to trap your fingers in the Compulsory hinge when opening handset

Failing to do so may cause injury or damage to the LCD Display.



Do not use handset without Outer Panel Do not use handset in damaged condition

Prohibited Doing so may cause an injury, accident, damage or malfunction.



Do not modify or repair Outer Panel

Performance may not be guaranteed.



Be sure to use Frame Remover when removing Outer Panel. Inner Sheet and Frame

Compulsory Failing to do so may cause an injury, accident or damage.



Do not remove the polyester film from Display

Using handset without the polyester film to protect against shattering of the reinforced glass may result in an injury if Display is damaged.

General Notes

Using Your Handset

- Handset employs radio waves. Signals may be disrupted even within service areas if you are indoors, underground, inside a tunnel or inside a vehicle. If you move to a location with poor signal reception, a call or the TV image/sound may be suddenly cut off.
- When using handset in public places, take care not to annoy other people around you. Use of handset is prohibited in some public places such as in theaters or on buses and trains.
- Handset is a radio transceiver under Japanese Radio Law. You may be requested to submit handset for inspection based on this law.
- Use of handset near a landline phone, TV or radio may affect the image and sound quality of the equipment.
- Handset employs a digital system to maintain a high level of communication quality even at very low signal levels. However, calls may be suddenly cut off when the signal strength becomes too weak.
- The digital system provides a high level of privacy protection. However, the possibility of someone eavesdropping on your conversation cannot be ruled out as long as radio waves are used.
- Data stored on handset may be corrupted or lost on the following occasions.
 - · Handset is used improperly.
 - · Handset is exposed to static electricity or electric noise.
 - · Handset is turned off during operation.
 - · The battery is completely discharged.
 - · Handset malfunctions or is sent for repairs.

- SoftBank and Toshiba accept no liability whatsoever for the corruption or loss of stored data. Be sure to keep a separate memo of important data to limit damage caused by data corruption or loss to a minimum.
- Be sure to charge the battery before using handset for the first time or if handset has not been used for a long time. When the battery is stored for a long time, it discharges over time even if it is not used
- Before using a memory card, read the instruction manual of the memory card thoroughly to ensure safe and proper operation.
- When handset is used for extended periods of time, especially in high temperature conditions, its surface could become hot. Please use caution when touching handset under such conditions.
- When certain items are taken out of the country, documentation may be required to certify that the export of the items is not controlled, prohibited, or restricted by the Export Trade Control Order and Foreign Exchange Order. Basically, no such documentation is required if you take handset out of the country and bring it back for the purpose of personal use when going on vacations or short business trips. In some cases, however, an export permit may be required if handset is to be used by or transferred to anyone else.

Furthermore, a US government export permit may be required when taking handset to countries for which the US government has imposed export restrictions (Cuba, North Korea, Iran, Sudan, Syria).

For details on export laws, regulations and procedures, refer to the Web page of the Security Export Control Policy Division of the Ministry of Economy, Trade and Industry.

• If you use a hearing aid, handset usage may interfere with hearing aid performance. If there is any interference, consult with the manufacturer or distributor of the hearing aid.

Inside Vehicles

- Do not use handset while driving. Use of handset while driving is prohibited by law.
 - Talking on handset using Stereo Earphone-Microphone (sold separately) while driving may be subject to penalties in some prefectures.
- Before using handset, stop the vehicle in a safe area where parking or stopping is permitted.

Aboard Aircraft

 Do not use handset on an aircraft. Do not turn handset on while you are on an aircraft.

Handling Basics

- Do not use handset in extreme temperatures, direct sunlight and humid or dusty places.
- Do not drop handset or subject it to excessive shock.
- To clean handset, wipe it with a dry soft cloth. Do not use alcohol, thinner, benzene or other solvents. Doing so may cause discoloration and remove the printed logo.
- Avoid exposing handset to rain, snow or high humidity. Handset, battery, charger (sold separately), Stereo Earphone-Microphone (sold separately) and other optional accessories are not waterproof.
- Do not remove the battery while handset power is on to avoid malfunction.
- If the battery has been removed from handset or handset has not been charged for a long time, stored data and settings may be lost or altered. SoftBank and Toshiba accept no liability whatsoever for any damage or loss resulting from such negligence.

- The battery is a consumable item employing lithium ions.
 Replace the battery with a new one if the operation time becomes extremely short after it is fully charged. Buy a new battery designated for handset.
- Do not dispose of batteries with municipal waste. Insulate the terminal with tape or place the battery in a plastic bag and take it to the nearest SoftBank Shop or recycling center. Be sure to observe local regulations on battery disposal.



Li-ion 00

- Be sure to pull the tab (above A mark on the battery) to remove the battery (page 14-5). Otherwise the terminals may be damaged.
- Some handset display pixels may be missing or remain lit. This is not a defect or malfunction. If Display is left on for a long period of time, pictures may be permanently burned into it.
- Make sure Stereo Earphone Conversion Cable (sold separately) or Stereo Earphone-Microphone (sold separately) is securely plugged into Earphone Microphone Jack. Failing to do so may generate noise on the other party's phone during calls.
- Do not turn the volume up too high while using Stereo Earphone-Microphone (sold separately). Exposure to high sound levels may impair hearing and prolonged use may cause hearing damage regardless of the volume level. Sound leakage may annoy other people and surrounding sounds may not be heard clearly when walking, resulting in an accident.
- When Earphone Microphone Jack and External Device Port are not in use, make sure to replace the covers. Otherwise dust or water may enter handset causing malfunction.
- Hold the plug and do not pull the cord when unplugging Stereo Earphone Conversion Cable (sold separately) or Stereo Earphone-Microphone (sold separately). Pulling the cord may cause damage or malfunction.

Safety Precautions

- Antenna of handset is built into the body. Signal sensitivity may be reduced by touching/covering Internal Antenna area (page 1-3).Do not cover this area by affixing stickers or any other items. Doing so may prevent you from making/receiving calls, sending/receiving messages or accessing the Web.
- TV Antenna is built in the upper section (Display side) of handset. Closing handset or covering this section with your hand may cause bad reception of TV signal, preventing you from watching TV.
- When you replace handset or send it for repair, messages and other data stored on handset cannot be transferred to another handset.
- Do not drop USIM Card or subject it to excessive shock. Doing so may cause a malfunction.
- Do not bend USIM Card or place a heavy object on it. Doing so may cause a malfunction.
- Do not allow USIM Card to get wet or leave it in places of high humidity. Doing so may cause a malfunction.
- Do not use or leave USIM Card in hot places such as near a fire or heater. Doing so may cause a malfunction.
- Avoid storing USIM Card in direct sunlight or hot and humid places. Failing to do so may cause a malfunction.
- Keep USIM Card out of infants' reach. Failing to do so may result in USIM Card being accidentally swallowed or cause an injury.
- Before using USIM Card, read the instruction manual of USIM Card thoroughly to ensure safe and proper operation.

Functional Limitations

- After handset upgrade or subscription cancellation, the following functions become unavailable on handset:
 - · Camera
 - · Digital TV
 - Media Player
 - · S! Appli
- Above functions may become unavailable after long periods of not using handset. Contact your nearest SoftBank Shop or contact SoftBank General Information (page 14-48).

Mobile Camera

- Be sure to observe proper etiquette when using the camera.
- Do not expose the camera lens to direct sunlight. Concentrated sunlight through the lens may cause handset to malfunction.
- Be sure to try taking and previewing pictures before using the camera on important occasions like wedding ceremonies.
- Do not commercially use or transfer pictures taken with the camera without the permission of the copyright holder (photographer), except for personal use.
- Do not use the camera in locations where taking photos and recording videos are prohibited.
- Do not block the lens with your fingers or strap when shooting pictures or videos.

Mobile Light and Twinkle Light

- Do not use Mobile Light or Twinkle Light in hot, cold or humid places. Doing so may shorten their life.
- Mobile Light and Twinkle Light have a limited life. Repeated use will decrease the light intensity.

Copyrights

• Copyrighted materials, such as music, images, computer programs and databases, and their respective holders are protected by copyright laws. Duplication of copyrighted materials is permitted only for individual or home use. Making copies (including data conversion), modifications, transfers or network distributions of copies for purposes other than stated above without proper authorization constitutes an infringement of copyrights and moral rights, potentially resulting in claims for reparations or criminal punishment. If you use handset to make copies, observe the copyright laws. Furthermore, recording materials using the camera is also subject to the same laws.

Right of Portrait

 Portrait right is the right of an individual to refuse to be photographed by others and protects from the unauthorized publication or use of an individual's photograph by others. Right of personality is a portrait right applicable to all citizens and right of publicity is a portrait right (property right) designed to protect celebrities' interests. Be careful when taking pictures with handset camera. Photographing, publicizing and distributing photographs of citizens and celebrities without permission are illegal.

FCC Notice

Handset may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using handset if such interference cannot be eliminated.

Information to User

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1. Reorient/relocate the receiving aerial.
- 2. Increase the separation between the equipment and receiver.
- 3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

End User License Agreement

TOSHIBA CORPORATION

IMPORTANT NOTE: PLEASE READ BEFORE USING YOUR HANDSET

BY ATTEMPTING TO USE ANY SOFTWARE ON THE SUPPLIED HANDSET THIS CONSTITUTES YOUR ACCEPTANCE OF THESE EULA TERMS. IF YOU REJECT OR DO NOT AGREE WITH ALL THE TERMS OF THIS EULA, PLEASE DO NOT ATTEMPT TO ACCESS OR USE THE SUPPLIED SOFTWARE.

End User License Agreement

This End User License Agreement ("EULA") is a legal agreement between you (as the user) and TOSHIBA CORPORATION ("Toshiba") with regard to the copyrighted software as installed in a Toshiba 3G handset supplied to you (the "Handset"). Use or disposal of any software installed in the Handset and related documentations (the "Software") will constitute your acceptance of these terms, unless separate terms are provided by the Software supplier on the Handset, in which case certain additional or different terms may apply. If you do not agree with the terms of this EULA, do not use or dispose the Software.

1. <u>License Grant</u>. Toshiba grants to you a personal, non-transferable and non-exclusive right to use the Software as set out in this EULA. Modifying, adapting, translating, renting, copying, making available, transferring or assigning all or part of the Software, or any rights granted hereunder, to any other persons and removing any proprietary notices, labels or marks from the Software is strictly prohibited, except as expressly permitted in this EULA. Furthermore, you

- hereby agree not to create derivative works based on the Software.
- 2. Copyright. The Software is licensed, not sold. You acknowledge that no title to the intellectual property in the Software is or will be transferred to you. You further acknowledge that title and full ownership rights to the Software will remain the exclusive property of Toshiba, Toshiba's affiliates, and/or their suppliers, and you will not acquire any rights to the Software, except as expressly set out in this EULA. You may keep a back-up copy of the Software only so far as necessary for its lawful use. All copies of the Software must contain the same proprietary notices as contained in or on the Software and are subject to the terms of this EULA. All rights not expressly granted under this EULA are reserved to Toshiba, Toshiba's affiliates and/or their suppliers.
- 3. Reverse Engineering. You agree that you will not attempt, and if you are a business organization, you will use your best efforts to prevent your employees, servants and contractors from attempting to reverse engineer, decompile, modify, translate or disassemble the Software in whole or in part except to the extent that such actions cannot be excluded by mandatory applicable law and only if those actions are taken in accordance with such applicable law. Any failure to comply with the above or any other terms and conditions contained herein will result in the automatic termination of this license and the reversion of the rights granted hereunder to Toshiba.

- 4. DISCLAIMER OF WARRANTY. The Software is provided "AS IS" without warranty of any kind. TOSHIBA, TOSHIBA'S AFFILIATES, AND THEIR SUPPLIERS DISCLAIM ALL WARRANTIES, CONDITIONS OR OTHER TERMS (WHETHER EXPRESS OR IMPLIED), INCLUDING BUT NOT LIMITED TO WARRANTIES, CONDITIONS AND TERMS OF SATISFACTORY QUALITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS; AND THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE SOFTWARE IS WITH YOU. YOU ACCEPT THAT SOFTWARE MAY NOT MEET YOUR REQUIREMENTS AND NO WARRANTY CAN BE GIVEN THAT OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE.
- 5. LIMITATION OF LIABILITY. TO THE FULLEST EXTENT LEGALLY PERMITTED, IN NO EVENT SHALL TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIERS BE LIABLE TO YOU FOR ANY DAMAGES FOR (A) LOST BUSINESS OR REVENUE, BUSINESS INTERRUPTION, LOSS OF BUSINESS DATA; OR (B) CONSEQUENTIAL, SPECIAL, INCIDENTAL OR INDIRECT DAMAGES OF ANY KIND (WHETHER UNDER CONTRACT, TORT OR OTHERWISE) ARISING OUT OF: (I) THE USE OR INABILITY TO USE THE SOFTWARE, EVEN IF TOSHIBA, TOSHIBA'S AFFILIATES OR THEIR SUPPLIER HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES; OR (II) ANY CLAIM BY A THIRD PARTY. SAVE AS SET OUT IN THIS SECTION, TOSHIBA'S ENTIRE LIABILITY UNDER THIS EULA SHALL NOT EXCEED THE PRICE PAID FOR THE SOFTWARE, IF ANY.

- PLEASE MAKE AND RETAIN A COPY OF ALL DATA YOU HAVE INSERTED INTO YOUR PRODUCT, FOR EXAMPLE NAMES, ADDRESSES, PHONE NUMBERS, PICTURES, RINGTONES ETC, BEFORE SUBMITTING YOUR PRODUCT FOR A WARRANTY SERVICE, AS SUCH DATA MAY BE DELETED OR ERASED AS PART OF THE REPAIR OR SERVICE PROCESS.
- Laws. This EULA will be governed by the laws of Japan.
 All disputes arising out of this EULA shall be subject to the exclusive jurisdiction of the Tokyo District Court.
- 7. Export Laws. Any use, duplication or disposal of the Software involves products and/or technical data that may be controlled under the export laws of applicable countries or region and may be subject to the approval of the applicable governmental authorities prior to export. Any export, directly or indirectly, in contravention of the export laws of applicable countries or region is prohibited.
- 8. <u>Third Party Beneficiary</u>. You agree that certain suppliers of the Software to Toshiba have a right as a third party beneficiary to enforce the terms of this EULA against you as a user.

Declaration of Conformity

C€ 0682



Toshiba Court, Weybridge Business Park, Addlestone Road, Weybridge, Surrey KT15 2UL

Leading Innovation >>>

DECLARATION OF CONFORMITY

Toshiba Information Systems UK (Ltd), Mobile Communications Division We,

Neybridge Business Park Addlestone Road **Toshiba Court** of

declare under our sole responsibility that the product

Type (Model) Name is CL4 – J01 UMTS & GSM/DCS/PCS Terminal (Tri band 900, 1800 & 1900)

to which this declaration relates, is in conformity with the following standards and/or Other normative documents. 3GPP TS 51.010-1, 3GPP TS 34.121, EN 60950, EN 301 489-1, EN 301 489-7, EN 301-489-24, EN 301 489-17, EN 300 328 and EN 50360

We hereby declare that all essential radio test suites, EMC & safety requirements have been carried out and that the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10(5) and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body:

Cetecom GmbH, Im Teelbuch 116, 45219 Essen, Germany

Identification mark:

0682

The technical documentation relevant to the above equipment will be held at:

Toshiba Information Systems UK (Ltd), Mobile Communications Division Delta House, The Crescent, Southwood Business Park, Delta House, The Crescent, Southwc Farnborough, Hampshire, GU14 0NL

Name:- Hidehito Koka

Deputy Managing Director of TIU General Manager Mobile Communications Division

Signature:-

ò

Trademarks and Patents

Licensed by QUALCOMM Incorporated under one or more the following United States Patents and/or their counterparts in other nations:

inited States I atents t	ariar or their counterpart	is in other nations.	
4,901,307	5,504,773	5,109,390	
5,535,239	5,267,262	5,600,754	
5,416,797	5,778,338	5,490,165	
5,101,501	5,511,073	5,267,261	
5,568,483	5,414,796	5,659,569	
5,056,109	5,506,865	5,228,054	
5,544,196	5,337,338	5,657,420	
5,710,784			



Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.



microSD Logo is a trademark.



microSDHC Logo is a trademark.

Powered by Mascot Capsule®/Micro3D Edition™ Mascot Capsule® is a registered trademark of HI Corporation © 2002-2003 HI Corporation. All Rights Reserved.



The Bluetooth word mark and logo are owned by the Bluetooth SIG, Inc. and any use of such marks by TOSHIBA is under license.

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG-LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, LLC. SEE HTTP://WWW.MPEGLA.COM.

Osaifu-Keitai is a registered trademark of NTT DoCoMo, Inc.

Trademarks and Patents

Chaku-Uta®, Chaku-Uta Full® is a registered trademark of Sony Music Entertainment (Japan) Inc.

Copyright © 1998-2003 The OpenSSL Project. All rights reserved. Copyright © 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

THIS SOFTWARE IS PROVIDED BY THE OPENSSL PROJECT AND/OR BY ERIC YOUNG "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENSSL PROJECT, ERIC YOUNG OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

QR Code is a registered trademark of Denso wave Incorporated.

FeliCa is a contactless IC card technology developed by Sony Corporation. FeliCa is a trademark of Sony Corporation.

a is a registered trademark of FeliCa Networks, Inc.



Edy is a brand name of the prepaid-type electronic money service managed by bitWallet, Inc.

Sky Mail, S! Mail, S! Appli, S! GPS Navi, S! Information Channel, S! Addressbook Back-up, S! Friend's Status, S! Circle Talk, PC Site Browser, Sha-mail, Movie Sha-mail, Navi appli, S! Quick News, S! Town, S! Loop, Graphic Mail, Feeling Mail, Secure Remote Lock and 3G HighSpeed are registered trademarks or trademarks of SOFTBANK MOBILE Corp.

Copyright © 1995-2006 Adobe Systems Incorporated. All rights reserved. Macromedia, Flash, Macromedia Flash, and Macromedia Flash Lite are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and other countries.

BookSurfing $^{\otimes}$ is a registered trademark of CELSYS, Inc., Voyager Japan, Inc. and INFOCITY, Inc.

"SOFTBANK" SOFTBANK's equivalent in Japanese, and the SOFTBANK logo are trademarks or registered trademarks of SOFTBANK CORP. in Japan and in other countries.

This product contains NetFront Mobile Client Suite of ACCESS CO., LTD. ACCESS, the ACCESS logo and NetFront are registered trademarks or trademarks of ACCESS CO., LTD. in the United States, Japan and/or other countries.

© 2008 ACCESS CO., LTD. All rights reserved.

This software is based in part on the work of the Independent JPEG Group.





This product uses OKAO $^{\mbox{\scriptsize TM}}$ Vision of OMRON Corporation.

"OKAO" and "OKAO Vision" are registered trademarks of OMRON Corporation in Japan.

Yahoo! and the Yahoo!/Y! logos are trademarks and/or registered trademarks of Yahoo! Inc.

All other company names and trademarks are the property of their respective owners.

SAR

This 830T mobile phone complies with the technical standards for the absorption of radio frequency (RF) energy as set by the Japanese government. These technical standards, based upon scientific evidence, were established to ensure that RF energy from wireless mobile devices used next to the head do not have a serious effect on human health. The maximum Specific Absorption Rate (SAR), which measures the average radio wave energy absorbed by the human head, set by the Japanese government is 2 W/kg*. This allowed value includes a substantial safety margin designed to assure the safety of all persons, regardless of age and stature. The value corresponds with the international guidelines prescribed by the International Commission on Nonlonizing Radiation Protection (ICNIRP) in cooperation with the World Health Organization (WHO).

All models of mobile phones are required to comply with the technical standards of Japan set forth in the Radio Law before being released for sale. The 830T has received construction design certification under the Radio Law with a SAR value of 0.705 W/kg. This maximum SAR value was determined by TÜV Rheinland Japan, Ltd. (registered certification agency) and the Telecom Engineering Center (measurement agency) at the maximum transmission power of this handset with measurement carried out conforming to the guidelines set by the Japanese government. Depending on the product, there may be minute differences in the SAR. However, they are within the allowed limits. During calling, the actual SAR is lower as handset is designed to use the minimum transmission power necessary to communicate with the mobile network.

Additional information about SAR can be found at the website listed below.

Ministry of Internal Affairs and Communications website:

http://www.tele.soumu.go.jp/j/ele/index.htm

Association of Radio Industries and Businesses (ARIB) website:

http://www.arib-emf.org/initiation/sar.html

SoftBank website:

http://www.softbankmobile.co.jp/ja/info/public/emf/emf02.html

http://www.toshiba.co.jp/product/etsg/cmt/

* The technical guidelines are stipulated in the Ministerial Ordinance Related to the Radio Law (Wireless Equipment Regulations, Article 14-2).

About SoftBank's Body SAR Policy

- Body SAR: Refers to the SAR of the maximum transmission power when continuously talking with handset attached to the body and using an earphone.
- ** Specific Absorption Rate (SAR): Measured value of continuous talking at 6 minute intervals.
 - Our technical standards for body SAR include the U.S. Federal Communications Commission (FCC) standards and information from Europe. For more information see the sections on "FCC RF Exposure Information" and "European RF Exposure Information."
- *** Placement on the body: Measurements were taken with the rear of handset facing the body at a distance of 1.5 cm as the normal position of handset. In order to maintain compliance with radio frequency (RF) exposure requirements, use accessories that maintain a 1.5 cm separation distance between the body and the back of handset. Choose accessories, such as belt clips and holsters, that do not contain metallic components.

FCC RF Exposure Information

Your handset is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless handsets employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model handset when tested for use at the ear is 0.505 W/kg and when worn on the body, as described in this user guide, is 0.446 W/kg.

Body-worn Operation: This device was tested for typical body-worn operations with the back of handset kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.5 cm separation distance between the user's body and the back of handset. The use of beltclips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The FCC has granted an Equipment Authorization for this model handset with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model handset is on file with the FCC and can be found under the Display Grant section of http://www.fcc.gov/oet/fccid after searching on SP2-CL4-J01.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) website at http://www.phonefacts.net.

European RF Exposure Information

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.


The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg and the highest SAR value for this device when tested at the ear was 1.06 W/kg*. As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide**. In this case, the highest tested SAR value is 0.674 W/kg.


As SAR is measured utilizing the devices highest transmitting power the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure then you can do so by limiting the length of calls or using a 'hands-free' device to keep the mobile phone away from the head and body. Additional Information can be found on the websites of the World Health Organization (http://www.who.int/emf).

- * The tests are carried out in accordance with international quidelines for testing.
- ** Please see the <FCC RF Exposure Information> section about body worn operation.

Handset Parts & Functions · · · · · · · · · · · · · · · · · · ·	1-2
Display Indicators · · · · · · · · · · · · · · · · · · ·	
Display · · · · · · · · · · · · · · · · · · ·	1-4
External Display · · · · · · · · · · · · · · · · · · ·	1-5
Information Prompt · · · · · · · · · · · · · · · · · · ·	
Charging Battery · · · · · · · · · · · · · · · · · · ·	1-7
Outer Panel and Inner Sheets · · · · · · · · · · · · · · · · · · ·	1-10
Changing Outer Panel/Inner Sheet · · · · · · · · · · · · · · · · · ·	
Power On/Off ·····	
Turning Handset Power On · · · · · · · · · · · · · · · · · ·	1-12
Turning Handset Power Off · · · · · · · · · · · · · · · · · ·	1-12
Date & Time ·····	1-13
Setting Date and Time · · · · · · · · · · · · · · · · · · ·	
Clock Format (12-hour/24-hour) · · · · · · · · · · · · · · · · · · ·	
About Mobile Manners · · · · · · · · · · · · · · · · · · ·	1-14
Manner Mode and Offline Mode · · · · · · · · · · · · · · · · · · ·	
Codes · · · · · · · · · · · · · · · · · · ·	1-16
About Codes · · · · · · · · · · · · · · · · · · ·	1-16

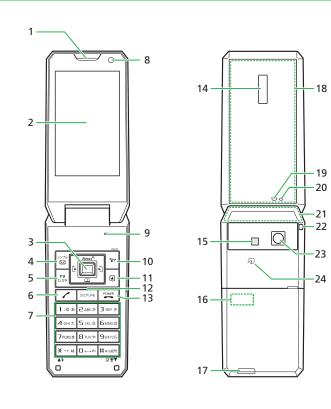

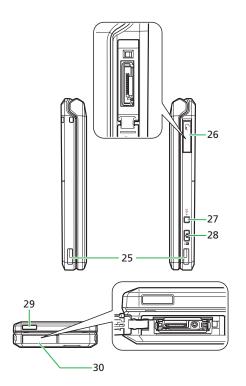

- 1 Earpiece
- 2 Display
- 3 Multi Selector : Move cursor.

Center Key • Open Main Menu/confirm operations.

- 4 Mail Key (Left Softkey) : Open Messaging Menu. : (Press and hold): Switch to Simple Mode.
- **5** TV Key :: Activate TV.
- 6 Send Key : Make/answer voice calls.
- 7 Keypad: Enter numbers/characters.

* Turn on Mobile Light (when using camera).


(Press and hold): Show My Status.

(Press and hold): Set/cancel Manner Mode.

- 8 Sub Camera
- 9 Microphone
- 10 Yahoo! Keitai Key (Right Softkey) : Access Yahoo! Keitai. (Press and hold): Scan special QR codes for Keitaideco.
- 11 Shortcut Key 📵: Open Shortcut Menu.
- 12 Clear/Memo Key (Press and hold): Set/cancel Answering Machine.
- **13 End/Power Key** End calls/operations.
 - (Press and hold): Power handset on/off.
- 14 External Display
- 15 Mobile Light/Penlight
- 16 Memory Card Slot: Remove the battery before inserting/removing a memory card (page 2-25).
- 17 Speaker
- **18 Twinkle Light**: Flashes for incoming calls, messages, etc.
- 19 External Light
- **20 Charging Indicator**: Lights during charging and goes out when charging is complete.
- 21 Internal Antenna
- 22 Handstrap Hole
- 23 Main Camera
- 24 $\sqrt{2}$ Logo

- 25 Charger Terminals
- 26 Earphone Microphone Jack
- 27 Side Key □Tipe: Toggle External Display views.*
 - * Available when handset is closed.
 - ☐ (Press and hold): Twinkle Light flashes.
- 28 Camera Key : Activate the camera/shutter, or toggle External Display views.*
 - * Available when handset is closed.
 - (Press and hold in Standby): Activate the video camera.
 - (Press and hold with handset closed): Set/cancel Manner Mode, send a Simple Notice, turn on Penlight, or check the balance of e-money for Lifestyle-Appli (any one of these functions can be set (page 2-4)).
- 29 Infrared Port
- 30 External Device Port
 - Signal sensitivity may be reduced by touching/covering Internal Antenna area. Do not cover this area by affixing stickers or any other items.

Display

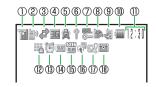

- ① 📆 Signal Strength
 - 🐒 Strong 🚡 Moderate 🖫 Weak 🍸 Faint
 - Out of Range
- ② 🔊 / 🗗 Voice/Video Call
 - Dial-up Connection
 - Positioning
 - IC Card Lock Active
- ③ A Packet Transmission
 - My Status Online
 - R Packet Transmission Ready Packet Network Range
- 4 Mon-SoftBank Network Area
 - III / 瞩 3G Network Area/Roaming
 - / Image: Jacob All Jaco
 - / @ GPRS Network Area/Roaming

- (5) S! Information Channel Updated
 - Reception of Rights Object Indicates the reception of a content key during operation.
 - Message Box Full
 - Message Delivery Failed
 - New Messages Delivery Report
 - New S! Mail/SMS and Delivery Report
- Password Lock Active (appears during TV) Timer viewing.)
 - PC Site Connected
 - S! Quick News Updated
 - Memory Card Inserted
- (7) 🕾 Web SŚL Indicates a connection to a web page with security protection.
 - (A) Bluetooth® Connection Established/ Connection Standby
 - Bluetooth® Connection Established (SCMS-T) Device Supported)
 - Some Bluetooth® Connections Lost
 - Вluetooth[®] Connection(s) Lost
 - Infrared Communication

 - ♣ Card Reader Mode
- 8 Software Update
 - External Connection for Data Synchronization
 - / Appli Activated/Paused
 - A Playing Music Files
 - Music File Playback Paused
 - Playing Video Files
 - **Streaming**
 - TV Timer Set

- Missed Call(s)
 - Manner Mode (Silent)
 - Manner Mode (Alarms)
 - Among Mode (Drive)
 - Signal 1 to 3)
- 10 a Battery Level
 - Sufficiently Charged
 - I ow Very Low

 - Charge Immediately
 - Charging
- (11) Clock
- Keypad Lock Active
 - Password Lock Active
- (13) THE Alarm Set
- (1) Machine On (No Messages)
 - / / / M Answering Machine On (Message(s) Recorded)
 - 🦏 / 🙀 / 🐷 / 🐷 Answering Machine Off (Message(s) Recorded)
- (b) Woice Mail Message(s)
 - Rall Forwarding (Ringer Off for Voice Call)
 - Ringer Off for Video Call)
 - Lall Forwarding (Ringer Off for Voice and Video Calls)
- (II) Prompt (III) Open Information Prompt
- ① S! Friend's Status Notification (Invitation)
- (18) Thow Secret

External Display



- ① M Signal Strength
 - M Strong M Moderate Weak Faint
- ¶x Out of Range
- ☑ Offline Mode On
- ② Battery Level
 - Sufficiently Charged
 - Low
 - Very Low
 - Charge Immediately
- Charging
- ③ Message Box Full
 - Message Delivery Failed
 - ☐ New Messages
 - Delivery Report
 - New S! Mail/SMS and Delivery Report
 - Keypad Lock Active
 - Password Lock Active
 - IC Card Lock Active
 - Cannot Activate External Playback Window
 By Definition (1988)
 - Connection Standby
 - Bluetooth® Connection Established (SCMS-T Device Supported)
 - Some Bluetooth® Connections Lost
 - Bluetooth® Connection(s) Lost

- 4 Missed Call(s)
 - Manner Mode (Silent)
 - Manner Mode (Alarms)
 - Manner Mode (Drive)
 - 🔄 / 🔁 / 🗃 Manner Mode (Original 1 to 3)
- ⑤ W Voice Mail Message(s)
 - Answering Machine On (No Messages)
 - 역 / 역 / 역 / 역 Answering Machine On (Message(s) Recorded)
 - (Message(s) Recorded)
- 6 Clock

Toggle External Display views by pressing ☐ TIVE or ■ while handset is closed.

• See page 2-8 for setting External Display.



Icon & Clock Display



Clock Display



Icon Display



External Playback Window

Information Prompt

Information Prompt appears to inform you of missed calls, new messages and other information.

1 Information Prompt appears



2 Select an item⇒■

Information Prompt Items

Missed Calls: Missed call(s)

Missed Calls: New Voice Mail message(s) at Voice Mail Center

Ans Machine: New message(s) recorded
New Messages: Unread S! Mail/SMS

Unsent Messages: Unsent S! Mail/SMS

Partly Sent: Unsent S! Mail for some recipients

Delivered: Unread delivery report(s)

Missed CT: Missed S! Circle Talk call(s)

Notification: New S! Friend's Status notification(s)

Info Channel: Content update(s) available

Info Channel: S! Information Channel update failed

Weather Updated: Weather report update available

Update Failed: S! Quick News update failed

Stop Snooze: Cancel snooze

Timer Results: TV view timer results

Resume S! Appli: S! Appli paused

Market IC Card Request: Request from Reader/Writer

Software Update: Software updated


Content Key Memory Full: Content key cannot be saved any more

Charging Battery

- Charging at low temperatures may be ineffective. Charge battery between 5 to 35°C.
- Battery must be installed in handset before charging. Use only specified AC Charger (sold separately), Desktop Cradle (sold separately) and In-Car Charger (sold separately).
- Regularly clean Charger Terminals, battery terminal and External Device Port with a dry cotton swab to avoid contact failure.
- If Please check connection with your charger. appears on Display, clean Charger Terminals, battery terminal and External Device Port with a dry cotton swab and try again.
 - When the message still does not disappear, stop charging immediately, and take the battery to your nearest SoftBank Shop or contact SoftBank General Information (page 14-48).
- Do not charge the battery in humid places.
- Charging is possible while handset is turned on, but takes longer than while handset is turned off.
- When charging while handset is turned on, a appears on Display and turns to when charging is complete.
- Handset and AC Charger may warm during charging. However, if it overheats, stop using immediately. There may be some defect.
- If a call arrives during charging, ringtone sounds/handset vibrates and External Light and Twinkle Light flash.

Using AC Charger

Use only specified AC Charger (sold separately).

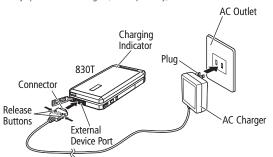


- Connect AC Charger connector to handset
 - Inscription on connector should face up.
- 2 Insert the plug into an AC outlet
 Charging Indicator illuminates red while charging;
 may take up to approximately 120 minutes.
- 3 Unplug AC Charger, then disconnect handset
 - Press and hold Release Buttons to remove AC Charger connector from handset.

- AC Charger and Desktop Cradle support a power supply of 100 to 240 V AC.
- AC Charger is exclusively for use in Japan.
- SoftBank is not liable for any problems associated with charging overseas.

Using Desktop Cradle


Use only specified AC Charger (sold separately) and Desktop Cradle (sold separately).

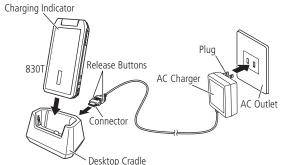

- 1 Attach AC Charger connector to Desktop Cradle
 - Inscription on connector should face up.
- 2 Insert the plug into an AC outlet
- 3 Slide handset into Desktop Cradle until it clicks Charging Indicator illuminates red while charging; may take up to approximately 120 minutes.
- 4 Remove handset from Desktop Cradle, then unplug AC Charger
- 5 Disconnect AC Charger from Desktop Cradle
 - Press and hold Release Buttons to remove the connector.

Using In-Car Charger

Use only specified In-Car Charger (sold separately).

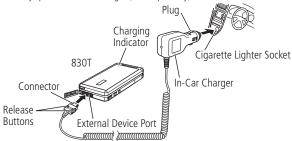

- Connect Charger connector to handset
 - Inscription on connector should face up.
- Insert Charger into cigarette lighter socket Charging Indicator illuminates red while charging; may take up to approximately 120 minutes.
- 3 Unplug In-Car Charger, then disconnect handset
 - Press and hold Release Buttons to remove Charger connector from handset.
- Do not use In-Car Charger when the car engine is off. Doing so may drain the car battery.
- Unplug In-Car Charger when leaving your car. If Charging Indicator remains on after removing car key, In-Car Charger may drain car battery.
- Use of handset while driving is prohibited by law. Before using handset, stop the vehicle in a safe area where parking is permitted.

More Features



Charging In Progress Image (Slideshow)

(page 13-7)


Outer Panel and Inner Sheets

Change handset appearance by replacing Outer Panel and Inner Sheet. Each Inner Sheet comes with a special QR Code (page 2-32). Scan QR Code to download theme-matching user interface, ringtones, etc.


Changing Outer Panel/Inner Sheet

Removal


- 1 Attach Frame Remover
 - Fasten Frame Remover, making sure notch fits completely into handset groove (see Fig. 1). Note that inscription on Frame Remover should face up.

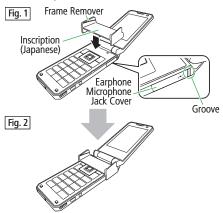

- 2 Close handset, and remove Frame and Outer Panel
 - Press corners (A) to tilt Frame up.

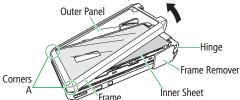

- Remove Frame, Outer Panel then Frame Remover.
- 3 Remove Outer Panel from Frame
 - Be careful not to damage the tabs of Frame or Outer Panel.

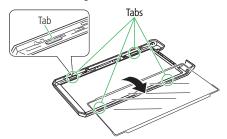


• After removing Outer Panel from Frame, remove Inner Sheet(s).

Attachment

Place Inner Sheet(s) on handset


• Insert Inner Sheet tabs into handset brackets (see below).

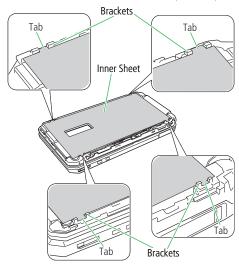

• Layer up to two Inner Sheets together.

2 Attach Outer Panel to Frame


• Secure Outer Panel into Frame with a click.

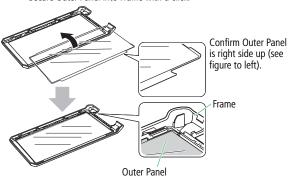

 Make sure Outer Panel is not inside out or upside down. Otherwise, parts may be damaged.

3 Replace Frame

• Press down until Frame is securely fixed to handset.

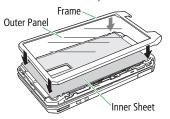

Turning Handset Power On

Press and hold



Standby

When Handset Powers On for the First Time

Following appears the first time handset is powered on or after performing *Reset All* or *Reset Setting*.



• Set Date & Time (page 1-13).

Retrieving Network Information

Before using network-related services (Yahoo! Keitai, Messaging or S! Appli), retrieve network connection information.

The first time you press lacksquare , \lacksquare or \lacksquare , a prompt appears.

Press ■//⋤



2 Select YES⇒■

Handset connects to the network and Network Information is retrieved.

- If Network Information is not acquired, some features will be limited.
- After replacing USIM Card, retrieve network information again.
- To retrieve network information from Main Menu:



Turning Handset Power Off

Press and hold

Power-off screen appears and handset powers off.

Date & Time

Setting Date and Time

- The date and time are set for Main City set in the World Clock settings.
- Press → Settings → → Phone
 Settings → → Clock → ■



Clock Menu

2 Select Date&Time ⇒ ■



- 3 Enter the year, month, day and time ⇒
 - Enter a time in the 24-hour system.
 - Use •• to move cursor and to select a number.
 - $\bullet\,$ Day of the week is automatically set.

Clock Format (12-hour/24-hour)

From Clock Menu (left), select 12hour/ 24hour



2 Select 12 hour or 24 hour ⇒ ■

Manner Mode and Offline Mode

Be careful about disturbing others in public or quiet areas.

- Turn handset off in theaters, museums and other places where silence is the norm.
- Observe signs and instructions regarding handset use aboard trains, etc.
- In airplanes, turn off handset to avoid interference with flight equipment.
- In hospitals, research institutes and other places where handset use is prohibited, turn handset power off to avoid interference with precision apparatus.
- When using handset in quiet places such as restaurants and hotel lobbies, be mindful not to disturb others.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Using Manner Mode

• See the table below for Manner Mode types and descriptions.

Туре	Description	
Silent [™]	No sounds are emitted from the speaker.	
Alarms 🖫	Only alarm sounds.	
Drive	Handset tones and sounds are emitted only when earphones are connected. Handset does not vibrate. All incoming calls are answered by Answering Machine.	
Original 1 to 3	Customize following items: Ringtone (Ringtone Volume & Vibration) Alarm (Alarm Volume & Vibration) Calendar (Alarm Volume & Vibration) SI Appli (S! Appli Volume) Sound Volume Effect Sound On/Off Battery Alarm On/Off Answering Machine On/Off	

Press and hold



- To cancel Manner Mode, press and hold HAGBER .
- Shutter click and recording start/end tone sound even in Manner Mode.
- S! Circle Talk connects automatically if My Status is set to Auto Join. Other party's voice will sound from speaker when connected, if handset is closed, even in Manner Mode.

Using Offline Mode

Use Offline Mode to temporarily suspend all handset transmissions. In Offline Mode, incoming/outgoing calls and network services (e.g. S! Mail/SMS transmission) are blocked.

- Press ⇒ Settings ⇒ ⇒ Call
 Settings ⇒ ■
- Select Offline Mode \Rightarrow (twice) \Rightarrow



- To cancel Offline Mode, select OFF.
- The following are unavailable in Offline Mode.
 Emergency calls: 110 (police), 119 (fire and
 - ambulance) and 118 (coast guard)
 - · Bluetooth® and infrared communications

More Features



Manner Mode



- Switch Manner Modes
- Customize Original Mode

About Codes

Handset Code, Center Access Code, Call Barring Service Code and Internet Security Code are required for some functions and settings.

- Write down those codes. If they are lost, contact SoftBank General Information (page 14-48).
- Do not reveal your codes. SoftBank is not liable for misuse or damages.

Handset Code

Four-digit number required to use various handset functions. Handset Code can be changed (page 11-2). **Reset All** resets Handset Code to default.

• The default setting is "9999".

Center Access Code

Four-digit number assigned at initial subscription. It is required to perform Optional Service operations via landlines or to subscribe to fee-based content on the Internet.

Call Barring Service Code

Four-digit number assigned at initial subscription. It is required to set Call Barring. The code can be changed (page 3-18).

If the code is incorrectly entered three times, Call Barring settings lock. If this happens, Call Barring Service Code and Center Access Code must be changed. For details, contact SoftBank General Information (page 14-48).

Internet Security Code


Internet Security Code is required to set Internet security. The code can be changed (page 11-5).

Menu Operations·····	2-2
Accessing Handset Functions · · · · · · · · · · · · · · · · · · ·	2-2
Simple Mode · · · · · · · · · · · · · · · · · · ·	2-5
Using Only Basic Functions · · · · · · · · · · · · · · · · · · ·	2-5
Display · · · · · · · · · · · · · · · · · · ·	2-7
Text Entry · · · · · · · · · · · · · · · · · · ·	2-10
About Text Entry · · · · · · · · · · · · · · · · · · ·	
Entering Characters · · · · · · · · · · · · · · · · · · ·	
Editing Text · · · · · · · · · · · · · · · · · · ·	
Word List (Japanese)·····	
Saving Frequently Used Words · · · · · · · · · · · · · · · · · · ·	
Phone Book·····	
Creating New Entries · · · · · · · · · · · · · · · · · · ·	
Using Phone Book · · · · · · · · · · · · · · · · · ·	
Data Folder · · · · · · · · · · · · · · · · · · ·	
Data Folder Structure · · · · · · · · · · · · · · · · · · ·	
Opening Files · · · · · · · · · · · · · · · · · · ·	
Managing Files and Folders · · · · · · · · · · · · · · · · · · ·	
Memory Card ······	
Advanced Features ······	
TOTALICCO I COCOLO	2 20

Menu Operations

Accessing Handset Functions

Press in Standby to open Main Menu.
Use to select a menu icon and press to access that menu.

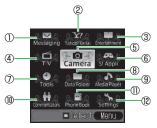

Main Menu

1Messaging

Create S! Mail/SMS messages. Also check received and sent S! Mail/SMS messages (Chapter 4).

2Yahoo! Keitai

From Yahoo! Keitai menu, access the Mobile Internet to download pictures, melodies and applications. Use PC Site Browser to access websites for PCs (Chapter 5).

3Entertainment

Access latest news, launch BookSurfing® and visit Ku-man's Room (Chapter 9).

4)TV

Watch Digital TV (Chapter 6).

⑤Camera

Take pictures and record videos (Chapter 7).

6S! Appli

Access applications such as games (Chapter 8).

⊘Tools

Access useful functions such as Alarms and Calculator (Chapters 9, 13, 14).

®Data Folder

Save/access files here (Chapter 2).

9Media Player

Play music and video files (Chapter 8).

®Communications

Access Communication Services provided by SoftBank (S! Town, S! Loop, S! Friend's Status, S! Circle Talk) (Chapter 10).

①Phone Book


Save and access Phone Book information (Chapter 2).

®Settings

Modify and confirm handset settings, and perform data communication and backup (Chapters 12, 13).

Operations in Landscape View

Use Multi Selector in Landscape View as follows.

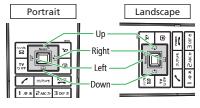

Customizing Main Menu

Customize Main Menu design (icons, font color, focus frame color, etc.).

Press Set Images Options



- Original Default theme.
- Phone Memory Select a Main Menu file.
- Keitaideco Sets the downloaded Keitaideco as Main Menu. Keitaideco must be set in advance from Data Folder (page 2-32). Then, Select Keitaideco

2 Select an item⇒ 🗹



- 3 Select *Icons* → *Phone Memory* or *Memory Card* → *Pictures* → *P*
 - To change the icon order:

 Press 😭 → Change Order → →

 Select an item → → Select a position
 - To change the font color:
 Press ♥ Font Color ♥ Select a color ■
 - To change the wallpaper:

 Press → Wallpaper → → Phone

 Memory or Memory Card → →

 Pictures or Digital Camera →

 Select an image → →
 - To change the focus frame color:
 Press → Highlight → → Select a color → ■

Numbered Menu Items



Numbers correspond to keypad keys.

Changing Multi Selector Shortcuts

By default, a shortcut is assigned to each Multi Selector key. Switch the assigned shortcuts.

Press ■ ⇒Settings ⇒ ■ ⇒Phone
Settings ⇒ ■



Phone Settings Window

2 Select Navigation Keys ⇒ ■



- Press ■⇒Select the function you want to assign to □⇒■⇒Select the function you want to assign to □⇒■⇒Select the function you want to assign to □⇒■
 - The remaining function is assigned automatically to .

Setting Side Key Function

Set a function to Side Key. Select from Manner Mode, Simple Notice, Torch (Penlight) and Balance. To access the set function, press and hold while handset is closed in Standby.

From Phone Settings Window, select

Side Key→ → Select a function→

Sub Menu View

Sub Menu View appears at top of sub menus (press [9] (Menu) for sub menu access). When multiple sub menu items are available, the two most recently selected items appear in Sub Menu View.

- From Phone Settings Window, select

 Sub Menu View

 ■
- 2 Select *Show* or *Hide* ⇒ ■
- This setting is disabled for S! Circle Talk, S! Circle Talk Call Log and S! Friend's Status.

Adding Functions to Shortcuts Menu

Add frequently used functions to Shortcuts Menu for quick and easy access.

Open a function (e.g. open S! Appli Library)→ਿ



- Press 🗟 (Assign)
 - Assign does not appear when the function is unavailable for Shortcuts Menu.

Using Shortcuts Menu

- Press 🕫 ⇒ Select a function ⇒ 🔳
- Activate up to two functions from Shortcuts
 Menu

More Features



Menus

lenus

page 2-26)



Mini Tool Settings

page 13-3)

- · Configure Mini Tool Settings
- Set Wide View
- Set Slideshow for Mini Tool

Simple Mode

Using Only Basic Functions

Use Simple Mode to limit menu items. Select from the following menu patterns.

Pattern	List View	Icon View
Menu 1	Phone Book Search Message Box Create Message Manner Mode My Number Add to Phone Book Tools Settings Full Menu	Message Create Manner Message Mode Add to Phone Book Phone Book Search Settings My Number Full Menu
Menu 2	Phone Book Messaging Camera Data Folder My Number Alarms Tools Settings Full Menu	Alarms Camera Data Folder Messaging Phone Book Tools Settings My Number Full Menu
Menu 3	Phone Book Messaging Yahoo! Keitai Camera My Number Data Folder Tools Settings Full Menu	Yahoo! Keitai Camera Data Folder Messaging Phone Book Tools Settings My Number Full Menu

- The following items are automatically set in Simple Mode.
 - · Sub Menu View Hide
 - Standby clock (page 2-8): Switches to
 1-Line Digit if Mini Clock has been set in normal mode.
- · IdleScreen under Wide View: ON
- Active Window: Switches to ON (Manual) if ON (Always) has been set in normal mode
- · Mini Tool: Giant Date

The above settings are retained after canceling Simple Mode.

Switching to Simple Mode

Press and hold



- 2 Select YES→ → Select a font size → → Select a menu pattern → ■
- To switch to Simple Mode from Main Menu:
 Press → Settings → SimpleMode
 ON → ■

Opening Main Menu

📘 In Simple Mode, press 🔳



Main Menu

• Press (Switch) to toggle between List View and Icon View.


Canceling Simple Mode

- In Simple Mode, press and hold

 →

 YES→

 ■
- To cancel Simple Mode from Main Menu:
 Press Settings SimpleMode
 OFF YES SimpleMode
- The font size setting is retained after canceling Simple Mode.

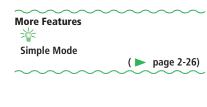

Display

Wallpaper

Press ■ → Settings → ■ → Display
→ ■



Display Setting Window

2 Select Idle Screen → ■ → Main Display
→ ■ → Wallpaper → ■ → Picture → ■



- 3 Select *Phone Memory* or *Memory Card*⇒ ⇒ Select a folder ⇒ ⇒ Select
 an image ⇒ ■
- 4 Use 🔄 to compose the image
 - To adjust the width or height: Press (Resize) Fit to Width or Fit to Length
 - To rotate the image:
 Press (Resize) → Rotate Image → ■

- 5 Press 🗹 (Cut)⇒ 🔳
- To set the default image:
 In 3, select Preset → (twice)
- To set Keitaideco: In 3, select Keitaideco*
 * Keitaideco must be set in advance (page 2-32).

Photo Album (Slideshow)

Set up to five images to appear on Standby as slideshow. Set effect and image order.

From Display Setting Window, select

Idle Screen → ■ → Main Display → ■

→ Wallpaper → ■ → Photo Album → ■



- 2 Select *Image* → *Images List* →
 - ⇒Select an image list ⇒ ■
 - Save images to an image list first:

 Select an image list → (Edit) → Select an item → Phone Memory or

 Memory Card → Pictures → Select an image → (twice) → (Set)
- Select Design → Select an effect → (twice)
- 4 Select *Order* → → Select an image order → ■
- 5 Press 🖫 (Set)

- To set images in a folder: In 2. select Select Folder → ■ Select a
- To set preinstalled images: In 2. select **Preset**

folder⇒

Clock

- From Display Setting Window, select *Idle Screen* ⇒ *Main Display* ⇒ ■
 - *→Others →* Select a clock type *→* (twice)

 - When you select 1-line Digit, 2-line Digit, World-Digital, or World-Analog, do the following. Use • to adjust the position → (twice)

External Display

Set Indicators on or off for External Display.

From Display Setting Window, select Idle Screen \Rightarrow \blacksquare \Rightarrow Ext. Display \Rightarrow \blacksquare \Rightarrow *Icon+Clock or Clock Only* →

Active Window (Japanese)

Save contact information to Members List and make calls, send messages and initiate S! Circle Talk from Active Window. In addition, check the latest information from S! Ouick News and Weather Indicator.

Operating Active Window

Press 🛅

The cursor appears indicating Active Window is enabled.



Shortcut Mode



Communication Mode

• Press 🗑 (Switch) to toggle between Shortcut and Communication Modes.

①S! Quick News

Shows newly received information.

- **2Weather Indicator**
- **3Members List**

Your current status (My Status) is shown on the top. Set an icon or a photo for each member. Save members from S! Friend's Status Members List to view their statuses. Make calls, send messages or initiate S! Circle Talk in Communication Mode.

Saving People to Members List

Add members to Members List from S! Friend's Status Members List or Phone Book. View members' statuses from Active Window

- From Active Window (Communication Mode), select an empty item→
 - (Save)
 - To change members:
 Select an entry → Change Member
 → YES → ■

Contacting Members

- From Active Window (Communication Mode), use 🜓 to select a member
- 2 Use to select a contact method
 - ⇒ 🔳
 - Make a call
 - Create and send a message
 - Make an S! Circle Talk call

Checking S! Quick News Updates

- You must register contents of S! Quick News in advance (page 9-22).
- From Active Window (Shortcut Mode), use to select S! Quick News→■
 - Press (Update) to update information. Press (Access) to access selected site.
 - If update fails, Information Prompt appears. In News List Window, press w then select *Update* to initiate update.

Checking Weather Forecast

- For details on using Weather Indicator, see page 9-23.
- From Active Window (Shortcut Mode), use to select Weather Indicator

More Features



Active Window

(page 2-27)



Active Window Settings


(page 13-8)

- Show All Information or Only Unread One
- Set Ticker Speed
- Show/Hide Images
- Restore Settings and Registered Contents of S! Quick News to Default

About Text Entry

There are two kinds of input methods: Standard mode and Beeper mode. Unless otherwise noted, text entry operations are described using Standard mode. For details on entering text in Beeper mode, see page 14-10.

About Text Entry Window

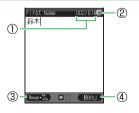

- ①Number of characters entered/Maximum number of characters allowed. The maximum number of characters allowed varies depending on the function.
- ②Current input mode.
- ③Select a text range and press to copy the text, save it to Word List, etc.

Switching Text Input Modes

- 📘 In a text entry window, press 🔛
 - Unavailable input modes do not appear.



2 Select a text input mode⇒ ■

Text Input Mode Icons

- **5** Kanji (hiragana)
- Single-bye katakana
- Double-byte alphanumerics (upper case)
- Double-byte alphanumerics (lower case)
- Single-byte alphanumerics (upper case)
- Single-byte alphanumerics (lower case)
- Double-byte numbers
- Single-byte numbers

URL: Mail and URL extensions

Pict: Pictographs

(^-^): Emoticons

My Pict: Pictographs in My Pictograms folder

Entering Characters

- For text entry key assignments, see page 14-9. Example: Entering 獨本木
- **1** In a text entry window, enter すずき



2 Press 📮



• To exit the suggestion list and enter characters after ###, press [917904].

- - To end text entry, press after determining entered text.

Lower Case (a, つ, etc.)

Except in Numeric input mode, you can change the case of a character selected by the cursor (unconverted character) (compatible characters only).

Example: Changing 5 to 5

- In a text entry window, press 💵

Adding or °

In Kanji (hiragana) input mode and Single-byte katakana input mode, add $^{\circ}$ to \mathcal{D}° (Ka), さ (Sa), た (Ta) and は (Ha) row characters. Add $^{\circ}$ to は (Ha) row characters.

Example: Entering #

- 🚺 In a text entry window, press
- 2 Press ★ · · sa → ■

が is determined.

• Press 🗷 😘 to switch between " and " for は (Ha) row characters.

Hiragana to Alphanumerics/Katakana Conversion

Enter alphanumerics and katakana in Kanji (hiragana) input mode.

Example: Entering TOM (single-byte)

- In a text entry window, press the keys corresponding to the characters
 - Press ਬਾਪਾ (once) → ங்கைய் (three times) →
 ப்பட்டியில் sentered.

 Press ਬਾਪਾ (once) → ங்கில் is entered.
- 2 Press 🖀 (Kana)

A suggestion list of roman characters and katakana appears.

- Press (Kana) (Mum.) to switch between roman character/katakana conversion and number conversion.
- 3 Use ♣ to select TOM (single-byte) → ■
 TOM (single-byte) is determined.

Toggling Characters in Reverse Order

Except in Numeric input mode, press to toggle unconverted characters on the cursor in the reverse order.

Example: Toggling the characters assigned to [ZABC79]

Symbols

In a text entry window, press
The double-byte symbol list opens.



2 Select a symbol⇒ ■

The selected symbol is entered and the symbol list closes.

• To enter symbols continuously, press after selecting each symbol.

Alphanumerics

In a text entry window, press [HAME?] (twice)
The double-byte alphanumeric list opens.

• The number of times [HANDP] is pressed differs depending on the function.



- 2 Select a number or letter⇒
 - Repeat this step to enter other numbers or letters

Pictographs

- In a text entry window, press 🗵 -- 18
 The pictograph list opens.
 - You may be unable to enter pictographs depending on the function.



- 2 Select a pictograph → The selected pictograph is entered and the pictograph list closes.
 - To enter pictographs continuously, press after selecting each pictograph.

Emoticons

- In a text entry window, press (twice)
 The emoticon list opens.
 - The number of times 🗷 -- ss is pressed differs depending on the function.



2 Select an emoticon⇒ ■

The selected emoticon is entered and the emoticon list closes.

To enter emoticons continuously, press after selecting each emoticon.

E-mail Address and URL Extensions

Example: Entering .co.jp (part of an e-mail address)

In a text entry window, press (three times)

The address library opens.

• The number of times [HAMEP] is pressed differs depending on the function.



2 Use • to select .co.jp → •

Editing Text

Correcting Entered Text

- In a text entry window, move cursor to the left of the character to delete → ☑☑☑☐ The character is deleted.

 To delete all characters to the right of the
 - cursor, press and hold when the cursor is at the end of text, press
 - When the cursor is at the end of text, pres and hold busselves to delete the entire text.
- 2 Enter correct characters

Deleting Multiple Characters

In a text entry window, move cursor to the first character of the text range to delete⇒ (Range·paste)



- 2 Select Start ⇒ → Move cursor to the last character → ■
- 3 Select Delete ⇒ ■

Copy/Cut/Paste

- In a text entry window, move cursor to the first character of the text range to copy/cut→圖 (Range·paste)
- 2 Select *Start* ⇒ → Move cursor to the last character → ■
- 3 Select *Cut* or *Copy* ⇒ ■

 The selected range of text is stored on the clipboard.
- 4 Position the cursor



5 Press (Range•paste)→Paste→■



2

Text 028/07(6) こんにちは、今度の日曜 日、ドライブに行きませんか?日曜日

6 Select the text to paste⇒ ■

Undoing Last Operation

In a text entry window, press ¬→

Undo→

Undo→



• Once text is reconverted or replaced, undo is unavailable.

More Features



Text Entry

(**>** page 2-27)

Text Entry Functions

(page 2-28)



Text Entry Settings

(page 13-34)

- · Change Input Method
- Do Not Show Word Suggestions from Entered Text
- Do Not Predict Next Phrase from Entered Phrases
- Set Custom Window
- Set Text Deletion Method
- Reset Prediction Dictionary/Conversion Dictionary

Word List (Japanese)

Saving Frequently Used Words

In a text entry window, press

Customize

→ Word List

■



2 Select To Word List ⇒ ■ ⇒Word ⇒ ■
⇒Enter a word ⇒ ■



3 Select *Reading* → ■ → Enter a reading



4 Press 🗹 (OK)

Save Words During Text Entry

- During text entry, move cursor to the first character of target word →
 (Range•paste)
- 2 Select Start → → Move cursor to the last character → ■
- 3 Select To Word List ⇒ ■
- 4 Select *Reading* ⇒ ⇒Enter a reading ⇒ ■
- 5 Press 🗹 (OK)

Edit Saved Entries

In a text entry window, press

Customize → ■ → Word List → ■ →

Edit Word → ■



- 2 Select a word⇒ (Edit)⇒Select the word/reading⇒ ⇒Edit the word/reading⇒ ■
- 3 Press 🗹 (OK)

More Features



Word List

(page 2-29)

Save phone numbers, e-mail address and other contact information to Phone Book. Access Phone Book information while making calls, writing messages, creating S! Circle Talk groups.

Phone Book Entry Items-

Contact & Personal Info

Name & Reading Job Title
Entry Number Company
Phone Numbers Birthday
E-mail Addresses URL

Picture Location Information

Group Note

Address

Settings

External Light Ringtone Duration
Ringtone Volume Message Folder
Ringtone Secret
Vibration External Display

Some Features

Speed Dial

Make calls to people in Phone Book quickly.

S! Addressbook Back-up

Back up Phone Book to server. Sync updates to back up new information.

Messaging

Specify addresses from Phone Book quickly when writing messages.

Reject Calls

Reject calls from numbers not saved in Phone Book.

• Back Up Important Information

When the battery is exhausted or removed for long periods, Phone Book entries may be lost. Handset damage may also affect handset information recovery. SoftBank is not liable for damages from lost or altered data.

Creating New Entries

Example: Saving a name, phone number and e-mail address, and specifying a group.





Phone Book Entry Window

- 2 Select Name → → Last Name or

 First Name → → Enter a last name/

 first name → → ⑤ (OK)
 - Characters entered for name (reading for kanji) appear.
 - To correct the reading, select a reading field (last name or first name) and edit the information
 - When you save to USIM Phone Book, enter both the first name and last name in the Name field.



- 3 Select *Phone Number* ⇒ ⇒ Enter a phone number ⇒ ⇒ Select a category ▶
 - To enter a hyphen "-" or a pause "P" (page 3-14), press w and then select **Manual Hyphen** or **Pause** (**P**).



4 Select *Email* ⇒ ■ ⇒Enter an e-mail address ⇒ ■ ⇒Select a category ⇒ ■



5 Select *No Group* ⇒ ■ ⇒ Select a group



6 Press 🖀 (OK)

2

Setting a Picture

- From Phone Book Entry Window, select
 - 2 Select Phone Memory or Memory Card

 →
 - To capture an image: Select *Take Picture* → Take a picture → Take a picture → Take a
 For details on taking pictures, see page 7-3.
- 3 Select *Pictures* or *Digital Camera* → ■

 ⇒ Select a picture → (twice)
 - If the selected picture does not fit in the prescribed frame, adjust the picture size (page 7-9).



• If Details of a picture file (page 2-31) indicate that the file is *Unavailable* for forwarding, the picture file cannot be set as Picture.

Setting Personal Ringtones

- From Phone Book Entry Window, select

 Options → ■
- 2 Select a type of incoming event⇒

 → Ringtone → ■



- 3 Select Phone Memory or Memory Card

 ⇒
 - To set a preinstalled ringtone:
 Select *Patterns* or *Melodies* → →
 Select a ringtone pattern → ■
 - If you select Same as Phone, the ringtone will be the same as the corresponding setting of Sounds.
- 4 Select a folder→ → Select a ringtone pattern→ (twice)

Secret Entries

Set specific Phone Book entries as secret so other people cannot see them.

- From Phone Book Entry Window, select

 Options ⇒ ■
- 2 Select Secret $\Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare$



- 📠 indicates a secret entry.
- To view secret entries, switch Secret Mode (page 11-4) to Show.

Saving Numbers from Call Log

Press ■/■



- To switch between Dialed and Received, press □/□.
- 2 Select a phone number ⇒ ¬To Phone Book ⇒ ■ → Add New ⇒ ■
 - To add a phone number to an existing Phone Book entry, select Add and select an entry.

Using Phone Book

Calling from Phone Book

Press 📮



- Press or to access the previous or next index tab.
- 2 Select an entry→ ■



- Press or to scroll entries within the same index tab.
- 3 Select a phone number⇒∠

• In Standby, press and hold a number key (1.00 to 2000) to access the corresponding index tab. Then, enter the first character(s) of the name to find an entry.

Changing Search Mode

Press 🖵 ⇒ 🗹 ⇒ Search Mode ⇒ 🔳



2 Select a search mode⇒ ■

• Select from the following search modes. Tab/Reading (default):

Enter reading (or partial reading) to search entries or select tab to scroll through entries.

List View:

Select tab then scroll through entries.

By 1-Touch*:

Search entries by the first letter of names. Press corresponding number key (1 @ 5) to 9wxyz6)

By Reading:

Enter reading (or partial reading) to search entries.

By Memory No.:

Search by entry number (Memory Number). Enter target entry number.

By Phone No.:

Search by entering a phone number.

Group Filter:

Search entries by Group.

* 2夕ッチ検索 (By 2-Touch), if 言語選択 (Language) is set to 日本語 (Japanese). In By 2-Touch search, select the first character of a reading (Press a key from to 9wxyzb), X ··· 16 Or #AGE → Press 1.0 to 5 IKLts).

More Features



Phone Book Entry Functions

page 2-29)

Customizing by Entry

(page 2-30)

Managing Phone Book

(page 2-30)



Phone Book Settings

page 13-35)

- Change Storage Location
- Prohibit Use of Phone Book

Settings for Phone Book Groups

(page 13-35)

Edit a Group Name/Group Icon

Data Folder

Data Folder Structure

Use Data Folder to save and manage files on handset. Files are saved to folders by file format.

as vObjects, text files, etc.

Preset Folders-Digital Camera*1 **Pictures** Ring Song · Tone S! Appli Music Picture files including those taken Pictures taken in Digital Sound files such as Downloaded S! Appli Downloaded music files. melodies, sounds recorded with the camera, My Pictograms mode Chaku-Uta Full® with Voice Recorder & Mail Art folders **Videos Books Templates** Lifestyle-Appli*2 Video files including Lifestyle-Appli for using Electronic comic books. Graphic Mail template those recorded with the Osaifu-Keitai® photo albums, etc. files camera Flash(R) Main Menu*2 Gamendeco Keitaideco Flash® image files & Image files for Main Icon/image files for Keitaideco files Flash(R) Tones folder Menu screen decoration Mini Tool*2 Other Documents • Files saved on handset may be altered or lost by improper use, accidents, or Mini Tool image files & Files in other formats, not saved mechanical failure. Always back up important files. Mini Photo folder to the folders listed above, such • \square indicates files requiring content usage rights. Press \square and select Buv Kev to

obtain a content key.

^{*1} Shown only in memory card Data Folder.

^{*2} Shown only in handset Data Folder.

Opening Files

7

Press ■ → Data Folder → ■



Data Folder Window

2 Select a folder⇒■



3 Select a file⇒ ■

Using Download Links

Some folders contain a link to Yahoo! Keitai. Use links to access Yahoo! Keitai and download content.

Slideshow

- **1** Open Data Folder*⇒Pictures* ⇒ ■
- **2** Select a file⇒ → *Change View* → ■



- **3** Select *Slideshow* ⇒
 - To end slideshow, press [917](4).

Managing Files and Folders

Creating a Folder

Folders can be created in *Pictures*, *Ring Song* • *Tone*, *Music*, *Videos*, *Books*, *Flash(R)*, *Main Menu*, *Gamendeco*, *Mini Tool* and *Other Documents*.

- Open Data Folder⇒Select a folder

 → ■
- Press → Create Folder → ■



3 Enter a folder name⇒ ■

Moving Files

- Open Data Folder⇒Select a folder

 → ■
- 2 Select a file⇒ 🖅 → Move → 🔳
- 3 Select One⇒
 - To move multiple files:
 Select Select Multi → Select files → Select files
 - To move all files: Select All → ■ ⇒Enter Handset Code



- 4 Select Phone Memory or Memory Card

 ⇒ ■
- 5 Select a destination folder⇒

 - To create a new folder in *Pictures*:
 Select *Pictures* → (Create) →
 Enter a folder name →

 When you move a still picture file taken in Digital mode to memory card, or a music file in MPEG-4 format (.3GP, .MP4 and .M4A) to another folder, select the fixed folder first and then select a destination folder.

Setting Folder Security

Set Security Lock to a folder to require Handset Code entry when accessing files in the folder.

- Open Data Folder⇒Select a folder you created⇒ ¬ Security Lock → ■
- 2 Enter Handset Code→ON→ ■

More Features



Opening Files

(page 2-31)

Using Files

(page 2-32)


Managing Files/Folders

(page 2-33)

Memory Card

Save files to memory cards.

- This manual refers to a microSD/microSDHC memory card as "memory card".
- Handset may not read/write files when battery level is low.
- Never remove memory card or battery while accessing/formatting files. Doing so may damage memory card resulting in lost files.
- Files on memory cards may be altered or lost from improper use, accidents or mechanical failure. Back up important files.
- Do not put labels or stickers on memory cards.
- For details on saving files to a memory card, see the corresponding explanation for each function.
- Handset supports microSD memory cards with a storage capacity of up to 2 GB and microSDHC memory cards with a storage capacity of up to 8 GB (as of September 2008). There is no guarantee that all memory cards will work with handset.

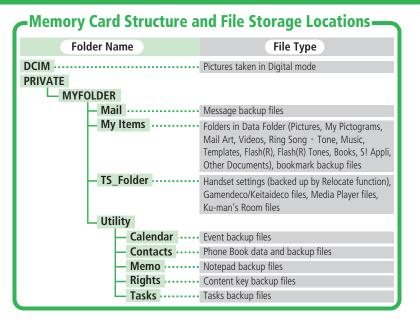

Inserting Memory Card

Turn handset off and remove the battery before inserting a memory card.



Insert memory card until it locks into position (gold terminal should face down)

Removing Memory Card

Turn handset off and remove the battery cover and battery. Gently push to eject card. Slide card out gently.

 Be cautious when ejecting a memory card; may abruptly pop out.

Formatting Memory Card

Formatting memory card deletes all data on the memory card.

- Memory cards formatted on PCs or other devices may be unreadable on handset.
- Press ⇒ Settings ⇒ → Memory



2 Select Format Card ⇒ ■ ⇒Enter Handset Code ⇒ YES ⇒ ■

Opening Memory Card Data

1 Press **■ ⇒** Data Folder **⇒ ■ ⇒ □**



2 Select a folder⇒ ■



3 Select a file⇒ ■

More Features



Opening Files



Advanced Features

Display

)

Menus

From Main Menu page 2-2
Phone Settings Window page 2-3

Reset Main Menu (Icons/Wallpaper)

Main Menu \longrightarrow Reset Options \rightarrow \longrightarrow YES \rightarrow

Reset Multi Selector Assignment

Rename Shortcut Titles

 You cannot edit the titles of preset Shortcut functions.

Customize Shortcuts Menu Icons

Select a function

✓

■Setting a Preinstalled Icon

Change Icon → ■ → Preset Icons → ■ → Select an icon → ■

Setting an Image in Data Folder/Memory Card

Change Icon → ■ → Phone Memory or Memory Card → ■ → Pictures → ■ → Select an image → ■ → ₹ to compose the image → ▼

 You cannot change the icons of preset Shortcut functions.

■Moving Icons

Arrange Icons → Select a destination →

Delete Shortcut Icons

Select a function

✓

■Deleting One Entry

 $Delete \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

■Deleting All Entries

Delete All ⇒ \blacksquare Enter Handset Code ⇒ **YES** ⇒ \blacksquare

• You cannot delete Main Menu icon.

Simple Mode

From Main Menu page 2-6

Change Main Menu Pattern

Main Menu ► Menu Patterns → Select a pattern → ■

Show Main Menu Guide

Main Menu $\searrow \rightarrow Guidance \rightarrow \bigcirc \rightarrow ON \rightarrow \bigcirc$

Open Full Menu in Simple Mode

Main Menu **Full Menu** ⇒ ■

Assign a 1-touch Number/Address to Softkeys

Main Menu Settings ⇒ ■ ⇒Save 1-touch ⇒
■ ⇒Soft Key 1 or Soft Key 2 ⇒ ■ ⇒From
Phone Book or New No./Address ⇒ ■ ⇒
Select/create a Phone Book entry ⇒ 🗟

- Select Soft Key 1 to assign a Phone Book entry to Left Softkey, and Soft Key 2 to Right Softkey.
- ■Calling/Sending a Message to a 1-touch Number/Address

Solution | Solution |

Active Window

From Shortcut Mode page 2-8
Communication Mode page 2-8

Always Show Active Window

■ Settings ■ Display ■ Idle

Screen ■ Main Display ■ Active

Window ■ ON (Always) ■

 When *OFF* is set, Active Window does not open even by pressing in Standby.

Set Shortcut Mode View

Shortcut Mode

→ Settings → Templates

→ Member/News, Member, News or

News: No Image → □

Edit Members List

Communication Mode → Edit List → → Select a member → → YES → ■ → Friend Status or Phone Book → ■ → Select an entry → ■

To add a new member, select *Edit List*, then
 Not Registered, and press

Change Members List Icons

Communication Mode Select a member → ▼ → Change Icon → ■ → Phone Book or Icon → ■ → Select an icon → ■

Show/Hide My Status

Communication Mode \searrow \Rightarrow *Edit List* \Rightarrow \Longrightarrow My *Status ON* or My *Status OFF* \Rightarrow \bigcirc (ON/OFF)

Check a Member's Status

Text Entry

Insert Line Break

In a text entry window, enter characters and convert property to insert line break

- Alternatively, press and hold
- To insert line break to the left of a determined character, access line break from the symbol list (page 2-11).
- Line break is unavailable in some text entry windows.

Insert a Space

In a text entry window, 🕒

 To insert a space to the left of a determined character, select a space from the symbol list (page 2-11).

Use Single Kanji Conversion

Example: Entering 🚪 (すずき)

In a text entry window, enter ### (twice)→
Select # from the suggestion list→■

 When 學業院 (Single Kanji Conversion List) does not appear in a text entry window, the entered characters cannot be converted with Single Kanji conversion.

Convert a Name One Character at a Time

Example: Entering *垂*秋(あかり)

In a text entry window, enter あかり → ⑤ → ♣ to select 名菽菜 (Name Conversion) → ⑤ → Select 臺 → ⑥ → Select 夏 → ⑥ (twice)

Conversion Prediction/Phrase Prediction

Handset is equipped with MobileRUPO[™], Toshiba's kana-kanji conversion engine.

Rupo AI 変換対応

* MobileRUPO[™] is a trademark of Toshiba Corporation.

■Using Conversion Prediction

Example: Entering お父さん

■Using Phase Prediction

Example: Entering the same phrase *満でライブ* that you have entered before

In a text entry window, enter $l \rightarrow \bigcirc$ to select $\mathcal{E} \rightarrow \bigcirc$

Save Original Emoticons

In a text entry window, $\square \rightarrow (^{-}) \rightarrow \square \rightarrow$ $User\ Created \rightarrow \square \rightarrow Select\ an\ empty\ item \rightarrow$ $\square \rightarrow Create\ an\ emoticon \rightarrow \square\ (twice)$

Text Entry Functions

Font Size

In a text entry window, ✓ → Customize → ■

Font Size → ■ → Select a font size → ■

Insert Phone Book Information

In a text entry window, 🗹 → Insert → 🔳

■Inserting Phone Book Information

Phone Book → Select a Phone Book entry → Select an item → ■

■Inserting Other Information

My Details, Phrases, Emoticon, Signature, Notepad, Message Box of URL History ⇒

■

Save Text to Notepad

• Used entries will be overwritten.

Save Numbers/E-mail Addresses to Phone Book

Scroll to beginning of text range $\Rightarrow Start$ $\Rightarrow Move cursor to end of text <math>\Rightarrow To$ Phone Book $\Rightarrow To$ Phone Book $\Rightarrow To$

• See "Creating New Entries" (page 2-17) for entering other items.

 If selected item contains characters or symbols not savable to Phone Book, the entry is not saved.

Reconvert Determined Text

Scroll to beginning of text range → Start

→ ■ → Move cursor to end of text → ■ →

Convert → ■

■Converting Hiragana to Kanji

Kana/Kanji → ■ → Select a word from the suggestion list → ■

- ■Converting All into Full/Half Width Full Width or Half Width ■
- ■Converting All Roman Characters into Upper/Lower Case

Upper Case or Lower Case ⇒ ■

Replace Text with Clipboard Entry

Scroll to beginning of text range→ 🔄 → Start

→ ■ → Move cursor to end of text → ■ →

Replace → ■ → Select text from clipboard →

Word List

Delete All Entries

Phone Book

Phone Book Entry Functions

From Phone Book Entry Window page 2-17

Save Other Information

■Address/Job Title/Company

Phone Book Entry Window **Personal Info.** → ■ → Select an item → ■ → Enter an item → ■

■Birthday

Phone Book Entry Window **Personal Info.** ⇒ ■ ⇒ **Birthday** ⇒ ■ ⇒ Enter birthday ⇒ ■ ⇒ 🗟

• Enter four digits for the year and if the month or date is a single digit, prefix it with a 0.

■URL

Phone Book Entry Window $Personal\ Info. \Rightarrow \blacksquare \Rightarrow URL \Rightarrow \blacksquare \Rightarrow Enter\ a\ URL \Rightarrow \blacksquare \Rightarrow Home\ or\ Business \Rightarrow \blacksquare \Rightarrow \boxtimes$

Note

Phone Book Entry Window *Note* → ■ ►Enter a reminder → ■

■Memory Number (Entry Number)

Phone Book Entry Window Select the current entry number > Enter a new entry number > ■

Set Location Information

Phone Book Entry Window Personal Info. ⇒ ■ → No Location ⇒ ■

■Setting Your Current Position

Position → Perform positioning → →

■Setting from Location Logs/My Locations

Location Logs or **My Locations** → ■ → Select location information → ■ → ②

Check Number of Entries

■ → Phone Book → ■ → Memory Status → ■

- Press (Count) (Rate) to switch between the number of entries and the usage rate.
- When Secret Mode is set to *Hide*, secret entries are excluded from the number of entries.

Customizing by Entry

Ringtone Volume

Phone Book Entry Window Options > III > Voice
Call, Video Call, Message, Circle Talk or
Notification > III > Ringtone Vol. > III >
Options or Same as Phone > III > Set
volume level > III

External Light/Vibration

Phone Book Entry Window Options ⇒ ■ ⇒Voice Call, Video Call, Message, Circle Talk or Notification ⇒ ■

■External Light

ExternalLight → ■ → Select a color, **OFF** or **Same as Phone** → ■

■Vibration

Vibration → Select a pattern, **OFF** or **Same as Phone** →

Ringtone Duration (New Message/ Notification)

Phone Book Entry Window Options → →

Message or Notification → → Duration →

Set Duration, 1 Cycle or Same as

Phone → → Enter a ring time → ■

Filter Messages

Phone Book Entry Window Options → ■ →

Message → ■ → Message Folder → ■ →

Select a folder or None → ■

Show/Hide Caller/Sender Name (External Display)

Phone Book Entry Window Options \Rightarrow \Rightarrow Ext. Display \Rightarrow \Rightarrow ON, OFF or Same as Phone \Rightarrow

Customize Incoming Event Alerts by Group

 $\blacksquare \Rightarrow Phone \ Book \Rightarrow \blacksquare \Rightarrow Group \Rightarrow \blacksquare \Rightarrow$ Select a group $\Rightarrow \blacksquare \Rightarrow Options \Rightarrow \blacksquare$

• See "Setting Personal Ringtones" (page 2-18) for following operations.

Managing Phone Book

Switch Phone Book (USIM/Handset/ Memory Card)

Q → **V** → **Change View** → **O** Select a storage location → **O**

- The storage location of each Phone Book entry is indicated by the following icons:
 - Handset
 - USIM Card
 - Memory card

Sort Entries

 $\square \Rightarrow \square \Rightarrow Sort \ by \Rightarrow \blacksquare \Rightarrow Alphabet \ Or$ Birthday $\Rightarrow \blacksquare$

 Available when Search Mode (page 2-20) is set to *List View*, *By 1-Touch* or 2タッチ検索 (By 2-Touch).

Edit Entries

 \bigcirc Select a Phone Book entry \rightarrow Select an item \rightarrow Edit the item \rightarrow \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc \bigcirc Save or Save as New \rightarrow

Copy/Move Entries

■Copying/Moving One Entry

Select a Phone Book entry → ✓ → Copy
or Move → → One → → Phone

Memory, USIM or Memory Card → ■

■Copying/Moving Multiple Entries

☐ → ₩ → Copy or Move → ■ → Select

Multi → ■ → Select Phone Book entries → ■

(Copy)/② (Move) → Phone Memory,

USIM or Memory Card → ■

■Copying/Moving All Entries

→ Phone Memory, USIM of Memory Card

 The items you can save to Phone Book differ depending on the storage location (handset, USIM or memory card).

Delete Entries

■Deleting One Entry

■Deleting Multiple Entries

■Deleting All Entries

Data Management

From Data Folder Window page 2-22

Opening Files

Change Data Folder View

Data Folder Window Pictures, My Pictograms,
Mail Art, Digital Camera, Videos, Books,
Main Menu, Mini Tool or Mini Photo

Change View

Type

Select a view type

File Properties

Data Folder Window Select a folder → ■ → Select a file → □ → Details → ■

Check Available Memory (Data Folder/ Memory Card)

Data Folder Window Memory Status

Proces To toggle between handset are

 Press to toggle between handset and memory card.

Using Files

Picture Files

Access Data Folder from each function*⇒

Pictures*

Select a file*

To compose the image*

To compose the image

**To compose the i

- * See the following: Customizing Main Menu icon/wallpaper (page 2-3), setting wallpaper (page 2-7), setting incoming call/message images (page 13-2), setting Video Call images (page 13-23), setting Phone Book picture (page 2-18)
- For adjusting the picture size, see page 7-9.
- If a GIF animation is selected, only the first frame (still image) is shown.

Melody/Music/Video and Flash® Files

Access Data Folder from each function*→Ring Song*Tone, Music, Videos, Flash(R) or Flash(R) Tones → Select a file (twice)

* See the following: Sound settings (page 13-11), setting wallpaper (page 2-7), setting event/task/Reminder alarm tones (page 9-27), setting alarm tone (page 9-32), setting personal ringtones (page 2-18)

Customize User Interface (Keitaideco)

Each Inner Sheet comes with a special QR Code. Scan the code to download Keitaideco (theme-matching user interface, wallpaper, ringtone, incoming images, Gamendeco and Main Menu image).

Press and hold \searrow Frame the QR code in Display \Longrightarrow YES \Longrightarrow

- Handset automatically sets Keitaideco after download is complete. Individually set Keitaideco items via their respective menus.
- *IdleScreen* under *Wide View* is automatically set to *ON*.
- To scan ordinary QR codes, see page 9-25.
- If battery level is low, handset will not set Keitaideco after download. Keitaideco is saved in Data Folder. Charge battery and set Keitaideco.
- Setting Previously Downloaded Keitaideco

Data Folder Window **Keitaideco** → Select a file → **YES** →

v0bjects

- Convert Phone Book entries, Calendar events and tasks to vObject files and exchange with vObject-compatible SoftBank handsets and PCs.
- vObject compatible software is required to use vObjects on a PC or other device.
- If a vObject file contains large amounts of data, all information may not be transferred.
- Depending on the software used, some vObject characters may become illegible.

■Creating a vObject

Open a function: Phone Book (page 2-16)/
Calendar (page 9-4)/Tasks (page 9-5)/Message
(page 4-2)/Bookmarks (page 5-6)/Notepad (page
9-8) Select a file to be saved as vObject Description One Phone Memory,
Data Folder or Memory Card Select
a folder

■Importing vObjects into Respective Functions

Data Folder Window Other Documents ⇒ ■ ⇒
Select a vObject ⇒ □ → To Phone Book, To
Cal./Tasks, To Messages, To Bookmarks or
To Notepad ⇒ ■ → One ⇒ ■

● To import multiple vObjects, do the following. Select Multi → ■ → Select vObjects → ■

□

Managing Files/Folders

Change Folder and File Names

■Changing Folder Name

Data Folder Window Select a folder you created → → Rename Folder → → Enter a folder name → ■

 If Security Lock is set to the folder, Handset Code entry is required after selecting *Rename* Folder.

■Changing File Name

Data Folder Window Select a file → ▼ → Rename → Enter a file name → ■

• If you change the file name of a music or movie file, its title will not be changed.

Change File Order

Data Folder Window Select a folder → Select a file → Change View → Sort by → Select a criterion → Select a criterion

• Files in the memory card cannot be sorted by title.

Move Folders

Data Folder Window Select a folder you created → Move Folder → ■ Enter Handset Code

When moving a folder created in Ring Song
 Tone or Music, do the following.
 Phone Memory or Memory Card

Phone Memory of Memory Card → ■ ■ Ring Song • Tone of Music → ■

Copy Folders and Files

■Copying a Folder

Data Folder Window Select a folder you created ⇒ ✓ → Copy Folder → ■ → Enter Handset Code → Phone Memory or Memory Card → ■

 When copying a folder created in Ring Song · Tone or Music, select a destination folder from Ring Song • Tone or Music.

■Copying One File

Data Folder Window Select a folder → Select a file → → Copy → One → → Phone Memory or Memory Card → → Select a destination folder → ■

■Copying Multiple Files

Data Folder Window Select a folder → □ → □ → Select Multi → □ → Select files → □ → □ → Phone Memory or Memory Card → □ → Select a destination folder → □

■Copying All Files

Data Folder Window Select a folder → □ → □ → Copy → □ → AII → □ → Enter Handset Code → Phone Memory or Memory Card → □ → Select a destination folder → □

• To create a new folder in a folder other than **Pictures**:

- To create a new folder in *Pictures*:
 While selecting a destination folder, *Pictures* ■ ■ Enter a folder name ■
- If Details indicate that the file is *Unavailable* for forwarding, the file cannot be copied.
- When copying picture files taken in Digital mode to memory card, *Digital Camera* folder is also selectable.
- When copying MPEG-4 music files (.3GP and .MP4), first select *Ring Song • Tone* or *Music* folder.

Delete Folders and Files

■Deleting a Folder

Data Folder Window Select a folder you created → Delete Folder → ■ ➤ Enter Handset Code → YES → ■

■Deleting One File


■Deleting Multiple Files



■Deleting All Files



Making Calls · · · · · · · · · · · · · · · · · ·	3-2
Voice Call·····	3-4
Answering Machine · · · · · · · · · · · · · · · · · · ·	3-6
Video Call · · · · · · · · · · · · · · · · · ·	3-7
Call Log · · · · · · · · · · · · · · · · · · ·	3-9
Viewing Dialed Numbers and Received Calls · · · · · · · · · · · · · · · · · ·	3-9
Optional Services · · · · · · · · · · · · · · · · · · ·	3-10
Overview · · · · · · · · · · · · · · · · · · ·	3-10
Advanced Features · · · · · · · · · · · · · · · · · · ·	3-12

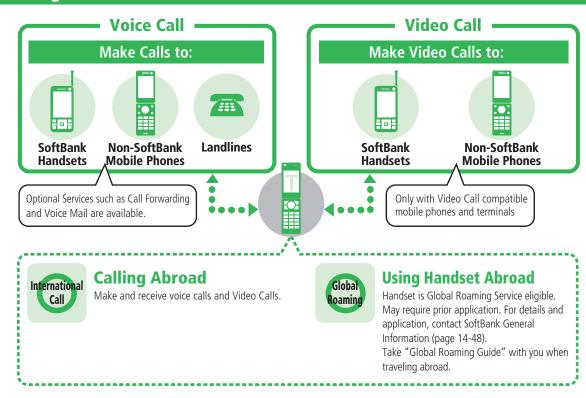

My Phone Number

Press ■ → Phone Book → ■ →
My Details → ■



- To check your phone number during a call: Press ☑ → My Details → ■

About Emergency Calls

Emergency calls (110 (police), 119 (fire and ambulance) and 118 (coast guard)) are available, even when Password Lock and/or Call Barring is active.

- If a Video Call is made to an emergency service, the call becomes a voice call.
- In a GSM network area, you cannot make emergency calls during data communication.

Emergency Positioning Request

Caller's location is notified to emergency agencies for emergency calls (110, 119 and 118). Positioning Information uses GPS information, where available. or base station information*.

- * If handset signal is received by a distant base station, Positioning Information may not be accurate.
- GPS information is recorded as Location Logs (page 9-31).
- Positioning Information may be inaccurate, depending on the caller's location and signal strength.
- This system may not operate if the responding agency has not installed the proper system.
- If emergency numbers (110, 118 and 119) are dialed with the 184 prefix, Positioning Information is not provided. However, emergency agencies may retrieve location information in life-threatening cases.
- No application fees or connection fees apply.
- This system is unavailable while using handset abroad.

all

Making a Voice Call

📘 Enter a phone number

- Include the area code for all numbers.
- Press or press and hold to delete the entire number and return to Standby. Press to delete the last number entered.
- For details on making a call from Phone Book, see page 2-19.



Dial Window

2 Press 🖊



Voice Call Window

- Use during a call to adjust the earpiece volume.
- 3 Press [POWER] to end the call
- Antenna is built into handset. Signal sensitivity may be reduced by touching/ covering Internal Antenna area (page 1-3).
 Do not cover this area by affixing stickers, or any other items. Doing so may prevent you from making/receiving calls, sending/ receiving messages or accessing the Web.
- The orientation and location of handset may affect signal strength.
- When Cost Limit is set and the limit is reached, outgoing voice calls are blocked. If the limit is reached during a call, the call ends

Answering a Voice Call

When a call arrives, incoming image, External Light, Twinkle Light and ringtone/vibration notify you.

- Press / when a call is received
 - Use 🜓 to adjust the ringtone volume while receiving an incoming call.
 - To stop the ringtone while receiving an incoming call, press and hold .
- Press 🛌 to end the call

<u>ട</u>

Speed Dial

Abbreviated dialing is possible for phone numbers saved in handset Phone Book.

- Tenter the last two digits of entry number 0010 to 0099⇒ ✓
 - For entry numbers 0000 through 0009, enter the last digit only and press .

Calling Abroad from Japan

Make international calls from Japan.

Tenter a phone number⇒ >>>

Intl. Calls → ■



Country Number List Window

- 2 Select a country⇒ ⇒ ✓
- 3 Press 🖭 to end the call

Calling While Abroad (Global Roaming)

Make international calls from a visiting country.

- Switch to the network system (3G/GSM) (page 13-22) for the country/region you are visiting.
- Intl. Calls ⇒ ■
- 2 Select a country⇒ ⇒ ✓
 - When calling to Japan, select *Japan* from Country Number List Window.
- 3 Press 🖭 to end the call

Calling within Visiting Country

- 1 Enter a number with area code
 - Do not omit 0 from area code.
- 2 Press .
- 3 Press 🚾 to end the call

Manual Entry of Country Codes

- 2 Enter a country code
 - See "Global Roaming Guide" for country codes.
- 3 Enter a number with area code⇒∠
 - Omit the first 0 from area code except when calling to Italy.
- 4 Press call

Press and hold

Answering Machine is activated.

- When recording capacity becomes full or call ends, recording stops automatically.
- To cancel Answering Machine, press and hold 2027/24.
- Press and hold press or to activate
 Answering Machine while receiving an incoming call.
- Answering Machine is not available for Video Calls and Call Waiting.
- When five messages are recorded, Answering Machine is disabled. Delete messages as follows.

Press Select a message Delete

- Messages may not be recorded when an S! Appli is set as Screensaver.
- When Manner Mode is set in Drive Mode, you cannot cancel Answering Machine.
- When Manner Mode is set to Original Mode, Original Mode setting takes priority. Change Answering Machine setting in Original Mode to switch to the preferred setting.

Playing Messages

Press →Select a message



More Features



Outgoing Call Functions

(page 3-12)
Incoming Call Functions

(**>** page 3-13)

Answering Machine Functions

(page 3-13)

Functions During Calls

page 3-13)

-

Response Settings for Incoming Calls (page 13-9)

- Answer Incoming Calls by Opening Handset (Open to Talk)
- Set Any Key Answer

Answering Machine Settings

(page 13-9)

Set Answering Machine Response Time

International Call Settings

(page 13-22)

- Switch Network Systems (3G/GSM)
- Change International Code
- Add Country Codes to Country Number List
- Set Operator to Use
- Change Priority Order of Operators
- Add an Operator

Earphone-Microphone Settings

(page 13-24)

- Save a Phone Number for Earphone-Microphone Call
- Set Auto Answer
- Set Microphone to Use When Earphone-Microphone is Connected

Video Call

Make Video Calls to other compatible mobile phones.

 You can switch the main and sub cameras, and send a still image instead of live image during Video Calls.

Making a Video Call

🚺 Enter a phone number and press 🖼



The other party answers your Video Call.



Video Call Window

- When Self-view (page 13-23) is set to ON, check your camera image, and then press to make a call.
- Use during a call to adjust the speaker (earpiece) volume.
- Press (to end the call
 - When Cost Limit is set and the limit is reached, outgoing Video Calls are blocked. If the limit is reached during a call, the call ends.

Video Call Icons

- Video Call
- Mute My Voice
- Mute All
- Faster Moving Mode
- Standard Mode
- **1** Better Picture Mode
- Handsfree On
- Handsfree (Bluetooth® connection)
- Sending Picture
- Voice Connection Established
- Earphone-Microphone Connected (when handset microphone is used)
- Earphone-Microphone Connected (when earphone microphone is used)

Answering a Video Call

When a Video Call arrives, incoming image, External Light, Twinkle Light and ringtone/ vibration notify you.

Press / when a Video Call is received

A confirmation window appears. Select **YES** and press to send live camera image. Press (5) while the handset is ringing/vibrating to view yourself before sending your camera image.

Press 🖭 to end the call

3

<u>ല</u>

Outgoing Call Functions

(page 3-12)

Incoming Call Functions

(page 3-13)

Functions During Calls (Voice & Video)

(page 3-13)

Functions During Calls (Video)

(Page 3-15)



Video Call Settings



(page 13-23)

- Set Alternative Picture
- Set Self-view Check
- Set Incoming Image Quality
- Add a Phone Number to Auto Answer List
- Set Mute
- Set Audio Output
- Set Hold Image

Call Log

Viewing Dialed Numbers and Received Calls





Call Log Window

- Press / to switch between Dialed (outgoing call log) and Received (incoming call log).
- Press () () to switch between outgoing S! Circle Talk call log and voice call/Video Call log.
- Press ☑ (ᆋ/基) to switch between incoming S! Circle Talk call log and voice call/Video Call log.

More Features



Call Log Functions

(page 3-15)

Functions for Call Time and Cost

(page 3-16)



Call Cost Settings

(page 13-22)

- Set Currency & Exchange Rate
- Show Call Cost After Each Call
- Set Maximum Cost Limit

- For details, contact SoftBank General Information (page 14-48).
- Operations are unavailable when out of range.

Call Forwarding	Forward calls to a preset phone number.
Voice Mail	Transfer calls to Voice Mail Center when handset is out of range or line is busy. Access messages from handset or touchtone phones (page 3-11)
Call Waiting [*]	Place a call on hold to receive another incoming call (page 3-17).
Group Calling [*]	Make or receive a call during a call and talk to multiple parties simultaneously (page 3-17).
Call Barring	Restrict outgoing/incoming calls and SMS (page 3-17).
Caller ID	Show or hide your phone number when making calls (page 3-12).

^{*} Separate application required.

Activating Call Forwarding

Press $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Call$ Settings → Call Services → ■



Call Service Settings Menu

2 Select VM/Call Fwd⇒ ■



Voice Mail/Call Forwarding Menu

- Select Call Fwd $ON \Rightarrow \blacksquare \Rightarrow$ Select a type of call⇒ ■
- Select All Calls or No Answer $\Rightarrow \blacksquare \Rightarrow$ Set response time (skip this step for All Calls)⇒ ■
 - All Calls: Forwards calls immediately. No Answer: Forwards calls after set ring time elapses.



- 5 Select Phone Book, Phone Number or $Call \ Log \Rightarrow \blacksquare \Rightarrow Select \ or \ enter \ phone$ number⇒ (twice)
 - Phone Book: Search from Phone Book. Phone Number: Enter number directly. Call Log: Select number from Call Log.
- 6 Connect to the network



7 Press 🔳

Activating Voice Mail

From Voice Mail/Call Forwarding Menu, select *Voice Mail ON* ■



- 2 Select All Calls or No Answer → →
 Set response time (skip this step for
 All Calls) →
 - All Calls: Forwards calls to Voice Mail Center immediately.
 No Answer: Forwards calls to Voice Mail Center after set ring time elapses.
- 3 Connect to the network



4 Press 🔳

- Call Forwarding and Voice Mail cannot be set simultaneously. If one service is activated, the other will be deactivated (Voice Mail is available with Call Forwarding for Video Calls).
- Receiving Calls After Activating Call Forwarding/Voice Mail

Press while the ringtone is sounding to talk to the caller. If you set **All Calls**, handset does not receive calls, but they are forwarded to the preset phone number or Voice Mail Center.

Voice Mail Service Options
 Access the Personal Options menu from Voice Mail Center to set/customize outgoing message. For details, contact SoftBank General Information (page 14-48).

Missed Call Notification

Missed Call Notification informs you of calls missed while handset was powered off, out of range or engaged. Once handset is powered on or in signal range, notification appears in Information Prompt. Activate Voice Mail in advance to use this feature.

- 1 Enter 1414⇒ 🖊
 - Follow the voice prompts.
- From overseas, call +819066514191 (international charges apply).

Checking Messages

- From Voice Mail/Call Forwarding Menu, select *Listen VM* → ■
- From overseas, call +819066514170 (international charges apply).

Deactivating Call Forwarding/Voice Mail

Trom Voice Mail/Call Forwarding Menu, select DeactivateAll → ■

Call Forwarding and Voice Mail are deactivated

- If Call Forwarding/Voice Mail is not activated, forward incoming calls as follows.
 - · Voice call: Press (Divert) while handset is ringing/vibrating
- · Video Call: Press 🗹 Divert while handset is ringing/vibrating

More Features



Functions for Optional Services

(page 3-16)

My Details

Save Information to My Details [Save My Details]

 \blacksquare → Phone Book → \blacksquare → My Details → \blacksquare → Select an item → \boxdot → Enter information → \blacksquare → \boxdot

■Entering a Name

■ Phone Book ■ My Details ■
Name ■ Select an item □ Edit
■ Enter a name ■ ■ (twice)

Use Location Information

[Personal Info.]

→ Phone Book → → My Details → → Personal Info. → → Location Exist → ∨ → Open Map, Location Mail, Add Location or Delete → ■

 To save a location, select *Personal Info.* and then do the following.

No Location $\Rightarrow \neg Add Location \Rightarrow \blacksquare$

Outgoing Call Functions

From Dial Window page 3-4
Voice Call Window page 3-4
Video Call Window page 3-7

Redial

[Dialed Numbers]

 \Longrightarrow Select an entry \Longrightarrow \Longrightarrow to end the call

- To make a Video Call, select an entry and press
- To make an S! Circle Talk call, press and hold
 when My Status is *Online* (page 10-4).

Call from Received Calls

[Received Calls]

→ Select an entry → → □ to end the

on To make a Video Call, select an entry and press

Show/Hide Caller ID

[Show My ID]

Dial Window ₩ → Hide My ID or Show My ID

Set Earpiece Volume

[Earpiece Volume]

■ → Settings → ■ → Sounds → ■ →
Earpiece Vol. → ■ → Set volume level → ■

Set Caller ID On/Off

[Show My Number]

■ \Rightarrow Settings \Rightarrow ■ \Rightarrow Call Settings \Rightarrow \Rightarrow Show My Number \Rightarrow \Rightarrow Select Show My ID, Hide My ID or OFF \Rightarrow \Rightarrow

- When *OFF* is selected, Caller ID is set to the setting you selected at time of subscription.
- Following methods are available for setting Caller ID (Priority is given in the listed order when multiple settings are used).
- ① Set before calling (enter number, ¬→Hide My ID or Show My ID → □)
- ② Handset setting (Show My Number)
- ③ Setting chosen at subscription

Make Voice Calls Using Earphone-Microphone

[Earphone-Microphone Call]

- Make one-touch calls from Earphone-Microphone. Before making a call, save a phone number to Earphone-Microphone (page 13-24).
 Insert Earphone-Microphone plug into earphone jack Press and hold the microphone switch to dial the set phone number Press and hold the microphone switch to end the call
- Press and hold the switch again to cancel dialing.
- Press round the call.

Incoming Call Functions

Reject an Incoming Call

[Reject Calls]

- when a call is received
- To reject an incoming Video Call, press ☑ and select *Reject Call*.

Place Incoming Call on Hold

[Hold Answer]

when a voice call or Video Call is received

- The caller is charged for the call while placed on hold.
- Pressing while the caller is on hold terminates the call.

 When you answer a Video Call that has been placed on hold, the call is connected without the confirmation window asking whether to send the camera image.

Answer Calls with Earphone-Microphone [Earphone-Microphone Answer]

Insert Earphone-Microphone plug into earphone jack Press and hold the microphone switch when a call is received Press and hold the microphone switch to end the call

• Press Fower to end the call

Answer Incoming Video Calls Automatically

[Auto Answer]

- When Auto Answer is set to ON, Video Calls from numbers in Auto Answer List are automatically answered when handset is open.
- Regardless of Manner Mode setting, the speaker will beep and the Video Call is automatically connected.

■ → Settings → ■ → Call Settings → ■ → Video Call → ■ → Auto Answer → ■ → ON/OFF → ■ (twice) → ON → ■

Answering Machine Functions

Delete Recorded Messages

■ Settings → ■ + Call Settings → ■ + Ans Machine → ■ + Recordings → ■ + Select a message → ▼ + Delete → ■ + YES → ■

Functions During Calls

Voice & Video Calls

Mute Audio During a Call

[Mute]

■Voice Calls

■Video Calls

• Press

to cancel mute during a call.

Place a Call on Hold

[Hold Call]

Voice Call Window ✓ Video Call Window 🔛 → **Hold** →

 Subscription to Call Waiting (page 3-17) or Group Calling (page 3-17) is required to use the Hold feature for voice calls.

Voice Calls

Record Other Party's Voice During a Call [Voice Record During Calls]

Voice Call Window **Y → Voice Record ■**

- Recording stops when the maximum time is reached or the call ends. To stop recording manually, press
- To play a recording, do the following.

 → Tools → → Useful Tools → →

 Voice Recorder → → Recordings → ■

 → Phone Memory or Memory Card → ■
- ⇒Select a file⇒ ■
- In a GSM network area, you cannot record the other party's voice during a call.

Save Number Memo During a Call [Save Number Memo]

Voice Call Window Press keypad keys

- After the call ends, the number memo is automatically saved.
- You can enter the following numbers and symbols.

0 to 9, X, #, +, -, P

● To check a number memo, do the following.

■ → Tools → ■ → Useful Tools → ■ →

Number Memo → ■ → Select a number memo → ■

Talk Handsfree

[Handsfree Call]

Voice Call Window

• To cancel handsfree, press 🗟 (HandsfreeOFF).

Send Touch Tones During a Call [Send Touch Tones]

■Manually Entering Touch Tones

Voice Call Window Press a key from (1940) to (1940), (X -- 16) or (1940)

■Sending Touch Tone Sequences

 Save touch tone sequences to Phone Book (page 2-17) and remotely access your answering machine or other devices.

Voice Call Window → Phone Book → →
Select a Phone Book entry → → Select a touch
tone sequence (phone number) → ✓ → Send
Tone → ■

■Adding Pause "P" to Touch Tone Sequence

• Enter a pause "P" to separate touch tones.

Example: To save 03123XXXX3 (phone number), #7777 (answering machine access code), and #1 (answering machine playback command), enter the following in the Phone Number field.

03123XXXX3P#7777P#1

Open the Phone Book entry → ✓ (handset calls phone number before the first "P") → ■ (handset sends next set of touch tones)

 Repeat this step until all the touch tones have been sent

Video Calls

Toggle Audio Output (Earpiece/Speaker) [Handsfree On/Off]

Video Call Window

(Handsfree ON/HandsfreeOFF)

Zoom Outgoing Image

[Zoom]

Video Call Window

 Zoom is unavailable when a still picture is set for outgoing image.

Switch Main & Sub Cameras During a Call [Switch Cameras]

Video Call Window (Switch)

Switch Outgoing/Incoming Image Windows

[Switch Windows]

Video Call Window → Screen Set. → ■ →
Switch → ■ → In. Prior, Incoming Only,
Out. Prior of Outgoing Only → ■

Set Still Picture for Outgoing Image [Send Picture]

Video Call Window

→ Send Picture →

→ Send Pic. ON →

→ Phone Memory or

Memory Card →

→ Select a picture →

■

Change Alternative Picture

[Alternative Picture]

Video Call Window | > Alt. Picture | Alt.

Pic. ON⇒ ■

- When *Alt. Pic. OFF* is set, the camera image is sent to the other party.
- ■Selecting Default Image

Preset ⇒ ■

■ Selecting an Image in Data Folder/ Memory Card

Phone Memory or **Memory Card** ⇒ ■ ⇒ Select an image ⇒ ■

 Handset automatically adjusts the image size.
 Some images may be unavailable depending on the image size.

Change Incoming Image Quality [Image Quality]

Video Call Window $\begin{tabular}{ll} $\not \end{tabular} \Rightarrow Screen Set. \Rightarrow \begin{tabular}{ll} \Rightarrow Image Quality \Rightarrow Select an item \Rightarrow \end{tabular}$

Call Log Functions

From Call Log Window page 3-9

Delete Call Log Records

[Delete/Delete All]

■Deleting a Record

Call Log Window Select a record → ¬Delete → Delete → ¬YES → ■

■Deleting All Records

Call Log Window ► Delete → Delete All → Enter Handset Code YES -

Lock Call Log

[Call Log Lock]

Call Log Window

Call Log Lock

Enter Handset Code

Lock

■

• To cancel the lock, select *Unlock*.

Functions for Call Time and Cost

View Call Time and Cost

[Call Time & Cost]

■ Settings ■ Call Settings ■ → Call Time & Cost → ■ All Calls or Last

Call ■ ■ Time or Cost ■

- Use Call Time & Cost as an estimate only. Actual bill may differ.
- Total call time does not include mail, Web, and S! Circle Talk connection fees.
- Up to 277 hours 46 minutes and 39 seconds can be counted for the total call time.
- Sum of charges appears for Group Calling (page 3-17).
- The total call cost does not include mail/ Internet/S! Circle Talk connection fees.
- Call cost does not appear for international calls.
- Call costs (Last Call, All Calls and Cost Limit) may be unavailable depending on subscription.

Reset Total Call Time

 \blacksquare \rightarrow Settings \rightarrow \blacksquare \rightarrow Call Settings \rightarrow \blacksquare \rightarrow Call Time & Cost \rightarrow \blacksquare \rightarrow All Calls \rightarrow \blacksquare \rightarrow Enter Handset Code \rightarrow YES \rightarrow \blacksquare

Reset Total Call Cost

■ Settings ■ Call Settings ■ Call Time&Cost ■ All Calls ■ Cost ■ W Reset ■ Enter PIN2 (page 14-2) ■ YES ■

Functions for Optional Services

From Voice Call Window page 3-4
Call Service Settings Menu page 3-10
Voice Mail/Call Forwarding Menu page 3-10

Optional Service Setting Status

Check Optional Service Setting Status
[Status]

■Call Forwarding/Voice Mail

Voice Mail/Call Forwarding Menu Status

■ Call Waiting

Call Service Settings Menu | Call Waiting ⇒ ■ ⇒

Status → ■

Call Barring

Call Service Settings Menu *Call Barring* → → *Status* → Select a type of restriction → •

Call Waiting

Set Call Waiting

[Call Waiting On/Off]

Call Service Settings Menu Call Waiting → → → ON or OFF → ■

Answer an Incoming Call During a Call [Call Waiting]

During a call, Call Waiting tone is heard → ₩ → **Answer** → ■

Switch Between Two Callers [Switch Parties]

[SWITCH Tare

- During Call Waiting → ZABC:19
- Press ABCTY o switch between parties.
- If a caller terminates a call during Call Waiting, a ringtone sounds and *Holding*. appears.
 Press to start talking with the other person on hold.

Group Calling

Call Another Party

[Call During a Call]

Voice Call Window Enter a phone number→

Switch Between Parties

[Switch Parties]

Voice Call Window Enter a phone number → ✓ →
When the other party answers, PARCH

- Press Press to switch between parties.

Talk to Multiple Parties

[Group Calling]

Voice Call Window Enter a phone number → ✓ → When the other party answers, 🗹 → Group

- $Calling \Rightarrow \blacksquare \Rightarrow Group \ Calling \Rightarrow \blacksquare$
- During Group Calling, press round to end the call with all parties simultaneously.
- If one person ends the call during Group Calling, the other parties remain connected.

● To talk to just one person during Group Calling:

Select a party to talk with → ♥ → Group Calling → Private → ■

Call Barring

Restrict Outgoing and Incoming Calls and SMS Messages

[Call Barring]

Call Service Settings Menu Call Barring

■Restricting Outgoing Calls and SMS

Outgoing Call → → All Outgoings, All

Out-Intl. or Out-Intl. → → Enter Call

Barring Service Code (page 1-16) → Connect to the network automatically → ■

■ Restricting Incoming Calls and SMS

Incoming Call → → All Incomings or All If Roamed → → Enter Call Barring Service
Code → Connect to the network automatically →

■Deactivating Call Barring

Cancel All → ■ → Enter Call Barring Service
Code → Connect to the network automatically →

- After network connection, status appears. If status does not appear, try procedure again.
- Emergency calls (110, 119 and 118) are available even when Call Barring is activated.
- Some Call Barring services (All Outgoings and All Incomings) are unavailable when Call Forwarding or Voice Mail is set.
- If Call Barring Service Code is incorrectly entered three consecutive times, Call Barring settings are locked. Change Call Barring Service Code and Center Access Code (page 1-16). For details, contact SoftBank General Information (page 14-48).

Change Call Barring Service Code [Call Barring Service Code]

Call Service Settings Menu Call Barring

Security Code

Enter current Call

Barring Service Code

Enter new Call Barring

Service Code

Re-enter new Call Barring


Service Code for confirmation

 After connecting to the network, a setting completed window appears. If the window does not appear, follow the procedure again.

Messaging·····		• 4-2
Message Types · · · · · · · · · · · · · · · · · · ·		· 4-2
Customizing Handset Address · · · · · · · · · · · · · · · · · ·		· 4-3
Sending Messages·····		• 4-4
Sending S! Mail · · · · · · · · · · · · · · · · · · ·		· 4-4
Sending SMS · · · · · · · · · · · · · · · · · ·		
Incoming Messages·····		• 4-8
Opening New Messages · · · · · · · · · · · · · · · · · · ·		· 4-8
Checking Received Messages · · · · · · · · · · · · · · · · · · ·		· 4-8
Replying to Messages · · · · · · · · · · · · · · · · · · ·		· 4-9
Organizing/Using Messages · · · · · · · · · · · · · · · · · · ·	,	4-10
Sorting Messages · · · · · · · · · · · · · · · · · · ·		4-11
Advanced Features · · · · · · · · · · · · · · · · · · ·	,	4-13

Message Types

Handset supports S! Mail (MMS) and SMS.

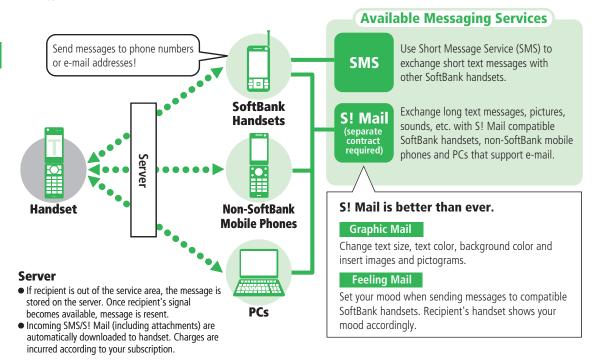

Customizing Handset Address

Change the account name (part before @) of your handset e-mail address.

- □□□□□□□□□@softbank.ne.jp
- For details, contact SoftBank General Information (page 14-48).
- This operation uses Yahoo! Keitai access.
- Before using Messaging service, retrieve network connection information (page 1-12).
- A random alphanumeric text string is assigned at the time of contract. Composing a long e-mail address using single-byte alphanumerics and symbols is an effective way for preventing spam.





- 2 Select メール設定(アドレス・迷惑メール等) (Mail settings (Owner's mail address, spam mails, etc.)) **・**
 - Follow the onscreen instructions.

4

Sending S! Mail

Press

→ Create New →

■



Create Message Window

2 Select Address ⇒ ■



Set Address Window

3 Select *Phone Number* or *Email* ⇒

■ ⇒ Enter a phone number/e-mail
address ⇒ ■



- To select an address from Phone Book: Select Phone Book → → Select an entry → → Select a phone number/ e-mail address → ▼
- You can select from the three most recently sent addresses in Set Address Window.
- 4 Select Subject ⇒ ⇒Enter a subject ⇒ ■



5 Select Text → ■ →Enter text → ■



- 6 Press
 (Send)

 OK
 - If you select Notify Only Once in the sending confirmation/completed window, the window will not appear from the next time.

- If you enter an e-mail address or input text that cannot be sent by SMS, the mail type automatically changes to S! Mail.
- S! Mail you send may look different on a receiving handset if it does not support S! Mail.

Attaching Files

Attach an image or melody to an S! Mail.

From Create Message Window, select



Attachments Menu

2 Select Data Folder ⇒ ■ ⇒Phone Memory or Memory Card ⇒ ■



3 Select a folder⇒ ■⇒Select a file



 Some files may not be able to be attached to messages. To find out whether a file can be attached or not, check Details of the file (page 2-31).

Feeling Mail

When Feeling Mail arrives, graphics corresponding with sender's mood appears in Information Prompt. Vibration and External Light also respond accordingly.

- Handset response for incoming Feeling Mail varies by recipient's handset.
- From Create Message Window, select

 Feeling ⇒ ■



2 Select a pictograph⇒■



 If Feeling Mail is sent to non-compatible handsets, regular pictographs appear in the subject field.

Graphic Mail

Send HTML mail to change font size, font color, background color, add moving text, insert images, etc.

Example: Changing the font size and background color, and inserting a picture

- From Create Message Window, select
- 2 Press → GraphicMail → ■



Graphic Mail Window

- To decorate text using a Graphic Mail template:
 - Press Templates Phone

 Memory or Memory Card >

 Select a template YES >

 Edit text —

4

3 Select *Font Size* ⇒ ■



4 Select a font size → ■ → Enter text



5 Press ¬ GraphicMail → → ScreenColor → ■



6 Select a background color⇒ ■



7 Press → GraphicMail → → Picture
→ → → Phone Memory or Memory
Card → ■



8 Select a folder⇒ ■ ⇒ Select an image ⇒ ■

Sending SMS

Send short text messages to other SoftBank handsets using phone numbers as address.



Create Message Window





3 Select Address ⇒ ■



Set Address Window

4 Select *Phone Number* ⇒ ■ ⇒Enter a phone number ⇒ ■



- To select a number from Phone Book: Select **Phone Book** ■ Select an entry ■ Select a phone number
- You can select from the three most recently sent addresses in Set Address Window
- - If you select Notify Only Once in the sending confirmation/completed window, the window will not appear from the next time.

More Features



Creating Messages

(page 4-13)

Attaching Files

(page 4-14)

Graphic Mail Functions

(page 4-15)

Outgoing Message Functions

(page 4-15)



Message Creation Settings

page 13-14)

- Add Recipients to Simple Input List
- Set Groups
- Set a Signature
- Set Default Mail Type
- Show/Hide Notification When Mail Type is Switched

Outgoing Messages

(page 13-15)

- Show/Hide Sending Confirmation Window
 Sat Vibratian Wilson Confirmation
- Set Vibration When Sending is Confirmed
- · Check Delivery
- Set Server Storage Period of Sent Messages
- Set Message Priority
- Set Time for Delivering Messages to Recipients
- Save a Reply Address
- Edit SMS Center Number (+819066519300)

4

Opening New Messages

When a message arrives, ringtone sounds and animation plays. Incoming messages are saved to **Received**.


Check any unread messages from Information Prompt.

- By default, S! Mail retrieval is set to *Immediate*. The complete incoming message and attachments are automatically downloaded. Change settings to *Phone # Only* (auto-download messages from SoftBank handsets) or *Deferred* (select messages to download) (page 13-16).
- When you have several unread Feeling Mail, the corresponding graphics of the most recent sender appears in Information Prompt background.
- Information Prompt appears



2 Select New Messages ⇒ ■

3 Select a folder⇒ ■ ⇒ Select a message ⇒ ■

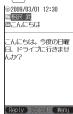

- To retrieve new messages from the server: Press **Press Press Pr**
- If Priority is set to Pause, incoming messages are notified by a confirmation window during handset use (except in Standby). Select Read Now or Later. To delete a message without reading it, select Delete.
- While watching TV, if a confirmation window appears to notify of an incoming message, select *Read Now* or *Later*. When *Later* is selected, handset receives the message after ending TV.

Checking Received Messages



- 2 Select a folder→ ⇒ Select a message →
 - It may be impossible to open/play a file unless you obtain a content key (content license) depending on the file.

Replying to Messages

Create Message Window opens and the recipient's address is automatically set.

 When replying to an S! Mail, the subject to which Re: is prefixed is automatically inserted in the subject field.

Example: Replying by quoting the received text

- Press

 → Message Box →

 Received
- 2 Select a folder → → Select a message → → 圖 (Reply)



3 Select With Text⇒■



- To reply to the sender of a message with multiple addresses, select *To Sender* or *To All*.
- To reply by creating new text, select Blank; to reply by referring to the received text, select Refer.

More Features



Receiving Messages

(page 4-16)

Server Operations

(page 4-16)



Display Settings

(page 13-15)

- Set Font Size
- Set Scroll Unit
- Show/Hide Address and Subject When Sending/Receiving Messages

Incoming Messages

(page 13-16)

- Set New Message Retrieve Mode
- Set Automatic Display of Picture Files
- Set Automatic Playback of Sound Files
- Set Spam Filter

3D Pictograms

(page 13-16)

- Set Automatic Playback of 3D Pictograms
- Set Font and Background Colors for 3D Pictograms

3D Mail

(page 13-17)

Set Playback of 3D Mail

Received and sent messages are saved to the **Received** and **Sent** message folders respectively. Unsent draft messages are saved to **Drafts**, and undelivered (delivery failed) messages are saved to **Unsent**.

About Auto-delete

If Message Box memory is full, the oldest message is deleted when receiving/sending a new message. Set Protect (page 4-17) to save important messages. Alternatively, set Auto-delete (page 13-17) to **Do not Set**. However, when memory is full, a warning and

□ appear on Display. Delete unnecessary messages to receive new messages (page 4-18).

 When unable to receive S! Mail notifications due to insufficient memory, delete unnecessary messages. Once memory space becomes available, S! Mail notifications are redelivered by Retry function. Alternatively, retrieve Mail List (page 4-16) to receive notifications. For details on redelivery of S! Mail notifications, contact SoftBank General Information (page 14-48).



Message Box Window

2 Select *Received* or *Sent* ⇒ Select a folder ⇒ ■



Message List Window

①Message Status

Unread Message Read Message Unread Message with Attachments Replied Unread Message Forwarded Unread Message Replied & Forwarded Unread Message Unread S! Mail Notification Read S! Mail Notification Replied Unread S! Mail Notification Forwarded Unread S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery	Ulvies:	sage status		
Unread Message with Attachments Replied Unread Message Forwarded Unread Message Replied & Forwarded Unread Message Unread S! Mail Notification Read S! Mail Notification Replied Unread S! Mail Notification Replied Unread S! Mail Notification Replied & Forwarded S! Mail Notification Replied & Forwarded S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery	\vee	Unread Message		
Replied Unread Message Forwarded Unread Message Replied & Forwarded Unread Message Unread S! Mail Notification Read S! Mail Notification Replied Unread S! Mail Notification Forwarded Unread S! Mail Notification Replied Winread S! Mail Notification Replied & Forwarded S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Read Message		
Forwarded Unread Message Replied & Forwarded Unread Message Unread S! Mail Notification Read S! Mail Notification Forwarded Unread S! Mail Notification Replied Unread S! Mail Notification Replied & Forwarded S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Unread Message with Attachments		
Replied & Forwarded Unread Message Unread S! Mail Notification Read S! Mail Notification Replied Unread S! Mail Notification Forwarded Unread S! Mail Notification Replied & Forwarded S! Mail Notification Replied & Forwarded S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Replied Unread Message		
Unread S! Mail Notification Read S! Mail Notification Replied Unread S! Mail Notification Forwarded Unread S! Mail Notification Replied & Forwarded S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Forwarded Unread Message		
Read S! Mail Notification Replied Unread S! Mail Notification Forwarded Unread S! Mail Notification Replied & Forwarded S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Replied & Forwarded Unread Message		
Replied Unread S! Mail Notification Forwarded Unread S! Mail Notification Replied & Forwarded S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Unread S! Mail Notification		
Forwarded Unread S! Mail Notification Replied & Forwarded S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Read S! Mail Notification		
Replied & Forwarded S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Replied Unread S! Mail Notification		
Replied & Forwarded S! Mail Notification Sent Message with Unread Delivery Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Forwarded Unread S! Mail Notification		
Report Sent Message with Delivery Being Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Replied & Forwarded S! Mail Notification		
Confirmed Sent Message without Delivery Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery		Report		
Confirmed Forwarded Sent Message without Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery	₽	Sent Message with Delivery Being Confirmed		
Delivery Confirmed Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery	T			
Sent Message of Which Delivery to Some Recipients is Failed Forwarded Sent Message of Which Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery				
Delivery to Some Recipients is Failed Unsent Message with Delivery Failed Unsent Message Waiting for Delivery	ą	Sent Message of Which Delivery to Some		
Unsent Message Waiting for Delivery	ą			
	¥	Unsent Message with Delivery Failed		
		Unsent Message Waiting for Delivery		
Message Being Sent	000	Message Being Sent		
☐ Draft Message		Draft Message		

②S! Mail/SMS

\checkmark	S! Mail
	SMS
-	SMS on USIM Card

③Priority/Protection

9	High/Protected
0	High/Not Protected
	Normal/Protected
0	Low/Protected
0	Low/Not Protected

Sorting Messages

Sort messages into folders by criterion.

Open Message Box⇒Select a folder⇒

Sort Setting ⇒ ■



- 2 Select a criterion→ ⇒ Specify conditions →
 - Select **Person** to set an individual entry in Phone Book as the sorting condition.
 - Select *Group* to set a Group entry in Phone Book as the sorting condition.
 - Select Address to set the specified addresses, regardless of whether they are saved to Phone Book, as the sorting condition
 - Select *Phone Book* to set those addresses that are either saved or not saved to Phone Book as the sorting condition.
 - Select *Ku-man* to set messages from Ku-man as the sorting condition.
 - Select *Idokoro* to set Departure Mail, Arrival Mail, and Simple Notice as the sorting condition.

More Features



Organizing Messages

(page 4-17)

Using Messages

(page 4-18)

Message Box Settings



(page 13-17)

- Disable Auto-delete
- Switch Between Folder View and All Message
- Switch Between Mixed View and Separate View

Message List View Settings

(page 13-17)

- Switch Message List Views
- Split Message List Window

Message List Window Settings

(page 13-18)

- Filter Messages
- Create a New Phone Book Entry with a Phone Number/F-mail Address
- Add a Phone Number/E-mail Address to a Phone Book Entry
- Switch Between Unread and Read
- Switch All Messages in a Folder Between Unread and Read

Mini Tool Setting in Message List Window (page 13-18)

• Set Mini Tool in Message List Window

Advanced Features

Sending Messages

Creating Messages

From Create Message Window page 4-4
Set Address Window page 4-4

Specify Recipients Quickly

[Simple Input]

• Save addresses to Simple Input list (page 13-14) for quick access.

Set Address Window **Simple Input** → Select an entry →

Send a Message from Sent Log/Received Log

[Sent Log/Received Log]

Set Address Window Sent Log or Received Log

Select an entry

■

Send a Message to a Group

[Group]

 You can select addresses saved to a group (page 13-14).

Set Address Window **Group** → Select a group

Insert Your Name and Other Information Automatically

[Insert]

Create Message Window Text → ■ → ¬ Insert → ■ → Phone Book, My Details, Phrases, Emoticon, Signature, Notepad, Message Box or URL History → ■ → Do the respective operations

Add Recipients

[Add Address]

Create Message Window Select the address field → → Add Address → ■ → Select an address → ■

 For details on how to enter addresses, see page 4-4.

Delete Recipients

[Delete/Select Multi/Delete All]

■Deleting One Entry

Create Message Window Select the address field Select an address Delete One

■Deleting Multiple Entries

Create Message Window Select the address field → Polete → Select Multi → Select addresses → Select Multi → Select addresses →

■Deleting All Entries

Create Message Window Select the address field→

Delete All →

Save a Recipient's Address to Phone Book [To Phone Book]

Create Message Window Select the address field → Select an address → Save Sender → Add New or Add → ■

• See "Creating New Entries" (page 2-17) for entering other items.

Set To/Cc/Bcc

[To/Cc/Bcc]

Create Message Window Select the address field → Select an address → To/Cc/Bcc → To, Cc or Bcc → □ → 👸

- To: The recipient's address.
- Cc: Copies of a message sent to the address in the To field are sent to other addresses.
 Addresses entered in the Cc (carbon copy) field are revealed to other recipients.
- Bcc: Addresses entered in the Bcc (blind carbon copy) field are not revealed to other recipients.

Save All Addresses to a Group

[To Group]

Create Message Window Select the address field → To Group → (twice) → Select a group → Enter a group name → ■

4

Edit Text

[Edit Text]

Create Message Window Select the text→ → Edit the text → ■

Delete Text

[Clear Text]

Create Message Window Select the text→

Clear Field →

Clear Fiel

Change Mail Type

[Mail Type]

■Switching to SMS

Create Message Window $Type \Rightarrow \blacksquare \Rightarrow SMS \Rightarrow \blacksquare$

 If a message contains something that cannot be sent by SMS, a confirmation window appears. The contents which cannot be sent will be deleted if you select *Change*.

- If the text exceeds the maximum number of characters allowed in SMS, a confirmation window appears. If you select *Cut to Fit SMS* after selecting *Change*, the maximum amount of text from the beginning is remained and the excess is deleted.
- If you change the mail type to SMS, the following items are deleted.
 E-mail address, Cc and Bcc setting, Subject, Attached file, Graphic Mail template and settings, Feeling Mail setting

■Switching to S! Mail

Create Message Window $Type \Rightarrow \blacksquare \Rightarrow S! Mail \Rightarrow \blacksquare$

- By performing the following operations, you can also change the mail type from SMS to S! Mail automatically. If these items are deleted, the mail type returns to SMS automatically.
 Add an e-mail address, Set Cc/Bcc, Enter subject, Attach a file, Set Feeling Mail
- If you press
 and select *Templates* or *GraphicMail* while entering text, or if you enter text that exceeds the maximum number of characters allowed in SMS and press , a confirmation window telling the message cannot be sent as SMS appears. Select *Change to S!Mail, Cut to Fit SMS*, or *Edit Message*.

Attaching Files

From Create Message Window page 4-4

Attachments Menu page 4-4

Shoot Picture or Video Attachments [Take Picture/Record Video]

■Picture

Attachments Menu *Take Picture* Frame subject in Display (twice)

■Video

Attachments Menu **Record Video** → Frame subject in Display → (three times)

Set an Attachment to Open Automatically (Recipient's Handset) [Auto Play]

• If there are more than one attached file, you can set just one to play back.

Create Message Window, Attachments → ■ →
Select an attached file → □ → Auto Play → ■
→ ON/OFF → ■ → ON → ■ → Display or
Do not Display → ■

• To put a caption to the attached file, select **Display** and enter a caption for the file.

Graphic Mail Functions

From Create Message Window page 4-4
Graphic Mail Window page 4-5

Other Decorations

[Graphic Mail]

■Changing Font Color

Graphic Mail Window *Font Color* → Select a color → Enter text

■Blinking/Scrolling/Swinging Text

Graphic Mail Window Blink, Telop or Swing⇒

Enter text

■Aligning Text

Graphic Mail Window *LineUp* → Select a character position → Enter text

■Inserting a Line in Text

Graphic Mail Window **Partition** ⇒ ■

■Inserting Sound

Graphic Mail Window Sound → → Phone

Memory or Memory Card → → Select a sound file → ■

■Inserting My Pictograms

Graphic Mail Window *MyPictograms* → Select a My Pictogram →

■ Deleting One Decoration

Graphic Mail Window $Cancel \rightarrow \blacksquare \rightarrow Delete \ by$ $Each \rightarrow \blacksquare \rightarrow Select \ a \ decoration \rightarrow \blacksquare \rightarrow \boxdot$

■Deleting All Decorations

Graphic Mail Window $Cancel \Rightarrow \blacksquare \Rightarrow Delete \ All \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

Change Decorations [Change/Delete Graphic Mail Settings]

Create Message Window Select text → → Enter text → ⑤ → Start → → Select the end → ← Graphic Mail → ← Set/delete decorations

Insert a Graphic Mail Template [Switch Templates]

Create Message Window Select text ⇒ ¬Switch

Templ. → ¬Switch → ¬Phone

Memory or Memory Card → ¬Select a

template → ¬Edit text → ¬

Save Graphic Mail Templates [Save Template]

Create Message Window Select text ⇒ ¬Save

Template → □ → Enter a title → □ → Phone

Memory or Memory Card → □

• Templates can only be saved when the text has been decorated with Graphic Mail settings.

Outgoing Message Functions

Save without Sending

[Save to Drafts]

Create Message Window → To Drafts → ■ → Save → ■

Check Preview

[Preview]

Specify Server Storage Period

[Expiry Time]

Create Message Window *Options* → *Expiry* → Select an expiry time →

Check Delivery

[Delivery Check]

Create Message Window *Options* → → *DeliveryCheck* → ■ → *ON* → ■

Specify Message Delivery Time [Delivery Time]

Create Message Window *Options* → Delivery *Time* → Select a delivery time →

• This procedure is only available with S! Mail.

Set Message Priority

[Priority]

Create Message Window *Options* → Priority → Select a priority → ■

• This procedure is only available with S! Mail.

4

Activate Reply to Function

[Reply to]

Create Message Window *Options* → *Reply to* \Rightarrow \blacksquare \Rightarrow Activate \Rightarrow \blacksquare

- Save a Reply address in advance (page 13-15).
- This procedure is only available with S! Mail.

Delete a Sent Message Checked on the **Recipient's Side Automatically** [Self-delete]

Create Message Window **Options** ⇒

 $Self-delete \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare$

• This procedure is only available with S! Mail.

Incoming Messages

Receiving Messages

Manually Retrieve Complete S! Mail [Retrieve Mail]

Select S! Mail notification → Retrieve *Mail*⇒ ■

Forward Continuation of S! Mail [Forward Mail]

Select S! Mail notification ⇒ ¬ Divert ⇒ $\blacksquare \Rightarrow$ Server Mail $\Rightarrow \blacksquare \Rightarrow$ Keep or Do not **Keep** → ■ → Enter an address → 🖾

• For details on how to enter addresses, see page 4-4.

Server Operations

Use Mail List

[Update Mail List/Retrieve Mail]

Server Mail ⇒ ■

Retrieving and Updating Mail List

 $\square \Rightarrow Update \Rightarrow \square$

■ Receiving Messages on Mail List

Select a message $\Rightarrow Retrieve \Rightarrow \blacksquare \Rightarrow One$, Select Multi or All ⇒ ■

• When you select Select Multi, do the following. Select messages → ■ → 🖀

Forward Server Messages

[Forward Server Mail]

Server Mail → Select a message $\neg Divert \Rightarrow \blacksquare \Rightarrow Keep \text{ or } Do \text{ not } Keep \Rightarrow$ ■ ⇒Enter an address⇒ 🗃

- When **Do not Keep** is selected, the forwarded message is deleted from the server.
- When handset is out of range or in Offline Mode, server messages cannot be forwarded.
- For details on how to enter addresses, see page 4-4.

Delete Server Messages [Delete/Select Multi/Delete All]

Server Mail ⇒ ■

■Deleting One Message

Select a message $\Rightarrow Delete \Rightarrow \blacksquare \Rightarrow One \Rightarrow$ ■ ⇒Server Mail or Notif./Server ⇒ ■ ⇒ $YES \Rightarrow \blacksquare$

■Deleting Multiple Messages

▼ → Delete → ■ → Select Multi → ■ → Server Mail or Notif./Server → ■ → Select messages → ■ → □ → YES → ■

■Deleting All Messages

▼ → Delete → ■ → All Read Mail or All → Server Mail or Notif./Server → ■ → Enter Handset Code → YES → ■

Check Server Status

[Mailbox Volume]

Server Mail → □ → □ → Mailbox Vol.

- To update the amount of server space, press (Update).
- If the server usage exceeds 80%, a warning window appears. Retrieve messages stored on the server (page 4-16) or delete them (page 4-16).

Organizing/Using Messages

From Message Box Window page 4-10
Message List Window page 4-10

Organizing Messages

Set Security to Message Box

[Security Lock]

To view messages, do the following.

→ Message Box → → Enter Handset

Code → Select a folder → → Select a message

Set Folder Security

[Security Lock]

 Set to require Handset Code entry to view messages in the selected folder. However, folder security cannot be set to *General* folder.

Message Box Window Select a folder → 🔛 →
Security Lock → ■ → Enter Handset Code →
Lock → ■

Edit a Folder Name

[Rename Folder]

Protect Messages [Protect/Select Multi/Protect All]

■Protecting One Message

Message List Window Select a message → → Protect → ■ → One → ■ → Protect → ■

■Protecting Multiple Messages

Message List Window → Protect → ■ → Select

Multi → ■ → Protect → ■ → Select

■Protecting All Messages

messages⇒ ■ ⇒ 🖀

Message List Window $Protect \rightarrow All \rightarrow Protect \rightarrow (twice)$

Messaging

Delete Messages [Delete/Select Multi/All in Folder/ Delete All]

■Deleting One Message

Message List Window Select a message → ✓ → Delete → ■ → One → ■ → YES → ■

■Deleting Multiple Messages

Message List Window \longrightarrow \longrightarrow Delete \longrightarrow \longrightarrow Select Multi \longrightarrow \longrightarrow Select messages \longrightarrow \longrightarrow \longrightarrow YES \longrightarrow \longrightarrow

■Deleting All Messages in a Folder

Message Box Window \Rightarrow \Rightarrow Delete \Rightarrow \Rightarrow All in Folder \Rightarrow \Rightarrow Enter Handset Code \Rightarrow YES \Rightarrow

■Deleting All Received/Sent Messages

Message Box Window → Delete → → All →

Enter Handset Code → YES → ■

Using Messages

Forward Messages

[Forward Mail]

 When forwarding an S! Mail, the subject to which Fw: is prefixed is automatically inserted in the subject field.

Message List Window Select a message → 💌 → **Divert** → **■** → Enter an address → 🖀

• For details on how to enter addresses, see page 4-4.

Call Sender/Recipient

[Call Sender/Call Address]

Message List Window Select a message → ✓ Call Sender or Call Address → ✓

Check Delivery Report

[Check Delivery Report]

Use Links

[Call/Create Message/Save Sender/ Start Navi Appli/Access URL]

Message List Window Open a message that has a link > Select a link > •

• Available links are shown in blue.

■Calling a Phone Number

Voice Call ⇒ ■ →

■Making a Video Call to a Phone Number

Voice $Call \Rightarrow \blacksquare \Rightarrow \forall \forall ideo \ Call \Rightarrow \blacksquare$

■Making an S! Circle Talk Call to a Phone Number

■Sending a Message to a Phone Number/ E-mail Address

Create Mail → ■ → *Create* → ■ → Create Message Window opens

- For how to send messages, see pages 4-4 and 4-6.
- Saving a Phone Number/E-mail Address to Phone Book

Save Sender ⇒ ■ → Add New or Add → ■

→ Phone Book Entry Window opens

- See "Creating New Entries" (page 2-17) for entering other items.
- ■Starting Navi Appli from Location Information

 $Navi Appli \Rightarrow \blacksquare \Rightarrow Launch \Rightarrow \blacksquare$

■Saving Location Information to My Locations

To Locations ⇒ ■

 See "Save Location Information to My Locations" (page 9-31) for following operations.

■Accessing the Internet

By Yahoo! Keitai or By PC Browser ⇒ ■

Save Attached Files

[Save Attachments]

Message List Window Open a message that has an attachment Select a file Save Save Select a file Memory or Memory Card Select a folder

- Some files cannot be saved depending on the file type.
- To open/play an attached file, select a file and select View or Play. Some files may not be shown/played properly on handset.
- When a received message has more than 20 attached files, all files after the 20th file cannot be opened/played.

Edit and Send Unsent Messages [Edit Unsent Messages]

ullet Press $\ensuremath{\ensuremath{\bowtie}}$ (OK) after editing the address.

Change Order of Messages

[Sort by]

Message List Window \longrightarrow Sort by \longrightarrow Select a criterion \longrightarrow

Copy Text

[Text Copy]

Message List Window Open a message → → Text

Copy → → Move cursor to one end of the

text range to copy → → Specify the range →

Move SMS Messages to USIM Card or Handset

[Move]

Message List Window Open a message → → Move → → To Folder, To Phone or To USIM → ■

Check Message Details

[View Details]

Message List Window Open a message → View → View Details → ■

Move Messages to a Different Folder [Move Folder]

■Moving One Message

Message List Window | Select a message → ✓ → Move Folder → ■ → One → ■ → Select a destination folder → ■

■Moving Multiple Messages

Message List Window → Move Folder → ■

→ Select Multi → ■ → Select messages → ■ → Select a destination folder → ■

■Moving All Messages in a Folder

Message List Window → Move Folder → ■


All → ■ Select a destination folder → ■

Internet ······5-
About the Internet · · · · · 5-
Yahoo! Keitai ······5-
Accessing Yahoo! Keitai······5-
PC Site Browser ····· 5-
Accessing PC Sites · · · · · 5
Web Page Operations · · · · · 5-
Bookmarks/Screen Memo · · · · · 5-
Bookmarks······5-
Screen Memo·····5-
Advanced Features · · · · · 5-

5

About the Internet

Access the Mobile Internet via Yahoo! Keitai (SoftBank's mobile portal site). Also browse the Internet using PC Site Browser.

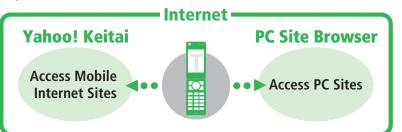

About Security

Handset uses SSL/TLS (a protocol for sending encrypted data) to protect against dangers on the Internet such as eavesdropping, tampering and spoofing. Root certificates necessary for SSL/TLS are saved on handset.

- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of SSL/TLS usage.
- SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd. and Secom Trust Systems Co., Ltd. cannot be held liable for any damages associated with the use of SSL/TLS.
- In a 3G HighSpeed area, you can receive at a maximum speed of 3.6 Mbps and send at a maximum speed of 384 kbps. Note that downloading large files may result in high connection fees.

More Features



Security Settings



- Send/Block Manufacture Number
- Configure Send Referer Setting
- Enable/Disable Cookies
- Configure Script Settings
- Check Root Certificates
- Set Authentication
- Set SSL Communication

Yahoo! Keitai

Accessing Yahoo! Keitai

Press 🛂

• To disconnect during communication, press [32] (Cancel).



web rage

- 2 Select an item ⇒ ■
- 3 To stop viewing the web page, press

 202750€ / POREN → YES → ■

Accessing Web Pages from History

Press ■ ⇒ Yahoo! Keitai ⇒ ■ ⇒
History ⇒ ■



History Menu

2 Select a title ⇒ ■

Accessing Web Pages by Entering URLs

Press ■ → Yahoo! Keitai → ■ → Enter
URL → ■



URL Window

Select Direct Entry → ■ →Enter a URL → ■ (twice)

More Features



Connecting/Browsing

(page 5-7)



Universal Settings for Yahoo! Keitai and PC Site Browser

(page 13-20)

- Clear Cache
- Delete All Cookies
- · Clear Authentication Info
- Return Browser Settings, Bookmarks, and Screen Memo to Default
- Restore Settings and Stored Information to Default

Yahoo! Keitai Settings

(page 13-20)

Set Storage Location of Downloaded Contents

Accessing PC Sites





PC Browser Menu

- 2 Select *Homepage* \Rightarrow \Rightarrow *Always Ask* or Ask Once Only⇒ ■
 - If you select Ask Once Only, the confirmation window about display and connection fees will not appear from the next time



Web Page

Accessing Web Pages from History

From PC Browser Menu, select History \Rightarrow



History Menu

2 Select a title $\Rightarrow \blacksquare \Rightarrow Always \ Ask \ or$ Ask Once Only⇒ ■

Accessing Web Pages by Entering URLs

From PC Browser Menu, select Enter $URL \Rightarrow \boxed{\blacksquare}$



- 2 Select *Direct Entry*

 Enter a URL \Rightarrow (twice) \Rightarrow Always Ask or Ask Once Only⇒ ■
- Some websites may not be shown correctly or it may take time to open depending on the site.

More Features



Connecting/Browsing

page 5-7)

PC Site Browser

page 5-7)



Universal Settings for Yahoo! Keitai and PC Site Browser

page 13-20)

- Clear Cache
- Delete All Cookies
- Clear Authentication Info
- · Return Browser Settings, Bookmarks, and Screen Memo to Default
- Restore Settings and Stored Information to Default

PC Site Browser Settings

(page 13-20)

Do Not Show Alert When Switching Browsers

Web Page Operations

Scrolling Pages

When the full page does not fit on browser, a scroll bar appears on bottom or right side of browser. Use 1/2 browser. Use 1/2 browser.

Moving Cursor


To select items, use 🜓/\cdots to move cursor.

Going to Previous Page/Next Page

Websites you have retrieved are temporarily stored. Press ᠍ (Back) to return to the previous page. Press ☑ and select *Forward* to go to the next page.

Text Entry & Item Selection

When there are entry fields and selectable items on the screen, operate as follows.

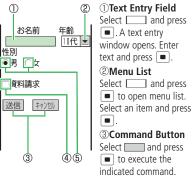

(4)Checkbox

Select
☐ and press
☐. The checkbox changes to
☐, indicating that the item is selected.

®Radio Button

Select one from a range of items. Select \bigcirc and press \blacksquare . The radio button changes to \bigcirc , indicating that the item is selected.

• The above screenshot is an example image.

More Features



Using Web Pages

(page 5-7)



Web Page Settings



- Change Font Size
- Change Scroll Unit
- Change Text Encoding Type
- Adjust Sound Playback Volume
- Do Not Download Images and Melodies from Web Pages
- Set Security Lock

If you bookmark frequently accessed pages, you will be able to access them quickly and easily.

Saving a Bookmark

- **1** Open a page⇒ 🖙 *⇒Bookmarks* → 🔳
- **2** Select *Save* ⇒
 - If you are not editing the title or URL, press
 (Save).
- 3 Press (Edit) ⇒Select the title field ⇒ Edit the title ⇒ ■

New Entry 『Yahoo!ク"ルメ 能欠 Whttp://gourme

- 4 Press (OK) →
 - Select a folder when adding the bookmark to one of folders you created.

Using Bookmarks

- Press ■⇒Yahoo! Keitai⇒■⇒

 Bookmarks⇒■
 - To access a web page from a PC site bookmark:

Press Yahoo! Keitai



Bookmarks List Menu

2 Select a title ⇒ ■

Screen Memo

If you save frequently accessed information (pages) to Screen Memo, the information can be viewed without accessing the Internet later.

Saving Pages

- Open a page ⇒ ¬Screen Memo
 → □
- 2 Select Save→ → Enter a title→ ■
- Some pages may not be saved because of copyright restrictions, etc.
- If you save a page with the same URL as a page already saved in Screen Memo, it is saved as a different page.

Viewing Saved Pages

- Press ⇒ Yahoo! Keitai ⇒ ⇒
 Screen Memo ⇒
 - To view saved pages of PC sites: Press • Yahoo! Keitai • • • Screen Memo • •



Screen Memo List Menu

2 Select a title ⇒ ■

More Features



Bookmarks and Screen Memo

(page 5-9)



Advanced Features

Internet

From History Menu page 5-3, 5-4

URL Window page 5-3, 5-4

Web Page page 5-3, 5-4

Connecting/Browsing

Delete Records from History [Delete/Select Multi/Delete All]

■Deleting One Record

History Menu Select a record \longrightarrow \longrightarrow $Delete \rightarrow$ \longrightarrow $One \rightarrow \bigcirc$ \longrightarrow $YES \rightarrow \bigcirc$

■Deleting Multiple Records

History Menu → Delete → Select Multi
→ Select records → → → YES → ■

■Deleting All Records

History Menu Delete All Delete

Enter Handset Code YES

Use Once Entered URLs

[URL History]

URL Window URL History → ■ ⇒ Select a record → ■ (twice)

Switch Browsers

Web Page

Change View

Current

Page or Linked Page

Always Ask or

Ask Once Only

■

 If you select Ask Once Only, the confirmation window will not appear from the next time.

PC Site Browser

From Web Page page 5-4

Switch Screens

[PC Screen/Small Screen]

Web Page \longrightarrow **Tool** \Longrightarrow **PC Screen** or **Small Screen** \Longrightarrow

Enlarge/Reduce a Page

[Zoom]

Web Page

→ Tool →

→ Zoom →

→

Select a magnification/shrinkage percentage →

View Pages in Landscape or Portrait [Landscape/Portrait]

Web Page \longrightarrow **Tool** \Longrightarrow **Landscape** or **Portrait** \Longrightarrow

Using Web Pages

Refresh

[Reload Page]

Web Page → Reload Page → ■

Copy Text

[Text Copy]

Web Page

→ Text Copy → → Move cursor to one end of the text range to copy → → Specify the range → ■

Only characters and pictographs can be copied.

Send a URL Link via Mail

[Send URL]

Web Page \longrightarrow **Tool** \Longrightarrow **Send URL** \Longrightarrow

Search Text in Web Pages

[Page Search]

Use Files

[File Playback/Save File/File Details]

Open a page that has a file → → Saving

Mode → → → Select a file → ■

■Playing/Opening a File

Play/View ⇒ ■

• Some files may not be played/shown properly on handset.

■Saving a File

Save → Phone Memory or Memory

Card → Select a folder → Select a folder

- Some files may not be saved because of copyright restrictions, etc.
- **■**File Properties

File Details ⇒ ■

Use Files from Links in Web Pages [File Playback/Save File/File Details/ Set Ringtone/Set Wallpaper]

Open a page that has a file ⇒Select a link ⇒ ■

■Playing/Opening a File

Play/View ⇒ ■

• Some files may not be played/shown properly on handset

■Saving a File

Save⇒ ■

- See page 4-19 for how to save files.
- Some files may not be saved because of copyright restrictions, etc.

■File Properties

File Details ⇒ ■

■Saving and Setting a File as Ringtone

Set Ringtone → Select a type of incoming event → (twice)

■Saving and Setting a File as Wallpaper

Set Wallpaper → Select a folder → ■

Use Text in Web Pages [Use Phone Number/E-mail Address/URL]

- \bullet Only underlined items are available.
- Making a Call/Adding to Phone Book
 Web Page Select a link → □ → Call or To

Phone Book⇒ ■

■Sending a Message/Adding to Phone Book

Web Page Select a link → ■ → As Mail or To

Phone Book → ■

■Accessing a Website

Web Page | Select a link →

Save a Page to Event

[To Event]

Save a Page to My Locations

[To Locations]

Web Page
→ Tool → ■ → To Locations →

Save the location information (page 9-31)

View Page Properties

[Page Details]

Check Server Certificate for a Page [Session Info.]

Web Page

→ Tool →

→ Details →

Session Info. →

□

Jump to Top or End of a Page

[Jump]

Web Page \longrightarrow $Tool \longrightarrow$ \longrightarrow $Jump \longrightarrow$ \longrightarrow To

Search for a Page by Keyword [Web Search]

Web Page

Tool

Web Search

Enter a keyword

(twice)

View a Frame in Whole Screen

[Frame In]

Web Page Select a frame $\Rightarrow Tool \Rightarrow To$

■Returning to All-Frames Screen

 $\neg Tool \Rightarrow \blacksquare \Rightarrow Frame\ Out \Rightarrow \blacksquare$

Bookmarks and Screen Memo

From Bookmarks List Menu page 5-6
Screen Memo List Menu page 5-6

Delete Bookmarks/Saved Pages [Delete/Select Multi/Delete All]

■Deleting One Entry

Bookmarks List Menu / Screen Memo List Menu | Select a title $\Rightarrow \checkmark \Rightarrow Delete \Rightarrow \Rightarrow One \Rightarrow \checkmark YES$

■Deleting Multiple Entries

Bookmarks List Menu / Screen Memo List Menu | > > Delete > | - > Select Multi > | - > > Select titles > | - > | > > | > > > |

■Deleting All Entries

Bookmarks List Menu / Screen Memo List Menu

→ Delete → → All → ■ → Enter Handset Code

→ YES → ■

Change Titles

[Edit Title]

■Changing a Bookmark Title

Bookmarks List Menu Select a bookmark → ₩ → Edit → ■ → Select the title field → ■ → Edit the title → ■ → 🗟

■Changing Title of a Saved Page

Screen Memo List Menu Select a saved page → → → Rename → ■ → Edit the title → ■

Create a Folder to Organize Bookmarks [Create Folder]

Bookmarks List Menu

→ Create Folder →

Enter a folder name →

■

Move Bookmarks to a Specified Folder [Move/Select Multi/Move All]

■Moving One Bookmark

Bookmarks List Menu Select a bookmark → ¬ → Move → ¬ → One → ¬ → Select a folder →

■Moving Multiple Bookmarks

Bookmarks List Menu
→ Move
→ Select

Multi → → Select bookmarks → →

Select a folder → ■

■Moving All Bookmarks

Bookmarks List Menu → Move → ■ → All → Select a folder → ■

Send a Bookmark via Mail

[As Mail]

Bookmarks List Menu Select a bookmark → ✓ → As

Mail → •

TV · · · · · · · · · · · · · · · · · · ·	6-2
About TV · · · · · · · · · · · · · · · · · ·	· · 6-2
Watching TV · · · · · · · · · · · · · · · · · ·	6-3
Channel Setup · · · · · · · · · · · · · · · · · · ·	6-3
Watching TV · · · · · · · · · · · · · · · · · ·	6-4
View Timer · · · · · · · · · · · · · · · · · · ·	6-6
Setting View Timer · · · · · · · · · · · · · · · · · · ·	6-6
Advanced Features · · · · · · · · · · · · · · · · · · ·	6-7

6

Handset supports One Seg Digital TV for cellular phones and information terminals. For more information on One Seg services, visit the Association for Promotion of Digital Broadcasting Website:

http://www.dpa.or.ip (PC)

http://www.dpa.or.jp/1seg/k/ (Mobile Site) (Japanese)

• Digital TV supports reception in Japan only. Other countries use different broadcast systems and frequencies, and so Digital TV reception is not possible outside of Japan.

One Seg

One Seg is a digital TV broadcasting service for mobile devices. It uses one segment of the terrestrial digital band to allow you to watch TV and data broadcasts you enjoy at home on your handset.



Enjoy watching TV in widescreen.

Data Broadcasts

Enjoy data broadcasts along with watching programs. You can access related information and even participate in programs.

View Timer

Use the timer to book programs you want to view. Use Program Guide to set the timer.

Precautions

- Never use TV while riding a bicycle/motorcycle, or while driving. Doing so may compromise hearing or distract attention from the road, causing risk of accident. Even while walking, pay attention to the traffic around you when using TV. Be especially careful in the vicinity of railway crossings and pedestrian crosswalks.
- TV image and audio may be affected if messages are received while you are using TV.
- SoftBank is not liable for any loss or alteration of data or settings saved by you due to accident, malfunction or repair of handset. When handset is replaced for repair or changed to a new model, captured pictures, TV links and other information saved on handset cannot be transferred
- You cannot watch TV if your handset does not have a USIM Card installed or if your contract with SoftBank expires.
- Channels allocated by channel settings are based on information as of April 2008. Whenever there is a change in the regional broadcasting channels, use Scan to update the channel settings.

Watching TV

Channel Setup

Set channels for your area.



2 Select *Manual* ⇒ ■



 To automatically configure channel settings:

Select *Scan* ⇒ ■

3 Select an area → ■ → Select a prefecture → ■



 For some prefectures, select a regional subdivision as well. If you select Hokkaido for the area, select a city.

Broadcast Signals

Image/audio quality may be poor in the following areas due to inadequate signal reception.

- Areas far away from or extremely close to the broadcast source
- Mountain areas or places beside tall buildings
- · Inside of a moving train or car, underground, in a tunnel, etc.
- Near high-tension electrical wires, neon lighting, wireless stations, railway lines, highways, etc.
- Other areas where there is a large number of signal obstructions, or areas that are cut off from the signal

About TV Antenna

TV Antenna is built in the upper section (Display side) of handset. Covering this area with your hands or closing handset may disrupt signal reception.

Battery Level

TV does not activate when battery level is , except during charging. TV will automatically turn off when battery level drops to ...

About Charging

Watch TV while charging the battery.

- Charging while watching TV may require longer charging time or result in insufficient charging.
- Placing AC Charger cord near handset when charging may affect TV image.



TV Screen

- TV starts up in full screen. Press to toggle view screens.
- 2 Select channels using keypad
 - Select channel 10 by pressing ☒---□, channel 11 by ☐---□, and channel 12 by ☐---□.

Direct channel selection is unavailable when keypad operations are used by the data broadcaster while viewing in Data Broadcast Mode

- To change channels one by one, press [] / []. To automatically search for receivable channels, press and hold [] / [].
- 3 To end TV, press 🚎 ⇒YES⇒ 🔳

- Do not remove the battery while TV is activated. Channel settings, broadcast memory, TV links, and other data may be altered or deleted
- When a station is broadcasting more than one program at the same time, select a sub program by pressing from the main program.

TV View Operations

Adjust Volume	
Toggle View Screens	DEA.
Show Channel Information	(press and hold)
Change Channels	•□/□• ^{*1}
Capture Pictures	۵
End TV	2U77/x=E *3/ POWER

- *1 Functions assigned to vary in Landscape View (page 2-2).
- *2 Moves cursor in Data Broadcast Mode.
- *3 Unavailable in Data Broadcast Mode.

Data Broadcast (Japanese)

Access a variety of program-related information from Data Broadcasts. Information appears in Data Broadcast Panel.

Press a to toggle Image Mode and Data Broadcast Mode

• (To TV) toggles to Image Mode and (ToData) toggles to Data Broadcast Mode.



Data Broadcast Mode

- In Data Broadcast Panel, use 🔁 to move cursor and scroll pages.
- Press while in Data Broadcast Mode to show a data broadcast in full screen. To return to the previous view and toggle screens, press
- Viewing Data Broadcast information requires no fees. However, accessing websites via links will incur fees.
- Data broadcasts are unavailable in Landscape View.

Image Mode Views

Press [to toggle views.

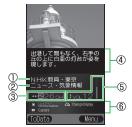


Image Mode in Portrait View



Landscape View



Full Screen View

- ① Station Name ③ Channel Number
- ② Program Title
- ⑤ Volume
- 4 Subtitle Area6 Key Guide

Using Program Guide

Electronic Program Guide (EPG) S! Appli lets you select a program and activate TV.



Program Guide appears. For following operations, see Program Guide help.

More Features



Functions for Area and Channel Settings (▶ page 6-7)

Functions While Watching TV
(▶ page 6-7)

Functions for Data Broadcasts
(▶ page 6-7)



TV View Screen Setting

(page 13-28)

(page 13-28)

• Set TV Start-up View

TV Audio Setting

Set Audio Output

Settings for Watching TV

(page 13-28)

- Channel List Name
- · Auto-off Timer

Image and Sound

(page 13-28)

- Set Brightness
- Set Image Quality
- Set Image Sharpness
- Set Economy Mode
- Set Subtitles
- · Switch Main and Sub Audio

Data Broadcasts

(page 13-29)

- Set Data Communication Confirmation Window
- · Set Secure Connection Confirmation Window
- Set Memory Access Confirmation Window
- Delete Broadcast Data
- · Set Location Information Send Setting
- Set Whether or Not to Send Manufacture Number
- Set Content Storage Location

6-5



• The first time you use the timer, a warning appears. Press \Box (twice) to select OK. If you select **NO** in the confirmation window, the warning will not appear from the next time.



Timer List Window

2 Press (Create) → Manual → 🔳



- 3 Select Channel → Channel List ■ ⇒Select a station ⇒ ■
 - Select *Direct Input* to directly input a channel number
- 4 Select Start Date → → Enter a start date and time ⇒ Select *End Date* **→** Enter an end date and time ⇒ 🔳
- 5 Select *Do not Repeat* → Select a repeat method → •
- 6 Press (OK)

When View Time is Near

Five minutes before the view timer is activated. the notification window appears*, the alarm sounds, and handset vibrates.

* The actual notification window may look different from the following.



 When handset is closed, a notification message appears on External Display.

- The view timer cannot be activated in the following situations.
 - · If handset power is turned off
 - · In Card Reader mode

End any active functions before the view

More Features



Functions for View Timer





Settings for View Timer



- Set Alarm Volume for Timer Notification
- Set Vibration for Timer Notification

From TV Screen page 6-4 Data Broadcast Mode page 6-4 Timer List Window page 6-6

Functions for Area and Channel Settings

Add a Reception Area

[Add Channel List]



Select an area → Select a prefecture →

- For some prefectures, select a regional subdivision as well. If you select Hokkaido for the area, select a city.
- **■**Configuring Channel Settings Automatically



Switch Reception Areas [Switch Channel Lists]

Functions While Watching TV

Select a Channel from Channel List [Select Station]

TV Screen \searrow **Settings** \Rightarrow **Set Channels** ⇒ Select a channel ⇒ ■

Check Keys for Operating TV

[Key Guide]

TV Screen **Y** ⇒ **Kev Guide** ⇒ ■

Capture a Picture

[Capture]



- Captured pictures are saved in Pictures of handset Data Folder.
- Except for your own personal enjoyment, any use of captured pictures that infringes upon the copyrights of copyright holders is prohibited.
- Due to copyright restrictions, you may not be able to capture pictures of certain programs.

Functions for Data Broadcasts

Save/Use TV Links

[Save/Use TV Links]

■Saving a TV Link

Data Broadcast Mode Select an item such as Save TV Links ⇒ ■

• The actual procedure depends on the program. For details, see the information within the data broadcast

6

 $\blacksquare \Rightarrow TV \Rightarrow \blacksquare \Rightarrow TV Links \Rightarrow \blacksquare \Rightarrow Select a$ TV link ⇒ ■

To view a Memo, do the following.

 $\blacksquare \Rightarrow TV \Rightarrow \blacksquare \Rightarrow TV Links \Rightarrow \blacksquare \Rightarrow Select a$ Memo ⇒ 🖾

• The following icons appear to indicate TV link types.

TV Links	Valid	Expired
Memo	<u>leay</u>	may.
Link communication contents		×
Mobile contents		
PC contents		01

 An Internet connection confirmation window may appear depending on the TV link. If you select Ask Once Only, the confirmation window will not appear from the next time.

Functions for View Timer

Use Program Guide to Set View Timer [Set Timer by Program Guide]

Timer List Window

→ Program Guide

→ S! Appli starts ⇒Select a program ⇒Set the view timer

Check/Edit/Delete Timer Information [Check/Edit/Delete Timer Information]

■Checking Timer Information

Timer List Window Select an entry ⇒ ■

■Editing Timer Information

Timer List Window Select an entry ⇒ ■ ⇒ 🗃 ⇒ Select an item → ■ → Edit the item → 🖾

■Deleting a Timer Entry

Timer List Window Select an entry ⇒ ¬Delete → $\blacksquare \Rightarrow YES \Rightarrow \blacksquare$

• When the timer is set to repeat, a confirmation window appears.

Check/Delete Timer Results [Check/Delete Timer Results]

■Checking a Timer Result

 $\blacksquare \Rightarrow TV \Rightarrow \blacksquare \Rightarrow Timer Results \Rightarrow \blacksquare \Rightarrow$ Select an entry ⇒ ■

■Deleting a Timer Result

 $\blacksquare \Rightarrow TV \Rightarrow \blacksquare \Rightarrow Timer Results \Rightarrow \blacksquare \Rightarrow$ Select an entry $\Rightarrow YES \Rightarrow$

6 Į

Camera·····	7-2
Basics·····	7-2
Taking Pictures·····	7-3
Camera Modes · · · · · · · · · · · · · · · · · · ·	
Taking a Picture · · · · · · · · · · · · · · · · · · ·	7-3
Recording Videos·····	7-5
Video Modes · · · · · · · · · · · · · · · · · · ·	
Recording a Video · · · · · · · · · · · · · · · · · · ·	
Camera Functions · · · · · · · · · · · · · · · · · · ·	
Delay Timer · · · · · · · · · · · · · · · · · · ·	
Frame Setting (Still Picture) · · · · · · · · · · · · · · · · · · ·	
Multi Shots (Still Picture) · · · · · · · · · · · · · · · · · · ·	
Picture Editing · · · · · · · · · · · · · · · · · · ·	7-8
Basic Operations for Picture Editing · · · · · · · · · · · · · · · · · · ·	
Changing Size · · · · · · · · · · · · · · · · · · ·	
Picture Effects · · · · · · · · · · · · · · · · · · ·	
Composite Pictures · · · · · · · · · · · · · · · · · · ·	7-9
Advanced Features · · · · · · · · · · · · · · · · · · ·	7-10

Basics

Use handset camera to take pictures and record videos. Handset is also equipped with a sub camera allowing you to shoot pictures/videos of yourself.

Image Sizes

Select from a variety of sizes, from handy-size pictures or videos perfect for Sha-mail or Movie Sha-mail to high resolution images, to fit your needs.

Auto Focus


When you press the shutter key, the camera automatically detects the distance to the subject and focuses.

Shooting Modes

Use the delay timer, take pictures with frames or other effects, or take continuous shots.

Picture Editing

Compose and edit images by adding stamps or text to pictures you have taken.

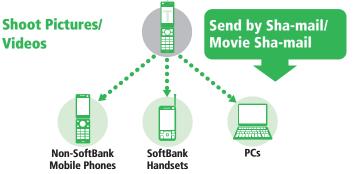

- Pictures are saved in JPEG format, and videos in MPFG-4 format
- To avoid camera shake, hold handset firmly.
- Fingerprints or grime may affect focus. Wipe the lens with a soft cloth.
- Do not block the lens with your fingers or strap when shooting pictures/videos.

Taking Pictures

Camera Modes

■ Mobile

Take pictures to set as wallpaper, etc.

■Digital

Take high-quality pictures to output to external devices such as PC.

Taking a Picture



 Press in Standby to activate Viewfinder in the last Camera mode.



Viewfinder

2 Frame subject in Display → □/ □
Camera focuses, shutter clicks and preview window appears.



Preview Window

Viewfinder reappears.

3 Press 🔳 / 🗖

- If Storage is set to *Phone Memory*, the picture is saved to *Pictures* in Data Folder, and Viewfinder reappears. If it is set to *Memory Card*, a picture taken in *Mobile* mode is saved to *Pictures*, one taken in *Digital* mode to *Digital Camera*, and
- Capturing images in low-lighting may compromise image quality. Capture images in adequate lighting or use Mobile Light.

Viewfinder Operations

Toggle Camera Modes	2 _{ABC} th
Zoom Adjustment	□ / □ *¹
Exposure Adjustment	•□/□•*1
Auto Focus Lock	TV * 2
Mobile Light On/Off	X ∾ №
Self-view On/Off	#AGE9
Icons On/Off	[]+-ut)
Key Guide On/Off	1.@ #

- *1 Functions assigned to vary in Landscape View (page 2-2).
- *2 For details of Auto Focus Lock operation, see page 7-10.

More Features

Functions for Taking Pictures

(page 7-10)

Common Functions After Shooting Pictures/Videos

(page 7-10)



Settings for Shooting Pictures/Videos

(page 13-25)

- Save Pictures/Videos Automatically
- Change Storage Location
- Set Image Quality
- Set White Balance
- Adjust Color Control
- Set Picture/Video Effects
- Adjust Flicker
- Set Shortcuts While Shooting Pictures/Videos
- Set Snortcuts \

 Set File Name

Settings for Taking Pictures

(page 13-26)

- Set Focus Mode
- Change Shutter Sound
- Add Date Stamps
- Set Guidelines
- Take a Picture for a Phone Book Entry

Recording Videos

Video Modes

■Video

Record long videos.

■Video Mail

Shoot videos to send as attachments

■Short Video

Shoot MPEG-4 videos and send to MPEG-4 compatible SoftBank handsets (PDC).

Recording a Video

Recorded videos are automatically saved to the Videos folder in handset or memory card.







Video Mail or Short Video ⇒ •

• Press and hold in Standby to activate Video Viewfinder in the last Video mode



Video Viewfinder

Prame subject in Display → 1/10 Start tone sounds, and recording begins.



• In Video or Video Mail mode, press (Pause) to pause, then (Record) to resume recording.

3 Press -/o

End tone sounds, and the first frame of the recording appears.



Preview Window

 To delete a video recorded in Video Mail or Short Video mode:

Press ⊅JP/XE → YES → ■

Videos recorded in Video mode are automatically saved. To delete the recording:
 Press Delete TES



Files are saved in the location specified in **Storage** and Video Viewfinder reappears.

Video Viewfinder Operations

Toggle Video Modes	3 DEF &
Zoom Adjustment	<u> </u>
Exposure Adjustment	•□/□•*
Mobile Light On/Off	X ** #8
Self-view On/Off	#Anales
Icons On/Off	□+·∞⊅
Key Guide On/Off	1.@ あ

^{*} Functions assigned to • vary in Landscape View (page 2-2).

More Features



Common Functions After Shooting Pictures/Videos

(page 7-10)



Settings for Shooting Pictures/Videos

(page 13-25)

- Save Pictures/Videos Automatically
- Change Storage Location
- Set Image Quality
- Set White Balance
- Adjust Color Control
- Set Picture/Video Effects
- Adjust Flicker
- Set Shortcuts While Shooting Pictures/Videos
- Set File Name

Settings for Recording Videos

(page 13-27)

- Do Not Record Sound
- Enlarge Video Viewfinder
- Change Start/End Tone
- Set Preview On/Off
- Set Recorded Video as a Ringtone Pattern

Camera Functions

Delay Timer

This feature allows you to take a picture or start recording after / is pressed and a specified time elapses.

- Activate Viewfinder/Video Viewfinder

 ⇒ □ Picture or Movie ⇒ ■
- 2 Select *Delay Timer*⇒■



- 3 Select seconds → ■
- Zoom is unavailable when the delay timer is activated.

Frame Setting (Still Picture)

- Activate Viewfinder⇒ → Add Frame
- 2 Select Phone Memory or Memory Card

 ⇒
 - To cancel the frame, select OFF.
- 3 Select *Pictures* ⇒ ■
- 4 Select a frame⇒ (twice)
- When Camera mode is set to *Digital*, you cannot use Add Frame.

Multi Shots (Still Picture)

Take nine pictures in succession.

Activate Viewfinder⇒ → Multi Shots



- 2 Select a speed⇒ ■
- When Camera mode is set to *Digital*, you cannot use Multi Shots.
- Night mode is unavailable during Multi Shots.

Picture Editing

Images that have been captured and stored in Data Folder or memory card can be edited. The following types of files can be edited: JPEG files of 2 Mbytes or less, PNG files of 1 Mbyte or less.

Images that are larger than W240 \times H400 (W400 \times H240) are reduced to W240 \times H400. A picture that is smaller than W16 \times H16 cannot be edited.

- When saving edited image, select Save as New to save as new file. If Overwrite is selected, the original file cannot be restored.
- If Data Folder is full, delete unnecessary files from Data Folder before editing a picture.

Basic Operations for Picture Editing

Press ■ → Tools → ■ → Useful Tools → ■ → Edit Picture → ■



2 Select Edit → ■ → Phone Memory or

Memory Card → ■ → Pictures or

Digital Camera → ■ → Select a picture

→ ■



Picture Editing Window

3 Press 🛂



4 Select an edit type → ■ → Perform edit operations



- 5 Press ⊚ (OK)⇒Overwrite or Save as
 - When you edit pictures in *Digital Camera* folder, the edited files cannot be saved in *Overwrite* mode.

Changing Size



- 2 Select a picture size ⇒
 - After selecting a size, use to adjust the position of the picture to clip.
 - To adjust the width or height: Press
 (Resize) → Fit to Width or Fit to Length →
 - To rotate the picture:
 Press
 (Resize) → Rotate Image → ■
- 3 Press ☑ (Cut) → Editing is completed.

Picture Effects



- 2 Select an effect ⇒
 - Use to change the effect level in Twinkle, Whitening, Change Color, Shade Off, Pinch, and Brush Up.
- Press Editing is completed.

Composite Pictures

Composite two pictures.

- In Picture Editing Window, press

 →

 Overlay

 ■
- Press Editing is completed.

More Features



Additional Picture Editing Functions
(▶ page 7-11)

Camera

From Viewfinder page 7-3
Preview Window page 7-3, 7-6
Video Viewfinder page 7-5

Functions for Taking Pictures

Quickly Focus on Nearby Subjects

[Macro]

Viewfinder → Function → Focus Mode
→ Macro → ■

Shoot Scenery without Autofocus

[Infinity]

Viewfinder → Function → Focus Mode
→ Infinity → ■

Shoot with Focus Locked

[Auto Focus Lock]

• The focus mode setting (page 13-26) must be **Auto** in order to use Auto Focus Lock.

Viewfinder Frame subject in Display→

Re-compose the image→

/o→

/o→

- The focus frame turns from white to green when focus was successful and it turns red when focus has failed.
- After focusing on a subject, press again to re-focus on the subject.

Change Size of Pictures to Take [Picture Size]

Viewfinder

→ Picture Size →

→ Select a picture size →

□

ullet For details on picture sizes, see page 14-21.

Take Night Scene Pictures

[Night]

Viewfinder $\searrow \rightarrow Night \rightarrow \bigcirc \rightarrow ON \rightarrow \bigcirc$

 Night mode is unavailable during Multi Shots (page 7-7).

Take Pictures with Beautiful Skin Tones [Brush Up Mode]

Viewfinder $\longrightarrow Brush Up \longrightarrow \bigcirc ON \longrightarrow \bigcirc$

Common Functions After Shooting Pictures/Videos

View a Picture/Video in Data Folder [View Picture/Video]

Viewfinder / Video Viewfinder ☑ → Data Folder → Select a picture or video → ■

- To use the full screen, press (Full) while viewing a picture.
- To show the key guide, press 1.@ # while playing a video.

Send a Picture/Video via Mail

[As Mail]

- If Auto Save (page 13-25) is set to OFF, a picture or video can be sent immediately after it is taken or recorded.
- Videos recorded in Video mode cannot be sent.

Preview Window

• For details on creating S! Mail, see page 4-4.

Send a Picture/Video to Another Handset [Via Infrared/Via Bluetooth®]

- If Auto Save (page 13-25) is set to OFF, a picture or video can be sent immediately after it is taken or recorded.
- Videos recorded in Video mode cannot be sent from Preview Window. Select a video from Data Folder to send it.

Preview Window Send via Via

Infrared or Via Bluetooth

 For sending by infrared communication, see page 12-2. For sending by Bluetooth[®] communication, see page 12-6.

Additional Picture Editing Functions

From Picture Editing Window page 7-8

Add Text to a Picture

[Add Text]

Picture Editing Window
→ Add Text → →

Select a font size → → Enter text → →

→ to adjust the position → →

Overwrite of Save as New →

■Changing Font Color

■Changing Border Color

Add a Frame to a Picture

[Add Frame]

Picture Editing Window → Add Frame → →

Phone Memory or Memory Card → →

Select a frame → → → to adjust the position

→ → ⊘ Overwrite or Save as New →

Add a Stamp to a Picture

[Add Stamp]

Picture Editing Window

Phone Memory or Memory Card

Select a stamp

(twice) → Overwrite or Save as New

Phone Window

When Add Stamp

Description

Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Description
Desc

• If the size of a stamp is larger than the picture, the stamp cannot be added.

Rotate a Picture

[Rotate Image]

Picture Editing Window $\longrightarrow Rotate\ Image \longrightarrow \blacksquare$ $\longrightarrow \boxtimes (\blacktriangleleft \varnothing \ |)/ \ \lor (\blacktriangle \odot \) \longrightarrow \blacksquare \longrightarrow \boxtimes \longrightarrow$ $Overwrite\ or\ Save\ as\ New \Longrightarrow \blacksquare$

Apply a Mosaic to Part of a Picture

[Mosaic]

Picture Editing Window \longrightarrow \longrightarrow Mosaic \longrightarrow \longrightarrow \longleftarrow to change the texture \longrightarrow \longrightarrow \longrightarrow \longrightarrow \longrightarrow \longrightarrow or Save as New

Mix Pictures to Create Wallpaper [Wallpaper]

 $\blacksquare \Rightarrow Tools \Rightarrow \blacksquare \Rightarrow Useful\ Tools \Rightarrow \blacksquare \Rightarrow$ *Edit Picture* → **Wallpaper** → Select [1]⇒ Phone Memory or Memory Card → Select a picture → to compose the image → Select [2] to [4] and repeat the operations → 🗃 → Phone Memory or Memory Card⇒ ■

• To unset a picture, press [x] (Delete).

Brighten Dark Areas of a Picture [Change Bright]

 $\blacksquare \Rightarrow Tools \Rightarrow \blacksquare \Rightarrow Useful\ Tools \Rightarrow \blacksquare \Rightarrow$ Edit Picture ⇒ ■ ⇒ Change Bright ⇒ ■ ⇒ Phone Memory or Memory Card⇒ = ⇒ Select a picture → • to adjust the brightness⇒ • Overwrite or Save as New ⇒ 🔳

• A picture cannot be saved if its brightness is set to 0 %.


Playing Music and Videos · · · · · · · · · · · · · · · · · · ·	•••••	⋯8-2
About Music/Video Playback · · · · · · · · · · · · · · · · · · ·		· · 8-2
Transferring Files · · · · · · · · · · · · · · · · · · ·		· · 8-3
Playing Music·····		· · 8-4
External Playback Window		· · 8-5
Playing Videos · · · · · · · · · · · · · · · · · · ·		· · 8-5
Playlists · · · · · · · · · · · · · · · · · ·		· · 8-7
Using Playlists · · · · · · · · · · · · · · · · · ·		
S! Appli		8-8
Using S! Appli · · · · · · · · · · · · · · · · · · ·		8-8
Downloading S! Appli · · · · · · · · · · · · · · · · · · ·		8-8
Starting S! Appli · · · · · · · · · · · · · · · · · · ·		8-8
Advanced Features · · · · · · · · · · · · · · · · · · ·		8-10

Playing Music and Videos

About Music/Video Playback

Music and videos stored on handset are played and managed with Media Player.

- Access Web pages to download music/video files.
- For a list of compatible file types, see page 14-21.
- Use Earphone-Microphone (not included) with a compatible Bluetooth® device for wireless connection.

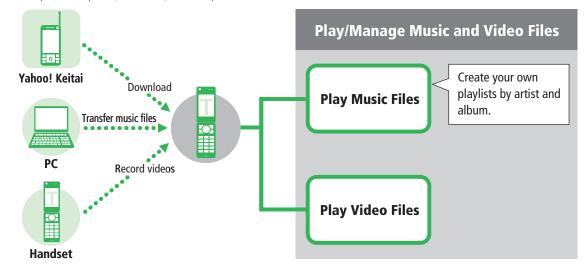

• Media Player cannot be used when battery power is low. Charge the battery to use Media Player.

Transferring Files

Download music and video files from Yahoo! Keitai, etc.

- Alternatively, connect handset to a PC using USB cable (not included) to transfer files. For details on file transfer, see page 12-8.
- 🚺 Press 🔳 ⇒Media Player⇒ 🔳



- 2 Select Audio or Videos⇒■
- - Follow the onscreen instructions.

Streaming

Access Web pages for streaming music/video files.

- Connection fees apply even if playback is paused as handset remains connected.
- 🚺 Press 🔳 ⇒Media Player⇒ 🔳
- 2 Select Streaming → → Enter URL →
 → Enter a URL → ■

Stream via Bookmarks

Access the bookmarked Web pages for streaming.

- 1 Press *Media Player* ■
- 2 Select Streaming ⇒ ⇒ Bookmarks
- 3 Select a bookmark⇒ ■

Stream via History

- 1 Press *Media Player*
- 2 Select Streaming \Rightarrow \blacksquare \Rightarrow Recent \Rightarrow \blacksquare
- 3 Select a title⇒ ■

Stream via Links

Stream content by selecting a link.

- Select a link in S! Mail/SMS → → By

 Yahoo! Keitai or By PC Browser →
 - To stream from a link on a Web page: Select a link
 - Operations may vary depending on the website.

Playing Music





Audio Menu Window

2 Select All Music⇒■




All Music List Window


- Select *Disc Search* to show all music files by artist and album.
- Select Artist, Album or Folder to show music files by artist, album or folder, respectively.

- 3 Select a music file⇒
 - If the file contains cover art, the artwork appears. If the file contains more than one cover, press to toggle covers during playback.
 - To end Media Player, press .
 - Playback Window appears on External Display when handset is closed during playback.

Music Playback Window

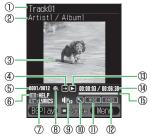

Music Playback Window

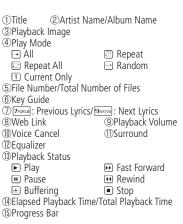

Operations in Playback Window

Return to the Beginning of a File/ Skip to Previous File	¥ ~o ½ / ■□
Skip to Next File	##A/68279 /
Fast Forward	Press and hold
Rewind	Press and hold
Adjust Volume	•
Key Guide	1 .@ #

External Playback Window

Playback Window appears on External Display when handset is closed during playback.

Activating External Playback Window

- Close handset while using Media Player
- When battery level is low, External Playback Window won't launch.

External Playback Window



- ① Play mode
- ② Playback status
- ③ Title, artist name and album name run in a ticker from right to left.

Playing Videos





Video Menu Window


2 Select Videos → ■ → Phone Memory or Memory Card → ■



Video List Window

3 Select a video file⇒ ■

Video Playback Window

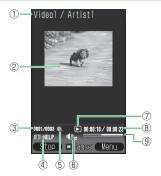

Video Playback Window

- ①File Name/Artist Name
- ②Video
- ③File Number/Total Number of Files
- 4 Key Guide
- ⑤Web Link
- ⑥Playback Volume
- ⑦Playback Status
 - ▶ Plav

- Fast Forward Rewind
- Pause Buffering
- Stop
- ® Elapsed Playback Time/Total Playback Time

Operations in Playback Window

Skip to Previous File	X 16 /
Skip to Next File	#AGE9/
Fast Forward	Press and hold while playing
Rewind	Press and hold while playing
Adjust Volume	•
Key Guide	1 ·@ #

More Features



Functions for Music/Video Playback (page 8-10)

Playback Features (Music)

page 8-10)

Playback Features (Video)

(page 8-10)

Functions for Music/Video Files (page 8-10)



Settings for Playing Music

(page 13-31)

- Set Audio Output
- Set Wallpaper During Playback

Playlists

Using Playlists

Adding Songs to a Playlist

- Press → Media Player → → Audio
 → → Playlist → ■
- Press ¬New Playlist → Phone
 Memory or Memory Card → ■
- 3 Enter a playlist name ⇒ → YES



Playlist Creation Window

- 4 Select All Music⇒
 - To select music files by artist or by album: Select Artist or Album → Select an artist or album → ■

- 5 Select a music file⇒
 - To select other files, repeat this step.



6 Press 🖀 (Create)

Playing a Playlist

Press ■ → Media Player → ■ → Audio
→ ■ → Playlist → ■



Playlist Window

2 Select a playlist ⇒ 🛭 (Play)

Changing a Playlist Name

- Press → Media Player → → Audio
 → → Playlist → ■
- 2 Select a playlist⇒ 🗹 ⇒ Rename ⇒ 🔳
- 3 Edit the playlist name ⇒ 🔳

More Features



Functions for Playlists


(page 8-11)

Using S! Appli

Download S! Appli from S! Appli sites on the Internet. The same connection fees apply for downloads as Internet connection fees.

- For details, contact SoftBank General Information (page 14-48).
- You can download and use only S! Appli that are specially designed for SoftBank handsets.

Downloading S! Appli

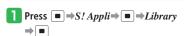



S! Appli Library

- 2 Select More S! Appli⇒ → YES →

 Select an S! Appli→ Download

 → ■
- 3 Select *Phone Memory* or *Memory Card*⇒ ■

Downloading begins.

- A confirmation window appears when the download is completed.
- If battery level is low, the application may not be completely downloaded.
- If you replace USÍM Card, downloaded applications will no longer be available.

Starting S! Appli

- - To switch to memory card Library, press (52).
- 2 Select an S! Appli⇒ ■
- When you use a Network S! Appli, a connection fee is charged each time the application connects to the network.
- When using a Network S! Appli while Access under Security is set to Blanket, handset automatically connects to the network without alert.

Pausing/Resuming/Ending S! Appli

- 📘 While an S! Appli is running, press 🖼
- **2** Select *Pause, Resume* or *End*⇒■

Resuming/Ending Paused S! Appli

- 2 Select Resume or Exit⇒■

More Features



S! Appli

(page 8-12)



Operational Settings

(page 13-32)

- Change Sound Effect Volume
- Set Backlight
- · Set Flashing of Backlight
- Set Vibration
- Set Priority While Running S! Appli

Other Settings

(page 13-32)

- Set Confirmation Window for Making Calls or Network Connection
- Update S! Appli Information on Memory Card
- View S! Appli License Information
- Check S! Appli Root Certificates

Media Player/S! Appli

Advanced Features

Media Player

Functions for Music/Video Playback





Playback Features (Music)



Repeat

[Repeat Play]

Music Playback Window While a file is playing/
paused → Play Mode → Repeat or
Repeat All →

Change Sound Quality [Surround/Equalizer/Voice Cancel]

Music Playback Window While a file is playing/
paused ⇒ Surround, Equalizer or Voice
Cancel → Select a sound effect, ON or
OFF → ■

Run Media Player in Background [Multitask]

Playback Features (Video)

Window Size

[Normal Screen/Full Screen]

Video Playback Window While a file is playing/paused → Normal Screen or Full Screen

Functions for Music/Video Files

Sort Music/Video Files

[Sort by]

■Music Files

All Music List Window Select a file → y → Sort by → Select a criterion → ■

■Video Files

Video List Window Select a file → w → Change
View → ■ → Sort by → ■ → Select a criterion
→ ■

Send Music/Video Files to Another Handset [Send File]

■ Data Folder ■ Ring Song Tone,

Music or Videos ■ Select a music or

video file ■ Send ■ Select a

transmission method ■

 For sending by infrared communication, see page 12-2. For sending by Bluetooth[®] communication, see page 12-6.

View Music/Video File Properties

[Details]

All Music List Window / Video List Window Select a file

→ Details → ■

Functions for Playlists

From Music Playback Window page 8-4
Playlist Window page 8-7

Add a Song Being Played to a Playlist [To Playlist]

Music Playback Window While a file is playing/paused > To Playlist > Select a playlist >

Add a Song Being Played to My Library [To My Library]

Music Playback Window While a file is playing/ paused→Press and hold ♣

Add Songs to a Playlist

[Add Tracks]

Playlist Window Select a playlist

Tracks

All Music

Select a music file

 To select music files by artist or album, select *Artist* or *Album* and select an artist or album, respectively.

Change Playing Order of a Playlist [Change Order]

Playlist Window Select a playlist → Select a file → Select a position → ■

Delete Songs from a Playlist [Remove Tracks]

- To delete multiple music files, select Select Multi, select files you want to delete, and press
- If you delete all files on a playlist, the playlist will be deleted, too.

Copy a Playlist

[Copy Playlist]

Playlist Window Select a playlist → Copy → Copy → Phone Memory or Memory Card →

Delete a Playlist

[Delete Playlist]

Playlist Window Select a playlist → → Delete →

 $\blacksquare \Rightarrow YES \Rightarrow \blacksquare$

8

S! Appli

From S! Appli Library page 8-8

Set an S! Appli as Screensaver [S! Appli Screensaver Settings]

■ ⇒S! Appli ⇒ ■ ⇒ Settings ⇒ ■ ⇒
Screensaver ⇒ ■

■Selecting an S! Appli

Screensavers → ■ ⇒ Select an S! Appli → ■ ⇒ YES → ■

■Setting S! Appli Start Time

S! Appli starts → ■ ⇒Enter a time before

- Even if there is an incoming call, Answering Machine will not operate when an S! Appli is set as Screensaver or when Voice Call of Calls&Alarms (page 13-32) is set to Continue Apps.
- Some Screensaver S! Appli may pause when the time set for Power Saving (page 13-5) is reached depending on the application.
- Some S! Appli cannot be set as Screensaver depending on the application.

Move S! Appli

[Move/Select Multi/Move All]

■Moving One Application

S! Appli Library Select an application $\Rightarrow Move$ $\Rightarrow One \Rightarrow \Rightarrow YES \Rightarrow \Box$

■Moving Multiple Applications

■Moving All Applications

S! Appli Library $\longrightarrow Move \longrightarrow \longrightarrow All \longrightarrow \longrightarrow$ Enter Handset Code $\longrightarrow YES \longrightarrow \bigcirc$

- Screensaver settings will be canceled if an S! Appli set as Screensaver is moved to memory card.
- Some preinstalled S! Appli cannot be moved depending on the application. Some S! Appli cannot be moved to memory card depending on the application.
- If there is the same S! Appli on handset and memory card, the S! Appli will be overwritten.

Delete S! Appli

[Delete/Select Multi/Delete All]

■Deleting One Application

S! Appli Library Select an application → ₩ → **Delete** → **One** → **PES** →

■Deleting Multiple Applications

SI Appli Library **Delete* **Select Multi

Select applications **Select Multi

YES

To applications **Select Multi

The select applications **Select Multi

The select applications **Select Multi

The select Mul

■Deleting All Applications

S! Appli Library \longrightarrow **Delete** \longrightarrow **All** \longrightarrow Enter Handset Code \longrightarrow **YES** \longrightarrow

 If a preinstalled S! Appli is deleted, Reset All does not restore the application.

View S! Appli Properties

[Details]

S! Appli Library Select an S! Appli → \(\nu\) → Details

Tools · · · · · · · · · · · · · · · · · · ·	• • • 9-2
Tools · · · · · · · · · · · · · · · · · · ·	· · · 9-2
Calendar/Tasks · · · · · · · · · · · · · · · · · ·	• • • 9-4
Saving Events	· · · 9-4
Time Table · · · · · · · · · · · · · · · · · · ·	• • • 9-7
Creating a Time Table Notepad Using Notepad Voice Recorder Osaifu-Keitai®	· · · 9-7
Notepad · · · · · · · · · · · · · · · · · · ·	••• 9-8
Using Notepad · · · · · · · · · · · · · · · · · · ·	9-8
Voice Recorder	9-9
Usairu-Keitai	9-10
About Osaifu-Keitai® · · · · · · · · · · · · · · · · · · ·	9-10
Using Osaifu-Keitai® · · · · · · · · · · · · · · · · · · ·	. 9-10
IC Card Lock	9-12
Remote Lock	9-12
Using S! GPS Navi	0 14
Idokoro Mail·····	016
Heing Idokoro Mail	0 16
Using Idokoro Mail	9-10
Using Alarms · · · · · · · · · · · · · · · · · · ·	9-18
World Clack · · · · · · · · · · · · · · · · · · ·	9-19
Calculator/Dictionary Using Calculator	9-20
Using Calculator	9-20
Using Dictionaries · · · · · · · · · · · · · · · · · · ·	9-20
Kitchen Timer	9-21
Measuring Time · · · · · · · · · · · · · · · · · · ·	9-21
Measuring Time S! Quick News Checking for Information Updates S! Information Channel	9-22
Checking for Information Updates · · · · · · · · · · · · · · · · · · ·	9-22
S! Information Channel · · · · · · · · · · · · · · · · · · ·	9-23
Browsing Updated Information	9-23
Browsing Updated Information Electronic Books Using BookSurfing®/e-Book Viewer	⋯9-24
Using BookSurfing®/e-Book Viewer	9-24
Barcode Reader Scanning QR Codes Scanning QR Cod	9-25
Scanning QR Codes · · · · · · · · · · · · · · · · · · ·	9-25
Ku-man's Room (Japanese) Opening Ku-man's Room Advanced Features	9-26
Upening ku-man s koom	9-26
Advanced Features · · · · · · · · · · · · · · · · · · ·	9-27

About Tools

Information Management Tools

Manage information on handset.



Information Browsing Tools

View and check all kinds of information.

Calendar

View Calendar and save events. Use information stored in the events to make calls and create messages.

Tasks

Save tasks with time limit.
Set the alarm for deadline, or organize tasks to check based on whether they are Completed, Not Completed or Overdue.

Time Table

Create a time table and check your class schedule.

Notepad

Save notes. You can access saved notes while entering text. This is especially useful if oftenused phrases and memos are saved.

Voice Recorder

Record and play back sounds. The recordings can be sent via mail and set as ringtone.

S! Quick News

Check various pieces of information delivered at a regular interval and S! Loop items from Active Window.

S! Information Channel

Automatically download subscribed information. Use Weather Indicator that posts weather forecast in Standby.

Electronic Books

Use BookSurfing® and e-Book Viewer to view electronic books, comics, and albums.

9

Tools

Lifestyle Support Tools

These tools support everyday life.





Other Tools

Barcode Reader

Scan QR codes with the camera, and use scanned information.

Ku-man's Room (Japanese)

Visit Ku-man's Room to change his outfit or receive messages from him

Osaifu-Keitai®

Hold handset up to a reader at a cash register to pay with e-money, or use handset as a point card.

World Clock

View dates and times of cities around the world. It is also possible to show the current times of two cities (countries) in Standby.

S! GPS Navi

Uses positioning information to show your location on a map or the best route to your destination.

Calculator

Includes basic arithmetic operations, percentages, and memory. You can also calculate currency conversions.

Idokoro Mail

Sends messages to inform others when you have entered or left a specific area.

Dictionary

Three useful dictionaries, Japanese, English-Japanese and Japanese-English, and a medical dictionary (Japanese) are available on handset.

Alarms

An alarm sounds at a specified time. You can set the alarm to sound only on a specific day of the week and set the snooze function.

Kitchen Timer

Set an alarm to sound after a specific time expires.

Opening Calendar

📘 Press and hold 🗅



Calendar Window

- " and/or the start time, event title and stamp icon are shown on the date that has events.
- Press x -- se or thouse to switch to the previous or next window.
- 2 Press 🖾 to select a view format
 - Switch between Monthly View, Monthly & Event View, Weekly View, 4 Month View and All View.

Jumping to a Specified Date

- In Calendar Window, press → Jump
- 2 Enter a date⇒ ■

Saving an Event

Trom Calendar Window, select the date to save an event⇒ (Create)



- 2 Select *Title* → → Enter a title →
 - Select the start date and time field⇒

 → Date&Time or Date Only → →

 Enter a date and time →
 - Enter a time in the 24-hour system.
 - Enter only a date, when you select *Date Only*.
- 4 Select *End Date* → → Enter a date and time →
 - Enter a time in the 24-hour system.
 - If *Date Only* is selected for the start date and time, this field cannot be entered.
- 5 Select *Contents* → → Enter details of the event → ■

6 Select $Alarm \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare$



Event Alarm Setting Window

- 7 Select *Time* → →Enter a date and time → → 🗟 (OK)
 - Enter a time in the 24-hour system.
- 8 Press (OK)⇒OK⇒
 - If you select Notify Only Once when a confirmation window appears telling that the alarm will not start if the power is turned off, this window will not appear from the next time.

Alarm Time Operations

The alarm stops automatically after a set ring time, but you can also stop it manually.

- Press any key while the alarm is sounding
 - To view the event details, press (View) after stopping the alarm.

9

Checking an Event

- From Calendar Window, select the date to check⇒■
 - From All View Window, select an event and press to open Event Details Window.



Daily View Window

2 Select an event⇒ ■



Event Details Window

Deleting an Event

- From Daily View Window, select the event to delete
- 2 Press 🗹 ⇒ Delete ⇒ 🔳
- 3 Select One ⇒ ⇒YES ⇒
 - To delete all events for the day: Select *For this Day* → *YES* ■

Deleting All Previous Events

- From Calendar Window, select the next day of the event to delete
- Press ¬Delete → Before Today
 → → YES →

Saving Tasks

- Press → Tools → → Tasks → ■
- 2 Press

 → Create New →

 ■



New Task Window

- 3 Select *Title* → → Enter a title → ■
- 4 Select *Deadline* → → Enter a date and time →
 - Enter a time in the 24-hour system.
- 5 Select *Contents* ⇒ ⇒Enter details of the task ⇒ ■
- 6 Select $Alarm \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare$



Task Alarm Setting Window

- 7 Select *Time* → Denter a date and time → → (OK)
 - Enter a time in the 24-hour system.
- 8 Press
 (OK) → OK →
 - If you select Notify Only Once when a confirmation window appears telling that the alarm will not start if the power is turned off, this window will not appear from the next time.

The alarm stops automatically after a set ring time, but you can also stop it manually.

- Press any key while the alarm is sounding
 - To view the task details, press (View) after stopping the alarm.

Checking Tasks

Press $\blacksquare \Rightarrow Tools \Rightarrow \blacksquare \Rightarrow Tasks \Rightarrow \blacksquare$



Tasks Window

- To change the view format: Press $\neg Change\ View \rightarrow \square \Rightarrow Select$ a view format⇒ •
- To change the status of a task: Select a task⇒ (Status) ⇒ Select the status⇒ ■

Deleting a Task

- From Tasks Window, select the task to delete
- 2 Press $\square \rightarrow Delete \rightarrow \square \rightarrow One \rightarrow \square \rightarrow$ $YES \Rightarrow \blacksquare$

More Features



Functions for Calendar

(page 9-27)

Functions for Saving Events/Tasks page 9-27)

Functions for Saving Events

Functions for Saving Tasks

(page 9-28)

(page 9-29)

page 9-28)

Functions for Checking/Managing Events (page 9-28) Functions for Checking/Managing Tasks

Settings for Saving Events

(page 13-38)

- Change Alarm Volume
- Change Vibration
- Set an Image to Appear at Set Time
- Set a Stamp Icon
- Set Category
- Set a Phone Number/F-mail Address/URI

- Set Link Information (Message/Web Page/ Image)
- Set a Location

Settings for Calendar

page 13-39)

- Set Start-up View of Calendar
- · Change Font Color of Events
- Lock Calendar

Settings for Saving Tasks

- page 13-39) Change Alarm Volume
- Change Vibration
- Set an Image to Appear at Set Time
- Set a Stamp Icon
- Set Task Priority Set Task Status
- **Settings for Tasks**

page 13-40)

Lock Tasks

9

Tools

Time Table

Creating a Time Table

A time table from Monday to Saturday can be created.

Subjects and classrooms of up to eight periods per day, and font colors can be entered/specified.

Press ■ → Tools → ■ → Useful Tools →
■ → Time Table → ■



Time Table Window

2 Select a period $\Rightarrow v \Rightarrow Edit \Rightarrow \blacksquare$



3 Select Subject → Enter a subject

- To enter a classroom, teacher or memo:
 Select an item → Enter information
- To specify the background or font color:
 Select BG Color or Font Color ⇒
 Select a background or font color ⇒
- 4 Press 🗟 (OK)

Checking Time Table

From Time Table Window, select a period⇒■

Deleting a Class from Time Table

- From Time Table Window, select the period to delete
- Press $v \rightarrow Delete \rightarrow \blacksquare \rightarrow One \rightarrow \blacksquare \rightarrow YES \rightarrow \blacksquare$

More Features



Time Table Functions

(page 9-29)



Time Table Settings

page 13-40)

- Set Start/End Time of a Period
- Reset Time Settings to Default

Using Notepad



Notepad List Window

- 2 Select a blank notepad⇒ ■
- 3 Enter contents⇒ ■

Setting Category

- From Notepad List Window, select the notepad to set an icon for⇒ Set Category ■
- 2 Select a category
 ■

 The icon of the selected category appears.

Viewing Notepad

From Notepad List Window, select a notepad⇒■

Deleting a Notepad

- From Notepad List Window, select a notepad
- 2 Press $\longrightarrow Delete \longrightarrow \bigcirc One \longrightarrow \bigcirc \longrightarrow$

More Features



Notepad Functions

(page 9-29)

9

Voice Recorder

- Use Voice Recorder exercising common morals and manners.
- Note that recording of some concerts and shows is not allowed even for personal use.
- If handset receives a call during recording, recording ends and data is automatically saved in order to give priority to the call. If you don't want to receive calls during recording, set handset to Offline Mode.
- Press → Tools → → Useful Tools →
 → Voice Recorder → ■



Voice Recorder Window

2 Select *Record* → **(twice)**



Voice Recorder Recording Window

- Sound is recorded through the microphone.
- Press (Pause) to pause recording. To resume recording, press . To save the recording data, press (Save).
- When the remaining time available for recording is less than 10 seconds,
 REC flashes.
- 3 Press 🔳

Sounds recorded with Voice Recorder are automatically saved in the *Ring Song* • *Tone* folder.

Playing Recordings

- From Voice Recorder Window, select

 Recordings → ■
- 2 Select *Phone Memory* or *Memory*Card ⇒ ■
- - Use during playback to adjust the volume.

More Features



Voice Recorder Functions



About Osaifu-Keitai®

Osaifu-Keitai® is a service that allows you to use handset for shopping with e-money, or use it as a point card or membership card. Hold up the a mark on the back of handset to a reader/writer. Osaifu-Keitai® can be used even while handset is turned off. Note, however, that Osaifu-Keitai® cannot be used while the battery is removed.

 For more information about Ósaifu-Keitai®, contact SoftBank General Information (page 14-48).

Getting Started

■IC card

"IC card" means an IC chip built in an Osaifu-Keitai® compatible terminal.

■Lifestyle-Appli

This is an S! Appli for using Osaifu-Keitai®.

• Your handset comes with a preinstalled e-money Lifestyle-Appli called "Edy".

"Edy" is the brand name of a prepaid e-money

service managed by bitWallet, Inc.

Precautions

- The data on the IC card can be misused if your Osaifu-Keitai[®] compatible handset is lost or stolen. SoftBank assumes no responsibility for any losses suffered by you if this happens.
- Before deciding whether to use an Osaifu-Keitai[®] service, be sure to contact the service provider about the terms, conditions, and other rules governing its use.
- Connection fees may be incurred when downloading a Lifestyle-Appli or when using a Lifestyle-Appli that requires network connection
- Do not remove the stickers from the back of the battery cover or from handset in the area around the battery, and do not remove the battery cover. Doing so may make it impossible to use Osaifu-Keitai*®.
- Certain types of service and usage conditions may cause data to be stored on the IC card. The procedure for deleting such data from the IC card depends on the Lifestyle-Appli. For details, contact the Osaifu-Keitai® service provider.
- SoftBank assumes no responsibility for any loss or corruption of data or settings on the IC card due to malfunction or repair.
- Be sure to keep separate records of the security code, contact information, and other information for each service so you do not forget them.

Using Osaifu-Keitai®

Downloading Lifestyle-Appli

- Press ⇒ Data Folder ⇒ ⇒
 Lifestyle-Appli ⇒ ■
- 2 Select *Download* ⇒ ⇒ *YES* ⇒ ⇒

 Download a Lifestyle-Appli
 - Lifestyle-Appli are stored in the Lifestyle-Appli folder of Data Folder.
- Downloading may not end normally if battery level is low.
- A downloaded Lifestyle-Appli cannot be used if you replace USIM Card.

9


Subscription and Setup

- Press → Tools → → Osaifu-Keitai → ■ → Lifestyle → ■
- 2 Select the Lifestyle-Appli to subscribe and set up⇒■
 - You must subscribe to an Osaifu-Keitai[®] service (hereafter "service") and configure a number of settings.
 - The subscription method and the settings depend on the Lifestyle-Appli. Follow the onscreen instructions.

Using Osaifu-Keitai®

The e-money example below shows how to use a reader/writer to read IC card data.

- Before performing this procedure, you must subscribe to a service, configure its settings, and make a deposit in your e-money account.
- There is no need to activate Lifestyle-Appli to perform this procedure.
- Osaifu-Keitai[®] can be used even while handset is turned off. Note, however, that a Lifestyle-Appli will not activate while handset is turned off.
- Hold the a mark up to a reader/ writer

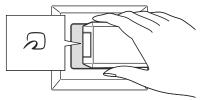

- Whenever there is difficulty reading the data, try moving handset back and forth, left and right.
- Check the reader/writer display to confirm that the read was performed

- Data may not be read if there is a metal object or other obstruction between the mark and the reader/writer.
- Osaifu-Keitai[®] cannot be used when battery level is low. Charge the battery to use Osaifu-Keitai[®].



Card Settings Window

2 Select IC Card Lock

■ ⇒Enter

Handset Code

ON or OFF

■

Remote Lock

Disable Osaifu-Keitai® remotely by calling handset from another phone (Call Lock) or by sending an e-mail with a preset subject to handset (Mail Lock).

 You must set a Lock Phone Number or Lock Password, and set Call Lock or Mail Lock to ON in advance.

Setting a Lock Phone Number

- From Card Settings Window, select

 Remote Lock **Enter Handset

 Code
- 2 Select Call Lock⇒■



3 Select Phone Numbers ⇒ ■

- - Select *Phone Number* to enter a phone number directly.
 - Select Call Log to select a phone number from Call Log.
 - Select Payphone or Withheld to remotely lock handset from a pay phone or a withheld number.
- 5 Select an entry⇒ ⇒ Select a phone number ⇒ (twice)

Setting a Lock Password

Set a password (subject) for Mail Lock.

- Trom Card Settings Window, select

 Remote Lock

 ■ Enter Handset

 Code
- 2 Select Mail Lock⇒ ■



- 3 Select Lock PW⇒ ■
- 4 Enter a lock password⇒ ■

9

Turning Call Lock/Mail Lock On

- Note that a Lock Phone Number or Lock Password must be set in advance.
- From Card Settings Window, select

 **Remote Lock* ■ Enter Handset

 Code
- 2 Select *Mail Lock* or *Call Lock*⇒■
- 3 Select $ON/OFF \Rightarrow \blacksquare \Rightarrow ON \text{ or } OFF$

Activating Remote Lock

Using Call Lock

- Place a call to handset from a preset phone number
- 2 Hang up the phone
 - The calls must go unanswered three times in a row within three minutes.

- The current incoming call count is cleared in the following cases:
 - · If a call is received from another preset phone number
 - · If a call placed to handset is answered
 - · If handset is turned off
 - If the number of incoming calls does not reach the preset number (default is 3) within three minutes
- If Call Lock is performed during a Video Call, IC Card Lock will turn on but there will be no message telling that the IC card has been locked.
- Call Lock cannot be performed during a voice call if Call Waiting is set to OFF.

Using Mail Lock

- Create a message with the preset lock password in the subject field, and send it to handset
 - Do not enter anything in other fields of the message.
 - IC Card Lock will turn on when the message is received.
- If handset is unable to receive mail for some reason, IC Card Lock will not be turned on even if you send a Mail Lock message.

Canceling Remote Lock

Set IC Card Lock to OFF.

More Features



Functions for Osaifu-Keitai®

(page 9-30)



Settings for Osaifu-Keitai®



- Set Whether Functions Start Up When Handset is Held Up to a Reader/Writer
- Check IC Card Information
- Do Not Send a Lock Engaged Notification

About S! GPS Navi

S! GPS Navi uses location information obtained from the GPS satellite and by communication with base stations.

View on the map where you are, and send your location information to compatible SoftBank handsets

The navigation application (Navi appli) is preinstalled on handset. For details, contact SoftBank General Information (page 14-48).

- When signal reception of the GPS satellite is poor, handset position is determined by base station information. However, the margin of error may vary from a few hundred meters to several kilometers in radius, depending on the base station's location/signal strength.
- When you cannot confirm the right location, move to an open-air space.
- SoftBank accepts no liability for any damages arising from use of the location information provided.
- Positioning cannot be performed by handset while Positioning Lock is in use.

Starting Navi Appli

Use Navi appli to retrieve information about your current location or check the route to your destination.

Press ■→Tools→■→S! GPS Navi



S! GPS Navi Window

2 Select *Navi Appli* ⇒ ■

Checking Your Current Position

- From S! GPS Navi Window, select *Locate*Me⇒
 - Confirmation window appears. Select Ask Once Only to always send location information without confirmation
- When the location information send setting (LocationProperty) is set to Do not Send, the current position cannot be checked. Set to Always Ask or Send.

Using Ichi Navi

Locate other people or detect the approximate position of your handset in case it is lost.

- From S! GPS Navi Window, select *Ichi*Navi⇒
 - Follow the onscreen instructions.
 - To use Ichi Navi, the person requesting location information must join the service.
 - Before receiving a request for location information, you need to sign up on Yahoo! Keitai the people you allow to request location information (people you inform of your location).
 - Ichi Navi is not effective in areas that are out of signal range.
 - You need to apply and make settings in advance so that you can search for a lost handset from a PC

9

Tools

More Features



Functions for S! GPS Navi

(page 9-31)



Settings for S! GPS Navi

(page 13-41)

- Save a Map URL
- Edit Map URL Display Name
- Edit Map URL
- Delete a Map URL
- Set Map URL
- Set Navi Appli
- Lock Positioning
- Set Location Information Send Setting

Using Idokoro Mail

Inform other people of your arrival in or departure from a specified area. Send your location information by a simple operation (Simple Notice).

- When signal reception from the GPS satellite is poor, handset position is determined by base station information. However, the margin of error may vary from a few hundred meters to several kilometers in radius, depending on the base station's location/ signal strength.
- When you cannot confirm the right location, move to an open-air space.
- SoftBank accepts no liability for any damages arising from use of the location information provided.
- Positioning cannot be performed by handset while Positioning Lock is in use.
- Connection fees apply for sending mail notifications and using positioning service.
- Idokoro Mail is unavailable while using handset abroad.

Saving People to Recipients List

Press ■ → Tools → ■ → Useful Tools →
■ → Idokoro Mail → ■ → Enter
Handset Code



Idokoro Mail Window

2 Select *Recipients List* ⇒ ■ ⇒ Select a list item ⇒ ■



Recipient Window

- 3 Select Recipient → → Select an entry from Phone Book → → Select a phone number or e-mail address → ■
- 4 Select each mail notification ⇒ ⇒

 Yes or No ⇒ □ ⇒ ≅ (OK)

Saving Locations to Areas List

- From Idokoro Mail Window, select

 Areas List ⇒
 - If Recipients List has no entry, a message appears. Save addresses to Recipients List to use Idokoro Mail
- 2 Select an area list item⇒ ■



Area Settings Window

- 3 Select *Area Name* → → Enter an area name → ■
- 4 Select Set Location ⇒ → Position ⇒

 Start positioning
 - To specify from Location Logs or My Locations:
 Select Location Logs or My Locations

Select location information →

■ To specify from Phone Book: Select **Phone Book** ■ Select a Phone Book entry that has location information ■

9

- 5 Select Launch Setting → → Select

 Date → → Date → → Enter a date

 → → Arrivals Time or Departures

 Time → → ON → → Enter a start

 time and duration → → ② (OK)
 - To specify a day of the week:
 Select Weekly → □ ⇒ Select Arrive or
 Depart for a day of the week → □ ⇒ ON
 → □ ⇒ Enter a start time and duration ⇒
 □ → ≅ (OK)
- 6 Press 🖫 (OK)

Mail Notifications

Automatically Sending Notifications

When the specified time comes, your current position is obtained using GPS and it is compared with location information of the saved area. When your departure or arrival is confirmed, a mail notification is sent. When your departure or arrival cannot be confirmed in the specified time period or positioning cannot be performed because you are out of range, a mail notification is automatically sent.

Manually Sending Notifications (Simple Notice)

Send a Simple Notice to preset recipients (Recipients must be set to **Yes** in Recipient Window).

- Side Key must be set to SimpleNotice in advance (page 2-4).
- Press and hold
 while handset is closed

More Features



Functions for Idokoro Mail

(page 9-31)



Alarm List Window

2 Select an alarm⇒ ■



Set Alarm Window

- 3 Select *Time* → → Enter a time →
 - Enter a time in the 24-hour system.

- 4 Select *Once* → → Select a repeat interval →
 - When you select *Weekly*, do the following.

 Select day(s) of the week → □ → (OK)
- 5 Select Snooze → → ON or OFF → → Enter a time between alarm tones → ■
- Press (OK)→OK→ ■
 If you select Notify Only Once when a confirmation window appears telling that the alarm will not start if the power is turned off, this window will not appear

Alarm Time Operations

from the next time.

The alarm stops automatically after a set ring time, but you can also stop it manually.

Press any key while the alarm is sounding

When Snooze is Set

If Snooze is set to *ON*, the alarm plays in specified intervals up to five additional times.

To stop Snooze and return to Standby:

Stop the alarm Stop Snooze YES

Canceling an Alarm

- From Alarm List Window, select the alarm to cancel
- Press (ON/OFF)

Deleting an Alarm

- From Alarm List Window, select the alarm to delete
- 2 Press $\forall \Rightarrow Reset \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

More Features



Alarm Functions

(> page 9-32)



Alarm Settings

(page 13-42)

- Change Alarm Volume
- Change Vibration
- Set an Image to Appear at Set Time

9

World Clock

Handset shows the time of the city set as Main City. If you set City 1 and City 2, and set **World-Digital** or **World-Analog** as Standby clock (page 2-8), the dates and times of both City 1 and City 2 are shown in Standby.

Setting World Clock

Setting City 1/City 2

Press ■ → Settings → ■ → Phone

Settings → ■ → Clock → ■ → World

Clock → ■



World Clock Setting Window

2 Select City 1 or City 2⇒ ■ → • to select a city → ■

Switching Main City

- From World Clock Setting Window, select Set as Main City ⇒ ■
- 2 Select City 1 or City 2⇒■

Viewing World Clock

In World Clock Window, move cursor (yellow line) on the map to view dates, times and time differences of major cities. The time zones of City 1 and City 2 are indicated in green and red lines, respectively.

Press ■ ⇒ Tools ⇒ ■ ⇒ Useful Tools ⇒
■ ⇒ World Clock ⇒ ■



World Clock Window

- 2 Use ••• to select a city

More Features



World Clock Functions

(page 9-32)



World Clock Settings

(page 13-42)

- Set a City by GMT Time Difference
- Set Daylight Saving Time (DST)

Calculator/Dictionary

Using Calculator





Calculator Window

Operations in Calculator Window

Enter Numbers	0++t) to 9wxy26
+	
_	
×	
÷	•
=	•
\pm (Switch $+/-$)	\
Tax	527h
C (Clear)	257/AE
. (Decimal)	OZS 1A
EXIT	POWER

• Other Options by Pressing 🗹 in Calculator Window

- Converter: Enter the currency exchange rate and then perform currency conversion calculations.
- · Clear All: Delete the input value and clear memory.
- · MS: Save the input value to memory.
- · M+: Add the input value to the value stored in memory.
- · MR: Show the value stored in memory.
- · %: Calculate a percentage.
- · 1/X: Calculate a reciprocal.
- · SQRT: Calculate a square root.
- Set Tax Rate: Set the tax rate to be calculated when you press . Enter the tax rate and press .

Using Dictionaries

Use Japanese, English-Japanese, and Japanese-English dictionaries. *Medical Book* (簡単メディカルBOOK) (Japanese) is also available.



"Jispa" of Gakken Co., Ltd. is bundled as Japanese dictionary, English-Japanese dictionary and Japanese-English dictionary.

簡単メディカルBOOK ©shogakukan





- 2 Select Japanese, English-Japanese or Japanese-English⇒ ■
- 3 Press ➡Enter a keyword⇒ ■
- 4 Select a word⇒ ■

More Features



Functions for Calculator

(page 9-32)

Kitchen Timer

Measuring Time

- Press → Tools → → Useful Tools →
 → Kitchen Timer → ■
- 2 Enter a countdown time⇒■
- 3 Press 🔳



 Press (Stop) during the count to temporarily stop the timer. To restart, press
 (Start).

When Set Time is Over

The alarm sounds and External Light flashes.

To stop the alarm, press a key from , , , to , to () ,

Checking for Information Updates

Registering Contents

Press ■ ⇒Entertainment ⇒ ■ ⇒
S! Ouick News ⇒ ■



S! Quick News Window

2 Select News List or S! Loop List⇒■





News List Window

S! Loop List Window

- 3 Select Add News or S! Loop \Rightarrow \Rightarrow YES \Rightarrow
- 4 Select contents ⇒
 - Follow the onscreen instructions to register contents.

Checking for Updates

- Select contents from News List Window or S! Loop List Window ⇒ ■
- 2 Select the item to check ⇒
 - Press to check the previous update and
 to check the next update.

More Features



Functions for S! Quick News





Active Window Settings



- Show All Information or Only Unread One
- Set Ticker Speed
- Show/Hide Images
- Restore Settings and Registered Contents of S! Quick News to Default

S! Information Channel

Browsing Updated Information

Subscribe to contents and receive automatic updates. Content updates are received during the night.

• Connection fees apply to use S! Information Channel.

Subscribing/Canceling Subscription

Access a special site to register or cancel transmission of information and select programs.

- Connection fees apply while you are connected to the Internet.
- Press ⇒ Entertainment ⇒ ⇒
 Info Channel ⇒ ■



Info Channel Window

- 2 Select $Reg./Cancel \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$
 - Follow the onscreen instructions.

Checking Content Updates

From Info Channel Window, select
What's new?

Checking from Information Prompt

When Information Prompt appears⇒

Info Channel ⇒

■

Using Weather Indicator

Weather Indicator posts the weather forecast in the current area in Standby. The indicator is updated automatically.

 A separate subscription is required to use Weather Indicator.

Checking Weather Forecast

From Info Channel Window, select

Weather



Weather Indicator Menu

- 2 Select Weather ⇒
 - You can view the weather forecast by selecting Weather Indicator and pressing
 from Active Window (page 2-9).

More Features



S! Information Channel

(page 9-33)



S! Information Channel Settings
(▶ page 13-43)

- Do Not Show Weather Indicator in Standby
- Set Notification of Weather Forecast Updates

9-23

BookSurfing® and e-Book Viewer are viewers to view electronic comic books, electronic photo albums, electronic publications (novels, etc.), and other electronic books.

You can enlarge or reduce images, scroll the window with simple operations, and use sound, vibration, and other effects to enhance your reading experience.

• Some electronic books may require a content key for viewing.

Supported File Formats

BookSurfing [®]	CCF (.CCF)
e-Book Viewer	XMDF (.ZBK, .ZBF, .ZBS)

- Titles of unsupported file formats are not displayed.
- The viewer that starts up depends upon the file format. To find out the file format, check Details of the file (page 2-31).
- e-Book Viewer may not be able to display some PC contents.

- ness *⇒Entertainment* ⇒ ■
- 2 Select BookSurfing or e-Book Viewer

 →
 - For the following operations, see BookSurfing[®] or e-Book Viewer help.

9

Tools

Barcode Reader

Scanning QR Codes

About QR Codes

Scan OR codes with handset camera, and save scanned data. Connect to Web pages, send messages or create Phone Book entries from scanned URLs or contact information



- Dirty or dark QR codes may not be scanned.
- Some OR codes may not be scanned depending on the size or version.

Scanning a QR Code

Press $\blacksquare \Rightarrow Tools \Rightarrow \blacksquare \Rightarrow Useful\ Tools \Rightarrow$ ■ ⇒Scan Data⇒ ■



Scan Data Window

2 Select Scan ⇒ ■



Scanning Window

- 3 Frame a QR code in Display→
 - Use to adjust the exposure.
 - When the QR code is made up of several data areas, select YES to scan the other data areas. When all the areas are scanned, the QR code data is shown.



Scan Results Window



Checking Saved Data

- From Scan Data Window, select Scanned Data⇒ ■
- 2 Select QR code data⇒ ■

More Features




Scanning QR Codes

(page 9-33)

Opening Ku-man's Room

- Press ⇒ エンタテイメント (Entertainment)⇒ ■ ⇒〈ーまんの部屋 (Ku-man's Room)⇒ ■
- 2 Select 趣移 (Open)⇒ ⇒YES or NO ⇒ 🔳
- You cannot open Ku-man's Room if the interface language is set to English. Set 言 語選択 (Language) to **四** (Japanese).

About Ku-man's Room

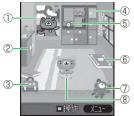

Ku-man's Room

© Dora communications

①Poster

Change posters.

②Change Clothes

Contains Ku-man's clothes.

③Treasure Chest

Contains Ku-man's treasures

(4)Closet

It is decorated with many different types of trophies.

⑤Take Pictures

Take photos of Ku-man. You and Ku-man can appear in the same photo.

6Album

Albums with pictures of Ku-man.

⑦Change!

Standby Ku-man changes his outfit by putting on a plush toy.

®Ku-man

Ku-man is a foot-loose and fancy free baby star bear. He sometimes goes off on journeys.

Playing with Ku-man

Look in Ku-man's Treasure Chest, change the outfit of Ku-man in Standby or take photos.

Example: Changing the outfit of Ku-man in Standby

In Ku-man's Room, press 🔳

Now you can operate Ku-man's Room.

2 Press ፟ (前へ (Previous))/☞ (次へ (Next)) to select \hline \hline \hline \langle (Change!) ⇒ ■

Select an outfit⇒ ■

• Ku-man in his room wears the clothes from before the change.

Checking Messages from Ku-man

Ku-man sends mail after you open his room for the first time, when he goes on trips and other times

Sometimes there are presents attached to messages from Ku-man.

- 📘 In Ku-man's Room, press 🗹 ➡<-まんメール (Ku-man Mail)⇒ ■
- 2 Select a message⇒ ■

More Features



Ku-man's Room (Japanese)

page 9-33)

Setting Ku-man for Standby (Japanese) (page 13-43)

Set Ku-man to Appear in Standby

9 Tools

Advanced Features

Information Management Tools

From Calendar Window	page 9-4
Create Event Window	page 9-4
Event Alarm Setting Window	page 9-4
Daily View Window	
Event Details Window	
New Task Window	page 9-5
Task Alarm Setting Window	page 9-5
Tasks Window	page 9-6

Functions for Calendar

Change Color of Calendar Dates [Set Holiday]

■Changing Color of a Date

Calendar Window Select a date → 💟 → Set

Holiday → ■ → Current Day → ■ → Select a

color or Deactivate → ■

■Changing Color of a Day of the Week

Galendar Window → Set Holiday → →
Select Week → ■ → Select a day of the week →
Select a color → ■ → 🗟

Functions for Saving Events/Tasks

Set Alarm Tone

[Alarm Tone]

Event Alarm Setting Window / Task Alarm Setting Window

■Setting a Preinstalled Sound

Patterns or Melodies \Rightarrow ■ \Rightarrow Select an alarm tone \Rightarrow \Rightarrow (twice) \Rightarrow $OK \Rightarrow$ \Rightarrow

■Setting a File in Data Folder/Memory Card

Phone Memory or Memory Card \Rightarrow \Rightarrow Select a file \Rightarrow \blacksquare (twice) \Rightarrow \boxtimes (twice) \Rightarrow $OK \Rightarrow$

■Setting Time Reader

Time Reading $\rightarrow \square$ (twice) $\rightarrow OK \rightarrow \square$

Set Alarm Ring Time

[Duration]

Event Alarm Setting Window / Task Alarm Setting Window

Duration ■ Denter a ring time** ■ Denter a ring time** ■ Denter Benefit (twice)**OK** ■ Denter

Notify of Events/Tasks for Today or Tomorrow at a Specified Time

[Reminder]

Calendar Window / Tasks Window \Longrightarrow Settings \Longrightarrow Reminder \Longrightarrow \Longrightarrow ON \Longrightarrow Time \Longrightarrow Enter a time \Longrightarrow \Longrightarrow

• Enter a time in the 24-hour system.

■Setting Today/Tomorrow

Today \Rightarrow Today or Tomorrow \Rightarrow \Rightarrow

■Setting a Preinstalled Alarm Tone

Set Alarm → Tone → Patterns or Melodies → Select an alarm tone → (wice)

■ Setting a File in Data Folder/Memory Card as Alarm Tone

Set Alarm \rightarrow \rightarrow Tone \rightarrow \rightarrow Phone

Memory or Memory Card \rightarrow \rightarrow Select a file \rightarrow \bigcirc (twice) \rightarrow \bigcirc (twice)

■Setting Alarm Volume

Set Alarm → ■ → Volume → ■ → Set volume level → ■ → ③ (twice)

■Setting Vibration

Set Alarm → **Vibration** → Select a vibration pattern → (twice)

■Setting Alarm Ring Time

Set Alarm → Duration → Enter a ring time → (twice)

■Setting Alarm Repeats

Once⇒ ■ ⇒Select an item ⇒ 🗃

Hide Special Events/Tasks

[Hide]

Create Event Window / New Task Window Options → Show/Hide → ■ → Hide → ■

Functions for Saving Events

Save Periodic Events

[Repeat Setting]

Create Event Window Options → ■ → Repeat for → ■ → Daily, Weekly, Monthly, Yearly or End of Month → ■ → Enter a repeat duration → ■

- If you set a start date to the last day of a month, you can set Repeat for to End of Month.
- To repeat infinitely, enter "00".
- If you set *Monthly* for the 30th or 31st, the repetition is only set for months that include that date
- If an event set to repeat daily, weekly, etc. is deleted, a message asks if you wish to cancel repeat features. Select *Do not Repeat* to delete the event for that day only.
- Canceling a single date of a periodic event may not be effective if the event is sent as vObject (page 2-33) and received by another device.

Edit a Saved Event

[Edit Event]

Daily View Window Select an event $\Rightarrow Edit \Rightarrow$ Select an item $\Rightarrow Edit$ the item $\Rightarrow Coverwrite$ or Coverwrite or Coverwrite

Functions for Saving Tasks

Edit a Saved Task

[Edit Task]

Select a task → □ → Edit → □ → Select an item → □ → Edit the item → □ → Overwrite or Save as New → □ → OK →

Functions for Checking/Managing Events

Use Event Information

[Call/Create Message/Access URL]

■Calling or Sending a Message to a Phone Number

Event Details Window Select a phone number (twice) Voice Call or Create Mail

• When you select *Voice Call*, do the following.

☑ ⇒Voice Call or Video Call ⇒ ■

■Sending a Message to an E-mail Address

Event Details Window Select an e-mail address

(twice)

■Connecting to a URL

Event Details Window Select a URL (twice) YES

Use Link Information of an Event [To Messages/To Screen Memo/To Pictures]

Event Details Window To Messages, To Screen Memo or To Pictures → ■

Use Information Stored in Contents [Call/Create Message/Save Sender/Access URL]

Event Details Window Select the Contents field → Select information → Voice Call, Create Mail, Save Sender, By Yahoo! Keitai or By PC Browser → ■

Delete Multiple Events

[Select Multi]

Delete All Events

[Delete All]

Functions for Checking/Managing Tasks

Use Task Information [Call/Create Message/Save Sender/Access URL]

Tasks Window Select a task → ■ → Select the

Contents field → ■ → Select information →

■ → Voice Call, Create Mail, Save Sender,

By Yahoo! Keitai or By PC Browser → ■

Delete Multiple Tasks

[Select Multi]

Tasks Window → Delete → → Select Multi
→ Select tasks → □ → ② → YES → □

Delete All Tasks

[Delete All]

Tasks Window Delete All Delete Tandset Code YES

 When Change View is not set to All View, you cannot delete all tasks.

Time Table Functions

From Time Table Window page 9-7

Copy a Class on Time Table

[Copy]

Time Table Window Select a period → ✓ Copy → Select a destination period → 🕥 → 🖾

 To copy to multiple periods, repeat selecting a destination period and pressing as many times as required.

Delete All Classes from Time Table

[Delete All]

Time Table Window
→ Delete → ■ → All → ■

Enter Handset Code → YES → ■

Notepad Functions

From Notepad List Window page 9-8

Edit a Notepad

[Edit Notepad]

Delete All Notepads

[Delete All]

Notepad List Window ► Delete ► All → Enter Handset Code ➤ YES ► ■

Voice Recorder Functions

From Voice Recorder Window page 9-9

Change Storage Location of Recordings [Select Storage]

Voice Recorder Window Record → □ → □ → SelectStorage → □ → Phone Memory or Memory Card → □

• A memory card must be inserted to configure these settings.

Lifestyle Support Tools

Functions for Osaifu-Keitai®

From Card Settings Window page 9-12

Check Balance of a Lifestyle-Appli on External Display

[Display Balance]

Card Settings Window Display Balance ⇒ ⇒ Enter Handset Code → ON/OFF → □ → ON →

■Adding a Lifestyle-Appli to Balance List

Card Settings Window Display Balance → ■ →
Enter Handset Code → Balance List → ■ →
Empty → ■ → Select a Lifestyle-Appli → ■

■Checking the Balance

• Side Key must be set to **Balance** in advance (page 2-4).

Press and hold

- The balance is shown by each Lifestyle-Appli saved on Balance List. Pressing switches the balance display to the next Lifestyle-Appli.
- Alternatively, select a Lifestyle-Appli on Balance List and press

 to display the balance

Delete Lifestyle-Appli from Balance List [Delete from Balance List]

Card Settings Window Display Balance → ■ →
Enter Handset Code → Balance List → ■ →
Select a Lifestyle-Appli

■ Deleting All Entries

□ → Delete All → ■ → Enter Handset Code → YES → ■

Change Number of Calls to Activate Call Lock

[Missed Count]

Set a Reply Address to Send Lock Engaged Notification

[Address]

Card Settings Window Remote Lock → ■ → Enter Handset Code → Mail Lock → ■ → Address → ■ → x → Add → ■

■Setting Mail Lock Address

To Sender ⇒ ■

9

■Setting an Address from Phone Book

Phone Book → Select an entry → Select an address → Select an ad

■Setting an Address from Sent Log or Received Log

Sent Log or **Received Log** → Select an entry →

■Directly Entering a Phone Number or E-mail Address

Phone Number or **Email** → Enter a phone number or e-mail address → (twice)

Functions for S! GPS Navi

From S! GPS Navi Window page 9-14

Send Current Position by Mail [Location Mail]

S! GPS Navi Window **Location Mail**

Check Location Logs

[Location Logs]

S! GPS Navi Window **Location Logs** → ■ → Select a log → ■

 If so is shown to the left of the log, it means the positioning was successful; so means a failure.

Use Location Logs

[Open Map/Start Navi Appli/Send Message/ To Locations/To Phone Book]

SI GPS Navi Window Location Logs > Select a log > Depen Map, Go to,

Location Mail, To Locations or To Phone

Book > I

Delete Location Logs

[Delete/Delete All]

S! GPS Navi Window **Location Logs** → Select a log → **Polete** → ■

■Deleting One Entry

 $Delete \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

■Deleting All Entries

Delete All⇒ ■ ⇒Enter Handset Code⇒**YES** ⇒ ■

Save Location Information to My Locations

[My Locations]

SI GPS Navi Window My Locations → ■ → Select an empty item → ■ → Save location information → ■ → Enter a title → ■

Functions for Idokoro Mail

From Idokoro Mail Window page 9-16

Delete People from Recipients List [Delete/Delete All]

■Deleting One Entry

| Idokoro Mail Window | Recipients List $\Rightarrow \blacksquare \Rightarrow$ | Select an entry $\Rightarrow Pelete \Rightarrow \blacksquare \Rightarrow YES \Rightarrow$

■Deleting All Entries

| Idokoro Mail Window Recipients List → □ → □

→ Delete All → □ → Enter Handset Code →

YES → □

Delete Area Lists

[Delete/Delete All]

■Deleting One Entry

Idokoro Mail Window **Areas List** > Select an entry > Delete > YES > •

■Deleting All Entries

| Idokoro Mail Window $Areas \ List \Rightarrow \square \Rightarrow \square \Rightarrow$ | Delete $All \Rightarrow \square \Rightarrow$ Enter Handset Code $\Rightarrow YES \Rightarrow$

From Alarm List Window page 9-18
Set Alarm Window page 9-18

Change an Alarm Name

[Alarm Name]

Set Alarm Window Select an alarm name → ■ → ■ → ■ → OK → ■

Change Alarm Tone

[Alarm Tone]

Set Alarm Window Alarm Tone \rightarrow \blacksquare \rightarrow Tone \rightarrow

■Setting Time Reader

Time Reading $\rightarrow \square \rightarrow \square$ (twice) $\rightarrow OK \rightarrow \square$

■Setting a Preinstalled Sound

Patterns or **Melodies** \Rightarrow Select an alarm tone \Rightarrow \Rightarrow Select \Rightarrow OK \Rightarrow \Rightarrow

■Setting a File in Data Folder/Memory Card

Phone Memory or Memory Card \Rightarrow \Rightarrow Select a file \Rightarrow (twice) \Rightarrow \bowtie (twice) \Rightarrow $OK \Rightarrow$

Change Alarm Ring Time

[Duration]

Set Alarm Window $Alarm\ Tone \Rightarrow \blacksquare \Rightarrow Duration$ $\Rightarrow \blacksquare \Rightarrow \text{Enter a ring time} \Rightarrow \trianglerighteq \text{ (twice)} \Rightarrow OK \Rightarrow \blacksquare$

Edit an Alarm

[Edit Alarm]

Delete All Alarms

[Reset All]

Alarm List Window \nearrow $Reset All \rightarrow \blacksquare$ \Longrightarrow Enter Handset Code \nearrow $YES \rightarrow \blacksquare$

World Clock Functions

From World Clock Setting Window page 9-19

Edit a City Name

[Rename City]

World Clock Setting Window City 1 or City 2⇒

→ to select a city → Rename City

→ Enter a city name

Functions for Calculator

From Calculator Window page 9-20

Calculate Currency Conversion

[Converter]

Calculator Window w Converter

Exchange Rate Main Currency or
Sub Currency Enter a rate

(three times) Enter an amount

(three times)

Converter ⇒ ■ ⇒To Main or To Sub ⇒ ■

Functions for S! Quick News

From S! Quick News Window page 9-22
News List Window page 9-22
S! Loop List Window page 9-22

Update Lists Automatically

[Auto Refresh]

SI Quick News Window Settings = Auto
Refresh = Flash News, News or
S! Loop =

Setting Flash News to Update Automatically

Select a time interval for automatic updates ⇒

■ → □ → ■ → YES → ■

9

Tools

■Setting News/S! Loop to Update Automatically

 $Automatic \Rightarrow \blacksquare \Rightarrow \Box \Rightarrow YES \Rightarrow \blacksquare$

- S! Quick News (Flash News) and S! Loop List updates do not take place during late hours at night.
- Automatic updates may not occur if handset is outside the service area or signal reception is poor.
- If automatic updates stop for some reason, performing a manual update (page 2-9) can restart the automatic updates.
- Automatic updates are unavailable while using handset abroad.

Delete Registered Contents and Items [Delete/Delete All]

■Deleting One Entry

■Deleting All Entries

News List Window / S! Loop List Window | Delete | Delete | List Window | New YES | Delete | New YES | Delete

S! Information Channel

From Info Channel Window page 9-23
Weather Indicator Menu page 9-23

Download Unreceived Information [Get Latest]

Info Channel Window Get Latest ⇒ ■ ⇒ YES ⇒

A connection is established to the redelivery

page.

• You can download only the latest information of the control of the latest information o

- You can download only the latest information.
 Content cannot be downloaded on nondelivery days.
- ■Requesting Redelivery from Information Prompt

Information Prompt appears → Info Channel → ■ → YES → ■

[History]

Check Past Updates

Info Channel Window *History* → Select information → ■

Update Weather Forecast Manually [Update Weather Forecast]

Weather Indicator Menu *Update* → ■ → *YES* →

Scanning QR Codes

From Scan Results Window page 9-25

Use Scanned Data [Call/Send Message/To Phone Book/ Access URL]

Scan Results Window Select information ⇒ ⇒ ⇒ Call, Send Message or To Phone Book ⇒

 When a URL is scanned, select YES after selecting a URL.

Paste Scanned Data into Message Text [To Message]

Scan Results Window **Y** → **To Message** → ■

Use Location Information [Start Navi Appli/To Locations]

Scan Results Window **Y**→**Go to** Or **To Locations**

Ku-man's Room (Japanese)

From Ku-man's Room page 9-26

Check What You can Do in Ku-man's Room [Help]

Ku-man's Room 🛂 ⇒ヘルブ (Help) ⇒ 🔳

S! Town (Japanese)/S! Loop (Japanese) · · · · · · · · · · · · · · · · · · ·	10-2
S! Friend's Status ·····	10-3
About S! Friend's Status · · · · · · · · · · · · · · · · · · ·	10-3
Using S! Friend's Status·····	10-4
S! Circle Talk·····	10-6
About S! Circle Talk · · · · · · · · · · · · · · · · · · ·	10-6
Using S! Circle Talk · · · · · · · · · · · · · · · · · · ·	10-7
Advanced Features · · · · · · · · · · · · · · · · · · ·	10-9

Services 10

S! Town (Japanese)/S! Loop (Japanese)

Using S! Town

S! Town is an online 3D virtual space. Go online to chat, shop, etc.

- When you use S! Town for the first time, a user registration (free) and profile registration are required. Please read and agree to the terms of service before the registration.
- Connection fees apply to use S! Town. The fees may be expensive.
- If you subscribe to Website access restrictions, you cannot use S! Town.
- Press *Communications*
- 2 Select S! Town⇒■
 - You can cancel S! Town service by selecting S!ダウン (S! Town) from マイメニュー (My Menu) of Yahoo! Keitai.
 - Upgrade notification may appear when you start S! Town. Follow the onscreen instructions to upgrade S! Town.

About Library

Downloaded S! Appli that expand the functions of S! Town are automatically stored in Library. To check S! Appli in Library: Press — Communications — S! Town

Using S! Loop

Use S! Loop to keep a diary on the web or exchange information via BBS.


- Press *Communications* ■
- 2 Select S! Loop \Rightarrow \Rightarrow YES \Rightarrow

S! Friend's Status

About S! Friend's Status

Share your current mood and availability to receive calls, messages or S! Circle Talk calls with your friends who are on your S! Friend's Status Members List. It is possible to check statuses of your S! Friend's Status members from Standby after adding them to Active Window.

• A separate subscription and fees are required to use S! Friend's Status.

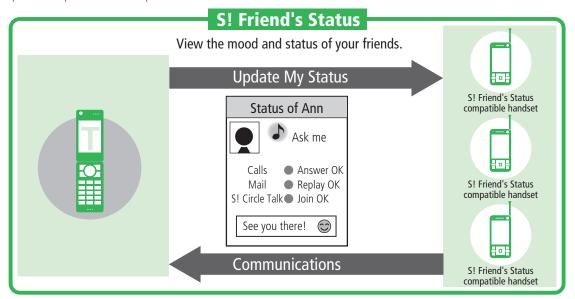

- S! Friend's Status is unavailable if IP Service is set to OFF.
- S! Friend's Status is unavailable while using handset abroad.

Using S! Friend's Status

Setting Your Own Status (My Status)

Press and hold ★



My Status Window

- You can set My Status from Active Window (page 2-8).
- When My Status is offline, switch to online by selecting YES in the confirmation window.
- To go offline:

 Select Online → → Offline → →

 ③ (Update)
- 2 Select a status such as ♂## (Good mood) ⇒ ⇒Select an item⇒

- 3 Select an Answer Status ⇒ ⇒ Select an item →
 - To change all your Answer Statuses at once:

Press ☑ (All) ⇒Select an item⇒ ⇒ → Check the settings ⇒ ■

- 4 Select the Comment field → → Enter a comment → ■
- 5 Press (Update)
 - If you switch to offline, you and other people cannot check each others' current statuses.
 Also, you cannot create S! Friend's Status Members List or initiate S! Circle Talk.

Adding Members

When you add a person to your S! Friend's Status Members List, an invitation is sent.

- You can only add friends who have a SoftBank handset that supports S! Friend's Status to your S! Friend's Status Members List.
- To create S! Friend's Status Members List, set My Status to *Online*.
- When the person accepts your invitation, you receive a Saving Completed notification, and you and the person can check out each other's status.
- Press → Communications → →
 Friend Status → ■
- Press (Add) ⇒Phone Book or Direct
 Input⇒
 - If you select *Phone Book*, you can search Phone Book entries on handset (not those on USIM Card or memory card).
- 3 Select a member or enter a phone number →
 - To select a group:
 Select

 Select

 Select a group
- 4 Press (Save) YES

 A Saving Request notification is sent to the person, and *Waiting* appears in S! Friend's Status Members List Window.

 You will receive a Saving Failed notification when the other person's S! Friend's Status Members List already contains 30 people.

Adding a Member from Saving Request

If someone wants to add you to his/her S! Friend's Status Members List, you will receive a Saving Request notification. If you accept, the other person is saved to S! Friend's Status Members List and you and the person can check out each other's status.

- Information Prompt appears⇒

 Notification⇒■
- 2 Select a Saving Request notification

 → YES→
 - If you select NO, a Saving Failed notification is returned to the other person and the person is not saved to S! Friend's Status Members List.
- If you select NO and a Saving Failed notification is returned to the other person, you cannot send the person an invitation to S! Friend's Status Members List for 24 hours.
- Although you select NO and a Saving Failed notification is returned to the other person, if the person does not receive the notification because he/she is outside the service area or offline for more than 24 hours, you will receive another Saving Request notification when the person comes online.

Checking a Member's Status

Press ■ → Communications → ■ →
Friend Status → ■



S! Friend's Status Members List Window

- 2 Use 🕞 to select a group
- 3 Use 📮 to select a member⇒ 🔳



S! Friend's Status Details Window

More Features



S! Friend's Status Functions

(page 10-9)



Settings for S! Friend's Status

(page 13-44)

- Edit Status Settings of My Status
- Save Members to Active Window
- Ignore Saving Requests from People Not in Phone Book
- Ignore All Saving Requests

Settings for S! Friend's Status/S! Circle Talk

(page 13-44)

• Disable S! Friend's Status/S! Circle Talk

S! Circle Talk


About S! Circle Talk

S! Circle Talk is a walkie-talkie style communication service. Talk one-on-one or with a group of people (up to ten people) using S! Circle Talk compatible SoftBank handsets.

Press and hold the key to talk (one person at a time) and release the key when finished talking. Check

each participant's status and see who is currently talking in S! Circle Talk window.

You must subscribe to S! Friend's Status to use S! Circle Talk. Connection fees apply for using S! Circle Talk.

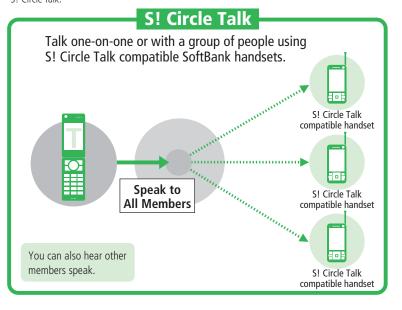

- S! Circle Talk is unavailable if IP Service is set to OFF.
- S! Circle Talk is unavailable if S! Friend's Status is set to Offline. Switch to Online (page 10-4) to use S! Circle Talk.
- Š! Čircle Talk is unavailable during a voice call or Video Call. Also, you cannot receive another S! Circle Talk call during S! Circle Talk.
- S! Circle Talk is unavailable while using handset abroad.

Using S! Circle Talk

Adding Members

Adding a Person

- Press → Communications → →
 Circle Talk →
 - A confirmation window appears the first time you start.
- 2 Press → Add Members →
 - If no one is on S! Circle Talk Members List, press (Add).



3 Select *Personal*⇒■⇒*Phone Book*,

Friend Status or Direct Input⇒ ■

- If you select *Phone Book*, you can search Phone Book entries on handset (not those on USIM Card or memory card).
- 4 Select a member or enter a phone number → ■

Creating a Group

Organize entries by group and make an S! Circle Talk call to a group of people.

- From Add Members Menu, select

 Group → □ → Create New → □
- 2 Select Empty⇒ → Phone Book, Friend Status or Direct Input → ■
 - If you select *Phone Book*, you can search Phone Book entries on handset (not those on USIM Card or memory card).
- 3 Select a member or enter a phone number →
 - To save more members, repeat 2 and 3.
 - If you want to change a member's phone number, select a member and press
 twice.
- 4 Press
 (Add) →Enter a group name

 →

 ■

Adding a Group from S! Friend's Status Members List

- Save members other than yourself to an S! Friend's Status group in advance.
- From Add Members Menu, select

 Group → → Friend Status → ■
- 2 Select a group ⇒ ■

Initiating S! Circle Talk

- Enter a phone number, and then press and hold
 - To call from S! Circle Talk Members List:
 Press → Communications → →
 Circle Talk → → Select a member or
 group → ② (CT)/ ○



- 2 Press and hold 🙍 to talk
 - Talk when * Myself appears.
 - Initiator can talk as soon as S! Circle Talk is connected
 - * Myself disappears after 30 seconds and the floor is released.
 - Only one person can talk at a time.
- 3 To sign off, press $\Rightarrow YES \Rightarrow \blacksquare$
 - When only one person remains, S! Circle Talk ends automatically.

Joining S! Circle Talk

Press (Answer) when S! Circle Talk invitation arrives

S! Circle Talk is connected.

- To reject the connection, press [37] (Reject).
- Alternatively, press or to answer.

S! Circle Talk Operations

Calling Another Member

- During S! Circle Talk, press ¬→Add
- 2 Select *Members List* ⇒ Select a member ⇒
 - To call a person from S! Friend's Status Members List:
 Select Friend Status
 - To call a person from Phone Book:
 Select Phone Book
 Select an entry
 Select a phone number
 - To enter a phone number directly:
 Select *Direct Input* = Enter a phone number

Adjusting Speaker (Earpiece) Volume

During S! Circle Talk, use 🚺

Toggling Audio Output (Earpiece/Speaker)

📘 During S! Circle Talk, press 🖀 (🐠 / 🔌)

More Features



S! Circle Talk Functions





Settings for S! Friend's Status/S! Circle Talk

(page 13-44)

Disable S! Friend's Status/S! Circle Talk

Advanced Features

Communications

S! Friend's Status Functions

From -

Friend's Status Members List Window	page 10-5
CL Exiand's Ctatus Datails Window	nage 10 E

S! Friend's Status Details Window page 10-5

Add a Member

S

[Add Members]

S! Friend's Status Members List Window Select a member other than yourself (My Status)→ 🕶 Add Members ⇒ ■

• See "Adding Members" (page 10-4) for following operations.

Delete Members

[Deletion Request]

S! Friend's Status Members List Window Select a group

■Deleting One Member

Select a member $\Rightarrow Delete \Rightarrow \blacksquare \Rightarrow One \Rightarrow$ $\blacksquare \Rightarrow YES \Rightarrow \blacksquare$

■Deleting Multiple Members

Select a member other than yourself (My Status) \Rightarrow r \Rightarrow $Delete \Rightarrow \blacksquare \Rightarrow Select Multi \Rightarrow \blacksquare \Rightarrow$ Select members → □ → □ → YES → □

■Deleting All Members

Select a member other than yourself (My Status) \Rightarrow P \Rightarrow Handset Code⇒*YES*⇒ ■

• After a member is deleted from S! Friend's Status Members List, you cannot send/receive a Saving Request notification to/from that person for 24 hours.

Move Members to a Different Group [Change Group]

S! Friend's Status Members List Window Select a group

■Moving One Member

Select a member $\Rightarrow \neg \neg Change Group \Rightarrow$ $\blacksquare \Rightarrow One \Rightarrow \blacksquare \Rightarrow Select a group \Rightarrow \blacksquare$

■ Moving Multiple Members

Select a member other than yourself (My Status) \Rightarrow $rac{}{}$ \Rightarrow Change Group \Rightarrow $rac{}{}$ \Rightarrow Select Multi → Select members → Select a group⇒

■Moving All Members

Select a member other than yourself (My Status) \Rightarrow r \Rightarrow Change Group \Rightarrow \Rightarrow \Rightarrow $All \Rightarrow$ \Rightarrow Select a group →

Edit a Group Name

[Rename]

S! Friend's Status Members List Window Select a group \Rightarrow $x_1 \Rightarrow Rename \Rightarrow$ \Rightarrow Edit the group name \Rightarrow

Update S! Friend's Status Manually [Status Update]

S! Friend's Status Members List Window Settings ⇒ Status Update ⇒ ■

Check a Notification

[Notification]

S! Friend's Status Members List Window Y7 => Notification ⇒ •

Contact a Member According to His/Her **Current Status**

[Call/Send Mail]

■Making a Voice Call/Video Call

S! Friend's Status Details Window Select the call answer status → **v** → **Voice Call** or Video Call⇒ ■

Sending a Message

S! Friend's Status Details Window Select the mail answer status → Create a message → 🗟

• For details on creating messages, see pages 4-4 and 4-6.

■Initiating S! Circle Talk

S! Friend's Status Details Window Select the S! Circle Talk answer status

S! Circle Talk Functions

Edit S! Circle Talk Members List

[Edit Group]

■ \rightarrow Communications \rightarrow \blacksquare \rightarrow Circle Talk \rightarrow \blacksquare \rightarrow Select a group \rightarrow \trianglerighteq \rightarrow Edit Group \rightarrow \blacksquare

■Editing Group Name

Rename → Edit the group name →

■Adding Members

Change Member → ■ → Empty → ■ →
Phone Book, Friend Status or Direct Input
→ ■ → Select a member or enter a phone
number → ■ → 🗟

■Changing a Member's Phone Number

Change Member → ■ → Select a member → ■ (twice) → Enter a phone number → ■ → 🗟

■Deleting a Member

Change Member → Select a member → Select a member → Pelete → YES → □ → □

■Deleting All Members

Change Member → • → Delete All →

Enter Handset Code → YES → •

Delete a Group or Person from S! Circle Talk Members List

[Delete/Select Multi/Delete All]

■ → Communications → □ → Circle Talk

■Deleting One Entry

■Deleting Multiple Entries □ → Delete → □ → Select Multi → □ →

Select members or groups → □ → □ → YES →

■Deleting All Entries

P \rightarrow Delete \rightarrow \blacksquare \rightarrow All \rightarrow \blacksquare \rightarrow Enter Handset Code \rightarrow YES \rightarrow \blacksquare

Changing Handset Code · · · · · · 11-
Prohibiting/Limiting Use · · · · · · 11-
Protecting Handset Information · · · · · · 11-
Advanced Features · · · · · · · 11-





2 Enter current Handset Code



3 Enter new Handset Code



4 Re-enter new Handset Code for confirmation

Security

Prohibiting/Limiting Use

Activating PIN Settings

Set to require PIN entry to use handset when handset is turned on with USIM Card inserted in it.





Security Setting Window

- 3 Enter PIN⇒ ■

Prohibiting Handset Use

Set Password Lock to prevent others from using your handset. When Password Lock is activated, Handset Code entry is required to use handset.

From Security Setting Window, select

Password Lock

■ Enter Handset

Code



- 2 Select an item⇒ ⇒ ON →
 - Phone Closed: Locks handset when you close it.
 - Power Saving: Locks handset when Display is turned off for Power Saving.
 - Power Off: Locks handset when it is turned on.
- To cancel Password Lock, enter Handset Code to unlock it temporarily, and then set Password Lock to OFF.
- Phone Closed locks handset when you close it in Standby. Power Saving locks handset when Display is turned off after a certain period of time (as set in the power saving settings) has passed in Standby.
- You cannot make one-touch calls from Earphone-Microphone when Password Lock is activated.

Keypad Lock

Disable all keys to prevent unintentional operations while your handset is in your bag or pocket.

- Press and hold
 - To cancel Keypad Lock, press and hold while it is set.
- Keypad Lock cannot be set when Bluetooth[®]/ infrared communication is activated.
- When Keypad Lock is set, Information Prompt does not appear.

Prohibiting/Limiting Use

Using Secure Remote Lock

By using Secure Remote Lock service, if your handset is lost or stolen, you can lock handset functions remotely from a PC or mobile phone. Once the lock is set, all key operations are disabled except for turning the power on, making emergency calls and calling SoftBank Customer Center (157).

IC Card Lock (page 9-12) will also be turned on automatically.

For more information on conditions for using Secure Remote Lock, go to http://www.softbank.jp or access My SoftBank from handset.

Accessing My SoftBank from a Mobile Phone



Protecting Handset Information

Prohibiting Use of Phone Book and Other Features

Set Function Lock to prevent unauthorized access to Phone Book, Calendar, Tasks, Call Log and Sent/Received Log. When Function Lock is set, Handset Code must be entered to access these functions/features.

From Security Setting Window, select

Function Lock

■ ■ Enter Handset

Code



2 Select a function $\Rightarrow \blacksquare \Rightarrow Lock \Rightarrow \blacksquare$

Viewing Secret Data

Phone Book entries saved as secret (page 2-18) can be viewed.

From Security Setting Window, select

Secret Mode⇒ ■ ⇒Enter Handset

Code



- 2 Select Show ⇒ ■
- Secret Mode is set to *Hide* when handset is turned off.

More Features



Functions for Prohibiting/Limiting Use (▶ page 11-5)

Advanced Features

Security

Functions for Prohibiting/Limiting Use

From Security Setting Window page 11-3

Change PIN/PIN2

[Change PIN/PIN2]

- Set PIN Settings to **ON** before you change PIN. • Do not forget your PIN and do not reveal it to
- others. Write down your PIN.

Security Setting Window **PIN Settings** \Rightarrow Change PIN or Change PIN2⇒ ■ ⇒Enter current PIN/PIN2 → Enter new PIN/PIN2 → ■ Re-enter new PIN/PIN2 for confirmation →

Cancel PIN Lock

[Cancel PIN Lock]

While PIN/PIN2 Lock is set, do an operation that requires PIN/PIN2 entry⇒Enter PUK/PUK2 ⇒ ■ ⇒Enter new PIN/PIN2⇒ ■ ⇒Re-enter new PIN/PIN2 for confirmation ⇒ ■

• If Personal Unblocking Key (PUK) is incorrectly entered ten times in a row, USIM Card is locked (USIM lock). If USIM lock is set, it cannot be canceled. Contact SoftBank General. Information (page 14-48).

Restrict Access to the Internet by Inputting **URLs** [Web] Security Setting Window Restricted Mode => **Web** → Enter Internet Security Code (page 1-16) \Rightarrow \blacksquare \Rightarrow Set Regulation \Rightarrow \blacksquare \Rightarrow $ON \Rightarrow$ ■When Internet Security Code is Not Registered Security Setting Window **Restricted Mode** \Rightarrow **Web** → (twice) → Enter Internet Security Code ⇒ Re-enter Internet Security Code for confirmation $\Rightarrow \Box \Rightarrow Do \ not \ Save \Rightarrow \Box$ • To register a clue to your Internet Security Code, select Save and enter a clue. ■ Changing Internet Security Code Security Setting Window Restricted Mode \Rightarrow Web ⇒ ■ ⇒Enter Internet Security Code ⇒ ■ *⇒Change Password ⇒* (twice) *⇒*Enter new Internet Security Code → Re-enter new Internet Security Code for confirmation $\Rightarrow \blacksquare \Rightarrow$

Do not Save⇒ ■

• To register a clue to your Internet Security Code, select Save and enter a clue.

Infrared · · · · · · · · · · · · · · · · · · ·	12-2
About Infrared · · · · · · · · · · · · · · · · · · ·	
Using Infrared · · · · · · · · · · · · · · · · · · ·	
Bluetooth® · · · · · · · · · · · · · · · · · · ·	12-4
About Bluetooth® · · · · · · · · · · · · · · · · · · ·	
Using Bluetooth®·····	12-5
PC Connection ·····	12-8
About PC Connection · · · · · · · · · · · · · · · · · · ·	
Memory Card Backup · · · · · · · · · · · · · · · · · · ·	
About Memory Card Backup · · · · · · · · · · · · · · · · · · ·	12-10
S! Addressbook Back-up ······	12-12
About S! Addressbook Back-up·····	
Using S! Addressbook Back-up · · · · · · · · · · · · · · · · · · ·	
Advanced Features · · · · · · · · · · · · · · · · · · ·	12-14

Infrared


About Infrared

Send/receive Phone Book entries, events, pictures taken with the camera and other data to/from other infrared compatible devices (PCs, handsets).

Precautions

- A dirty Infrared Port may cause an infrared communication failure. If Infrared Port is dirty, gently wipe it with a soft cloth while making sure not to scratch the port.
- Do not move the devices until the file transfer is complete.
- Direct sunlight or fluorescent light may interfere with infrared communication.
- If a voice call/Video Call arrives while handset is sending/receiving files via infrared, the fixed incoming image appears and the fixed pattern ringtone sounds. If you answer the call, file transfer is canceled
- When sending/receiving vObjects, some information may be altered or may not be received.
- You cannot use Bluetooth® communication or USB functions other than the charge function during infrared communication.
- S! Friend's Status and S! Circle Talk are unavailable while transferring files even if IP Service is set to ON.

 Bring Infrared Port of handset to within 20 cm of the infrared port of the destination device and align both ports. Make sure no objects are placed between them.

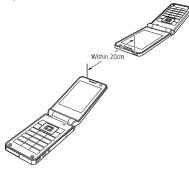

Authentication Password


The authentication password (four digits) is for sending and receiving all data by infrared communication.

When sending or receiving all data, the same authentication password needs to be entered on both sending and receiving devices.

Using Infrared

Activating Infrared

Set handset so that it can be connected to other compatible devices via infrared.

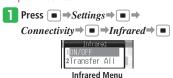

- 2 Select *ON/OFF* ⇒ ■
- 3 Select *ON*⇒
 - To cancel infrared standby status, select **OFF**.
 - Infrared communication is unavailable when Offline Mode is set to *ON*.
 - If handset does not communicate via infrared in three minutes after Infrared has been set to ON, the infrared standby status is canceled automatically.

Transferring Files

Sending a File

Access a function that supports infrared

- 2 Select a file $\Rightarrow \neg Send \Rightarrow \blacksquare$
 - Select Send vCard to access from Phone Rook
- 3 Select *Via Infrared* ⇒ ■
- Files without transfer permission and Screen Memo files cannot be sent
- Removal of memory card during file transfer from memory card may result in loss or damage of files on memory card.

Receiving Files

Handset can receive files when the Infrared setting is ON.

- In Standby, receive a connection request
- 2 Select YES⇒
 - To reject reception of files, select NO.
 - When handset receives a Phone Book entry, event, task or notepad, select YES to save it to your Phone Book, Calendar. Tasks or Notepad.
- 3 Select Phone Memory or Memory Card
- Handset cannot receive files except in Standby.

Sending All Phone Book Entries/Calendar & Task Data

All Phone Book entries on handset, events on Calendar and tasks can be sent to other infrared compatible handsets. Enter the same authentication password on both sending and receiving devices.

- From Infrared Menu, select Transfer $All \Rightarrow \blacksquare$
- Enter Handset Code
- Select *Phone Book* or *Cal./Tasks* →
 - When sending Phone Book entries, a confirmation window appears asking if you want to send images saved in Phone Book, Select Without Image to send Phone Book entries without images.
 - When sending events/tasks, a confirmation window appears. Select Without Past not to send past events/tasks.
- Enter the authentication password

Receiving All Phone Book Entries/Calendar & Task Data

All Phone Book entries, events on Calendar and tasks can be received from other infrared compatible handsets. Enter the same authentication password on both sending and receiving devices.

Handset can receive files when the Infrared setting is ON.

- In Standby, receive a connection request
- 2 Enter Handset Code⇒Enter the authentication password
- Select Add ⇒
 - To overwrite all files: Select $Overwrite \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$
 - To cancel receiving files, select Discard.
- Handset cannot receive files except in Standby.

More Features



Functions for Infrared Communication (page 12-14)

Bluetooth®

About Bluetooth®

Transfer Phone Book entries, events and other files in Data Folder between handset and other Bluetooth® compatible devices (PCs, etc.). Also use a handsfree compatible device to make handsfree calls.

Frequency

The Bluetooth® system on handset uses the 2.4 GHz spectrum ranging from 2.402 GHz to 2.480 GHz. Other wireless devices may be using the same frequency. In order to avoid radio interference, note the followings:

- The Bluetooth® system on handset uses 2.4 GHz spectrum. This spectrum is used by industrial, scientific, and medical equipment (microwaves etc.), other radio stations of the same kind, premises radio stations for radio frequency identification which require a license (used in production lines etc.), license free specified low power radio stations, and amateur radio stations (hereafter "other radio stations").
- Before using handset, make sure there are no other radio stations nearby.
- If radio interference occurs between handset and other radio stations, change locations to use handset, or stop using handset (stop emitting radio waves) at once.
- 3. For details, contact SoftBank General Information (page 14-48).

Handset



This wireless device uses 2.4 GHz spectrum. It employs FH-SS modulation, and causes interference within a 10-meter radius.

Precautions

- Communication tests have not been performed for all Bluetooth[®] compatible devices. There is no guarantee of connection with all Bluetooth[®] devices.
- The security function used for wireless communication complies with the standard specifications of Bluetooth®. However, take care when using Bluetooth® for data communication because, in some cases, security may be inadequate depending on the operating environment and configuration.
- SoftBank accepts no liability whatsoever for any data generated or information leaked during Bluetooth[®] communication.
- If a voice call/Video Call arrives while handset is sending/receiving files by Bluetooth® connection, the fixed incoming image appears and the fixed melody ringtone sounds. If you answer the call, file transfer is canceled.
- When sending/receiving vObjects, some information may be altered or may not be received.
- You cannot use infrared communication and USB functions other than the charge function during Bluetooth[®] communication.

- S! Friend's Status and S! Circle Talk are unavailable while transferring files even if IP Service is set to ON.
- The Bluetooth[®] system on handset has been certified to comply only with specifications of Japanese Radio Law. Using Bluetooth[®] features outside Japan may be punishable by law.

Authentication PIN Code

Authentication PIN code (Bluetooth Passkey) is a 4 to 16 digit number required to connect to a compatible device. Code must be entered on both devices before connection is established.

• You can set a different authentication PIN code on each device.

Using Bluetooth®

Use Bluetooth[®] to connect handset to other compatible devices. Transfer files and make dial-up connections.

Activating Bluetooth®

Set handset so that it can be connected to other compatible devices via Bluetooth® communication.





Bluetooth Menu

- 2 Select *ON/OFF* ⇒ ■
- 3 Select *ON*⇒■
 - To cancel Bluetooth[®] standby status, select *OFF*.
- Bluetooth[®] communication is unavailable when Offline Mode is set to ON.

Connecting to Bluetooth® Devices

Finding and Pairing with a Device

Before establishing a Bluetooth® connection, you need to search for, find and then pair with a Bluetooth® compatible device.

From Bluetooth Menu, select Search

Device⇒

■

Handset starts searching for Bluetooth[®] devices and then the names and icons of available devices appear.

- The device type icons are as follows:
 - PC Audio device
 Mobile phone
 LAN Printer
 Headset Other device

Andsfree device

2 Select a device → ■ → Enter an authentication PIN code → ■ → YES or NO → ■

When handset is connected to another Bluetooth[®] compatible device, the device is registered in the paired device list.

- Enter the same authentication PIN code (any 4 to 16 digits) on handset and the Bluetooth[®] compatible device.
- An authentication PIN code needs to be entered within approximately 30 seconds for security reasons.

Connecting to a Paired Handsfree Device

From Bluetooth Menu, select *Paired*Device



Paired Device List Window

- **2** Select a handsfree device⇒ w
 - If a handsfree device is not registered, press (Search) and select a handsfree device to register it to the paired device list.
- 3 Select *Connect* ⇒ ■

12

Transferring Files

Sending a File

- Access a function that supports
 Bluetooth®
- 2 Select a file⇒ \(\strice{\pi} \) \(\strice{\pi} \) Send \(\strice{\pi} \)
 - Select Send vCard to access from Phone Book.
- **3** Select *Via Bluetooth*⇒■
- 4 From Paired Device List Window, select a device →
 - If a receiving device is not registered, select (Search) and then select a receiving device.
- Files without transfer permission and Screen Memo files cannot be sent.
- Removal of memory card during file transfer from memory card may result in loss or damage of files on memory card.

Receiving Files

Handset can receive files when the Bluetooth setting is \boldsymbol{ON} .

- In Standby, receive a connection request → YES →
 - If the device information of handset is not registered on the sending device, the same authentication PIN code (any 4 to 16 digits) entry window appears. Enter the same authentication PIN code on handset and the Bluetooth® compatible device.
- 2 Select YES⇒■
 - To reject reception of files, select NO.
 - When handset receives a Phone Book entry, event, task or notepad, select YES to save it to your Phone Book, Calendar, Tasks or Notepad.
- 3 Select *Phone Memory* or *Memory Card*⇒ ■
- Handset cannot receive files except in Standby.

Sending All Phone Book Entries/Calendar & Task Data

All Phone Book entries on handset, events on Calendar or tasks can be sent to other Bluetooth® compatible handsets.

- From Bluetooth Menu, select *Transfer*
- 2 Enter Handset Code
- **3** Select *Phone Book* or *Cal./Tasks* ⇒
 - When sending Phone Book entries, a confirmation window appears asking if you want to send images saved in Phone Book. Select Without Image to send Phone Book entries without images.
 - When sending events/tasks, a confirmation window appears. Select Without Past not to send past events/tasks.
- 4 Select a receiving device⇒
 - If a receiving device is not registered, select (Search) and then select a receiving device.
 - Enter the same authentication PIN code (any 4 to 16 digits) on handset and the Bluetooth® compatible device.

Receiving All Phone Book Entries/Calendar & Task Data

All Phone Book entries, events on Calendar or tasks can be received from another Bluetooth® compatible handset.

Handset can receive files when the Bluetooth setting is \emph{ON} .

- In Standby, receive a connection request → YES →
 - If the device information of handset is not registered on the sending device, the same authentication PIN code (any 4 to 16 digits) entry window appears. Enter the same authentication PIN code on handset and the Bluetooth® compatible device.
- 2 Select Add ⇒
 - To overwrite all files:
 Select Overwrite → → Enter Handset
 Code → YES → ■
 - To cancel receiving files, select *Discard*.
- Handset cannot receive files except in Standby.

More Features



Functions for Bluetooth® Communication
(page 12-14)



Settings for Bluetooth® Communication (▶ page 13-36)

- Check Details of a Paired Bluetooth® Compatible Device
- Set a Bluetooth® Compatible Device as Trusted Device
- · Check Details of Handset
- Change Name of Handset
- Communicate Using a Handsfree Device
- Hide Handset

PC Connection

About PC Connection

Use the USB cable to connect handset to a PC to transfer music files. Data on a memory card inserted in handset can be checked from a PC.

Getting Started

- Install the USB Host Driver software to your PC before connecting the USB cable. Download the USB Host Driver from the following URL: http://www.softbank.jp/mb/r/support/830t/
- When using the USB cable to connect handset to a PC, be sure to directly insert the plug of the USB cable into a USB port of the PC.
- You cannot use USB functions other than the charge function during infrared/Bluetooth® communication.

Configuring USB Connection Mode

Configure the mode for using the USB cable to connect a PC to handset in Standby. Select *Card Reader* to transfer music from a PC, and *Communication* for a dial-up connection.

- Press \longrightarrow Settings \Longrightarrow \Longrightarrow Connectivity \Longrightarrow \Longrightarrow USB \Longrightarrow
- 2 Select Connection ⇒ ⇒

 Communication, Card Reader or

 Always Ask ⇒
 - Select Always Ask to choose the connection mode whenever you connect the USB cable in Standby.
 - If handset is not in Standby when connecting the USB cable, handset changes to *Communication* mode even if Connection has been set to *Card Reader* or *Always Ask*.


Transferring Music from a PC to Memory Card

To transfer music files from a PC, use Card Reader mode.

- Offline Mode is set while handset is in Card Reader mode. In Offline Mode, handset cannot make/receive calls, send/receive messages, nor connect to Yahoo! Keitai. In this mode, all the keys are disabled.
- Timer viewing of TV will not start in Card Reader mode.
- Music files cannot be played on handset unless they are transferred using music transfer software.

Switching to Card Reader Mode by Connecting the USB Cable

- In Standby, connect handset to a PC with the USB cable
 - Open the cover of External Device Port and plug in the connector of the USB cable with the inscription facing up.
 - If Connection is set to Always Ask, select Card Reader.

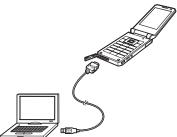

- If Connection is set to Communication, handset does not change to Card Reader mode when connecting the USB cable in Standby.
- If handset is not in Standby when connecting the USB cable, handset changes to *Communication* mode even if Connection has been set to *Card Reader* or *Always Ask*.

Transferring Data

- Set handset to Card Reader mode
- 2 Follow the instructions on the PC

Canceling Card Reader Mode

- Use the connected PC's function to remove an external device
- 2 Disconnect the USB cable from handset

More Features



Functions for PC Connection

(page 12-15)



Settings for PC Connection

Use USB Cable for Charging

Memory Card Backup

About Memory Card Backup

Back up Phone Book entries, events and other data to memory card, and restore as required.

Precautions

- Some data cannot be transferred to memory card.
- Do not use a PC or other device to view or change a backup file on memory card. The file may be damaged.
- Copyrighted data may not be transferred to memory card or restored to handset, or may be deleted from memory card/handset after the transfer.
- If the file name of data restored to handset is more than 32 characters, characters that exceed the limit are omitted when the file is transferred.
- The security lock set to handset Data Folder will not be reflected in the transferred data.

About Backing Up Content Keys

- Since only a single content key backup file can be saved to memory card, backing up another content key will overwrite the previously saved backup file. If you want to maintain the previously backed up content key, import the backup file from memory card to handset and then perform the backup operation again.
- The file whose content key has been moved to memory card for backup will no longer be available on handset.
- Importing a content key into handset adds it to other content keys in handset. It does not overwrite the current handset content keys.

Backing Up Data to Memory Card

Press ■ ⇒Settings → ■ ⇒Backup



Backup Window

- 2 Select Transfer All ⇒ ⇒Backup
- 3 Select the data to back up⇒■



- To select other data, repeat this step.
- To select or unselect all data: Press → Mark All or Unmark All

- 4 Press
 (Trans.) → □ → Enter Handset Code
 - When transferring Phone Book entries, a confirmation window appears asking if you want to include images saved in Phone Book, Select NO to transfer Phone Book entries without images.
 - When transferring events on Calendar or tasks, a confirmation window appears asking if you want to transfer past events/ tasks. Select Futures Only not to transfer past events.

Restoring Data from Memory Card

- From Backup Window, select Transfer $All \Rightarrow \blacksquare \Rightarrow Restore A \text{ or } Restore B$ ⇒ 🔳
 - If *There are no data*. appears, select either **Restore** A or **Restore** B to restore the data
 - To restore data from a non-3G model SoftBank handset, select From non-3G.
- Select the data to restore ⇒ ■



- To select other data, repeat this step.
- To select or unselect all data: Press $\longrightarrow Mark All$ or Unmark All \Rightarrow
- 3 Press
 (Read) → → Enter Handset Code
 - To restore Phone Book/Events/Tasks/ Messages/Bookmarks/Notepad: Select *Add* or *Overwrite* → (twice) → Select data⇒ ■
 - If you select $A\overline{dd}$, you can add the data without deleting data on handset.

More Features




Functions for Memory Card Backup (page 12-15)

S! Addressbook Back-up

About S! Addressbook Back-up

Back up Phone Book entries to network server and synchronize as required. This service is useful for recovering entries when handset is lost or damaged. For details on S! Addressbook Back-up, access the following website. http://mb.softbank.jp/mb/en/service/advanced/sab/

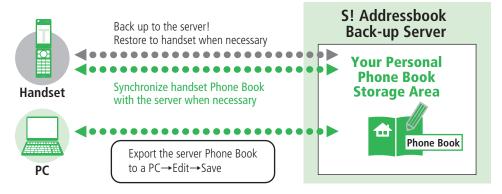

Precautions

- Back up is unavailable for the following settings:
 Ringtones/External Light/Picture
 Be careful as these Phone Book settings are deleted after restoring handset Phone Book.
- Server data is deleted upon service termination.
- Be careful about timing and synchronization type setting when you back up or read data on the server.
- If you synchronize Phone Book data with the synchronization type of *Synchronize*, *From Client*, or *Backup* after deleting all the Phone Book entries on handset, the server Phone Book is deleted.
- If you synchronize Phone Book data with the synchronization type of *Synchronize*, *From Server*, or *Restore* after deleting all the Phone Book entries on the server, Phone Book on handset is deleted.

Using S! Addressbook Back-up

Synchronizing Phone Book

Access network server to synchronize handset Phone Book with server Phone Book

• When synchronizing for the first time, the Synchronize type is used regardless of the synchronization type setting.





S! Addressbook Back-up Window

- 2 Select Start Sync \Rightarrow \blacksquare \Rightarrow Start \Rightarrow \blacksquare \Rightarrow **Enter Handset Code**
 - Follow the onscreen instructions.
- Upon starting synchronization, handset connects to the Internet. Connection fees apply during Internet connections. Ending synchronization terminates the connection automatically.

Setting Synchronization Type

Select from the following types.

3 71	
Synchronize	Synchronize handset Phone Book and server Phone Book.
From Client	Upload edited data to server Phone Book.
From Server	Download edited data from server Phone Book.
Backup	Back up handset Phone Book to server. Please note, server Phone Book is overwritten by handset Phone Book.
Restore	Restore handset Phone Book with server Phone Book. Please note, handset Phone Book is overwritten by server Phone Book.

From S! Addressbook Back-up Window, select *Sync Settings* → Sync Type ⇒ 🔳



2 Select a synchronization type⇒ ■ ⇒ (OK)

More Features



Functions for S! Addressbook Back-up (page 12-16)

12

Advanced Features

File Transfer/Backup

Functions for Infrared Communication

Send My Details

[Send My Details]

 $\blacksquare \Rightarrow Phone \ Book \Rightarrow \blacksquare \Rightarrow My \ Details \Rightarrow \blacksquare$ ⇒ S ⇒ Via Infrared ⇒ ■

Functions for Bluetooth® Communication

From Paired Device List Window page 12-5

Change a Paired Device Name [Device Name]

Paired Device List Window Select a device **Device Name**→ Enter a device name

Delete a Paired Device

[Delete Device]

Paired Device List Window Select a device $Delete \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare$

Cut Off Connection to a Handsfree Device [Disconnect]

Paired Device List Window Select a handsfree device $\Rightarrow \neg Disconnect \Rightarrow \blacksquare$

Send My Details

[Send My Details]

■ Phone Book ⇒ ■ ⇒My Details ⇒ ■ → 🖾 → Via Bluetooth → 🔳 → Select a device⇒ ■

Use Bluetooth® for Dial-up Connections [Dial-up Connections]

In Standby, receive a connection request from another Bluetooth® compatible device → YES → ■ ⇒Enter an authentication PIN code ⇒ ■

- Handset can use dial-up connections when the Bluetooth setting (page 12-5) is ON.
- Enter the same authentication PIN code (any 4 to 16 digits) on handset and the Bluetooth® compatible device to connect.
- Handset sends a message three times in three minutes to the same device if the receiving device does not respond.
- In a 3G HighSpeed area, you can receive at a maximum speed of 3.6 Mbps and send at a maximum speed of 384 kbps. Note that sending or receiving very large files can result in high connection fees

• When accessing the Internet by connecting handset to a PC or PDA (i.e. mobile data communication), a large amount of data is often transferred in a very short time resulting in high connection fees. You are recommended to check the fees now and then during the mobile data communication.

Functions for PC Connection

Use USB Cable for Dial-up Connections [Dial-up Connections]

You can connect handset to a PC with the USB cable and access the Internet.

- In some cases, handset sends a message three times in three minutes to the same device if the receiving device does not respond.
- In a 3G HighSpeed area, you can receive at a maximum speed of 3.6 Mbps and send at a maximum speed of 384 kbps. Note that sending or receiving very large files can result in high connection fees.
- When accessing the Internet by connecting handset to a PC or PDA (i.e. mobile data communication), a large amount of data is often transferred in a very short time resulting in high connection fees. You are recommended to check the fees now and then during the mobile data communication.

Functions for Memory Card Backup

From Backup Window page 12-10

Back Up/Restore Setting Data

[Relocate]

■Backing Up Setting Data

Backup Window Relocate → ■ → Enter Handset

Code → Backup → ■ → Select a setting data
item → ■ → □ → Enter a backup
file code → Re-enter the code for confirmation →

[(twice) → ■

- To select more than one item, repeat selecting an item and pressing as many times as required.
- A backup file code is a four-digit number set at each backup and required when restoring the setting data to handset. Write down your backup file codes and do not reveal them to others.

■Restoring Setting Data

Backup Window Relocate → ■ → Enter Handset
Code → Restore or From non-3G → ■ →
Select a setting data item → ■ → Enter the
backup file code → □ (twice) → ■

Delete Backup Files

[Delete Data]

Backup Window $Transfer All \Rightarrow \blacksquare \Rightarrow Delete$ $Data \Rightarrow \blacksquare$

■ Deleting Phone Book/Events/Tasks/ Messages/Bookmarks/Notepad

Select Data → Select a type of data → Select a file → Select

- To select more than one file, repeat selecting a file and pressing as many times as required.

■Deleting All Files

 $AU \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare \Rightarrow$ Enter Handset Code

Functions for S! Addressbook Back-up

From > S! Addressbook Back-up Window page 12-13

Auto Sync Settings

[Auto Sync]

S! Addressbook Back-up Window Sync Settings → Auto Sync → ON → ■ → Enter Handset Code

■Setting Synchronization Schedule

Weekly or **Monthly** → ■ Set a day of the week/date/time → ■ ⇒ 🖾

■Auto Sync After Editing Phone Book

After Updated ⇒ ■ ⇒ 🗟

 If you select After Updated, synchronization will be performed automatically after about ten minutes whenever handset Phone Book is edited.

View S! Addressbook Back-up History
[Sync Log]

S! Addressbook Back-up Window Sync Log ⇒ ■ ⇒ Select a log → ■

Display Settings · · · · · · · · · · · · · · · · · · ·	13-2
Incoming Event Settings ·····	13-9
Sound Settings · · · · · · · · · · · · · · · · · · ·	13-11
Mail Settings · · · · · · · · · · · · · · · · · · ·	13-14
Internet Settings · · · · · · · · · · · · · · · · · · ·	13-19
Call Settings · · · · · · · · · · · · · · · · · · ·	13-22
Camera Settings · · · · · · · · · · · · · · · · · · ·	
TV Settings · · · · · · · · · · · · · · · · · · ·	13-28
Media Player Settings · · · · · · · · · · · · · · · · · · ·	
S! Appli Settings · · · · · · · · · · · · · · · · · · ·	13-32
Reset ·····	
Text Entry/Phone Book · · · · · · · · · · · · · · · · · ·	13-34
File Transfer · · · · · · · · · · · · · · · · · · ·	
Various Tools·····	13-38
Communications · · · · · · · · · · · · · · · · · · ·	13-44

13

Display Settings

Menus, Incoming Images, etc.

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Main Screens \Rightarrow \blacksquare \Rightarrow$

Set Menu Icons/Images

Preinstalled Icons/Images	Deco
Saved Icons/Images (Data Folder)	Deco
_	Gamendeco ⇒ (twice) ⇒ YES ⇒ ■
Keitaideco	Deco \longrightarrow or Deco \longrightarrow Sec \longrightarrow Weitaideco \longrightarrow (twice) \longrightarrow YES \Longrightarrow \bigcirc

Set Incoming Call Image

Preinstalled Image	<i>In-Calls</i> → → <i>Voice Call</i> or <i>Video Call</i> → → <i>Original</i> or <i>Ku-man</i> → ■ (twice)
Saved Image (Data Folder/Memory Card)	In-Calls → ■ → Voice Call or Video Call → ■ → Phone Memory or Memory
	$Card$ \blacksquare \Rightarrow Select an image \Rightarrow \blacksquare \Rightarrow to compose the image \Rightarrow \boxdot
Keitaideco	<i>In-Calls</i> → ■ → <i>Voice Call</i> → ■ → <i>Keitaideco</i> → ■ (twice)

Set Incoming Message Image

Preinstalled Image	Messages → ■ → Receiving of DeliveryCheck → ■ → Original of Ku-man → ■ (twice)
Saved Image (Data Folder/Memory Card)	Messages → ■ → Receiving or DeliveryCheck → ■ → Phone Memory or Memory Card → ■ → Select an image → ■ → ♣ to compose the image → □ → ■

Messages → ■ → *Receiving* → ■ → *Keitaideco* → ■ (twice)

Keitaideco

[•] To set Keitaideco for menu icons/images or incoming call/message image, Keitaideco must be set in advance (page 2-32).



- If you receive a call from a person whose picture is sayed to Phone Book and *Picture* under *Caller Details* is set to *ON*, the picture is shown regardless of the incoming image settings. However, if you receive a call from a secret Phone Book entry when Secret Mode is set to Hide, the incoming image is shown.
- If a video file is set as ringtone, the incoming image is not shown.

Mini Tool Settings

Select Calendar, Notepad, Weather News, or other information to appear on Mini Tool during operations or in Standby.

To show Mini Tool. Wide View must be set to OFF.

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Mini Tool \Rightarrow$

Configure Mini Tool Settings

Set a Preinstalled Content *Mini Tool* → Preset or Giant Date → (twice) Set a Saved Content (Data Folder) \blacktriangleright Mini Tool → \blacksquare → Phone Memory → \blacksquare → Select an item → \blacksquare (twice)

 $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Wide View \Rightarrow \blacksquare \Rightarrow$ Start Here

Set Wide View

▶ Select a window \Rightarrow \blacksquare \Rightarrow ON or $OFF \Rightarrow$ \blacksquare

- If you change the *IdleScreen* setting, reconfigure the wallpaper setting.
- *IdleScreen* is fixed to *ON* in Simple Mode.

Set Wide View Collectively ► 🖾 → Wide View ON or Wide View OFF → 🔳

Display Settings



Incoming Caller Details

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Caller Details \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \Box \Rightarrow Display \Rightarrow Display$	
Set Caller Photo to Appear	▶ $Picture$ \Rightarrow ON or OFF \Rightarrow
Set Caller Info to Appear in External Display	$\blacktriangleright Ext. \ Display \Rightarrow \blacksquare \Rightarrow ON \ \text{or} \ OFF \Rightarrow \blacksquare$


- When Picture is set to ON, incoming image does not appear.
- If you receive a call from a secret Phone Book entry when Secret Mode is set to *Hide*, the caller photo is not shown.
- If a video file is set as ringtone, the caller photo is not shown.

Font Settings

The font size and color for Display can be changed.



Backlight Settings

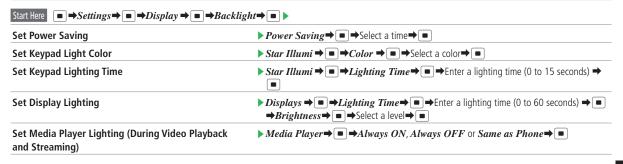

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Exp$	ternal Light → ■ ▶
Set External Light for Notifications	Notification → ■ → Select a type of incoming event → ■ → Select a color or OFF →
Set External Light for Incoming Events	<i>Incoming</i> → ■ → Select a type of incoming event → ■ → Select a color or <i>OFF</i> → ■
Set External Light for Incoming Messages	\blacktriangleright <i>Incoming</i> → \blacksquare → <i>Message</i> → \blacksquare → <i>Color</i> → \blacksquare → Select a color or <i>OFF</i> → \blacksquare
Set External Light for Incoming Feeling Mail	► $Incoming$ \Rightarrow $Message$ \Rightarrow $Feeling$ \Rightarrow ON or OFF

Twinkle Light Settings

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Twinkle \ Light \Rightarrow \blacksquare \Rightarrow$

Set Twinkle Light

Set a Preinstalled/Original Pattern	Settings → Select an item → Preset or Original → Select a pattern →
Turn Off Twinkle Light	<i>Settings</i> → ■ → Select an item → ■ → <i>OFF</i> → ■
Set Twinkle Light Collectively	▶ Settings → ■ → 🖾 → Preset, Original or OFF → ■
Create an Original Twinkle Light Pattern	Design Light Select a title field Rename Enter a title Create Color Select a color Pattern Select a pattern Select a pattern


- Select a base color from the color table using the keypad. Then, use to adjust the color density.
 While selecting a color and pattern, Twinkle Light flashes in the color and pattern currently being selected so that you can check them.

Operator Name Setting	
Show/Hide Operator Name in Standby	$\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Display \Rightarrow \blacksquare \Rightarrow Operator Name \Rightarrow \blacksquare \Rightarrow ON \text{ or } OFF \Rightarrow \blacksquare$
Interface Language	
Switch Language	■ → Settings → ■ → Phone Settings → ■ → EEE (Language) → ■ → Select a language → ■ • If you select Automatic, the language set on USIM Card is automatically selected.
Charging In Progress Image (Slideshow)	
Start Here ■ → Tools → ■ → Photo Stand → ■ ▶	
Set Slideshow On/Off	 ON/OFF → ■ →ON or OFF → ■ →Settings → ■ →Image → ■ →Images List → ■ →Select an image list → ■ Images must be saved to an image list in advance.
Set Images Saved to an Image List	> ON/OFF→ ■ →ON or OFF→ ■ →Settings → ■ →Image → Images List → ■ →Select an image list → 圖 →Select an item → ■ →Phone Memory or Memory Card → ■ →Select an image → ■ (twice) → 圖
Set Images in a Folder	$\triangleright ON/OFF$ → $\blacksquare \rightarrow ON$ or OFF → $\blacksquare \rightarrow Settings$ → $Image$ → $Select$ $Folder$ → $\blacksquare \rightarrow Select$ a folder $\blacksquare \blacksquare$
Set Preinstalled Images	$\triangleright ON/OFF$ $\rightarrow \bigcirc ON$ or OFF $\rightarrow \bigcirc Settings$ $\rightarrow \bigcirc Image$ $\rightarrow \bigcirc Preset$ $\rightarrow \bigcirc Preset$
Set Template	\blacktriangleright <i>ON/OFF</i> → \blacksquare \rightarrow <i>ON</i> or <i>OFF</i> → \blacksquare \rightarrow <i>Settings</i> → \blacksquare \rightarrow <i>Templates</i> → \blacksquare \rightarrow Select a template → \blacksquare (twice)
Set Duration	$\triangleright ON/OFF$ → $\blacksquare \rightarrow ON$ or OFF → $\blacksquare \rightarrow Settings$ → $\blacksquare \rightarrow Duration$ → $\blacksquare \rightarrow Enter$ time

Display Settings

Active Window Settings

Configure settings for S! Quick News in Shortcut Mode (page 2-8).

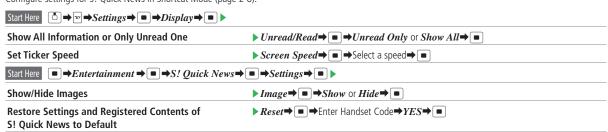

Incoming Event Settings

Response Settings for Incoming Calls Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Call Settings \Rightarrow \blacksquare \Rightarrow Answer Type \Rightarrow \blacksquare \Rightarrow$ Answer Incoming Calls by Opening Handset (Open to $\longrightarrow Open \text{ to } Talk \Rightarrow \square \Rightarrow ON \Rightarrow \square$ Talk) \blacktriangleright Any Keys \Rightarrow \bigcirc \bigcirc ON or OFF \Rightarrow \bigcirc Set Any Key Answer • If Any Key Answer is set to ON, you can answer incoming voice calls/Video Calls and S! Circle Talk calls by pressing a key from to Swaze, ** or ** or **, besides **, or ** or **, for to sale of the sale of th Video Call). **Answering Machine Settings** Set Answering Machine Response Time $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Call Settings \Rightarrow \blacksquare \Rightarrow Ans Machine \Rightarrow \blacksquare \Rightarrow Set Duration \Rightarrow$ ■ →Enter a response time → ■ **Reject Settings** $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Call Settings \Rightarrow \blacksquare \Rightarrow Reject Calls \Rightarrow \blacksquare \Rightarrow Enter Handset Code \rightarrow$ Reject Specific Incoming Calls ▶ Select calls to reject \rightarrow \bigcirc \rightarrow $ON \rightarrow$ \bigcirc **Reject Calls from Specified Phone Numbers** \triangleright Specific #s → \bigcirc \bigcirc ON/OFF → \bigcirc \bigcirc ON → \bigcirc \triangleright Specific #s → \blacksquare → Reject List → \blacksquare → \blacksquare → Phone Book → \blacksquare → Select an entry → Use Reject List (Save Numbers to Reject List) ■ ⇒Select a phone number ⇒ ■ (twice) Enter a Number \blacktriangleright Specific #s → \blacksquare → Reject List → \blacksquare → \blacksquare → Phone Number → \blacksquare → Enter a phone number → (twice) Select a Number from Call Log \blacktriangleright Specific #s → \blacksquare → Reject List → \blacksquare → \blacksquare → Call Log → \blacksquare → Select a phone number → (twice)

Incoming Event Settings

• If Call Barring (page 3-17) is set for incoming calls, Call Barring takes priority.

Sound Settings

Set Ringtone Volume

Manner Mode ■ ⇒Settings ⇒ ■ ⇒Sounds ⇒ ■ ⇒Manner Mode ⇒ ■ ▶ Start Here Switch Manner Modes **Switch Mode** → Select a mode → **Original Mode**Select an Original Mode Select an item Set each **Customize Original Mode** item→ • For details on setting each item, see "Sound and Vibration". **Sound and Vibration** $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Sounds \Rightarrow \blacksquare \triangleright$ Set Ringtone Set a Preinstalled Sound \blacktriangleright *Incoming* → \blacksquare → Select a type of incoming event → \blacksquare → *Ringtone* → \blacksquare → *Patterns* or *Melodies* → Select a ringtone → Set a File in Data Folder/Memory Card ► Incoming \Rightarrow \blacksquare \Rightarrow Select a type of incoming event \Rightarrow \blacksquare \Rightarrow Ringtone \Rightarrow \blacksquare \Rightarrow Phone *Memory* or *Memory Card* → Select a file → (twice) • If a play point is included in the selected file, select the play point after selecting the file. • If you set a SMAF file which includes an image as ringtone, the image may not be shown correctly. Incoming → ■ → Voice Call or Message → ■ → Ringtone → ■ → Keitaideco → Set Downloaded Keitaideco Ringtone (twice) Keitaideco must be set in advance (page 2-32).

volume level→

► Incoming \Rightarrow \blacksquare \Rightarrow Select a type of incoming event \Rightarrow \blacksquare \Rightarrow Ringtone Vol. \Rightarrow \blacksquare \Rightarrow Set

Sound Settings

Set Ringtone Duration	
Specify a Time by Direct Entry	Incoming ⇒ ■ ⇒ Message, Delivery Check, Missed Call or Friend Status ⇒ ■ ■ Duration ⇒ ■ ⇒ Set Duration ⇒ ■ ⇒ Enter a ring time (1 to 99 seconds) ⇒ ■
Play a Specified File until the End	Incoming → ■ → Message, DeliveryCheck, Missed Call or Friend Status → ■ ■ Duration → ■ → 1 Cycle → ■
Set Vibration	<i>Incoming</i> → ■ → Select a type of incoming event → ■ → <i>Vibration</i> → ■ → Select a pattern → ■
Set Vibration for Incoming Messages	Incoming → → Message → → Vibration → → Pattern → → Select a pattern →
Set Vibration for Incoming Feeling Mail	► Incoming → \blacksquare → Message → \blacksquare → Vibration → \blacksquare → Feeling → \blacksquare → ON or OFF
Set Sound Volume	► Sound Vol. → ■ → Set volume level → ■
Set Speaker Volume	► Speaker Vol. → ■ → Set volume level → ■
Set Sound Effects	
Set Default Tone	 Sound Effects → ■ → Select an item → ■ → Tone Type → ■ → Original → ■ Select Original 1 (default) or Original 2 for Keypad Tone.
Set a Preinstalled Melody	 Sound Effects → ■ → Select an item → Tone Type → ■ → Melodies → ■ → Select a melody → ■ You cannot set preinstalled melodies as Keypad Tone.
Set a File in Data Folder/Memory Card	 Sound Effects → ■ → Select an item → ■ → Tone Type → ■ → Phone Memory or Memory Card → ■ → Select a file → ■ (twice) You cannot set files which include an image as sound effects.

Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Sounds \Rightarrow \blacksquare $	
Set Sound Effects Volume	Sound Effects Select an item Tone Volume Set volume level ■
Set Kacha-ble Lets you know there are missed calls or new messages by vibrating handset when you open it.	► $Kacha-ble$ → $Select$ an item → ON or OFF → ON
Set Kacha-ble Collectively	<i>Kacha-ble</i> → □ → □ → ON or <i>OFF</i> → ■

Mail Settings

Message Creation Settings


Add Recipients to Simple Input List	 Simple Input → ■ → Select a list item with no entry → ■ → Enter an address For details on how to enter addresses, see page 4-4.
Set Groups	Category → ■ → Select a group → ■ → 圖 → Enter addresses
Edit a Group Name	<i>Category</i> → ■ → Select a group → ¬ <i>Pename</i> → ■ → Enter a group name → ■
Set Send Type (To/Cc/Bcc) for Each Address	\blacktriangleright Category \Rightarrow \blacksquare \Rightarrow Select a group \Rightarrow \blacksquare \Rightarrow Select an address \Rightarrow \boxdot \Rightarrow To/Cc/Bcc \Rightarrow \blacksquare To, Cc or Bcc \Rightarrow \blacksquare
Set a Signature	<i>Signature</i> → ■ → <i>Signature 1</i> or <i>Signature 2</i> → ■ → Enter a signature → ■
Cancel Signature Insertion	▶ Signature → ■ → No Signature → ■
Edit Signature	► Signature → ■ → Signature 1 or Signature 2 → □ → Edit → ■ → Edit the signature → ■
Set Default Mail Type	▶ Default Type \rightarrow ■ \rightarrow SMS or S! Mail \rightarrow ■
Show/Hide Notification When Mail Type is Switched	Notify Type → ■ →Show or Hide → ■

Outgoing Messages

Start Here → Settings → ■ → Sending → ■ ▶	
Show/Hide Sending Confirmation Window	Confirmation →■→Show or Hide→■
Set Vibration When Sending is Confirmed	\blacktriangleright <i>Vibration</i> ⇒ \blacksquare \Rightarrow <i>ON</i> or <i>OFF</i> ⇒ \blacksquare
Check Delivery	\blacktriangleright DeliveryCheck $\Rightarrow \blacksquare \Rightarrow Ask \Rightarrow \blacksquare$
Set Server Storage Period of Sent Messages	<i>Expiry</i> → SMS or S! Mail → Select an expiry time →
Set Message Priority	Priority ■ Select a priority ■
Set Time for Delivering Messages to Recipients	Delivery Time → Select a delivery time ■
Save a Reply Address	 Reply to → ■ →ON → ■ →Enter an address For details on how to enter addresses, see page 4-4.
Edit SMS Center Number (+819066519300)	<i>Message Ctr</i> → (three times)→Input SMS Center Number →

- SMS may become unavailable after changing SMS Center Number.
 Once SMS Center Number is changed, resetting handset will not restore the default number.

Display Settings

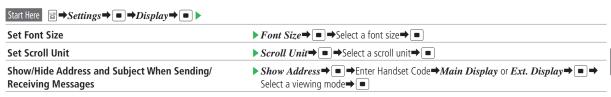

Incoming Massages

Mail Settings

Incoming Messages	
Start Here	•
Set New Message Retrieve Mode	 ▶ Retrieve Mode → ■ → Home or Roaming → ■ → Immediate, Phone # Only or Deferred → ■ • Select Home to receive S! Mail within SoftBank's service area; select Roaming to receive S! Mail outside that area.
Set Automatic Display of Picture Files	► Auto-extract → ■ → Picture → ■ → Show or Hide → ■
Set Automatic Playback of Sound Files	ightharpoonup Auto-extract ⇒ $ ightharpoonup Sound$ ⇒ $ ightharpoonup Unmute or Mute$ $ ightharpoonup$
Set Spam Filter	<i>Anti-Spam</i> → Enter Handset Code → <i>Sort Messages</i> → <i>Sort</i> or <i>Do not Sort</i> → <i>Select Folder</i> → <i>Select a</i> folder →

3D Pictograms

3D Pictograms are a 3D animation playback function compatible with words, pictographs and emoticons in message text.

Start Here \implies \rightarrow Settings \Rightarrow \implies \implies \implies \implies \implies \implies \implies

- 3D Pictograms are unavailable for S! Mail notifications, SMS with no text and Graphic Mail.
- Background playback of music files is paused during 3D Pictograms playback.

3D Mail

3D Mail is a function to play 3D animation that reflects the content of mail by extracting pictographs, certain emotional expressions or keywords in message text.

Set Playback of 3D Mail


 \Longrightarrow Settings \Longrightarrow \Longrightarrow 3D Mail \Longrightarrow \Longrightarrow ON or OFF \Longrightarrow

- 3D Mail is unavailable for S! Mail notifications, messages with no text and Graphic Mail.
- If 3D Mail is set to **ON** when Auto Play of 3D Pictograms is set to **All** or **Unread Only**, 3D Mail is played after playback of 3D Pictograms.

Message Box Settings

Disable Auto-delete	
Switch Between Folder View and All Message View	$ \Rightarrow Message \ Box \Rightarrow $
Switch Between Mixed View and Separate View	S→Message Box→ → → Display → ■ → Received/Sent → ■ → Mixed View or Separate View → ■

Message List View Settings

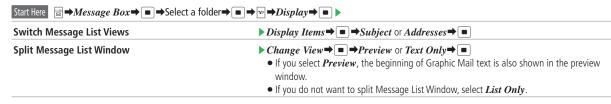

Mail Settings

When Subject is selected for Display Items, the preview window shows the other party's address. When Addresses is selected for Display Items, the subject is shown in the preview window.

 Read
 Select messages → □ → □

 Switch All Messages in a Folder Between Unread and Read
 \mathred \to Unread/Read \mathred \mathred \to Unread or To Read \mathred \mathred \to Change \mathred \mathre

▶ \square → Unread/Read → \square → Select Multi → \square → To Unread or To Read → \square →

→ -

• Only received messages can be switched between unread and read.

Switch Multiple Messages Between Unread and

13 Mini Tool Setting in Message List Window

Internet Settings

Security Settings

Security Settings		
Start Here for Yahoo! Keitai → Yahoo! Keitai → Security → Security		
Start Here for PC Site Browser \Rightarrow Yahoo! Keitai \Rightarrow \Rightarrow Settings \Rightarrow \Rightarrow Security \Rightarrow \Rightarrow		
Send/Block Manufacture Number	<i>Manufacture #</i> ⇒■ <i>Send</i> or <i>Do not Send</i> → ■	
Configure Send Referer Setting	▶ Send Referer⇒ ■ ⇒Send or Do not Send⇒ ■	
Enable/Disable Cookies	▶ Cookie ⇒ ■ ⇒ Enable, Disable or Always Ask ⇒ ■	
Configure Script Settings	▶ Script → ■ → Ask Once, Enable, Disable or Always Ask → ■	
Check Root Certificates	▶ Root Certif. ⇒ ■ ⇒Select a root certificate ⇒ ■	
Set Authentication	▶ Authentica ⇒ ■ ⇒Retain Info, Per Session or Do not Retain ⇒ ■	
Set SSL Communication	Session Info.⇒■⇒Show or Hide⇒■	

Internet Settings

Universal Settings for Yahoo! Keitai and PC Site Browser		
Start Here for Yahoo! Keitai > Yahoo! Keitai > Settings > Settings > Start Here for PC Site Browser > Yahoo! Keitai > Settings > Set		
Delete All Cookies	<i>Memory Mgr.</i> → ■ →Enter Handset Code → <i>Clear Cookie</i> → ■ → <i>YES</i> → ■	
Clear Authentication Info	<i>Memory Mgr.</i> → \blacksquare →Enter Handset Code → <i>Clear Auth</i> → \blacksquare → <i>YES</i> → \blacksquare	
Return Browser Settings, Bookmarks, and Screen Memo to Default	<i>Browser Reset</i> ⇒ ■ →Enter Handset Code → <i>YES</i> → ■	
Restore Settings and Stored Information to Default	Reset Setting ■ ■Enter Handset Code YES ■	
Yahoo! Keitai Settings		
Set Storage Location of Downloaded Contents	■ ⇒Yahoo! Keitai ⇒ ■ ⇒Settings ⇒ ■ ⇒Storage ⇒ ■ ⇒Phone Memory or Memory Card ⇒ ■	
PC Site Browser Settings		
Do Not Show Alert When Switching Browsers	■ → Yahoo! Keitai → ■ → Settings → ■ → Warning → ■ → PC Browser of Yahoo! Keitai → ■ → Hide → ■	

Web Page Settings	
Web Page → (page 5-3, 5-4)	
Change Font Size	Web Page→¬Settings→¬Font Size→¬Select a size→¬
Change Scroll Unit	Web Page → Settings → Scroll Unit → Select a scroll unit →
Change Text Encoding Type	Web Page \Rightarrow \triangleright \Rightarrow $Settings \Rightarrow$ \blacksquare \Rightarrow $Encoding Type \Rightarrow \blacksquare \Rightarrow Select a text encoding type \Rightarrow \blacksquare$
Adjust Sound Playback Volume	Web Page→¬Settings→¬Sound Volume→¬Set volume level→¬
Do Not Download Images and Melodies from Web Pages	Web Page \Rightarrow \Rightarrow $Settings \Rightarrow$ \blacksquare \Rightarrow $Downloads \Rightarrow$ \blacksquare \Rightarrow $Images$ or $Sounds \Rightarrow$ \blacksquare \Rightarrow $Donot Download \Rightarrow$ \blacksquare
Set Security Lock	■ → Yahoo! Keitai → ■ → Bookmarks, Screen Memo, Enter URL or History → Security Lock → ■ → Enter Handset Code → Lock or Unlock → ■
Set Security Lock to a Bookmark Folder	■ \Rightarrow Yahoo! Keitai \Rightarrow ■ \Rightarrow Select a folder \Rightarrow \Rightarrow Security Lock \Rightarrow ■ \Rightarrow Enter Handset Code \Rightarrow Lock or Unlock \Rightarrow ■
Set Security Lock to PC Sites	■→Yahoo! Keitai→■→圖→Bookmarks, Screen Memo, Enter URL or History→ → Security Lock→■→Enter Handset Code→Lock or Unlock→■

13

Call Settings

International Call Settings

Switch Network Systems (3G/GSM)	▶ SelectNetwork \Rightarrow \blacksquare \Rightarrow Automatic, 3G or GSM \Rightarrow \blacksquare
Change International Code	<i>Intl. Code</i> → ■ →Enter Handset Code →Enter a code → ■
Add Country Codes to Country Number List	\blacktriangleright CountryNumber → \blacksquare → \boxdot → Enter a country name → \blacksquare → Enter a country code → \blacksquare
Set Operator to Use	 Operator → ■ → Auto/Manual → ■ → Automatic or Manual → ■ → Select an operator → ■ When Automatic is selected, an operator is automatically selected according to the priority list.
Change Priority Order of Operators	 Operator → ■ → Set Priority → ■ → □ → Insert or Move → ■ → Select an operator → ■ (twice) → Select a position → ■ If you select Add to Bottom, you can select and add an operator to the end of the priority list.
Add an Operator	

Call Cost Settings

Start Here \longrightarrow Settings \longrightarrow Call Settings \longrightarrow Call Time & Cost \longrightarrow		•
--	--	---

Set Currency & Exchange Rate	<i>Cost Unit</i> → ✓ <i>Settings</i> → Enter PIN2 → Enter a currency (three characters) → Enter an exchange rate → <i>YES</i> ■
Show Call Cost After Each Call	$\triangleright Cost Display \Rightarrow \bigcirc N \Rightarrow \bigcirc$
Set Maximum Cost Limit	\triangleright Cost Limit → \blacksquare → \trianglerighteq → Set Max Limit → \blacksquare → Enter PIN2 → \blacksquare (twice) → Enter a
	maximum cost limit →

• You cannot make a voice call or Video Call if the total cost reaches the specified maximum cost limit. If the limit is reached during a call, the call ends.

Video Call Settings

Set Alternative Picture	
Set Default Image	$ ightharpoonup Alt. \ Picture ightharpoonup ightharpoonup ightharpoonup ON ightharpoonup ightharpoonup Preset ightharpoonup ightharpoonup (twice)$
Set an Image in Data Folder/Memory Card	► Alt. Picture → • ON → • Phone Memory or Memory Card → • Select at image → • (twice)
Set Self-view Check	\triangleright Self-view ⇒ \blacksquare ⇒ ON or OFF ⇒ \blacksquare
Set Incoming Image Quality	► <i>Image Quality</i> → ■ → Select an item → ■
Add a Phone Number to Auto Answer List	
Select a Phone Number from Phone Book	<i>Auto Answer</i> → ■ → <i>Answer List</i> → ■ ⇒ Enter Handset Code → <i>Phone Book</i> ■ → Select an entry → ■ → Select a phone number → ■ (twice)
Enter a Phone Number Directly	<i>Auto Answer</i> → → <i>Answer List</i> → □ → □ → Enter Handset Code → <i>Phone Number</i> → □ → Enter a phone number → □ (twice)
Select a Phone Number from Call Log	<i>Auto Answer</i> → ■ <i>Answer List</i> → ■ → Enter Handset Code → <i>Call Log</i> → ■ → Select an entry → ■ (twice)
Set Mute	► Mute → ■ → Mute My Voice, Mute All or OFF → ■
Set Audio Output	► Loud Speaker \Rightarrow \blacksquare \Rightarrow ON or OFF \Rightarrow \blacksquare
Set Hold Image	
Set Default Image	► Hold Setting → ■ → Hold on Call or Hold Answer → ■ → Preset → ■ (twice)
Set an Image in Data Folder/Memory Card	► Hold Setting → → Hold on Call or Hold Answer → → Phone Memory or Memory Card → → Select an image → → (twice)

Fountaine Missautaine Cattine

Call Settings

Earphone-Microphone Settings Start Here ■ \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Call Settings \Rightarrow \blacksquare \Rightarrow Earphone Mike \Rightarrow \blacksquare \triangleright Save a Phone Number for Earphone-Microphone Call ► Earphone Call \Rightarrow \bigcirc \Rightarrow $ON/OFF \Rightarrow$ \bigcirc \Rightarrow $ON \Rightarrow$ \bigcirc \Rightarrow Set Number \Rightarrow \bigcirc \Rightarrow Phone Select a Phone Number from Phone Book $Book \Rightarrow \blacksquare \Rightarrow$ Select an entry $\Rightarrow \blacksquare \Rightarrow$ Select a phone number $\Rightarrow \blacksquare$ (twice) **Enter a Phone Number Directly** ► Earphone Call \Rightarrow \bigcirc \Rightarrow $ON/OFF \Rightarrow$ \bigcirc \Rightarrow $ON \Rightarrow$ \bigcirc \Rightarrow Set Number \Rightarrow \bigcirc \Rightarrow Phone $Number \Rightarrow \blacksquare \Rightarrow \text{Enter a phone number} \Rightarrow \blacksquare \text{ (twice)}$ Set Auto Answer \blacktriangleright Auto Answer \Rightarrow \blacksquare \Rightarrow ON/OFF \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare \Rightarrow Enter a Allows you to answer an incoming voice call without pressing the switch when Earphone-Microphone is connected Set Microphone to Use When Earphone-Microphone ▶ Select Mike → ■ → Phone Mike or Earphone Mike → ■ is Connected • To switch microphones during a call (including voice recording): ¬Select Mike→ ¬Phone Mike or Earphone Mike→

- If you set Auto Answer and Answering Machine, Answering Machine is given priority.
- If you set Auto Answer and Voice Mail, the one with shorter response time is given priority. If the response time is the same, Voice Mail is given priority.

External Device Settings

Set Access Point Name (APN) to Perform Packet

□ → Settings → □ → Call Settings → □ → External Device → □ → Empty →

Transmission from a PC

□ → Enter an access point name (APN) → □ → YES → □

Camera Settings

Settings for Shooting Pictures/Videos

5	
Viewfinder → (page 7-3)/ Video Viewfinder → (page 7-5)	
Save Pictures/Videos Automatically	$ \begin{tabular}{ll} Viewfinder/Video Viewfinder \\ \hline \begin{tabular}{ll} \hline \end{tabular} \hline \end{tabular} \\ \hline \end{tabular} \hline \end{tabular} \\ \hline \end{tabular} \hline \end{tabular} \hline \end{tabular} \\ \hline \end{tabular} \hline tabula$
Change Storage Location	Viewfinder/Video Viewfinder $\Rightarrow x \Rightarrow Save \ Settings \Rightarrow x \Rightarrow $
Set Image Quality	Viewfinder/Video Viewfinder \Rightarrow $Picture$ or $Movie$ \Rightarrow \blacksquare \Rightarrow Quality \Rightarrow \blacksquare \Rightarrow Select a quality \Rightarrow \blacksquare
Set White Balance	Viewfinder/Video Viewfinder \Rightarrow $Picture$ or $Movie \Rightarrow$ \blacksquare \Rightarrow $White Balance \Rightarrow$ \blacksquare \Rightarrow Select an item \Rightarrow \blacksquare
Adjust Color Control	Viewfinder/Video Viewfinder \Rightarrow \square \Rightarrow $Picture$ or $Movie \Rightarrow$ \square \Rightarrow $Color Control \Rightarrow$ \square \Rightarrow \square Select a color tone \Rightarrow \square
Set Picture/Video Effects	Viewfinder/Video Viewfinder \Rightarrow $Picture$ or $Movie$ \Rightarrow $Effects$ \Rightarrow \Rightarrow Select an effect \Rightarrow \blacksquare
Adjust Flicker E.g. under fluorescent light, you can set the frequency (Automatic/50Hz/60Hz) to reduce flicker.	Viewfinder/Video Viewfinder $\Rightarrow rac{}{} \Rightarrow Function \Rightarrow rac{}{} \Rightarrow Flicker \Rightarrow rac{}{} \Rightarrow Automatic,$ 50 Hz or 60 Hz \Rightarrow $rac{}{} \Rightarrow$
Set Shortcuts While Shooting Pictures/Videos	Viewfinder/Video Viewfinder $\Rightarrow v \Rightarrow Function \Rightarrow v \Rightarrow Key Shortcut \Rightarrow v \Rightarrow ON$ or $OFF \Rightarrow v$
Set File Name	
Use Date and Time	Viewfinder/Video Viewfinder→ → Save Settings → ■ → File Name → ■ → Date& Time → ■
Define a Name	Viewfinder/Video Viewfinder→ → Save Settings → ■ → File Name → ■ → Define ■

[•] Auto Save cannot be set in *Video* mode.

Camera Settings

Settings for Taking Pictures	
Viewfinder → (page 7-3)/ Preview Window → (page 7-3)	
Set Focus Mode	Viewfinder→¬Function→¬Focus Mode→¬Select a focus mode→¬
Change Shutter Sound	Viewfinder \Rightarrow \Rightarrow Function \Rightarrow \Rightarrow Shutter Sound \Rightarrow \Rightarrow Pattern 1 or Pattern 2 \Rightarrow \Rightarrow
Add Date Stamps	Viewfinder \Rightarrow $Picture \Rightarrow \blacksquare \Rightarrow Date \ Stamp \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare \Rightarrow Select a font color \Rightarrow \blacksquare$
Set Guidelines	Viewfinder $\Rightarrow v \Rightarrow Function \Rightarrow \bullet \Rightarrow Grid \Rightarrow \bullet \Rightarrow ON \text{ or } OFF \Rightarrow \bullet \Rightarrow ON \text{ or } OFF \Rightarrow \bullet \Rightarrow ON \text{ or } OFF \Rightarrow ON $
Take a Picture for a Phone Book Entry	
Create a New Phone Book Entry with a Picture	Preview Window → ▼ → To Phone Book → ■ → Add New → ■ → Create a Phone Book entry • Set Camera mode to Mobile and Picture Size to W112 × H112 in advance.
Add a Picture to a Phone Book Entry	 For details on saving a Phone Book entry, see page 2-17. Preview Window → ¬To Phone Book → ¬Add → ¬Select a Phone Book entry → ¬Select a Phone Book entry → ¬Select Phone Book entry contains a picture, select YES and press to replace the picture. Set Camera mode to Mobile and Picture Size to W112×H112 in advance.

• When Camera mode is set to *Digital*, or when it is set to *Mobile* with Picture Size set to *W112×H112*, you cannot add date stamps.

Settings for Recording Videos	
Video Viewfinder → (page 7-5)/ Preview Window → (page 7-6)	
Do Not Record Sound	Video Viewfinder $\Rightarrow Voice Record \Rightarrow OFF \Rightarrow \blacksquare$
Enlarge Video Viewfinder	Video Viewfinder → \(\psi \rightarrow ScreenDisplay \rightarrow \) • Cannot be set when Video mode is set to \(Video \).
Change Start/End Tone	Video Viewfinder $\Rightarrow v \Rightarrow Function \Rightarrow \bullet \Rightarrow Start/End \Rightarrow \bullet \Rightarrow Pattern 1$ or $Pattern 2 \Rightarrow \bullet \bullet$
Set Preview On/Off	Video Viewfinder \Rightarrow $rac{}{}$ \Rightarrow $rac{}{}$ $rac{}{}$ Function \Rightarrow $rac{}{}$ $rac{}{}$ $rac{}$ $rac{$
Set Recorded Video as a Ringtone Pattern	
Create a New Phone Book Entry with a Ringtone Pattern Set for It	Preview Window → ▼ → To Phone Book → ■ → Add New → ■ → Create a Phone Book entry • Cannot be set when Video mode is set to Video. • For details on saving a Phone Book entry, see page 2-17.
Set a Ringtone Pattern for a Phone Book Entry	Preview Window → ¬To Phone Book → → Add → → Select a Phone Book entry → → ⇒ ⇒ Select a Phone Book entry of a ringtone pattern has already been set for the selected Phone Book entry, select YES and press of to replace the ringtone pattern. Cannot be set when Video mode is set to Video.

Customization 3

TV Settings

Set TV Start-up View	■ → TV → ■ → Settings → ■ → First View → ■ → Full Screen, Portrait of Landscape → ■
TV Audio Setting	
Set Audio Output	■ → TV → ■ → Settings → ■ → Output Settings → ■ → Speaker/Earphone or Wireless → ■ • When Wireless is selected: Select a paired Bluetooth® compatible device → ■ • For details on pairing a Bluetooth® compatible device, see page 12-5 as well as the instruction manual for the device.
Settings for Watching TV	
Start Here $\longrightarrow \searrow \longrightarrow Settings \longrightarrow \bigcirc$	
Channel List Name	> Set Channels → ■ → Select a channel list → ¬Rename → ■ → Enter a channel list name → ■
Auto-off Timer	▶ Off-timer⇒ ■ ⇒30 minutes, 60 minutes, 120 minutes or OFF⇒ ■
Image and Sound	





Start Here	
Set Image Sharpness	► Settings → ■ → Screen Settings → ■ → Sharpness → ■ → Sharp, Soft or OFF →
Set Economy Mode	> Settings → ■ → Screen Settings → ■ → Economy Mode → ■ → ON or OFF →
Set Subtitles	<i>Subtitles</i> →■→ <i>ON</i> or <i>OFF</i> →■
Switch Main and Sub Audio	Switch Audio → ■ → Main or Sub → ■
Data Broadcasts	
Start Here $\longrightarrow \longrightarrow Settings \longrightarrow \bigcirc \longrightarrow Datacasting \longrightarrow \bigcirc \longrightarrow$	
Set Data Communication Confirmation Window	► Start Comm. → ■ → Ask before or Do not Ask → ■
Set Secure Connection Confirmation Window Specify whether a confirmation window appears whenever data communication that uses encryption, a digital signature, or some other security function is performed over a secure connection (SSL).	► Go to Secured → ■ → Ask before of Do not Ask → ■
Set Memory Access Confirmation Window	► Access Memory → ■ → Ask before or Do not Ask → ■
Delete Broadcast Data	
Delete Data of a Station	\blacktriangleright Clear Memory → \blacksquare → Select a station → \trianglerighteq → Clear → \blacksquare → YES → \blacksquare
Delete All Data	\blacktriangleright Clear Memory → \blacksquare → \blacksquare → Clear All → \blacksquare → Enter Handset Code → YES → \blacksquare
Select a Station and Delete by Entry	\blacktriangleright Clear Memory → \blacksquare → Select a station → \blacksquare → Select an entry → \blacksquare → Clear → \blacksquare → YES → \blacksquare
Delete All Data of a Station and Its Affiliated Stations	<i>Clear Memory</i> → Select a station → ✓ <i>Procear All</i> → Enter Handset Code → <i>YES</i> → ■

TV Settings



- Positioning cannot be done when Positioning Lock is set. To send location information, set Positioning Lock to OFF.
- Even if *Always Ask* or *Send* is specified for location information send setting, location information is not sent if *Do not Send* is selected for S! GPS Navi location information send setting (*LocationProperty*).

Settings for View Timer



Media Player Settings

Settings for Playing Music	
Start Here ■ → Media Player → ■ → Audio →	•••
Set Audio Output	 Output Settings → ■ ⇒ Speaker/Earphone or Wireless → ■ When Wireless is selected: Select a paired Bluetooth® compatible device → ■ For details on pairing a Bluetooth® compatible device, see page 12-5 as well as the instruction manual for the device.
Set Wallpaper During Playback	▶ Player Image⇒ ■ → Original or Ku-man → ■

S! Appli Settings

Operational Settings

Change Sound Effect Volume	Volume Set volume level ■
Set Backlight	▶ Backlight⇒ ■ →ON/OFF → ■ →Always ON, Always OFF or Same as Phone ■
Set Flashing of Backlight	► Backlight \Rightarrow \blacksquare \Rightarrow Blink \Rightarrow \blacksquare \Rightarrow ON or OFF \Rightarrow \blacksquare
Set Vibration	\blacktriangleright Vibration \Rightarrow ■ \Rightarrow ON or OFF \Rightarrow ■
Set Priority While Running S! Appli	
Set Priority When a Voice/Video Call Arrives	► Calls&Alarms → ■ → Voice Call or Video Call → ■ → Pause Apps or Continue Apps → ■
Set Priority When a Message Arrives	► Calls&Alarms → ■ → Message → ■ → Pause Apps or Continue Apps → ■
Set Priority When Alarm is Activated	► Calls&Alarms → ■ → Alarm → ■ → Pause Apps of Continue Apps → ■

Other Settings

Start Here ■ ⇒S! Appli → ■ ▶	
Set Confirmation Window for Making Calls or Network Connection	<i>Library</i> → Select an S! Appli → Security → Select a function → → Blanket, Session, Oneshot or No → ■
Update S! Appli Information on Memory Card	\triangleright Card Sync \Rightarrow \blacksquare \Rightarrow YES \Rightarrow \blacksquare
View S! Appli License Information	▶ Information ⇒ ■
Check S! Appli Root Certificates	Certification → Select a certificate →



Resetting Handset to Default

Start Here \longrightarrow \Rightarrow Security \Rightarrow \implies Reset \Rightarrow \implies	
Return All Settings to Default and Delete All Data Stored on Handset	<i>Reset All</i> →■→Enter Handset Code→ <i>YES</i> →■
Reset All Settings to Default	<i>Reset Setting</i> → ■ → Enter Handset Code → <i>YES</i> → ■
Delete All Phone Book Entries, Files in Data Folder and Messages	<i>Clear Memory</i> → Enter Handset Code → YES → ■
Reset Confirmation Windows to Default	<i>Confirmation</i> → Enter Handset Code → YES →

- Files or information saved on USIM Card and memory card are not restored after resetting handset.
- Reset All or Clear Memory are unavailable when there is data created by a Lifestyle-Appli on the IC card. Moreover, Reset All cannot be performed when Web restriction under Restricted Mode is set to ON. Delete the data created by the Lifestyle-Appli and set Web restriction to OFF to perform reset operations.
- Performing Reset All or Clear Memory deletes some preinstalled S! Appli and contents, which cannot be restored to the status at the time of purchase.

Text Entry/Phone Book

Text Entry Settings	
Start Here In a text entry window → ¬Customize → □	•
Change Input Method	▶ Input Method→■→Standard or Beeper→■
Do Not Show Word Suggestions from Entered Text	\blacktriangleright Prediction → \blacksquare → Predict Text → \blacksquare → OFF → \blacksquare
Do Not Predict Next Phrase from Entered Phrases	\triangleright Prediction \Rightarrow \blacksquare \Rightarrow Phrase \Rightarrow \blacksquare \Rightarrow OFF \Rightarrow \blacksquare
Set Custom Window	Custom Window ■ → Add to Window ■ (twice) → Enter symbols and pictographs → ■
Show/Hide Custom Window	 Custom Window → ■ → Display → ■ → Display or Do not Display → ■ When Display is set, Custom Window appears in text entry windows so that you can quickly enter symbols and pictographs that are saved to Custom Window.
Set Text Deletion Method	 Clear Setting → Delete or Back Space → ■ When Delete is set, pressing believes a character to the right of the cursor; when Back Space is set, pressing believes a character to the left of the cursor.
Reset Prediction Dictionary/Conversion Dictionary	▶ Reset Learned → ■ → Prediction or Conversion → ■ → YES → ■

Phone Book Settings Start Here ■ → Phone Book → ■ → Settings → ■ >		
Prohibit Use of Phone Book	 ▶ Phone Book Lock ■ If you want to use Phone Book, enter Handset Code to temporarily unlock Phone Book Lock. 	
• If Phone Book Lock is set to <i>Lock</i> , Speed Dial	is unavailable to make calls.	
Settings for Phone Book Groups		
Edit a Group Name/Group Icon	■ → Phone Book → ■ → Group → ■ → Select a group → ■ → Select the group name → ■ → Enter a group name → ■ → Select a group icon → ■ → 圖 ● Press → and select To USIM or To Phone to switch between handset and USIM Car	

File Transfer

Settings for Bluetooth® Communication $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Connectivity \Rightarrow \blacksquare \Rightarrow Bluetooth \Rightarrow \blacksquare \Rightarrow$ Start Here Check Details of a Paired Bluetooth® Compatible **Paired Device ■ →** Select a device **→ ■** Device Set a Bluetooth® Compatible Device as Trusted ▶ Paired Device \Rightarrow \blacksquare \Rightarrow Select a device \Rightarrow $rac{r}{r}$ \Rightarrow Trust Device \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare Device If you set a paired Bluetooth® compatible device as trusted device, a confirmation window does not appear and a connection is established when a connection request is received from that device. Check Details of Handset ▶ Settings → ■ → Details → ■ Change Name of Handset ► Settings \Rightarrow \blacksquare \Rightarrow Device Name \Rightarrow \blacksquare \Rightarrow Enter a device name of handset \Rightarrow \blacksquare Communicate Using a Handsfree Device ▶ Settings → ■ → Set Handsfree → ■ → Handsfree → ■ • To make and receive regular calls on handset, select *Private*. **Hide Handset** \triangleright Settings \Rightarrow \bigcirc \Rightarrow Visibility \Rightarrow \bigcirc \Rightarrow Hide \Rightarrow \bigcirc

• If handset receives a connection request from a device and you register the device to the paired device list by entering an authentication PIN code, a part of the device information is not shown.

Settings for PC Connection

Use USB Cable for Charging

 $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Connectivity \Rightarrow \blacksquare \Rightarrow USB \Rightarrow \blacksquare \Rightarrow Battery \Rightarrow \blacksquare \Rightarrow ON \Rightarrow \blacksquare$

- Charging is not possible while the PC or handset is turned off.
- Charging may not be possible depending on the connection settings of the PC.
- If handset and a PC are connected with the USB cable, either the PC battery or handset battery is consumed depending on the Battery setting, regardless of whether they are communicating data.

ON: PC battery is used.

OFF: Handset battery is used.

Various Tools

Settings for Saving Events

Change Alarm Volume	
Change Vibration	\blacktriangleright Alarm → \blacksquare → ON → \blacksquare → Vibration → \blacksquare → Select a pattern → \blacksquare \blacksquare (twice) → OK → \blacksquare
Set an Image to Appear at Set Time	
Set Default Image	$ \land Alarm \Rightarrow $
Set an Image in Data Folder/Memory Card	\blacktriangleright Alarm → \blacksquare → ON → \blacksquare → Image → \blacksquare → Phone Memory or Memory Card → \blacksquare = Select an image → \blacksquare → \blacksquare to compose the image → \blacksquare → \blacksquare (twice) → OK → \blacksquare
Set a Stamp Icon	\blacktriangleright Stamp Icon → \blacksquare → Select a stamp → \blacksquare → \boxdot → OK → \blacksquare
Set Category	\blacktriangleright <i>Options</i> → \blacksquare → <i>Category</i> → \blacksquare → Select a category → \blacksquare → \boxdot → OK → \blacksquare
Set a Phone Number/E-mail Address/URL	▶ <i>Phone Number</i> , <i>Address</i> or URL \Rightarrow Enter a phone number, e-mail address, or URL \Rightarrow \Rightarrow \Rightarrow OK
Set Link Information (Message/Web Page/Image)	<i>Messages</i> , <i>Screen Memo</i> or <i>Pictures</i> → Select a message, web page, or image → B→OK→■
Set a Location	Location → ■ → Enter a location → ■ → ② → OK → ■

Settings for Calendar

Start Here
→ Tools → □ → Calendar → □ → □ → Settings → □ →


Set Start-up View of Calendar
▶ First View → □ → Select a view format → □

Change Font Color of Events
▶ Font Color → □ → Select a font color → □

Lock Calendar
▶ Calendar Lock → □ → Enter Handset Code → Lock → □

• When Calendar Lock is set, event titles do not appear at the event alarm activation time. Handset Code entry is also required to view event details.

Settings for Saving Tasks

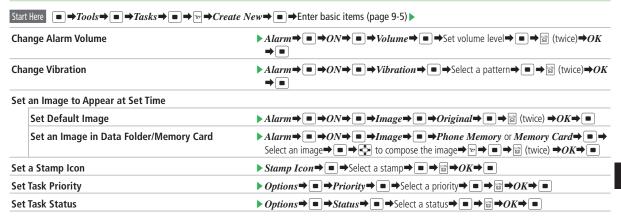

Do Not Send a Lock Engaged Notification

various roots	
Settings for Tasks	
Lock Tasks	$\blacksquare \Rightarrow Tools \Rightarrow \blacksquare \Rightarrow Tasks \Rightarrow \blacksquare \Rightarrow v \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Tasks \ Lock \Rightarrow \blacksquare \Rightarrow Enter$ Handset Code $\Rightarrow Lock \Rightarrow \blacksquare$
• When Tasks Lock is set, task titles do not appear at the t	task alarm activation time. Handset Code entry is also required to view task details.
Time Table Settings	
Start Here → Tools → → Useful Tools → → Time	ne Table → • > > Settings → • >
Set Start/End Time of a Period	> Set Time → ■ → Select a period → ■ → Enter a start time → ■ → Enter an end time → ■ → Enter times in the 24-hour system.
Reset Time Settings to Default	▶ Reset Time → ■ → YES → ■
Settings for Osaifu-Keitai®	
Start Here ■ → Tools → ■ → Osaifu-Keitai → ■ → Ca	ard Settings → ■ ▶
Set Whether Functions Start Up When Handset is Held Up to a Reader/Writer	► Interface \rightarrow Enter Handset Code \rightarrow Select a function \rightarrow \bigcirc \rightarrow ON or $OFF \rightarrow$ \bigcirc
Check IC Card Information	▶IC Card Status ⇒ ■

Do not Send⇒ ■

• You cannot check the contents of an IC card that is locked.

ightharpoonup Remote Lock ightharpoonup ightharpoonup

Settings for S! GPS Navi

Save a Map URL	<i>Map URL Settings</i> → Select an empty item → <i>→Edit URL</i> → ■ →Enter a URI → ■
Edit Map URL Display Name	<i>Map URL Settings</i> → Select a map URL → PRename → Edit the display name → ■
Edit Map URL	 Map URL Settings → ■ → Select a map URL → □ → Edit URL → ■ → YES → ■ → Edit the URL → ■ • The preset map URL cannot be edited.
Delete a Map URL	 Map URL Settings → ■ → Select a map URL → □ → Delete → ■ → YES → ■ The preset map URL cannot be deleted.
Set Map URL	<i>Map URL Settings</i> → Select a map URL →
Set Navi Appli	 Set Navi Appli → ■ → Select a navigation application → ■ When the application becomes unavailable due to USIM Card replacement, perform Reset All or Clear Memory (page 13-33).
Lock Positioning	Positioning Lock ■ Enter Handset Code • ON ■
Set Location Information Send Setting	▶ LocationProperty → □ → □ → Enter Handset Code → Always Ask, Send or Do not Send → □

Alarm Settings	
Start Here → <i>Tools</i> → → <i>Alarms</i> → → Select a	n alarm ⇒ ■ → Enter basic items (page 9-18) → A <i>larm Tone</i> → ■ ▶
Change Alarm Volume	$\blacktriangleright Volume$ → \blacksquare → Set volume level → \blacksquare → \boxdot (twice) → OK → \blacksquare
Change Vibration	\blacktriangleright Vibration → \blacksquare → Select a pattern → \blacksquare → \boxdot (twice) → OK → \blacksquare
Set an Image to Appear at Set Time	
Set Default Image	\blacktriangleright Image → \blacksquare → Original → \blacksquare → \boxdot (twice) → OK → \blacksquare
Set an Image in Data Folder/Memory Card	► $Image$ → \blacksquare → $Phone\ Memory\ or\ Memory\ Card$ → \blacksquare → $Select\ an\ image$ → \blacksquare \Rightarrow \blacksquare (twice) $\Rightarrow OK$ → \blacksquare

World Clock Settings		
Start Here $\blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow Phone \ Settings \Rightarrow \blacksquare \Rightarrow Clock \Rightarrow \blacksquare \Rightarrow World \ Clock \Rightarrow \blacksquare \Rightarrow Settings \Rightarrow \blacksquare \Rightarrow \Rightarrow Settings \Rightarrow \square \Rightarrow Settings \Rightarrow Set$		
Set a City by GMT Time Difference	► City 1 or City 2 → \square → \square → GMT Offset → \square → \square to select a time difference	
	→ (twice)	
Set Daylight Saving Time (DST)	\blacktriangleright City 1 or City $2 \Rightarrow \blacksquare \Rightarrow P$ $\Rightarrow DST ON/OFF \Rightarrow \blacksquare \Rightarrow ON \text{ or } OFF \Rightarrow \blacksquare$	

S! Information Channel Settings

Do Not Show Weather Indicator in Standby

▶ Weather \Rightarrow \blacksquare \Rightarrow View Settings \Rightarrow \blacksquare \Rightarrow Indicator \Rightarrow \blacksquare \Rightarrow Hide \Rightarrow \blacksquare

▶ Weather \Rightarrow \Rightarrow View Settings \Rightarrow \Rightarrow Prompt \Rightarrow \Rightarrow Show or Hide \Rightarrow

Set Notification of Weather Forecast Updates

Set whether or not to notify of weather forecast updates by Information Prompt.

Setting Ku-man for Standby (Japanese)

Set Ku-man, a 3D animated character, to appear in Standby. Ku-man changes his outfit according to the seasons and time of the day, and makes all sorts of comments with various gestures.

Set Ku-man to Appear in Standby

■ ➡錠 (Settings)➡ ■ ➡ 無く ¬ まん (Idle Screen) ➡ ■ ➡ ON or OFF ➡ ■

• To make Ku-man appear in Standby, you need to set 言語選択 (Language) to 日本語 (Japanese). Ku-man does not appear when S! Quick News information is being selected in Standby.

© Dora communications

Communications

Settings for S! Friend's Status

Edit Status Settings of My Status	
Set All Answer Statuses Collectively	\blacktriangleright \Longrightarrow Settings \Rightarrow \blacksquare \Rightarrow Status Setting \Rightarrow \blacksquare \Rightarrow Select an item \Rightarrow Select an it
Save Members to Active Window	▶ • to select a group → • to select a member → • Active Window → • (twice) • Not Registered → •
Ignore Saving Requests from People Not in Phone Book	$\triangleright $ \Rightarrow Settings \Rightarrow $\blacksquare \Rightarrow$ Request Reply $\Rightarrow \blacksquare \Rightarrow$ Known Only $\Rightarrow \blacksquare$
Ignore All Saving Requests	► ¬Settings → ■ → Request Reply → ■ → Do not Answer → ■
Settings for S! Friend's Status/S! Circle Talk	
Disable S! Friend's Status/S! Circle Talk	■ ⇒Settings ⇒ ■ ⇒Security ⇒ ■ ⇒IP Service ⇒ ■ ⇒OFF ⇒ ■


USIM Card · · · · · · · · · · · · · · · · · · ·	• • • • • • • • • 14-	2
Handling USIM Card · · · · · · · · · · · · · · · · · · ·	14-	2
USIM Codes (PIN/PIN2) · · · · · · · · · · · · · · · · · · ·	14-	2
Inserting and Removing USIM Card · · · · · · · · · · · · · · · · · · ·	14-	3
Battery		
Battery Installation · · · · · · · · · · · · · · · · · · ·	14-	5
Software Update · · · · · · · · · · · · · · · · · · ·	14-0	6
Updating Software · · · · · · · · · · · · · · · · · · ·	14-	6
Troubleshooting · · · · · · · · · · · · · · · · · · ·		
Text Entry Keys·····	14-	9
Standard Mode · · · · · · · · · · · · · · · · · · ·	14-	9
Beeper Mode · · · · · · · · · · · · · · · · · · ·	14-1	0
Simple Mode Function List · · · · · · · · · · · · · · · · · · ·		
Specifications · · · · · · · · · · · · · · · · · · ·	14-1	7
Main Specifications · · · · · · · · · · · · · · · · · · ·		
Specifications by Function · · · · · · · · · · · · · · · · · · ·	14-1	9
Default Settings·····		
Glossary·····		
Index · · · · · · · · · · · · · · · · · · ·		
Alphabetic Order · · · · · · · · · · · · · · · · · · ·	· · · · · 14-3	3
By User Action · · · · · · · · · · · · · · · · · · ·		
Warranty & After Sales Service · · · · · · · · · · · · · · · · · · ·		
Warranty · · · · · · · · · · · · · · · · · · ·		
After Sales Service · · · · · · · · · · · · · · · · · · ·		
Customer Service·····	14-4	8

USIM Card

Handling USIM Card

Universal Subscriber Identity Module (USIM) Card is an IC card containing customer and authentication information, including handset number, and limited storage for Phone Book entries and SMS messages. USIM Card must be inserted to use handset and Network services (calling, messaging, Web, etc.). Turn handset off before inserting/removing USIM Card.

- Save SMS messages and Phone Book entries on USIM Card (pages 4-19, 13-35).
- Insert USIM Card into compatible SoftBank handsets to access files.
- Do not insert USIM Card into any other IC card device. SoftBank is not liable for any resulting damages.
- Keep the IC chip clean.
- Use a dry, soft cloth to clean USIM Card.
- Do not attach labels to USIM Card. Doing so may damage handset.
- For details on USIM Card, refer to the instruction manual provided with USIM Card.

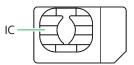

- USIM Cards are the property of SoftBank.
- USIM Cards will be reissued for a fee if lost or damaged.
- Return USIM Cards to SoftBank upon subscription termination.
- Returned USIM Cards are recycled.
- USIM Card specifications may change without prior notice. Preinstalled S! Appli may become unavailable if a different USIM Card is inserted
- Back up USIM Card information. SoftBank is not liable for lost information.
- If your USIM Card or handset (with USIM Card inserted) is lost or stolen, suspend your service immediately. For details, contact your nearest SoftBank Shop or SoftBank General Information (page 14-48).

USIM Codes (PIN/PIN2)

For security, USIM Card has two security codes: PIN and PIN2. Do not forget these codes and do not reveal them to others.

- PIN and PIN2 can be changed (page 11-5).
- The default setting is 9999 for both PIN and PIN2.

PIN

This is a four to eight digit security code to prevent others from using your handset. When PIN Settings is set to *ON*, PIN entry is required each time handset is turned on.

PIN2

This is a four to eight digit security code required for changing data stored on USIM Card, such as resetting Call Time&Cost.

PIN Lock & PUK Codes

PIN Lock or PIN2 Lock is activated when PIN or PIN2 is incorrectly entered three times. PUK (Personal Unblocking Key) codes are required to cancel PIN Lock and PIN2 Lock. To obtain PUK and PUK2, contact SoftBank General Information (page 14-48).


• If PUK or PUK2 is incorrectly entered ten consecutive times, USIM Card is locked. USIM Card Lock cannot be canceled. Contact SoftBank General Information (page 14-48).

Inserting and Removing USIM Card

Before inserting or removing USIM Card, turn off handset and remove the battery.

Insertion

With IC (page 14-2) facing down, slide USIM Card in the direction shown

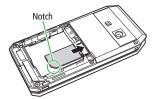

2 Push USIM Card completely in until it stops

Removal


Slide out USIM Card



- Avoid touching or scratching USIM Card's IC. Do not force USIM Card into or out of handset; damage may result.
- Take care not to lose USIM Card after removing it from handset.

Battery

- Before using your handset for the first time, charge the battery.
- Handset uses a lithium ion battery. Battery voltage decreases with operating time (see below).

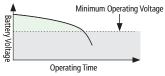

- Extreme temperatures will reduce battery capacity and shorten the operating time. Do not use the battery in high temperatures. This may shorten battery life.
- When storing the battery separately, make sure you put it in a case, etc. and store it in a dry and cool place. This will avoid short-circuiting the battery terminal. It is recommended that you store it uncharged.
- Repeatedly charging and discharging a battery shortens the operating time. If the operating time becomes too short, purchase a new battery.
- When disposing of a used battery, insulate the terminal with tape or place the battery into a plastic bag and then take it to your nearest SoftBank Shop, a recycle shop or follow the local disposal regulations for environmental conservation.
- Be careful not to drop or apply excessive force to the battery.

Battery Drain


- The battery discharges little by little when stored for a long time even if it is not used. It self-discharges at a rate of 10 to 20% per month and about 50% per half a year.
- If handset is used in a location with poor signal reception or left in Standby outside the service area, or if you use Mobile Light or launch S! Appli, it will shorten the battery's operating time.

Battery Level

 The battery level on Display (page 1-4) changes with the operating time. Charge or replace the battery when the level is low. When the battery is about to run out (), a message appears and the battery alarm sounds. Handset shuts down after 30 seconds.

Battery Installation


- Do not remove battery while handset power is on.
- Pressing down around the notch, slide the battery cover (①), and lift it up (②)

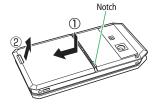

2 Align terminals and insert the battery



 Always remove the battery from the tab (above ▲). Otherwise the terminals may be damaged.

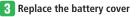



Software Update

Check if software on handset needs to be updated, and update it through the network.

- Connection fees do not apply to updates.
- There are two ways to update software:
 Update now and Schedule update.
 - · Update now: Update software now.
 - Schedule update: Set a date and time to update software so that software is updated automatically at the set time.
- Software updates may take a long time.
- Update software when the battery is fully charged. Do not remove the battery while updating.
- Update software in a place where handset has a good reception, and do not change locations while updating.
- You cannot use other functions during updates.
 If a program is running, software update is not available.
- You can update software without deleting Phone Book entries, images and sounds saved on handset. However, data may be lost or damaged if handset is not in good condition (broken, damaged, wet, etc.). We recommend that you make backups of your important data.
 - If software update fails, you may not be able to operate your handset. In this case, contact SoftBank Customer Assistance (page 14-48).

Updating Software

- Press $\longrightarrow Tools \rightarrow \square \rightarrow Update \rightarrow \square$ $\rightarrow YES \rightarrow \square$
- - The check result appears. Follow the onscreen instructions.

After Software is Updated

When software is updated, handset restarts automatically. After restarting, a confirmation window appears showing update information.

Using Schedule Update

A confirmation window for software update appears on the scheduled time. Press or leave handset for about ten seconds to start automatic software update.

- If you are using another function on handset on the scheduled time, software is not updated.
- If handset is out of the service area on the scheduled time, software is not updated.

Troubleshooting

Problem	Possible Causes and Remedies
Cannot turn the power on.	Is the battery inserted properly (page 14-5)?
Cannot turn the power on.	Has the battery run out (page 14-4)?
Please check connection with your charger. appears and cannot charge the battery.	Is there dust on the terminals of AC Charger, External Device Port or battery? Clean the terminals with a dry cotton swab, etc.
	Does the PIN Entry window appear? PIN Settings is set to <i>ON</i> , enter PIN.
Cannot operate handset normally after turning it on.	Does ¶ or <i>Password Lock</i> appear on Display? Password Lock is activated. Enter Handset Code.
	Does <i>USIM not inserted. Power off the phone and insert USIM</i> . appear on Display? Turn the power off and make sure USIM Card is inserted properly (page 14-3).
	Does an appear on Display? Are you out of the service area or in a location where it is difficult to receive a signal? Move to a location where a signal can reach handset and try again.
Cannot establish a connection for voice calls and Video Calls or use	Are you using handset outside Japan? Set the network system (3G/GSM) and the operator available in the country/region you are visiting (page 13-22).
mail and Web functions.	Is your hand or an object covering Internal Antenna area (page 1-3)?
	Does 🗽 or <i>Offline Mode</i> appear on Display? Cancel Offline Mode (page 1-15).
	Did you dial the whole phone number starting from the area code?
Cannot make voice calls and Video Calls.	Does <i>Network busy</i> . appear on Display? The line is busy. Wait a while and try again.
	Is Call Barring (page 3-17) set for outgoing calls?
	Is Reject Calls (page 13-9) set?
Cannot receive voice calls and Video Calls.	Is Call Forwarding (page 3-10) or Voice Mail (page 3-11) set to All Calls ?
	Is Call Barring (page 3-17) set for incoming calls?

Troubleshooting

Problem Possible Causes and Remedies Cannot send messages. Is Call Barring (page 3-17) set for outgoing calls? Is Call Barring (page 3-17) set for incoming calls? Cannot receive messages. Does appear on Display? Are you in a location where it is difficult to receive a signal? Calls are interrupted or Move to a location where a signal can reach handset. disconnected. Is your hand or an object covering Internal Antenna area (page 1-3)? Handset does not respond to key Does \P or *Password Lock* appear on Display? Password Lock is activated. Enter Handset Code. presses. Does @ appear on Display? Cannot use Osaifu-Keitai®. Cancel IC Card Lock (page 9-12).

Text Entry Keys

Standard Mode

Text Input Mode Key	Kanji (hiragana) (Double-byte)*	Single-byte katakana	Double-byte alphanumerics (upper case) Single-byte alphanumerics (upper case)	Double-byte alphanumerics (lower case) Single-byte alphanumerics (lower case)	Double-byte numbers Single-byte numbers	
1.@ あ	あいうえおぁぃぅぇぉ	アイウエオアイウエオ	.@1	.@1	1	
2 _{ABC} tr	かきくけこ	カキクケコ	ABC2	abc2	2	
3 DEF &	さしすせそ	サシスセソ	DEF3	def3	3	
4 GHI Æ	たちつてとっ	タチツテトツ	GHI4	ghi4	4	
5 JKL&	なにぬねの	ナニヌネノ	JKL5	jkl5	5	
Бмюіа	はひふへほ	ハヒフへホ	MNO6	mno6	6	
7PQRS#	まみむめも	ZELXE	PQRS7 pqrs7		7	
¢vu⊤B	やゆよゃゅょ	ヤユヨヤユヨ	TUV8	TUV8 tuv8		
9wxyz6	らりるれろ	ラリルレロ	WXYZ9	wxyz9	9	
D++t)	わをんー、。	ワヲンー、。	~/?!0	~/?!0	0	
X ∾∘ #8	Custom, Pictographs, Emoticons, * (dakuten), * (handakuten), —(cho-on), \$\(\times\) (touten), \$\(\circ\) (kuten)	Custom, * (dakuten), * (handakuten), —(cho-on), \ (touten), * (kuten)	Custom, Pictogr	Custom, Pictographs, Emoticons		
#AABE9	Symbols, Alphanumerics, URL Toggle case	L Symbols, Alphanumerics, URL Symbols, Alphanumerics, URL Toggle case Toggle case			Symbols, Alphanumerics, URL	
	Determine entered text/End text entry End to					
•	Move cursor, Insert line break with , Scroll through suggestions with Move cursor Move cursor, Insert line break with					
クリア/メモ	Delete entered characters					
TV U2P	Toggle characters in reverse order —					

^{*} When entering a reading to Word List (page 2-15), you can enter only double-byte hiragana and "—" (cho-on).

Beeper Mode

Switch the input method to Beeper mode. Enter two digits to make one character. Key combinations are as follows:

		Press next									
		1 .⊜ ಹ	2ABC#	3 DEF &	4 GHI た	5 ж.ъ	E woot	7PQRS#	8TUV#	9wxyz6	D+e40
Press first	1.⊚ あ	あ	い	う	え	お	Α	В	С	D	Е
	2ABC#	か	き	<	け	2	F	G	Н	-1	J
	3 DEF &	さ	し	す	t	そ	K	L	М	N	0
	4 GHI Æ	た	ち	つ	て	٢	Р	Q	R	S	Т
	5 IKL®	な	に	ぬ	ね	の	U	V	W	Х	Υ
	Билош	は	ひ	131	^	ほ	Z	?	!	_	/
	7PQRS#	ま	み	む	め	も	¥	&			
	BTUV#	や	(ゆ)	よ	X	#			
	9wxy26	5	り	る	れ	ろ	1	2	3	4	5
	(har-+	わ	を	h	*	۰	6	7	8	9	0

- indicates upper and lower cases are available. Press Access to switch case immediately after character entry.
- When entering in **!** and **!**, all the characters will be single-byte.
- When entering in 🖺, 🖶, 🖫, and 📵, hiragana will turn to katakana.
- When entering in 🖨 and 📵, the characters will be in lower case.

Entering Characters in Beeper Mode

Example: Entering よしお

In a text entry window, press Brove Sixts → 300Fd ZARCD → 1.005 Sixts

→ ■

Simple Mode Function List

- Functions available in Simple Mode are listed below.

 To use functions that are unavailable in Simple Mode, access the full menu (page 2-26).

 Settings made in Simple Mode are reflected in the full menu.

Main Menu

Menu Item		Description	Page	
Settings		Refer to "Settings" of Simple Mode Main Menu.	14-14	
My Number	Name		3-3	
	Reading	Same functions as in full mode	3-3	
	Phone Number	Same functions as in full mode	3-3	
	E-mail Address		3-3	
	Full Menu	Same as My Details menu in full mode	3-3	
	TV	Same functions as in full mode	6-2	
	Alarms	Up to six alarms can be set.	9-18	
	Notepad		9-8	
	Calculator	Same functions as in full mode	9-20	
	Dictionary		9-20	
Tools	Calendar	Monthly View only Impossible to save, edit and delete events	9-4	
	Scan Data		9-25	
	Kitchen Timer	Same functions as in full mode	9-21	
	S! GPS Navi	Same functions as in full mode	9-14	
	Ku-man's Room		9-26	
	Full Menu	Same as Tools menu in full mode	Chap. 9,13,14	
Full Menu		Same as Main Menu in full mode	2-26	

Appendix 14

Simple Mode Function List

Menu Item		Description	Page
	Phone Book		2-19
	Video Call		3-7
Phone Book	New Entry	Same functions as in full mode	2-17
	Call Log		3-9
	Group		13-35
	Full Menu	Same as Phone Book menu in full mode	Chap. 2
Phone Book Search Add to Phone Book			2-19
			2-17
	Message Box		4-10
	Create New	Same functions as in full mode	4-4, 4-6
	Retrieve New	Same functions as in full mode	4-8
Messaging	Drafts		4-10
	Templates		4-5
	Unsent		4-10
	Full Menu	Same as Messaging menu in full mode	Chap. 4
	Received/Sent		4-10
Message Box	Drafts		4-10
	Unsent	Same functions as in full mode	4-10
Cuarta Massass	Create New		4-4, 4-6
Create Message	Templates		4-5

Combinations of menu items in vary according to the menu pattern.

Menu Item		Description	Page
Manner Mode		Set/cancel Manner Mode.	1-14
Alarms		Up to six alarms can be set.	9-18
Mobile			7-3
Camera	Digital	Same functions as in full mode	7-3
Calliera	Video		7-5
	Full Menu	Same as Camera menu in full mode	Chap. 7
Data Folder		Same functions as in full mode	2-22
Yahoo! Keitai Bookmarks Screen Memo Enter URL Manufacture #	Yahoo! Keitai	- Same functions as in full mode	5-3
	Bookmarks	Impossible to set/cancel Security Lock	5-6
	Screen Memo	Same functions as in full mode	5-6
	Enter URL		5-3
	Manufacture #		13-19
	Full Menu	Same as Yahoo! Keitai menu in full mode	Chap. 5

Combinations of menu items in $\hfill\square$ vary according to the menu pattern.

"Settings" of Simple Mode Main Menu

Menu Item		Description	Page
Wallpaper		Same functions as in full mode	2-7
Idle Screen	Clock/Calendar	Mini Clock cannot be set.	2-8
	Ku-man	Same functions as in full mode	13-43
F4 C-44i	Font Type	Same functions as in full mode	13-5
Font Settings	Font Size	Can only be set to Large/Medium for General.	13-5
	Incoming	Can only be set for Voice Call/Video Call/Message.	13-11
Sounds	Earpiece Vol.	Complete and the fall and a	3-12
	Keypad Tone Vol.	Same functions as in full mode	13-13
Manner Mode	ON/OFF	Set/cancel Manner Mode.	1-14
Wanner Wode	Switch Mode	Switch Manner Modes (Original Modes cannot be edited).	13-11
	Mini Tool		13-3
Mini Tool	Mini Photo		13-4
	Voice Mail ON		3-11
VM/Call Fwd	Deactivate All		3-11
VIVI/Call FWG	Listen VM	Same functions as in full mode	3-11
	Ans Machine	Same functions as in full mode	3-6
· · ·	Password Lock		11-3
	Reject Calls		13-9
Security	Anti-Spam		13-16
	Change Password		11-2

Menu Item		Description	Page
	Date&Time		1-13
Clock	12hour/24hour	Same functions as in full mode	1-13
	World Clock	- Same functions as in full mode	9-19
	SelectNetwork		13-22
Intl. Calls	Operator	Impossible to set priority and add operators	13-22
Save 1-touch		A Phone Book entry can be assigned to either Softkey to make calls/send messages.	2-27
Full Menu		Same as Settings menu in full mode	Chap. 12,13
SimpleMode OFF		Cancel Simple Mode.	2-6

Functions Available in Standby

Operation	Function	Description	Page
	Main Menu	Refer to "Main Menu".	2-5
(Press and hold)	Keypad Lock	Same functions as in full mode	11-3
■ □t	My Number	Same as My Number in Main Menu	3-3
Ō	Active Window		2-8
(Press and hold)	Calendar		9-4
	Phone Book Search		2-19
•□	Dialed Numbers	Same functions as in full mode	3-9
(Press and hold)	Sent Message Log		4-13
-	Received Calls		3-9
(Press and hold)	Received Message Log		4-13

Operation	Function	Description	Page
^{(2/h} , ¥7	Use 1-touch entries	Make voice calls/Video Calls/send messages to assigned 1-touch entries.	2-27
(Press and hold)	Simple Mode Off	Cancel Simple Mode.	2-6
🗹 (Press and hold)	Barcode Reader for Keitaideco	Same functions as in full mode	2-32
UZP UZP	Activate TV	Same functions as in full mode	6-3
P	Shortcuts Menu	Impossible to add functions to Shortcuts Menu	2-4
(Press and hold) Information Prompt			1-6
2U7/x€	Play Answering Machine		3-6
(Press and hold) Answering Machine On/Off (Press and hold) Manner Mode On/Off			3-6
			1-14
*	Toggle views on External Display	Same functions as in full mode	1-5
☐ □ (Press and hold)	Twinkle Light On		13-6
۵	Activate camera		7-3
(Press and hold)	Activate video camera		7-5
(Press and hold)*	Activate set function		

^{*} Available while handset is closed

Simple Mode Function List

Specifications

Main Specifications

	3G	1920 to 2170 MHz
F	GSM900	880 to 960 MHz
Frequency Range	DCS1800	1710 to 1880 MHz
	PCS1900	1850 to 1990 MHz
	3G	Approx. 250 min. (Twinkle Light Off)
Continuous Talk Time	Video Call	Approx. 120 min.
	GSM	Approx. 190 min. (Twinkle Light Off)
Continuous Standby Time	3G	Approx. 490 hrs
Continuous Standby Time	GSM	Approx. 320 hrs
Charging Time		Approx. 120 min.
Dimensions When Closed (W×H×D)		Approx. 50×103×15 mm
	3G	Class 3 0.25 W
Maximum Output	GSM900	Class 4 2 W
Maximum Output	DCS1800	Class 1 1 W
	PCS1900	Class 1 1 W
Weight		Approx. 111 g

- The values above were calculated with the battery attached.
- The continuous talk time refers to the average length of time a signal can be received normally when handset is in a stationary state and a new fully charged battery is attached.
- The continuous standby time refers to the average length of time a signal can be received normally when handset is closed with External Display facing outward, handset is in a stationary state, a new fully charged battery is attached and there are no calls made/received or operations performed. If handset is in a location outside the service area or where it is difficult to receive a signal (in a building, vehicle, bag, etc.), this time may be reduced to half or less. This time may also be affected by other factors such as the operating environment (battery state, temperature, etc.). The continuous standby time for 3G was measured with SelectNetwork under Intl. Calls set to 3G

Specifications

- The operating time of the battery was calculated when a stable signal was received constantly. However, this time may be reduced to half or less if handset is used in a location where the signal is weak or handset is left in Standby when it is outside the service area. Repeated charging and discharging a battery shortens the operating time. If the operating time becomes too short, purchase a new battery.
- If Mobile Light is used frequently for taking pictures and recording videos or as a penlight, the continuous talk time and continuous standby time become shorter.
- When an S! Appli is activated, the continuous talk time and continuous standby time become significantly shorter.
- If handset is used with Display illuminated frequently (for Yahoo! Keitai use, etc.), the continuous talk time and continuous standby time become shorter.
- Note that the LCD Display may have defective pixels (dead or stuck pixels).

AC Charger (Sold Separately)

Input Voltage	100 to 240 V AC, 50/60 Hz	
Charging Temperature Range	5 to 35℃	

Specifications by Function

Basic Operations

Text Entry

Word List	100 words (4 words with same reading), 12 characters per word, 8 characters per reading	
Clipboard	20 entries	

Phone Book

Number of Entries	1,000 entries	
Name	16 characters each for first and last names	
Reading	16 characters each for first and last names	
Phone Number	5 numbers, 32 digits	
E-mail Address	5 addresses, 128 characters	
Address	Postal code: 20 digits, country: 32 characters, state/city/street/additional info: 64 characters each	
Job Title 32 characters		
Company	32 characters	
URL 128 characters		
Note	256 characters	
Group 20 groups, group name: 16 characters		

Data Folder

Available Memory	Approx. 51 MB ^{*1} , 2,500 entries ^{*2}	
File Name	32 characters	

- *1 Memory capacity when all files that can be deleted are deleted. Data
- Folder shares its memory with S! Appli Library.
 *2 This number does not include S! Appli and Lifestyle-Appli entries. Up to 100 S! Appli and Lifestyle-Appli items can be stored.

Others

Active Window	5 members on Members List	
Shortcuts Menu	40 entries (13 preset)	

Call

Dialed, Received		20 entries each
Answering Machine		5 messages, 30 seconds per message
Voice Record During Calls		60 seconds per recording
Number Memo		5 numbers, 32 digits
International Call Service	Country Number List	20 countries (17 preset)
Send Touch Tones		32 digits

Appendix

Messaging

Available Memory	Received	Approx. 5 MB, 2,000 messages	
	Sent, Unsent	Approx. 1.5 MB, 600 messages	
	Drafts	Approx. 700 KB, 60 messages	
Address		To/Cc/Bcc: total 20 entries, phone number: 24 digits, e-mail address: 254 characters	
S! Mail Text		Approx. 15,000 double-byte characters/Approx. 30,000 single-byte characters	
Attachments		Approx. 300 KB (including Address, Subject, Text)	
SMS Text		70 double-byte characters/70 single-byte katakana/160 single-byte alphanumerics	
Message Box		20 folders each for Received and Sent (General folder, Folder 1 to Folder 17, Idokoro folder, Ku-man folder)	
3D Pictograms		150 characters	

Internet

Data Transfer Speed	Maximum 3.6 Mbps receiving/ maximum 384 kbps sending (in 3G HighSpeed areas)	
Bookmarks	50 entries	
History (URL)	10 entries	

TV

View Timer	5 entries
TV Links	50 entries

Camera/Picture Editing

Effective Pixels		1.96 million pixels	
File Format		Still pictures: JPEG, videos: MPEG-4	
Picture Editing	File Format	JPEG (2.0 MB or less), PNG (1.0 MB or less)	
	Picture Size	W16×H16 to W240×H400	

14

Camera Modes

Mode Picture Size		Max. Zoom
	W240×H400	Approx. 4×
	W240×H320	Approx. 4.9×
Mobile	W144×H176	Approx. 8.3×
Mobile	W120×H160	Approx. 9.3×
	W112×H112	Approx. 10.5×
	W96×H128	Approx. 12×
	W1600×H1200	_
Digital	W1280×H960	Approx. 1.3×
	W640×H480	Approx. 2.5×
	W400×H240	Approx. 4×

Video Modes

Mode	Size	Max. Zoom	Max. Recording Time
Video	W320×H240	Approx. 2.5×	Approx. 20 min.
Video Mail	W176×H144	Approx. 2.5×	Approx. 30 sec. (Quality: Fine) Approx. 50 sec. (Quality: Normal) Approx. 60 sec. (Quality: Economy)
Short Video	W128×H96	Approx. 4.1×	Approx. 5 sec.

Media Player

Playlist	10 each on handset and memory card, 50 songs per playlist
My Library	50 songs
Recent	20 entries

Playable Data

- Even under the following conditions, some files may not be playable.
- Although files with bit rates other than those listed below may be playable, their operation is not guaranteed.

	File Format	Bit Rate	Sampling Frequency
	AMR	4.75 to 12.2 kbps	8 kHz
Handset	MPEG-4 AAC-LC	16 to 128 kbps	16 to 49 kHz
	HE-AAC	10 10 120 KDPS	10 to 40 kmz

Notes on AAC data

- · AAC encoder software is required for converting music into AAC formats.
- SoftBank does not recommend nor guarantee operation of any particular AAC encoder software.
- Refer to the website of software provider about specifications and usage of AAC encoder software.

S! Appli

Available Memory on Handset	Approx. 51 MB ^{*1} , 100 entries ^{*2}	
-----------------------------	---	--

- *1 S! Appli Library shares its memory with Data Folder.
- *2 This number includes S! Appli and Lifestyle-Appli entries.

Tools

Barcode Reader

14

Notepad	20 notepads, 256 characters per notepad	
Calendar	400 events (100 events per day), from January 2, 2000 to December 30, 2015	
Tasks	100 entries, from January 2, 2000 to December 30, 2015	
Time Table	8 periods per day, Monday to Saturday	
Dictionary	Japanese dictionary: approx. 40,000 words, English-Japanese dictionary: approx. 65,000 words, Japanese-English dictionary: approx. 36,000 words	
Voice Recorder	Maximum 90 minutes per recording	
Osaifu-Keitai	8 Call Lock phone numbers, 2 Mail Lock addresses, 8 Balance List entries	
World Clock	2 cities, city name:13 characters	
S! GPS Navi	20 location logs	
Idokoro Mail	Recipients List: 5 entries, Areas List: 7 entries	
S! Information Channel	7 History entries, 3 MB	
Electronic Books	BookSurfing®: CCF (.CCF), e-Book Viewer: XMDF (.ZBK, .ZBF, .ZBS)	

QR code data: 10 entries

Communication Services

S! Friend's Status

S! Circle Talk

Participants	11 people including yourself	
Talk Time	30 seconds each time	
S! Circle Talk Members List	50 entries, 10 people per group	

File Transfer/Backup

Infrared

Communication System	IrMC1.1
Transmission Range	Approx. 20 cm

Bluetooth®

Communication System Bluetooth® specification Ver.1.2	
Output	Bluetooth® Power Class 2
Transmission Range Approx. 10 m radius ^{*1}	
Supported Bluetooth® Profiles ^{*2}	HFP (Hands-Free Profile) HSP (Headset Profile) DUN (Dialup Networking Profile) OPP (Object Push Profile) FTP (File Transfer Profile) AZDP (Advanced Audio Distribution Profile) AVRCP (Audio/Video Remote Control Profile)
Frequency Band	2.4 GHz (2.402 GHz to 2.480 GHz)
Searchable Devices	8 devices at a time
Paired Devices	20 devices

^{*1} Varies depending on obstacles between devices and signal conditions.
*2 The specifications of Bluetooth® devices differ according to usage. There

Melody List

The preinstalled melodies are shown below.

Ringtones (Fixed Melodies)

• The following are unavailable for Keypad Tone under Sound Effects.

Title	Composer
Meistersinger	WAGNER RICHARD WILHELM
Someday My Prince will Come	CHURCHILL FRANK E.
Aloha Oe	Hawaiian ballad
Wooden Soldiers	JESSEL LEON
Jupiter	HOLST GUSTAV
Harp Concerto in B Flat Major	HAENDEL GEORG FRIEDRICH
Habanera	BIZET GEORGES
Moonlight Serenade	MILLER GLENN (US 1)
Old Phone	Produced by Toshiba
Flash News	Produced by Toshiba
Electronic Sound 1	Produced by Toshiba
Electronic Sound 2	Produced by Toshiba
Electronic Sound 3	Produced by Toshiba
Electronic Sound 4	Produced by Toshiba
Voice 1	Produced by Toshiba
Voice 2	Produced by Toshiba
Voice 3	Produced by Toshiba
Voice 4	Produced by Toshiba
Alarm Clock	Produced by Toshiba
Pigeon	Produced by Toshiba

^{*2} The specifications of Bluetooth® devices differ according to usage. Then are standards for Bluetooth®.

^{*3} Only the server function is supported.

14

Default Settings

Messaging

Function	Default Setting
Message Box	Wide View: Wide View ON, Folder View: Folder View, Received/Sent: Separate View, Display Items: Addresses, Change View: List Only, Sort Setting: None (except Ku-man and Idokoro), Security Lock: Unlock, Auto-delete (Received: Set, Sent: Set)
Display	Font Size: Medium-Small, Scroll Unit: Line, Show Address (Main Display: Show All, Ext. Display: Show All)
Creating	Signature: No Signature, Default Type: SMS, Notify Type: Show
Sending	Confirmation: Show, Vibration: ON, DeliveryCheck: Do not Ask, Expiry (SMS: Not Specified, S! Mail: Not Specified), Priority: Normal, Delivery Time: Immediate, Reply to: OFF, Message Ctr: Number on USIM Card
Receiving	Retrieve Mode (Home: Immediate, Roaming: Immediate), Auto-extract (Picture: Show, Sound: Mute), Anti-Spam (Sort Messages: Do not Sort, Select Folder: Folder 17)
3D Pictograms	Auto Play: OFF, Colors: Color1
3D Mail	ON

Yahoo! Keitai

Function	Default Setting		
	Font Size: Medium-Small (Yahoo! Keitai)/Extra-Smal (PC Browser), Scroll Unit: 1 line, Downloads (Images Download, Sounds: Download), Warning (PC Browse Show, Yahoo! Keitai: Show)		
Settings	Security	Manufacture #: Send, Send Referer: Send, Cookie: Enable, Script: Ask Once (Yahoo! Keitai)/Enable (PC Browser), Authentica: Per Session, Session Info.: Show	
	Storage: Phone Memory		

Entertainment

Function	Default Setting	
S! Quick News	Auto Refresh (Flash News: Manual, News: Manual, S! Loop: Manual), Image: Show	
Weather	Indicator: Show, Prompt: Show	
Ku-man's Room	Ku-man Data: Thumbnail View	

TV

Function	Default Setting
Watching TV	Subtitles: ON, Switch Audio: Main, Screen Settings: (Brightness: Brightness 3, Image Quality: Normal, Sharpness: Soft, Economy Mode: OFF), Datacasting (Start Comm.: Ask before, Go to Secured: Ask before, Access Memory: Do not Ask, Send Location: Always Ask, Manufacture #: Do not Send, Storage: Phone Memory), Off-timer: OFF, Output Settings: Speaker/Earphone, First View: Full Screen, Volume: VOL12

Camera

Function	Default Setting
Taking Pictures	Camera Mode: Mobile, Picture Size (Mobile: W240 × H400, Digital: W1280 × H960), Brush Up (Mobile: ON, Digital: OFF), Self-view: OFF, Night: OFF, Multi Shots: OFF, Add Frame: OFF, Icons Display: Show, Storage: Phone Memory, File Name: Date&Time, Auto Save: OFF, Quality: Fine, Effects: OFF, Date Stamp: OFF, Date Stamp Color: White w/Black, Mobile Light: OFF, White Balance: Auto, Color Control: Neutral, Delay Timer: OFF, Focus Mode: Auto, Grid: OFF, Flicker: Automatic, Shutter Sound: Pattern 1, Key Shortcut: ON, Exposure: ±0.0EV

Function	Default Setting		
	Video Mode: Video Mail, Self-view: OFF, ScreenDisplay: Normal screen, Icons Display: Show, Voice Record: ON, Storage: Phone Memory, File Name: Date&Time, Auto Save (Video: ON (Fixed), Video Mail/Short Video: OFF)		
Recording Videos	Quality	Video: Normal, Video Mail: Normal, Short Video: Economy (Fixed)	
	Effects: OFF, Mobile Light: OFF, White Balance: Auto, Color Control: Neutral, Delay Timer: OFF, Flicker: Automatic, Start/End: Pattern 1, Key Shortcut: ON, Preview: ON, Exposure: ±0.0EV		
Scan Data	Exposure: ±0.0EV		

S! Appli

Function	Default Setting
Settings	Screensaver: OFF, Start Time: 3 sec, Calls&Alarms (Voice Call: Pause Apps, Video Call: Pause Apps, Message: Continue Apps, Alarm: Pause Apps), Volume: Level 3, Backlight (ON/OFF: Same as Phone, Blink: ON), Vibration: ON

Tools

Function		Default Setting	
Alarms	Tone: Time Reading, Volume: Level 3, Vibration: OFF, Duration: 60 sec, Image: Original, Repeat: Once, Snooze: OFF		
Calculator	Set Tax Rate: 5	%	
	Create Event	Set Alarm: OFF, Show/Hide: Show, Repeat for: Do not Repeat, Category: No Category	
	Set Holiday (Sui Saturday: Blue)	nday: Red, Monday to Friday: Black,	
Calendar	Reminder	Reminder: OFF, Schedule for: Today, Tone: Pattern 1, Volume: Level 3, Vibration: OFF, Duration: 60 sec, Repeat: Once	
	Calendar Lock: Unlock, First View: Monthly, Font Color: White w/Black		
	New Task	Set Alarm: OFF, Show/Hide: Show, Priority: Normal, Status: Not Completed	
	Change View: All View, Sort by: Deadline		
Tasks	Reminder	Reminder: OFF, Schedule for: Today, Tone: Pattern 1, Volume: Level 3, Vibration: OFF, Duration: 60 sec, Repeat: Once	
	Tasks Lock: Un	lock	

Function	Default Setting	
Time Table	BG Color: OFF, Font Color: White w/Black	
Kitchen Timer	10 sec	
Voice Recorder	SelectStorage: Phone Memory	
Photo Stand	ON/OFF: OFF, Templates: Calendar, Image: Preset, Duration: 60 min	
Osaifu-Keitai® (Card Settings)	IC Card Lock: OFF, Mail Lock (ON/OFF: OFF, Notification: Send, Address: To Sender), Call Lock (ON/OFF: OFF, Missed Count: 3 times), Interface (Browser, Messaging, Vibration, Notification, S! Appli): ON, Display Balance: OFF	
S! GPS Navi	Map URL Settings: NAVITIME (http://map.navitime.jp), Set Navi Appli: NAVITIME, Positioning Lock: OFF, LocationProperty: Always Ask	

Data Folder

Function	Default Setting
Data Folder	Change View (View Type: Thumbnail 3×3/Thumbnail 5×5 (My Pictograms folder only), Sort by: From Latest), Security Lock: OFF

Media Player

Function	Default Setting	
Audio	Sort by (All Music: From Latest, Artist: Title: A to Z, Album: Track No., Folder: Title: A to Z), Output Settings: Speaker/Earphone, Player Image: Original, Play Mode: All, Surround: OFF, Equalizer: Flat, Voice Cancel: OFF	
Videos	Display Link: ON	

Communications

Function	Default Setting	
Friend Status	My Status: Offline, Request Reply: Always Answer, Answer Status (Calls: Answer OK, Mail: Reply OK, S! Circle Talk: Join OK), Status Setting: ごきげん (Good mood)	
Circle Talk	Loud Speaker: ON	

Phone Book

Function	Default Setting	
Phone Book	Search Mode: Tab/Reading	
Options	ExternalLight: Same as Phone, Ringtone Vol.: Same as Phone, Ringtone: Same as Phone, Vibration: Same as Phone, Duration: Same as Phone, MessageFolder: None, Secret: OFF, Ext. Display: Same as Phone	
Options (Group)	ExternalLight: Same as Phone, Ringtone Vol.: Same as Phone, Ringtone: Same as Phone, Vibration: Same as Phone, Duration: Same as Phone, MessageFolder: None	
Addr. Bkup	Auto Sync: OFF, Sync Type: Synchronize	
Settings	Select Storage: Phone Memory, Phone Book Lock: Unlock	

Default Settings

Settings

Sounds

Function	Default Setting		
Kacha-ble	MissedCall: ON, Messages: ON, Delivery: ON, Missed: ON, Missed CT: ON, Status: ON		
	Incoming	Ringtone: Pattern 1, Ringtone Vol.: Level 3, Vibration (Pattern): OFF, Feeling: ON, Duration: 5 sec	
Normal Mode	Sound Vol.: Level 3, Earpiece Vol.: Level 5, Speaker Vol.: Level 5, Battery: ON		
	Sound Effects	Tone Type: Original (Keypad Tone: Original 1), Tone Volume: Level 1 (Keypad Tone: Silent)	
	Manner Mode: Unset, Switch Mode: Silent		
	Silent	Ringtone Vol.: Silent, Vibration: Pattern 1, Feeling: Same as Normal Mode, Sound Effects: OFF, Battery: OFF, Answering Machine: Same as Normal Mode	
Manner Mode	Alarms	Ringtone Vol. (Except alarm volume): Silent, Vibration: Pattern 1, Alarms (Alarms: Same as Normal Mode, Alarm Volume: Same as Normal Mode, Vibration: Same as Normal mode), Feeling: Same as Normal Mode, Sound Effects: OFF, Battery: OFF, Answering Machine: Same as Normal Mode	

Function	Default Setting	
Manner Mode (Continued)	Drive	Ringtone Vol.: Silent, Vibration: OFF, Feeling: OFF, Sound Effects: OFF, Battery: OFF, Answering Machine: ON
	Original 1 to 3	Ringtone Vol.: Silent, Vibration: Pattern 1, Feeling: ON, Effects: OFF, Battery: OFF, Answering Machine: ON

Display/Idle Screen (Ku-man)

Function	Default Setting	
Idle Screen	Wallpaper: Preset (Picture), Others: 1-line Digit, Active Window: ON (Manual), Ext. Display: Icon+Clock	
Main Screens	Deco (Icons): Original, Deco (Windows): Original, In-Calls: Original, Messages: Original, Download: Original, Power On: Original, Power Off: Original	
Mini Tool	Mini Tool: Preset	
Caller Details	Picture: ON, Ext. Display: ON	
Wide View	IdleScreen: ON, Create Msg: ON, Msg Lists: ON	
Font Settings	Font Type: Gothic, Font Size (General: Medium, Messaging: Medium-Small, Mobile Web: Medium-Small, PC Browser: Extra-Small, Text Entry: Medium-Small), Font Color: Pattern 1	

Function		Default Setting	
Backlight	Power Saving: 15 sec, Start Illumi (Color: Turquoise, Lighting Time: 5 sec), Displays (Lighting Time: 5 sec, Brightness: Brightness 3), Media Player: Always ON		
External Light	Notification	Missed Call: Garnet, Messages: Emerald, DeliveryCheck: Sapphire, Missed Call: Amethyst, Missed CT: Blue Topaz, Friend Status: Citrine	
	Incoming	Voice Call: Garnet, Video Call: Emerald, Message (Color: Sapphire, Feeling: ON), DeliveryCheck: Amethyst, Missed Call: Citrine, Circle Talk: Blue Topaz, Friend Status: Citrine	
Twinkle Light	Settings	Voice Call: Wave 4, Video Call: Wave 4, Message: Wink 4, Delivery: Wink 4, Opening: Sparkle 4, Closing: Sparkle 4, In Call: Dance 4, Side Key: Veil 4	
	Design Light	Rename: Original 1 to 8, Create Color: Green 15 and Red 0, Pattern: Wave 1	
Operator Name	OFF		
Idle Screen (Ku-man)	OFF		

Phone Settings

Function	Default Setting	
Clock	12hour/24hour: 24 hour, World Clock (City 1: Tokyo, City 2: Tokyo, Set as Main City: City 1, DST ON/OFF: OFF)	
Sub Menu View	Show	
言語選択 (Language)	日本語 (Japanese)	
Navigation Keys	: Active Window, : Phone Book, : Dialed Numbers, : Received Calls	
Side Key	Manner Mode	

Security

Function	Default Setting	
Password Lock	Phone Closed: OFF, Power Saving: OFF, Power Off: OFF	
Function Lock	Phone Book: Unlock, Calendar: Unlock, Tasks: Unlock, Call Log: Unlock, Message Log: Unlock	
Secret Mode	Hide	
Anti-Spam	Sort Messages: Do not Sort, Select Folder: Folder 17	
Change Password	9999	
IP Service	ON	
Restricted Mode	Web: OFF	

Call Settings

Function		Default Setting		
	SelectNetwork: 3G			
	Intl. Code: 0046010			
Intl. Calls	CountryNumber	Japan (81), UK (44), Italy (39), Switzerland (41), Spain (34), Germany (49), Portugal (351), Netherlands (31), France (33), Monaco (377), USA (1), Sweden (46), Australia (61), China (86), Hong Kong (852), Taiwan (886), South Korea (82)		
	Operator: Automatic			
Ans Machine	Setting: OFF, Set Duration: 18 sec			
Earphone Mike	Auto Answer (ON/OFF: OFF, Set Duration: 10 sec), Earphone Call: OFF, Select Mike: Earphone Mike			
Answer Type	Open to Talk: OFF, Any Keys: OFF			
Video Call	Alt. Picture: OFF, Image Quality: Standard, Hold Setting (Hold on Call: Preset, Hold Answer: Preset), Mute: OFF, Loud Speaker: ON, Auto Answer: OFF, Self-view: OFF			
Reject Calls	Specific #s: OFF, Unknown: OFF, Withheld: OFF, Payphone: OFF, Unavailable: OFF			
Offline Mode	OFF			
Show My Number	OFF			

Connectivity

Function	Default Setting	
Bluetooth®	ON/OFF: OFF, Settings (Visibility: Show, Set Handsfree: Private)	
Infrared	ON/OFF: OFF	
USB	Connection: Always Ask, Battery: ON	

Priority

Pilotity	
Function	Default Setting
Mid-operation	Message: Pause, DeliveryCheck: Continue
Video	Message: Continue, DeliveryCheck: Continue
Media Player	Pause
Voice Recorder	Message: Continue, DeliveryCheck: Continue
S! Appli	Voice Call: Pause Apps, Video Call: Pause Apps, Message: Continue Apps, Alarm: Pause Apps
Circle Talk	Continue
TV	Alarm: Pause

Text Entry

Function	Default Setting
Custom Window	Display: Display
Clear Setting	Delete
Input Method	Standard
Font Size	Medium-Small
Prediction	Predict Text: ON, Phrase: ON

Active Window

Function	Default Setting
ON/OFF	ON (Manual)
Templates	News: No Image
Auto Refresh	Flash News: Manual, News: Manual, S! Loop: Manual
Unread/Read	Show All
Screen Speed	Neutral

Glossary

Term	Description
3G	A third generation (3G) mobile communication system.
GSM	A wireless communication system for digital mobile phones. GSM is predominant in Europe and Asia, and is the world's most widely used system.
GPRS	A data transmission technique using GSM mobile phone networks. It enables high-speed transfer of data in the form of packets.
USIM Card	Use handset with this card inserted. The card stores subscriber information such as your phone number and handset data. You can also save Phone Book entries and other data to the card. When you replace your handset, use of the same USIM Card in the new handset enables you to continue using the data stored on the card.
USIM PIN	A number required for using USIM Card with your handset. This number allows you to prevent others from using your handset in the event that your handset is lost or stolen.
S! Mail	A service that allows long text messages with picture, video and melody attachments to be exchanged.
SMS	A service that allows short text messages to be exchanged between handsets.

Term	Description
SSL	A communication method for transmitting data in an encrypted form over the Internet. It enables data such as information related to privacy and credit card numbers to be sent and received safely and protects against dangers on the Internet such as eavesdropping, tampering and spoofing. SSL communication uses server certificates.
Server Certificate	A digital certificate for identifying that a site on a server is trustworthy. The server certificate includes information necessary for SSL communication (encrypted communication), server information and a digital signature of a Certificate Authority to verify that the server is authentic.
Cache	The location in handset for temporarily storing the data of accessed Web pages, etc.
S! Appli	Applications including games and 3D images that can be downloaded from the Web pages of S! Appli providers. Some applications connect to the network to obtain information in real time and some applications can be activated as wallpaper.
FeliCa	Contactless IC card technology developed by Sony Corporation. It allows data to be exchanged by simply holding an IC card up to a reader device. 830T handset is capable of managing multiple types of data, so it can be used for such things as e-money and a membership card.
3G HighSpeed	A high speed data communication service that complies with HSDPA (High Speed Downlink Packet Access) protocol.

Index

Answering Machine · · · · · · 3-6 S! Addressbook Back-up · · · · · · 12-12 **Alphabetic Order** Delete Recorded Messages · · · · · · · · 3-13 Response Time · · · · · · 13-9 Barcode Reader · · · · · 9-25 Numeric Anti-Spam · · · · · · 13-16 Battery 1-7, 14-4 12hour/24hour - - - - 1-13 Any Key Answer · · · · · 13-9 3D Mail 13-17 Areas List 9-16 Battery (PC Connection) 13-37 3D Pictograms 13-16 Delete9-31 Battery Level 1-4, 1-5, 14-4 Attachments · · · · · · · · · 4-4 Beeper Mode 14-10 Bluetooth® · · · · · · 12-4 Save - - - - - 4-19 Α Delete Device - - - - - 12-14 Audio Output During Calls (Earpiece/Speaker) AC Charger · · · · · · 1-7, 14-18 Access Memory (Data Broadcasts) · · 13-29 Device Name 12-14. 13-36 Account Name · · · · · · · 4-3 Dial-up Connections · · · · · · 12-14 Voice Call (Handsfree Call)3-14 Active Window · · · · · 2-8 Audio Output Setting (Video Call) · · · 13-23 Change Icon · · · · · · 2-27 Authentication · · · · · · 13-19 Check a Member's Status · · · · · · 2-27 Authentication PIN Code (Bluetooth Passkey) · · 12-4 Paired Device List · · · · · · 12-5 Contact Members · · · · · · 2-9 Search Device · · · · · · 12-5 **Auto Answer** Earphone-Microphone · · · · · · · · 13-24 Send a Picture/Video After Shooting · · · · · 7-11 My Status ON/OFF · · · · · · · 2-27 Send My Details · · · · · · · 12-14 ON/OFF Settings · · · · · · 2-27 Set Handsfree · · · · · · · · · 13-36 Auto Focus Lock · · · · · 7-10 Save People to Members List · · · · · · · 2-9 Auto Play (Attachments) · · · · · 4-14 Templates2-27 Auto Save · · · · · · 13-25 Transfer Files · · · · · · 12-6 Add Address ----- 4-13 Auto-delete · · · · · · · · 4-10, 13-17 Add Frame (Camera) · · · · · · · · 7-7 Visibility - - - - 13-36 Add Stamp (Edit Picture) · · · · · 7-11 Bookmarks · · · · · · · · · · · · · 5-6 Available Memory · · · · · 14-19, 14-20, 14-21 Add Text (Edit Picture) · · · · · 7-11 Create Folder · · · · · · 5-9 Address Library · · · · · 2-13 В Alarms 9-18, 9-32 Background Play (Multitask) · · · · · 8-10 Alphanumerics · · · · · · 2-12 Backlight 13-5, 13-32 Send via Mail 5-9 Alternative Picture · · · · · · 3-15. 13-23 Backup BookSurfing® · · · · · 9-24 Answer Type 13-9 Relocate · · · · · · 12-15

Delete (Characters) 2-13 Delete Messages 4-16, 4-18 Delivery Check 4-15, 13-15 Delivery Report 4-18	e-Book Viewer	External Display
Delivery Time · · · · · · · 4-15, 13-15	Edit Text····································	F
Desktop Cradle 1-8 Dialed Numbers 3-9 Delete Call Log Records 3-15 Redial 3-12 Save to Phone Book 2-19 Dial-up Connections 12-14, 12-15 Dictionary 9-20 Digital Mode 7-3 Display 1-4 Display Balance 9-30 Display Settings 2-7, 2-27, 13-2 Active Window 13-8	Effects 7-9, 13-25 Electronic Books 9-24 E-mail Address/URL Extensions 2-13 Emergency Calls 3-3 Emergency Positioning Request 3-3 Emoticons 2-12 User Created 2-28 Encoding Type 13-21 Equalizer 8-10 Events 9-4 Alarm 9-4, 13-38	Feeling Mail 4-5 File Name (Camera) 13-25 Files 4-4 Attach 4-4 Copy 2-34 Delete 2-34 Details 2-31, 8-11 Move 2-23 Rename 2-33 Sort by 2-33, 8-10 Use 2-32
Mail	Category · · · · · · 13-38 Check · · · · · · · 9-5	Filter (Mail) · · · · · · 13-18 Flicker · · · · · 13-25
Download Screen 13-3 Drafts 4-15	Delete	Focus Mode······ 7-10, 13-26 Folders
E	Font Color13-39	Copy Folder · · · · · 2-34
Earphone Microphone Jack	Link Information 9-29, 13-38 Reminder 9-27 Repeat for 9-28 Show/Hide 9-28 Stamp Icon 13-38 Expiry (Mail) 4-15, 13-15 Exposure 7-3, 7-6 External Device Port 1-3 External Device Settings 13-24	Create Folder 2-22, 5-9 Delete Folder 2-34 Move Folder 2-34, 4-19 Rename Folder 2-33, 4-17 Font Color 4-15, 13-5, 13-39 Font Settings 13-5 Font Size Display 13-5 Graphic Mail 4-5 Internet 13-21

TV 6-7 Key Shortcut 13-25 Keypad 1-3, 2-3, 6-4 Keypad Light 13-5 Keypad Lock 11-3 Kitchen Timer 9-21 Ku-man Mail 9-26 Ku-man's Room 9-26	Lock Password 9-12 Lock/Cancel 9-13 Notification 13-40 ON/OFF 9-13 Mail Settings 13-14 Mail Type 4-14 Default Type 13-14 Mailbox Volume 4-17 Main Camera 1-3	Messaging 4-2 Microphone 1-3 Mini Photo 13-4 Mini Tool 13-3, 13-18 Missed Call Notification 3-11 Mobile Light 1-3, 7-3, 7-6 Mobile Mode 7-3 Mosaic (Edit Picture) 7-11 Multi Selector xi, 1-3, 2-3
L	Main Menu · · · · · 2-2, 2-3	Reset · · · · · · 2-26
Landscape View Operations · · · · · · · · · · · · · · · · · · ·	Reset Options 2-26 Simple Mode 2-6, 2-26, 14-11 Main Screens 13-2 Main/Sub Audio 13-29 Manner Mode 1-14, 13-11 Manufacture # 13-19, 13-30 Map URL Settings 13-41 Media Player 8-2 Lighting 13-5 Priority 13-10 Melody List 14-23	Multi Shots 7-7 Music Playback Window 8-4 Mute 3-13, 13-23 My Details 3-3, 3-12 Send 12-14 My Library 8-11 My Locations 9-31 My Status 10-4
Location Property 13-41 Lock Password 9-12 Lock Phone Number 9-12 Loud Speaker (Video Call) 13-23 Lower Case 2-11	Memory Card 2-24 Memory Card Backup 12-10 Relocate 12-15 Memory Card Slot 1-3 Memory Status 2-30, 2-31 Message Box 4-10	Name Conversion 2-28 Navi Appli 9-14, 13-41 NAVI Settings 13-41 New Messages 4-8 Night 7-10 Notepad 9-8
M	Settings · · · · · · · · 13-17	Delete 9-8, 9-29
Macro 7-10 Mail Lock 9-12 Address 9-30	Message Details 4-19 Message Folder 2-30 Message List 4-10 Settings 13-17, 13-18	Edit 9-29 Notification (S! Friend's Status) 10-5, 10-9 Notification (TV) 13-30 Number Memo 3-14

Activate · · · · · 4-16	Screensaver · · · · · 8-12	Get Latest · · · · · 9-33
Messages · · · · · 4-9	Start · · · · · 8-8	History · · · · · 9-33
Save an Address · · · · · · · · · · · · · 13-15	S! Appli Root Certificates · · · · · 13-32	Weather Indicator · · · · · 9-23
Reset	S! Appli Settings · · · · · · 13-32	S! Loop · · · · · 10-2
Reset All	S! Circle Talk · · · · · · 10-6	S! Mail · · · · · · · 4-4
Reset Learned · · · · · 13-34	Add Members · · · · · · 10-7	S! Quick News 9-22
Reset Setting · · · · · 13-33	Answer · · · · · · 10-8	Auto Refresh · · · · · · · 9-32
Internet	Call Another Member · · · · · · · · 10-8	Check Updates · · · · · · · 2-9
Restricted Mode · · · · · 11-5	Create a Group · · · · · · · · · · · · · · 10-7	Delete9-33
Retrieve Mail · · · · · 4-16	Delete	Image · · · · · · · · 13-8
Retrieve Mode · · · · · 13-16	Edit Group · · · · · · · · · · · · · · · · 10-10	Reset · · · · · · 13-8
Retrieve Network Information · · · · · 1-12	Initiate · · · · · · · · · · · · · · · · · · ·	Ticker Speed · · · · · · · · 13-8
Ringtone · · · · · · 2-18, 13-11	S! Friend's Status · · · · · 10-3	Unread/Read · · · · · · · · · · · · · · · 13-8
Ringtone Duration · · · · · · 2-30, 13-12	Add Members 10-4, 10-9	S! Town · · · · · 10-2
Ringtone Volume · · · · · · 2-30, 3-4, 13-11	Call/Send Mail · · · · · · · · · · · · · · · 10-9	Save 1-touch 2-27
Root Certificates 13-19, 13-32	Change Group · · · · · · · · · · · · · · · · 10-9	Scan Data 9-25
Rotate Image (Edit Picture) · · · · · 7-11	Check a Member's Status · · · · · · · · 10-5	Screen Display (Camera) · · · · · 13-27
	Deletion Request · · · · · · · · · · · · 10-9	Screen Memo · · · · · · · · · · · · · · · · · · ·
S	My Status · · · · · · · · · · · · · · · · · · ·	Delete 5-9
,	Notification	Rename · · · · · · 5-9
S! Addressbook Back-up · · · · · 12-12	Rename · · · · · · · · · · · · · · · · · · ·	Screen Settings (TV) · · · · · · 13-28
Auto Sync······12-16	Request Reply · · · · · · · · · · · · · 13-44	Script 13-19
Sync Log	Save Members to Active Window · · · · · 13-44	Scroll Unit · · · · · · · 13-15, 13-21
Synchronization Type · · · · · · · · 12-13	Saving Failed Notification · · · · · · · · 10-5	Search Mode (Phone Book) · · · · · 2-20
S! Appli8-8	Saving Request · · · · · · · · · · · · · · · · 10-5	Search Time ······ 8-10
Delete8-12	Status Setting · · · · · · · · · · · · · 13-44	Secret Entries · · · · · 2-18
Details · · · · · · 8-12	Status Update · · · · · · · · · · · · · · 10-9	Secret Mode · · · · · · 11-4
Download · · · · · · 8-8	S! GPS Navi · · · · · 9-14	Secure Remote Lock · · · · · 11-4
End/Exit · · · · · · · 8-8, 8-9	Location Logs · · · · · · 9-31	Security · · · · · · · 5-2, 13-19, 13-32, 13-33
Move · · · · · · · · · · · · · · · · · · ·	Location Mail · · · · · · · · · · · · · · · 9-31	Security Lock · · · · · · · · 2-23, 4-17, 13-21
Pause · · · · · 8-8	My Locations · · · · · · 9-31	Select Mike 13-24
Resume · · · · · · 8-8, 8-9	S! Information Channel · · · · 9-23	Self-delete (Mail)····· 4-16

	-	•	
٠,	-	-	
ю	ш	7/	

Settings · · · · · · 13-40	V
Timer	V Video Call 3-7 Video Call Settings 13-23 Video Mail Mode 7-5 Video Modes 7-5 Video Playback Window 8-6 View Settings (Weather Indicator) 13-43 View Type (Data Folder) 2-31 Visibility 13-36 vObjects 2-33 Voice Call 3-4 Call from Phone Book 2-19 Voice Mail 3-11 Voice Record (Camera) 13-27 Voice Record During Calls 3-14 Voice Recorder 9-9 Storage Location 9-30 Volume (S! Appli) 13-32
Undo	W Wallpaper 2-7 Edit Picture 7-12 Warning 13-20 Watch TV 6-4 Weather Forecast 2-9, 9-23, 13-43 Update 9-33 Weather Indicator 2-9, 9-23 View Settings 13-43

Web (Restricted Mode) 11-5 Web Page Operations -5-5 Web Search -5-9 White Balance 13-25 Wide View 13-3, 13-18 Word List 2-15 Delete All 2-29 World Clock 9-19 Rename City 9-32
Υ
Yahoo! Keitai ······5-3
Z
Zoom (Camera)

S! Circle Talk Call 10 Video Call 11 Voice Call 12 Assign 1-touch Number/Address 2- Attach Files 2-	3- 3-
В	
Back UpData to Memory Card (Transfer All)12-S! Addressbook Back-up12-Setting Data (Relocate)12-	-1
C	
Call Dialed Numbers 3- Earphone-Microphone Call 3- Group Calling 3- International Call 3- Received Calls 3- S! Circle Talk 10-7, 10 Speed Dial Video Call Voice Call 5- Cancel Alarm Answering Machine 9- Card Reader Mode 11 IC Card Lock 9- Keypad Lock 1	-1: -1: 3-: 3-: 3-: 3-: 2-:

Manner Mode · · · · · · · I - I 4
Mute3-13
Offline Mode · · · · · · 1-15
Password Lock · · · · · · · 11-3
Phone Book Lock · · · · · · · 13-35
PIN Lock · · · · · · · 11-5, 14-2
Remote Lock · · · · · · 9-13
S! Information Channel Subscription · · · · 9-23
Simple Mode · · · · · · · 2-6
hange
Alternative Picture (Video Call) · · · 3-15, 13-23
Call Barring Service Code · · · · · · · 3-18
Color of Calendar Dates · · · · · · · 9-27
File Name · · · · · 2-33
Folder Name 2-33, 4-17
Font Size (Display) · · · · · · · 13-5
Font Size (Internet) · · · · · · · 13-21
Font Size (Mail) · · · · · · · · 13-15
Font Size (Text Entry Window) · · · · · · 2-28
Handset Code · · · · · · · · · 11-2
Handset E-mail Address · · · · · · 4-3
Image Quality (Video Call) · · · · · · 3-15, 13-23
Internet Security Code · · · · · · · 11-5
Message Box View Format · · · · · · · 13-17
My Status · · · · · 10-4
Picture Size · · · · · · · 7-9
PIN · · · · · · 11-5
Text Encoding Type (Internet) · · · · · · · 13-21
hange Order
Files · · · · · · · 2-33
Main Menu Icons · · · · · 2-3
Messages · · · · · 4-19

8-8.8-9

	>	2	
ď	٦	ı,	П

ormat
Memory Card · · · · · · · · · · 2-25
orward
Call Forwarding · · · · · · · 3-10

S! Appli

S! Mail · · · · · · · · · · · · · · · · · · ·	4-4
SMS · · · · · · · · · · · · · · · · · ·	4-6
Time Table · · · · · · · · · · · · · · · · · · ·	٠,
vObject······	
Wallpaper · · · · · · · · · · · · · · · · · · ·	7-12
Customize	
Handset E-mail Address · · · · · · · · · · · · · · · · · ·	
Original Mode · · · · · · 13	3-11
D	

Phone Book Entries · · · · · · 2-31

AC Charger · · · · · · · 1-7

Desktop Cradle · · · · · · 1-8

In-Car Charger · · · · · · 1-9

USB Connection · · · · · · · · 13-37

Dial-up Connections · · · · · · 12-14. 12-15

Earphone-Microphone · · · · · · · · 3-13

Handsfree Device · · · · · · · 12-5 PC · · · · · · 12-8, 12-15, 13-37 USB Connection · · · · · · 12-8

Determined Text (Reconvert) 2-29 Hiragana to Alphanumerics/Katakana · · · · 2-11 Name - - - - 2-28 Single Kanii Conversion · · · · · · 2-28

Characters - - - - 2-13 Class on Time Table9-29 Message Text (Text Copy) · · · · · · · 4-19 Phone Book Entries · · · · · · · 2-31

Playlist 8-11

Text in Web Pages · · · · · · 5-7

Original Emoticons · · · · · · · 2-28 Original Twinkle Light Pattern · · · · · · · 13-6 Phone Book Entry · · · · · · · 2-17, 2-29 Playlist - - - - - 8-7

Charge (Battery)

Convert (Characters)

Connect

Copy

Create

ecorate
S! Mail Text · · · · · · 4-
elete
Alarms · · · · · 9-18, 9-3
Backup Data (Memory Card) · · · · · · 12-1
Balance List Entries · · · · · · · 9-3
Bookmarks · · · · · 5-
Characters · · · · · · · 2-1.
Classes from Time Table · · · · · · · 9-7, 9-2
Entries from S! Circle Talk Members List · · · 10-1
Events
Folders/Files (Data Folder) · · · · · · · · 2-3-
Members from S! Friend's Status Members List · · 10-
Messages · · · · · · 4-1
Phone Book Entries · · · · · · 2-3
Playlist · · · · · · 8-1
Recorded Messages on Answering Machine · · 3-1.
S! Appli8-1
Saved Pages (Screen Memo) · · · · · · · 5-
Server Messages · · · · · · 4-1
Shortcut Icons · · · · · · · 2-2
Tasks

Ε

Download

Edit
Active Window Members List · · · · · · 2-27
Bookmark Title · · · · · · · 5-9
City Name · · · · · · 9-32
Entered Text · · · · · · · 2-13
Event · · · · · · 9-28
Phone Book · · · · · · · 2-31
Picture · · · · · · 7-8
Playlist · · · · · · 8-7, 8-11
S! Addressbook Back-up · · · · · · · 12-12
S! Circle Talk Members List · · · · · · · 10-10
S! Friend's Status Members List · · · · · · 10-9
Task · · · · · · 9-28
Enable
Active Window Operation · · · · · 2-8
End

Lifestyle-Appli · · · · · · · 9-10

Music/Video Files · · · · · · · · 8-3

\$! Appli8-8

S! Information Channel · · · · · · 9-33

Software Update · · · · · · · · 14-6

Messages · · · · · · 4-18 Server Message · · · · · · 4-16	External Light for Incoming Events · · · 2-30, 13-6 External Light for Notifications · · · · · · · 13-6 Mobile Light · · · · · · · · · · · · · · 7-3, 7-6	SMS · · · · · · · 4-19
Н	Penlight · · · · · · · · · · · · · · · · · · ·	
Hold Hold Image (Video Call) · · · · · · 13-23 Incoming Call · · · · · · 3-13	Twinkle Light	Open Ku-man's Room · · · · · 9-26 P
I	Calendar Lock 13-39 Call Log Lock 3-15	Paste Characters · · · · · · · · · · · · · · · · · · ·
Input (Characters) Alphanumerics 2-12 Beeper Mode 13-34, 14-10 Dakuten (*)/Handakuten (*) 2-11 E-mail Address/URL Extensions 2-13 Emoticons 2-12 Kanji 2-10 Line Break 2-27 Lower Case 2-11 Pictographs 2-12 Space 2-28 Symbols 2-11	Function Lock 11-3 Function Lock 9-12 IC Card Lock 9-12 Keypad Lock 11-3 Password Lock 11-3 PIN Lock 11-3 POsitioning Lock 13-41 Remote Lock 9-13 Security Lock (Data Folder) 2-23 Security Lock (Internet) 13-21 Security Lock (Message Box) 4-17 Tasks Lock 13-40	Pause \$1 Appli
J	Move	R
Jump to Specified Date on Calendar · · · · · · · 9-4	Bookmarks 5-9 Files 2-23 Folders 2-34 Messages 4-19	Receive Messages · · · · · · · · · 4-8, 4-16 S! Friend's Status Notification · · · · · 10-5 via Bluetooth® Communication · · · 12-6, 12-7
Light (Flash) Backlight	Phone Book Entries	via Infrared 12-3 Record Answering Machine 3-6

4	1

•	Jet	Handset Power·····1-12
Save	Alarm	Transact ower
Attachments · · · · · · 4-19	Navi Appli	U
Bookmark	SI Δnnli · · · · · · · · · · · · · · · · · · ·	
Events · · · · · · 9-4	Subccribo	Mail List · · · · · · · · · · · · · · · · · · ·

File in Web Pages · · · · · 5-8

Locations to Areas List · · · · · · · 9-16

My Details3-12

My Locations · · · · · · 9-31

Number Memo·····3-14

Pages (Screen Memo) · · · · · · · 5-6

People to Active Window Members List · · 2-9. 13-44

People to Recipients List9-16

Phone Book Entry · · · · · · 2-17. 2-29

Phone Number to Reject List · · · · · · · 13-9

Words to Word List2-15

Text in Web Pages · · · · · · · · 5-7

Mail Notifications9-17

Music/Video Files · · · · · · · · 8-11

Picture/Video After Shooting · · · · · 7-10, 7-11

SMS - - - - - 4-6

Touch Tones - - - - 3-14

via Bluetooth® Communication · · · · · · 12-6

Video Call Image · · · · · · · · 3-7

Search

Send

Switch

Т

Take

Talk

Transfer

Turn off

Turn on

Picture

Take Notes

Notepad ·

Text Input Modes · · · · · · · 2-10 to Simple Mode · · · · · · · · 2-5

Call Waiting · · · · · · · · 3-17

Group Calling3-17

Handsfree3-14

by USB Connection · · · · · · 12-9

Setting Data (Relocate) · · · · · · · 12-15

Transfer All (Memory Card) · · · · · · · 12-10

Handset Power · · · · · · · 1-12

Off-timer (TV) · · · · · · · · 13-28

Other Party's Voice · · · · · · · 3-14

Voice Recorder · · · · · · 9-9

S! Ouick News Contents · · · · · · 9-22

Folder/File2-33

Saved Page (Screen Memo) · · · · · · 5-9

Received Messages · · · · · · · · 4-9

Browser Settings · · · · · · · 13-20

Multi Selector · · · · · · · 2-26

Prediction/Conversion Dictionary · · · · · · 13-34

S! Ouick News · · · · · · 13-8

Total Call Cost · · · · · · · 3-16

Total Call Time · · · · · · · 3-16

Access to the Internet by URL Entry · · · · · 11-5

Call Barring · · · · · · · 3-17

S! Appli8-8

Register

Rename

Reply to

Reset

Restrict

Resume

S

١	Natch
	W
	Web Page · · · · · 5-
	Weather Forecast · · · · · · · 9-3.
	Software · · · · · · · · · · · · · · · · · · ·
	S! Quick News · · · · · 2-
	S! Friend's Status · · · · · · · 10-

Warranty & After Sales Service

Warranty

A warranty card is included with handset. Carefully read the card and check that the store name and purchase date sections have been filled in correctly. Then, store it in a safe place.

 SoftBank and Toshiba assume no responsibility for damages to you or third parties as a result of a failure, malfunction or faulty operation of the product.

After Sales Service

Be sure to refer to "Troubleshooting" (page 14-7) before submitting your handset for repair. If you are still having problems with your handset, contact your nearest SoftBank Shop or SoftBank General Information (page 14-48).

Repair within Warranty Period

Repair is carried out in accordance with the conditions of the warranty.

Repair After Warranty Period

Repair is carried out if possible and the handset owner is responsible for any repair costs.

- During repair, parts may be replaced with used parts that meet our quality standards.
- Data and settings may be lost or altered as a result of failure or repair of your handset. It is, therefore, recommended that you keep a backup copy of important data such as Phone Book data. SoftBank and Toshiba assume no responsibility for any damages due to the loss or alteration of handset data (contents of Phone Book, Data Folder, etc.) and settings as a result of failure or repair of your handset.
- Disassembling or modifying handset is in violation of Radio Law. Your handset will not be accepted for repairs if it has been modified.

Customer Service

If you have any questions about SoftBank handsets or services, call General Information. For repairs, call Customer Assistance.

SoftBank Customer Centers

From a SoftBank handset, dial toll free at 157 for General Information or 113 for Customer Assistance.

SoftBank Global Call Center

From outside Japan, dial +81-3-5351-3491 (Please take care to dial the correct number. International charges will apply to this call.)

Call These Numbers Toll Free from Landlines

Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba,	General Information	(0088-240-157
Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	Customer Assistance	(0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	© 0088-241-157
Alcili, Gilu, Mie, Silizuoka	Customer Assistance	(a) 0088-241-113
Oralla Illiana Kasta Nava China Walannana	General Information	© 0088-242-157
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	Customer Assistance	6 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka,	General Information	(a) 0088-250-157
Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	Customer Assistance	0088-250-113

SoftBank 830T Instruction Manual

December 2008, First Edition

SOFTBANK MOBILE Corp.

* For additional information, please visit a SoftBank Shop.

Model: SoftBank 830T

Manufacturer: TOSHIBA CORPORATION



Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands).

- * Handsets, batteries and chargers submitted for recycling cannot be returned.
- * Always erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.