

<b>Basics</b> .....	<b>5-2</b>
<b>Initial Setup</b> .....	<b>5-4</b>
Channel Settings .....	5-4
<b>Watching TV</b> .....	<b>5-5</b>
Indicators .....	5-6
Operations while Viewing TV.....	5-7
Program Guide .....	5-7
Data Broadcast (Japanese).....	5-7
Functions while Viewing TV.....	5-8
<b>TV Links (Japanese)</b> .....	<b>5-10</b>
Saving TV Links .....	5-10
Opening TV Links.....	5-10
Functions Available in TV Link List.....	5-11
<b>Recording/Playing Programs</b> .....	<b>5-11</b>
Recording Current Program.....	5-11
Capturing Screenshots.....	5-12
Playing Recorded Programs.....	5-12
Viewing Captured Screenshots.....	5-13
Timer.....	5-13

## Basics

### 832P supports One Seg terrestrial digital TV broadcasting.

#### One Seg

One Seg is a digital TV broadcasting service for mobile phones.

For more information, visit The Association for Promotion of Digital Broadcasting Website:

[PC] <http://www.dpa.or.jp/>

[Handset] <http://www.dpa.or.jp/1seg/k/>

(Japanese only)

#### Features

Watch TV Programs (☞P.5-5)	Watch One Seg Digital TV on handset.
View Data Broadcast (☞P.5-7)	Access a variety of program-related information.
Record TV Programs (☞P.5-11)	Record program/capture still image while watching the program.
Set Timer (☞P.5-13)	Use Timer to view/record programs. You can easily set Timer by using Program Guide (☞P.5-7).

#### Mobile W-Speed

Frame rate of Digital TV images are automatically enhanced. Enjoy smooth image flow (☞P.17-11).

- Mobile W-Speed is set to **OFF** by default.
- When this function is set to **ON**, full effect of **Image Quality** may not be achieved.
- Depending on broadcasting condition, full effect of this function may not be achieved.
- Disabled during ECO Mode (☞P.17-12).
- Disabled for playing back videos recorded with Mobile W-Speed set to **ON**.

#### Precautions

- Digital TV is available only in Japan.
- Incoming calls/messages may affect TV image or audio quality while TV is activated.
- Digital TV may be disabled if USIM Card is not installed or SoftBank subscription is terminated.
- SoftBank is not liable for damages from accidental loss/alteration of handset/microSD Card information.  
Data saved to handset (TV Links, Channel List, etc.) cannot be restored after repairs or handset replacement. Back up important information.

## Signal Reception Areas

TV signal reception may be poor in the following conditions:

- Too far from or close to broadcasting stations.
- Mountain areas or near tall buildings.
- In moving vehicles, underground, in tunnels, etc.
- Near high-voltage wires, neon lights, wireless base stations, railroad tracks or highways.
- Areas with numerous signal obstructions or areas where signal reception is blocked.

## When Battery is Running Out

- Warning tone sounds and warning message appears if Digital TV is activated with low battery.
- When battery runs low while programs are on or being recorded, handset operates as follows:
  - While Viewing  
Warning tone sounds, and confirmation appears.
  - While Recording  
Response differs depending on **Rec. When Low Battery** (P.17-11) setting.
    - Continue Recording**... Warning tone does not sound and confirmation does not appear.
    - Stop Recording**... Warning tone sounds and confirmation appears.
- Watching TV while charging may shorten battery life.
- If recording ends due to low battery, recorded portion is automatically saved.

## Incoming Transmissions

TV pauses for incoming calls. Resume TV after call ends.

- Incoming calls do not interfere with recording.

### Tip

- Use Other Functions while Viewing TV (P.5-8)

## Initial Setup

### Set channels for your area.

- Up to ten Channel Lists can be saved.

#### Main Menu ► TV ► Channel Setting ► Select Area

- 1 Select a region → Select a prefecture
- 2 **YES**

#### Note

- If manual setup fails, try automatic channel setup (👉Below).
- 832P detects a change in reception area after moving to a different area. Set Channel List for that area.

## Channel Settings

### Automatic Channel Setup

#### Main Menu ► TV ► Channel Setting ► Automatic

- 1 **YES**
- 2 After channel search, **YES** → Enter title
  - If title is not entered, date (year/month/day/hour/minute) is automatically saved as title.


## Using Channel List

#### From ► Main Menu ► TV ► Channel List


 
### ■ Set Channels

- > Select a Channel List
  - Channel List is set, and available channels appear.
  - Select a channel to access the station.


### ■ Delete Channel List

- > Highlight a Channel List →  [Menu] → *Delete this* → **YES**
  - Selected Channel List cannot be deleted.




### ■ Delete Channels from Channel List

- > Highlight a Channel List →  [Detail] → Highlight a channel →  [Menu] → *Delete this* → **YES**
  - Channels in selected Channel List cannot be deleted.

### ■ Edit Title

- > Highlight a Channel List →  [Menu] → *Edit title* → Edit

### ■ Reassign a Remote Control Number (Keypad) to a Channel

- > Highlight a Channel List →  [Detail] →  [Menu] → *Remote control #* → Select a channel → Select a new remote control number →  [Finish] → **YES**

## Watching TV





- Set channels beforehand (☞P.5-4).
- Change Default View (☞P.17-11)

1 



Viewer

## 2 Select a channel

Direct Channel Access	<input type="text" value="1"/> - <input type="text" value="9"/> <input type="text" value="*"/> (Channel 10) <input type="text" value="0"/> (Channel 11) <input type="text" value="#"/> (Channel 12)
Previous/ Next Channel	 <sup>1</sup> /  <sup>2</sup>
Channel Search	Press and hold  <sup>1</sup> / press and hold  <sup>2</sup> ● To stop: <input type="text" value="Cancel"/> / <input type="text" value="CLR"/>

<sup>1</sup> Available only in Portrait View


<sup>2</sup> Available only in Landscape View

3 To end TV,  → YES

### Note

- Alternatively, **Main Menu** ► **TV** ► **Watch TV**

# Indicators

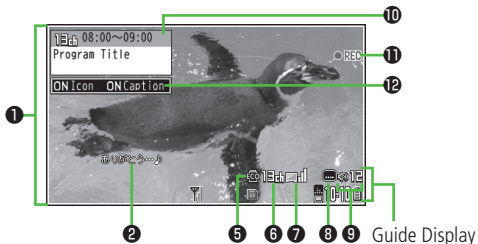

Guide Display

Item	Description
1 Image	-
2 Captions	-
3 Data Broadcast	(P.5-7)
4 Data Broadcast Mode	<input type="checkbox"/> Data Broadcast Mode off <input checked="" type="checkbox"/> Data Broadcast Mode on
5 ECO Mode	(P.17-12)
6 Channel	(P.5-4)
7 Signal Strength Level	Strong ← → Weak Out of range
8 Receiving Captions	-
9 Volume	-
10 Program Title	-
11 Recorder Status	<input checked="" type="checkbox"/> REC Recording <input checked="" type="checkbox"/> REC Timer Set
12 Indicator/Caption	Indicators/captions on or off

## Operations while Viewing TV

Operations	Landscape View	Portrait View
Volume	/A ▾	*/A ▾
Mute/Cancel Mute*		
Program Guide	–	[EPG]
Program Info	Press and hold ● To return to Viewer:	
Program Title	/ / /	[Disp.]
Indicator/ Caption View	While Program Title appears: ● Each key press toggles indicators (icons) and captions on/off.	–
Information View	–	While Program Title appears,  [Change]
Portrait/Landscape View*	 ● Each key press toggles view.	
Record Programs*	[Record] (↪P.5-11) ● To stop:  [Stop]	
Capture Still Images*	Press and hold  (↪P.5-12)	
Data Broadcast Mode On/Off	–	

\* Available when Data Broadcast Mode is off

## Program Guide

Check program schedules and set timer to view/record TV programs.

### Main Menu ► TV ► Program List

- Confirmation appears when using Program Guide for first time. Follow onscreen instructions.
- See Program Guide Help menu for usage information.

## Data Broadcast (Japanese)

Access a variety of program-related information such as still images and videos.

- Data Broadcast is not available in Landscape View. Press to switch to Portrait View.

1 Activate TV (Data Broadcast Mode off) →

appears.


- to select information.
- To deactivate Data Broadcast Mode:

### Note

- Viewing Data Broadcast information requires no fees; however, accessing websites will incur connection fees.

## Functions while Viewing TV

### Sound Settings


 





> While TV is active,  [Menu] → *Settings* → *Sound* → *Sound Effect* → Select an item (See below)

Item	Operation/Description
<b>Auto Volume</b>	Automatically increase to optimum volume > <b>ON</b> or <b>OFF</b>
<b>Remaster</b>	Adjust sound quality to reproduce original sound > <b>ON*</b> or <b>OFF</b>
<b>Listening</b>	Adjust to natural sound when using earphone > Select an item <ul style="list-style-type: none"> <li>· <b>Surround</b>: Reproduce natural and stereophonic sound</li> <li>· <b>Natur 1*</b> or <b>Natur 2*</b>: Complement sound specific to earphone to reproduce natural sound</li> <li>· <b>OFF</b>: Turn off Listening setting</li> </ul>
<b>Equalizer*</b>	Change sound quality when using earphone > Select an item <ul style="list-style-type: none"> <li>· <b>Normal</b>: Reproduce normal sound</li> <li>· <b>H. BASS1</b>: Enhance low-pitched sound</li> <li>· <b>H. BASS2</b>: Enhance low-pitched sound even more</li> <li>· <b>Voice</b>: Make voice clear</li> <li>· <b>Train</b>: Minimize sound leakage</li> </ul>

\* Available only when earphone is connected

### Other Functions

> While TV is active, follow the steps below.

Item	Operation/Description
<b>Access Internet</b>	>  → <i>Open Menu</i> → <i>Yahoo! Keitai</i> → <i>Yahoo! Keitai</i> or <i>PC Site Browser</i> <ul style="list-style-type: none"> <li>● Follow onscreen instructions</li> </ul>
<b>Make a Voice Call/Video Call</b>	>  → <i>Stand-by display</i> → Enter a number →  /  [Dial] (For Video Call,  [V. Call]) <ul style="list-style-type: none"> <li>● Interrupt TV during call. After call, TV resumes.</li> <li>● Recording will not be interrupted.</li> </ul>
<b>Use Messaging</b>	>  → <i>Stand-by display</i> → 



## ■ Functions Available while Viewing TV

> While TV is active,  [Menu] → Select an item (See below)

Item	Operation/Description
<b>Channel info</b> <sup>1</sup>	View channel details. Select a channel to watch that station
<b>Program info</b>	View current program information
<b>Channel List</b> <sup>1</sup>	View channel list (☞P.5-4)
<b>Channel Setting</b> <sup>1</sup>	Set channels for your area (☞P.5-4)
<b>Add to ch. list</b> <sup>1</sup>	Add current station to Channel List > <b>YES</b> ● Assign current station to lowest available number key.
<b>Program list</b> <sup>1</sup>	View program list
<b>Switch display</b> <sup>1</sup>	Switch view (switch image size/image off) > Select an item
<b>Switch TV/data BC</b> <sup>1</sup>	In Portrait View, toggle Data Broadcast Mode on/off (☞P.5-7)
<b>Icons</b> <sup>2</sup>	Set Guide Display in Landscape View > <b>ON</b> or <b>OFF</b>
<b>Compose S! Mail</b>	Create S! Mail while listening to sound (☞From Step 2 on P.13-4)

Item	Operation/Description
<b>Settings</b>	> Select an item <ul style="list-style-type: none"> <li>· <b>Brightness</b>: Set Back Light brightness</li> <li>· <b>Mobile W-Speed</b><sup>2</sup>: Enhance frame rate of TV images automatically</li> <li>· <b>Image Quality</b><sup>2</sup>: Select an image quality</li> <li>· <b>LCD AI</b>: Activate image compensation according to Back Light</li> <li>· <b>Sound</b> → <b>Sound Effect</b><sup>2</sup> (☞P.5-8)</li> <li>· <b>Sound</b> → <b>Main/sub sound</b>: Set main/sub sound</li> <li>· <b>Sound</b> → <b>Switch audio data</b>: Available only when multiple audio data are supported</li> <li>· <b>Sound</b> → <b>TV Sound W/ Closed</b><sup>2</sup>: Set whether to keep speaker on when closing 832P while viewing TV</li> <li>· <b>ECO Mode</b><sup>2</sup>: Set power saving mode (☞P.17-12)</li> </ul>
<b>Data Broadcasting</b> <sup>1</sup>	> Select an item <ul style="list-style-type: none"> <li>· <b>Reload contents</b>: Reload page (Data Broadcast link)</li> <li>· <b>Certificate</b>: View owner, author, validity period and serial number of certificate used in SSL communication</li> <li>· <b>Images</b><sup>2</sup>: Show/hide images on Data Broadcast sites</li> <li>· <b>Sound Effect</b><sup>2</sup>: Turn on/off sounds from Data Broadcast/sites</li> <li>· <b>Reset Settings</b><sup>2</sup>: Show confirmation on Data Broadcast</li> </ul>

Item	Operation/Description
<b>Back to data BC</b> <sup>1</sup>	End Data Broadcast site and return to Data Broadcast window
<b>Tune service</b> <sup>1</sup>	Select a program when multiple programs are available from the same broadcasting company > Select a station or its affiliate
<b>TV Link</b> <sup>1</sup>	Show TV Link details

<sup>1</sup> Available only in Portrait View

<sup>2</sup> Available from User Settings even while TV is not active (☞P.17-11).

## TV Links (Japanese)

### Saving TV Links

- Following function is not available in Landscape View.

1 Switch Data Broadcast Mode on → Select a link

2 **YES**

Follow onscreen instructions to save link.

### Opening TV Links

Main Menu ► TV ► TV Link

1 Select a TV Link

- Confirmation appears when Internet access is required. Select **YES** to proceed.
- If TV Link is expired, confirmation appears asking whether to delete link.

## Functions Available in TV Link List

Main Menu ► TV ► TV Link

1 [Menu] → Select an item (See below)

Item	Operation/Description
Display detail	Show TV Link title, URL, summary, content type, expiration date
No. of TVlink	Show number of saved TV Links
Delete this	> YES
Delete selected	> Check TV Links to delete →  [Finish] → YES
Delete all	> Enter Phone Password → YES

## Recording/Playing Programs

### Recording Current Program

Save programs as videos or still images.  
Recordings are saved to microSD Card.

- microSD Card: ㄱP.9-15
- Save up to 2GB of data at a time.

Recording Time (total)*	Approx. 740 minutes
Savable Files	99 files

\* Average recordable time per 2GB of data

- Recording is unavailable when signal strength drops to .

1 Activate TV (Data Broadcast Mode off) → [Record]

appears, and recording starts.

2 [Stop] to stop recording

Program is saved to microSD Card.

#### Note

- In the following cases, recording ends and recorded portion is automatically saved:
  - File size is over 2GB
  - microSD Card memory is full
- Recorded files are not saved to handset.
- Do not remove microSD Card while recording.
- Recording continues even if signal strength level is ; however, images and audio are not saved.
- Data Broadcast information cannot be recorded.

## Capturing Screenshots

### Captured screenshots are saved to handset.

- This feature is unavailable when signal strength is or Data Broadcast Mode is on.

- 1 Activate TV (Data Broadcast Mode off) → press and hold


#### Note

- Captions cannot be captured.

## Playing Recorded Programs

### Main Menu ► Data Folder ► TV ► Video

- 1 Select a file  
Playback starts.

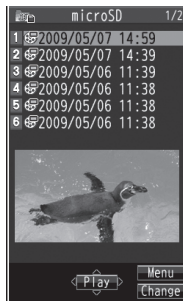

Example: Video Folder

- 2 to stop playback

## Playback Operations

Operations	Landscape View	Portrait View
Volume		
Mute/Cancel Mute		
Play Previous File		
	<ul style="list-style-type: none"> <li>• Press  to play back from beginning when playback time is over ten seconds.</li> </ul>	
Pause/Resume		
Play Frame by Frame	Pause playback →  [Frame] <ul style="list-style-type: none"> <li>• Play back frame by frame.</li> </ul>	
Skip Rewind (30 Seconds) <sup>2</sup>	Press and hold <sup>1/</sup> 	Press and hold <sup>1/</sup> 
Skip Forward (30 Seconds) <sup>2</sup>	Press and hold <sup>1/</sup> 	Press and hold <sup>1/</sup> 
Toggle Playback Speed		
View Title	[Disp.] <ul style="list-style-type: none"> <li>• In Landscape View, indicator/caption setting display appears.</li> </ul>	
Toggle Caption	Display title →  [Change] <ul style="list-style-type: none"> <li>• In Landscape View, each key press toggles indicators (icons) and captions on/off.</li> </ul>	
Portrait/Landscape View	 <ul style="list-style-type: none"> <li>• Each key press switches view.</li> <li>• Close handset while in Landscape View to switch to Portrait View.</li> </ul>	

<sup>1</sup> Use opposite key when Display faces right.

<sup>2</sup> Unavailable if file is under 30 seconds long.

## Viewing Captured Screenshots

Main Menu ► Data Folder ► TV ► Image

1 Select an image



## Timer


- Set up to 100 timer entries to watch or record programs.

Main Menu ► TV

1 **Timer Watching** or **Timer Recording**

2  [New] → Select an item (See below)

Item	Operation/Description
<b>Start date setting</b>	Set date and time to start viewing/recording a program > Select an item
<b>End date setting</b> <sup>1</sup>	· <b>Enter date</b> → Enter a date · <b>Choose date</b> → Select a date
<b>Channel</b>	> Select a channel
<b>Edit title</b>	> Enter a program name
<b>Repeat</b>	> Select a repetition → For <b>Select day</b> , select a day (days) →  [Finish]
<b>Alarm (Alarm notice)</b> <sup>2</sup>	> <b>ON</b> or <b>ON/Set time</b> → For <b>ON/Set time</b> , select an alarm time
<b>Alarm tone</b> <sup>2</sup>	> Select an alarm type → Select a folder → Select an alarm
<b>Alarm (Alarm on/off)</b> <sup>1</sup>	> <b>ON</b> or <b>OFF</b>
<b>Alarms (Alarm volume)</b>	>  to adjust volume ● For <b>Timer Recording</b> , Escalating Tone cannot be set.
<b>Activate TV w/ alarm</b> <sup>2</sup>	> <b>ON</b> or <b>OFF</b> ● When <b>ON</b> is set, Digital TV activates from alarm notification window.


Item	Operation/Description
Priority <sup>1</sup>	Set handset response when Timer Recording starts > <b>Recording</b> or <b>Operation</b> <ul style="list-style-type: none"> <li>● When <b>Recording</b> is set, active function suspends/ends, and recording starts.</li> <li>● When <b>Operation</b> is set, confirmation appears. To suspend/end active function, select <b>YES</b> and  to start recording.</li> </ul>

<sup>1</sup> Timer Recording only

<sup>2</sup> Timer Watching only

3  [Finish] → For **Timer Recording**, select **YES** or **YES (confirm once)**

#### Note


- Select timer entries to check details;  [Edit] to edit details.
- Timer Recording does not start if Internet and two other functions are active simultaneously.
- Alarm does not sound for Timer Watching/Timer Recording in following functions. For Timer Recording, complete followings (in parentheses) one minute before timer starts; otherwise, recording does not start.
  - While handset is off (Turn on handset)
  - While Privacy Key Lock is active (Cancel lock)
  - While Personal Data Lock is active (Cancel/change lock)
  - During data transfer (Complete transfer)
  - During Infrared transmission or IC transmission (Complete transmission)
  - During software update (Complete update)

## Other Timer Operations

Main Menu ► TV

1 **Timer Watching** or **Timer Recording**

2  [Menu] → Select an item (See below)

Item	Operation/Description
<b>New</b>	Set a timer entry to watch/record a program (☞P.5-13)
<b>Edit</b>	Edit entry details (☞P.5-13)
<b>Sort</b>	Sort timer entries > Select an order
<b>Delete this</b>	> <b>YES</b>
<b>Delete past</b>	Timer entries with start/end time set prior to current date/time are deleted > <b>YES</b>
<b>Delete selected</b>	> Check timer entries to delete →  [Finish] → <b>YES</b>
<b>Delete all</b>	> Enter Phone Password → <b>YES</b>
<b>Memory Status</b> [Timer Recording only]	Show memory status

## Checking Timer Recording Results

Main Menu ► TV

1 **Recording Result** → Select a result

- Details appear.