

# Entertainment

<b>S! Quick News (Japanese)</b> .....	<b>7-2</b>
Registering S! Quick News Items .....	7-2
Opening New Information .....	7-2
<b>S! Information Channel/Weather (Japanese)</b> .....	<b>7-4</b>
Registering/Canceling.....	7-4
Using S! Information Channel.....	7-4
Using Weather Indicator .....	7-5
Option Menu Items.....	7-6
<b>E-Books (Japanese)</b> .....	<b>7-6</b>

## S! Quick News (Japanese)

Add news headlines, weather forecasts, etc. via S! Quick News List to scroll across Standby Window.

- Registering or viewing S! Quick News incurs transmission fees. No fees apply for viewing ticker information. For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

### Registering S! Quick News Items

- Register one *Quick* news, up to four *General* news and one *Special* news.

Main Menu ► Entertainment ► S! Quick News  
► S! Quick News List

#### 1 Add News → YES

Yahoo! Keitai connects and contents list appears.


#### 2 Select an item

Follow onscreen instructions.

## Opening New Information

### Viewing New Information in Standby

When new information is received,  appears in Standby.

- 1  to highlight ticker  
Information appears above ticker.
- 2 Select ticker  
Content list appears.
- 3 Select information  
Details appear.

#### Tip

- Settings** ● Show Only Unread Items in Standby ● Change Marquee Speed  
● Hide S! Quick News ● Block Image Data (P.17-13)

## Opening S! Quick News List

### Icons



Unread Quick news



Unread General news



Read Quick news



Read General news



Auto Refresh disabled



Unread Special news



Read Special news

**Main Menu** ► **Entertainment** ► **S! Quick News**  
► **S! Quick News List**

- 1 Select an item  
Content list appears.
- 2 Select information  
Detailed information appears.
- 3 To connect to the Network, select a title → **YES**

### ■ Update Manually

> In Step 1, [Menu] → **Update** or **All Update** → **YES**

### ■ View Summary

> In Step 1, highlight information → [Menu] → **Summary Display**

### ■ Delete Registered Items

> In Step 1, (highlight information →) [Menu] → **Delete** or **All Delete** → **YES** (→ For **All Delete**, enter Phone Password)

### Note

- Alternatively, **Main Menu** ► **Entertainment** ► **S! Quick News**  
► **Settings** ► **Del S! Quick News List** ► **YES** to delete all information

### Tip

- Settings**
- Automatically Update S! Quick News List
  - Delete S! Quick News Information (P.17-13)

## S! Information Channel/Weather (Japanese)

Subscribe to content and periodically receive updates. Set Weather Indicator to appear on Standby.

- Transmission fees apply for updates.

### Registering/Canceling

Main Menu ► Entertainment ► S! Info Ch./Weather

#### 1 Register/Cancel → YES

832P connects to the Network.  
Follow onscreen instructions.

### Using S! Information Channel

- Up to seven updates are saved.

### Viewing New Information

When information arrives,  and Event Indicator appear in Standby.

#### 1 Select Event Indicator

Information appears.  
Follow onscreen instructions.  
• Option Menu Items (P.7-6)



### Manually Retrieve Information

Select Event Indicator "Failed to download"

- Alternatively, Main Menu ► Entertainment ► S! Info Ch./Weather ► Get Latest Contents ► YES

### Delete Information

> Main Menu ► Entertainment ► S! Info Ch./Weather ► Highlight What's New? ►  [Menu] ► Delete ► YES

#### Note

- Alternatively, Main Menu ► Entertainment ► S! Info Ch./Weather ► What's New? to retrieve information
- If there is unread information in both S! Quick News and S! Information Channel,  does not appear. Only Event Indicator appears.

### Viewing Previously Received Information

Main Menu ► Entertainment ► S! Info Ch./Weather

#### 1 History → Select a date

 for unread news and  for read news appear.

### Delete History

> Main Menu ► Entertainment ► S! Info Ch./Weather ► History ► (Highlight a History) ►  [Menu] ► Delete or Delete all ► YES  
(► For Delete all, enter Phone Password)

## Using Weather Indicator

Weather Indicator for current forecast area appears in Standby.

### Viewing New Information

Event Indicator and Weather Indicator appear for weather updates.

#### 1 Select Event Indicator or Weather Indicator

Information appears.

Follow onscreen instructions.

- Option Menu Items (➡P.7-6)



#### Weather Indicator

Indicators are updated periodically.

Example: ☀ Clear, ☂ Rain later thunderstorm,

☁ Cloudy with occasional snow, etc.

- See Weather Indicator List (➡P.18-23) for a complete list of indicators.

#### Manually Update Weather Indicator

Select Event Indicator "Failed to download"

- Alternatively, **Main Menu** ▶ **Entertainment**
  - ▶ **S! Info Ch./Weather** ▶ **Weather Indicator** ▶ **Manual Update** ▶ **YES**

#### Hide Event Indicator

- > **Main Menu** ▶ **Entertainment** ▶ **S! Info Ch./Weather**
  - ▶ **Weather Indicator** ▶ **Missed Event Settings** ▶ **OFF**

#### Note

- Alternatively, view forecast details from **Main Menu**
  - ▶ **Entertainment** ▶ **S! Info Ch./Weather** ▶ **Weather Indicator** ▶ **Weather**

### Hiding Weather Indicator


**Main Menu** ▶ **Entertainment** ▶ **S! Info Ch./Weather**  
▶ **Weather Indicator** ▶ **Display Settings**

#### 1 OFF

- When Display Settings is set to **OFF**, update is also deactivated.

## Option Menu Items


While viewing a content, press  [Menu] for these options.

Item	Operation/Description
<b>Forward</b>	Go to next page
<b>Text Copy</b>	Copy page text
<b>Select File</b>	View, play or save file to Data Folder (From Step 2 in Downloading Image/Sound Files:  P.14-11)
<b>Jump in this page</b>	Jump to top/end of page
<b>Yahoo! Keitai</b>	View top menu
<b>Font Size*</b>	Change character size
<b>Exit viewing this</b>	Exit content

\* Linked with Font Size setting in Internet option menu.

## E-Books (Japanese)

Use **BookSurfing®** to acquire/view e-books, comics, photo books, etc. or **e-Book Viewer** to view XMDF files on 832P.

- BookSurfing® and e-Book Viewer are S! Appli.
- Download Content Keys ( P.9-5) to read CCF/XMDF files.
- Some copy protected files have extensions different from the ones below.

Application	File Format
<b>BookSurfing®</b>	CCF (.ccf)
<b>e-Book Viewer</b>	XMDF (.zbf, .zbf, .zbs)

- Some PC content may not be viewable via e-Book Viewer.

### Main Menu ► Entertainment

#### 1 *BookSurfing* or *e-Book Viewer*

- See application Help menu for usage information.

#### Note

- Launch BookSurfing®/e-Book Viewer via S! Appli, or select a file from Books in Data Folder.