

Calendar	12-2
Opening Calendar	12-2
Creating Calendar Events	12-2
Saving Holidays/Memorial Days	12-3
Viewing/Editing Calendar Event Details	12-4
Calendar Functions	12-4
Tasks	12-6
Saving a Task	12-6
Using Tasks	12-6
Alarms	12-7
Alarm Tone	12-7
Setting Alarm	12-7
Calculator	12-8
Notepad	12-9
Saving a Note	12-9
Notepad Functions	12-9
Dictionary (Japanese)	12-10
Activating Dictionary	12-10
Dictionary Applications	12-10

Sound Recorders	12-11
Voice Recorder	12-11
Voice Announce	12-11
Bar Code Reader	12-12
Scanning Barcodes	12-12
Viewing/Editing Scanned Data	12-13
Using Scanned Data	12-13
Location Settings	12-14
Positioning Lock	12-14
Sending Location Information	12-14

Calendar

View by day, week or month; set Alarms for events.

Opening Calendar

Main Menu ► Tools ► Calendar

Current month appears.

- When a date with Calendar events is selected, number of AM and PM events and up to three contents appear.
- [Prev.] or [Next] to show previous/next month calendar.
- To switch Monthly/Weekly view: P.12-4




Monthly View

Creating Calendar Events

Save up to 1000 entries.

Main Menu ► Tools ► Calendar

- 1 to highlight a date → [New] → *Schedule*

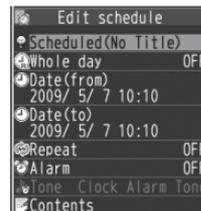

- 2 Select an item (See below)

Item	Operation/Description
Select icon/ Edit summary	> Select an icon → Edit subject
Whole day setting	> OFF or ON ● When ON is set, Alarm goes off at 0:00 a.m.
Date (from)	> Enter start date and time
Date (to)	> Enter end date and time
Repeat	> Select a repetition → (For Select day , check days → [Finish])
Alarm	> Select an Alarm type (→ For ON/Set time , enter time) ● Alarm Tone: P.12-7
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone
Contents	> Enter event description

3 [Finish]

Calendar Event Indicators

Following indicators appear in Calendar Window.

- (Blue): Morning event
- (Orange): Afternoon event
- (Underscore): Event that lasts for two days or longer
- Following indicators appear on Display.
 - : Alarm
 - : Monthly
 - : Daily
 - : Yearly
 - : Weekly

Note

- Calendar events between 00:00 on 2000/01/01 and 23:59 on 2037/12/31 can be saved on 832P.
- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (➡P.11-5).

Saving Holidays/Memorial Days

Save up to 100 entries (one entry a day) each for Holidays or Memorial days.

Main Menu ► Tools ► Calendar

- 1 Highlight a date → [New] → *Holidays* or *Memorial days*
- 2 Select an item (See below)

Item	Operation/Description
Date setting	> Enter a date
Repeat	> Select a repetition type <ul style="list-style-type: none">● 1 time does not repeat Holidays/Memorial days events.
Edit holiday/ anniversary	> Enter description

3 [Finish]

Indicators

Holidays appear in red.


Memorial days are marked with a red circle.

- Following indicators appear in Calendar/Calendar Event List Window:
 - : Holidays
 - : Memorial days
 - : Yearly repeat

Viewing/Editing Calendar Event Details

Main Menu ► Tools ► Calendar


1  to select a date

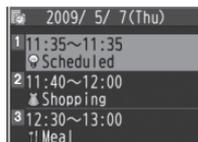

Calendar Event List

2 Select an event

- To edit:  [Edit] → Edit selected item (Schedule:  From Step 2 on P.12-2/ Holiday, Anniversary:  From Step 2 on P.12-3)

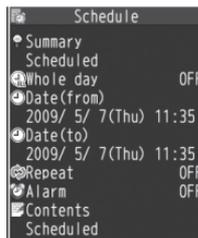

Calendar Event Details

Calendar Functions

From ► Main Menu ► Tools ► Calendar

Functions Available in Calendar Window

> Highlight a date →  [Menu] → Select an item (See below)

Item	Operation/Description
New	Create a new entry ( P.12-2, P.12-3)
Weekly display/ 1 Month	Toggle Monthly/Weekly view
Icon display	Entries in category of selected icon appear > Select an icon
No. of schedules	Display number of saved Schedule, Holiday or Anniversary entries
Add shortcut icon	Create a shortcut ( P.1-17)
Send all Ir data	( P.10-3)
AllIC transmission	( P.10-5)
Delete past	> Select a category to delete → YES
Delete all	> Enter Phone Password → Select an item → YES
Reset holidays	Restore deleted Holidays > YES

■ Functions Available in Calendar Events List/Details

> Select a date (→ Select a Schedule, Holiday or Anniversary) →

 [Menu] → Select an item (See below)

Item	Operation/Description
New	Create a new entry ( P.12-2, P.12-3)
Edit	Edit selected item ( P.12-4)
Copy	Copy an entry to another day > Enter date and time to copy an entry to
Calendar display	Switch from Icon display to Calendar display
Icon display	Entries in category of selected icon appear > Select an icon
Set secret mode/ Release secret	Activate/deactivate Secret Mode > YES (→ For Set secret mode , enter Phone Password) ● Secret entries appear only in Secret Mode or Secret Data Only ( P.11-9).
Compose S! Mail	Create S! Mail by copying event date and content to message text ( From Step 2 on P.13-4)
Send Ir data	( P.10-3)
Send all Ir data	( P.10-3)
IC transmission	( P.10-5)
AllIC transmission	( P.10-5)
Copy to microSD	Copy an entry to microSD Card > YES ● To display data on microSD Card:  P.9-17
Delete this	> YES

Item	Operation/Description
Delete past	Delete selected category entries up to the highlighted date > Select a category to delete → YES
Delete select	> Check entries to delete →  [Finish] → YES

Tasks

Make quick notes of task to manage in Task list.

Saving a Task

Main Menu ▶ Tools ▶ Tasks

- 1  [New] → Select an item (See below)
 - To check saved Tasks, select a Task. To edit, press  [Edit] in detail window.

Item	Operation/Description
Edit Tasks	> Enter content
Due date	> Select how to enter due date → Enter due date ● Select No date to enter none.
Priority	> Select a priority level
Category	> Select a category
Alarm	> Select an Alarm type (→ For ON/Set time , enter time) ● Alarm Tone:  P.12-7
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone

- 2  [Finish]
 - When content is not entered, Tasks cannot be saved.

Note

- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set ( P.11-5).

Using Tasks

In Tasks window, press  [Menu] for following operations.

Item	Operation/Description
New	Create a new entry ( Left)
Edit	Edit an entry ( Left)
Change status	Change status indicator shown in Tasks list > Select a status (→ For Completion , select an item → Enter Completion date) ● Overdue status indicator turns red.
Show by category	> Select a category
Sort/Filter	Sort list by due date, entry order, status, etc. > Select a condition
Add shortcut icon	Create a shortcut ( P.1-17)
Send Ir data	( P.10-3)
Send all Ir data	( P.10-3)
IC transmission	( P.10-5)
AllIC transmission	( P.10-5)
Copy to microSD	Copy a Task to microSD Card > YES ● To display data on microSD Card:  P.9-17
Delete this	> YES
Delete select	> Check entries →  [Finish] → YES
Delete completed	Delete an entry in Completion status > YES
Delete all	> Enter Phone Password → YES

Alarms

Alarm Tone

When scheduled time arrives, alarm tone sounds and Notification Light illuminates. Alarm image corresponding to icon appears on Display.

To Stop Alarm Tone for Calendar Events, Tasks or Alarm

Press any key.

Missed Alarm

"Missed Alarm" Event Indicator appears in Standby for alarms missed during Privacy Key Lock, Personal Data Lock or Infrared transmission once locks are canceled or transmission ends. Select indicator to view content.

Note


- When one or more Alarms are set to the same time, alarm sounds in the order of : "Alarm" → "Timer Recording" → "Tasks" → "Calendar" → "Timer Watching"
For Tasks, "Missed Alarm" indicator appears.

Setting Alarm

Set up to five alarms. Alarm tone sounds at the specified time once, everyday or weekly as set.

Main Menu ► Tools ► Alarms

- 1 Highlight an Alarm → [Edit]

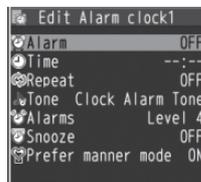

- 2 Follow the steps below

Item	Operation/Description
Alarm (Alarm on/off)	Activate or cancel Alarm > ON or OFF
Time setting	> Set Alarm time
Repeat	> Select a repetition (→ For Select day , check days → [Finish])
Alarm tone	> Select an Alarm tone type → Select a folder → Select an Alarm tone
Alarms (Alarm volume)	> to set Alarm tone volume
Snooze setting	> ON or OFF (→ For OFF , enter time) ● When Snooze is set to ON , Alarm tone sounds for 60 seconds, repeating up to six times at five minute intervals.
Prefer manner mode	> ON or OFF ● Set Manner Mode or Alarm priority.

3 [Finish]

appears.

Alarm Indicators

● Following indicators appear:

: Repeats daily : Repeats weekly

Cancel & Reactivate Alarm

> In Alarms list, press [Menu] → Select **set this** or **Release this** → **YES**

- Cancel or reactivate an alarm entry as required.
- Highlight an entry → to reactivate/cancel Alarm.

Cancel Snooze

> Press any key →


Note

- Copy protected files may not be set as Alarm tone.
- Alarm tone does not sound when Privacy Key Lock or Personal Data Lock is set. However, settings can be changed even while Personal Data Lock is set (→ P.11-5).

Calculator

Main Menu ▶ Tools ▶ Calculator

Operation	Assigned key
Number (0 - 9)	-
+	
-	
x	
÷	
=	
Decimal point	
%	
Clear	

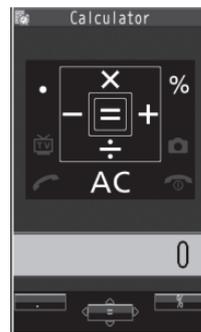

Example:

$$-17+28.5=11.5$$



Notepad

Save up to 20 notes.

Saving a Note


Main Menu ► Tools ► Notepad

1 <Not Recorded>

- Select a saved note to view content.
◻ [Edit] to edit.

2 Enter text

- Up to 256 double-byte or 512 single-byte characters can be entered.

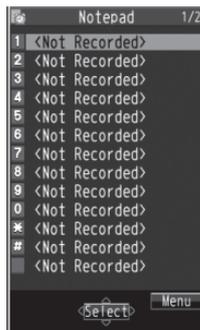

Notepads Window

Notepad Functions

In Notepad list window, press [Menu] for following operations.

Item	Operation/Description
Edit	Edit a saved note
Compose S! Mail	Create S! Mail by copying content to message text (☞From Step 2 on P.13-4)
Edit schedule	Copy a note to Schedule to create a Calendar event > Schedule → Save a new note (☞From Step 2 on P.12-2)
Add shortcut icon	Create a shortcut (☞P.1-17)
Send Ir data	(☞P.10-3)
Send all Ir data	(☞P.10-3)
IC transmission	(☞P.10-5)
AllIC transmission	(☞P.10-5)
Copy to microSD	Copy a note to microSD Card > YES ● To display data on microSD Card: ☞P.9-17
Notepad Info	Display entry date, latest modified date and category of note
Category	> Select a category ● When no category applies, select None .
Delete this	> YES
Delete selected	> Check notes → [Finish] → YES
Delete all	> Enter Phone Password → YES

Dictionary (Japanese)

Use ケータイTOOL<辞書> to access preinstalled dictionaries and reference books.

- ケータイTOOL<辞書> is an S! Appli.
- The following dictionaries are preinstalled.

Dictionary applications	英会話とっさのひとことクイズ, 英会話とっさのひとこと辞典, 学研「辞スバ」英和/和英/国語辞典 ● Refer to 使い方 (☞Right) for details.
E-Book	Other files ● View by using E- Book Viewer. Refer to E-Book Viewer Help for details.

Activating Dictionary

- 1 Press and hold **[MULTI]** → Read **免責** (disclaimer) → **OK**
ケータイTOOL<辞書> activates.
 - To forbid showing **免責** each time: Uncheck
アプリ起動時に常に表示する.
- 2 Select a dictionary

Note

- Alternatively, **Main Menu ▶ Tools ▶ Dictionary** to activate
- Press and hold **[MULTI]** to activate Dictionary while another function is active (creating messages, viewing TV, etc.). Dictionary may not activate, however, during a call, while another S! Appli is active, etc.

Dictionary Functions

After Step 1, press **[☑][メニュー]** for following operations.

Item	Operation/Description
文字サイズ変更	Change font size > Select a size
使い方	View details > Select an item
免責	View disclaimer
ライセンス	View license

Dictionary Applications

Enter a word and corresponding definitions appear from all dictionaries.

- 1 In Step 2 (☞Left), **学研「辞スバ」英和/和英/国語辞典**
- 2 **[○]** → Enter a word
Search results appear.
 - To scroll pages: **[◀]/[▶]**
 - To switch dictionaries: **[1]/[3]**
 - To search again: **[🔍][再検索]**
- 3 Select a word
Details appear.
- 4 To end, **[📞]** → **Stopped**

Note

- While Dictionary application is active, press **[☑][メニュー]** for useful functions.

Sound Recorders

Voice Recorder

Set recorded sounds for ringtones.

- Record for about 60 seconds each.

Main Menu ► Tools ► Sound Recorders ► Voice Recorder

1 **YES**

2  [Stop] /  /  (→ **OK**) to stop recording

Recorded sounds are saved in Ring Songs&Tones folder.

Voice Announce

Set recorded sound for on hold tone/holding tone, Alarm, Calendar event alarm, Tasks alarm, ringtones, Answer Phone message, Timer Watching (Digital TV), Ring Songs&Tones Play List.

- Record only one item for about 15 seconds.
- Select **Voice Announce** in individual window to set Voice Announce as specific tone.

Main Menu ► Tools ► Sound Recorders ► Voice Announce

1 **Record**

Recording starts.

Tone beeps five seconds before recording ends.

2 To end recording,  [Stop]

After recording ends, tone beeps twice and previous screen returns.

- To play back: **Play**
- To delete: **Erase** → **YES**

Bar Code Reader

Scan barcodes (JAN) or QR Codes with built-in camera.
Access websites, send messages, etc. from QR Codes.

JAN Codes

JAN Code is a one-dimensional bar code denoting numerals with bars and spaces of different widths.

QR Codes

QR Code is a two-dimensional bar code containing information.



Scanning Barcodes

Up to five scanned barcodes can be saved.
For split data, scan up to 16 divided QR Codes.

Main Menu ► Tools ► Bar Code Reader ► Scan Barcodes

- 1 Frame barcode in the center of Display
 - To adjust Display brightness: [Menu] → **Brightness** → Adjust to -3 (dark) - +3 (light)
 - To zoom:
 - To use Focus Lock:

2 [Start]

Scanning starts, and scanned results appear when completed.

- For split data, **OK** → Repeat Step 1 and 2
- To use scanned data: Step 2 on P.12-13



Example: Scanned Results Window (QR Code (Left))

3 [Menu] → Save result → OK

Note

- 832P cannot read barcodes or two-dimensional codes other than JAN/QR Codes.
- Some barcodes cannot be read depending on code type or size.
- Barcode recognition may be slow. Hold handset steady while scanning.
- Barcodes may not be correctly read owing to scratch, dirt, damage, quality of printed material, light reflection, or QR code version.

Viewing/Editing Scanned Data

Main Menu ► Tools ► Bar Code Reader ► Saved Data List

- 1 **View**
Select an item

Edit Title

Highlight an item →  [Menu] → **Edit title** → Edit

Delete Saved Data

- > In Step 1, (highlight an item →)  [Menu] → **Delete** → **Delete this** or **Delete all** (→ For **Delete all**, enter Phone Password) → **YES**

Using Scanned Data

Main Menu ► Tools ► Bar Code Reader ► Saved Data List

- 1 Select an item
- 2  [Menu] → Select an item (See below)

Item	Operation/Description
Save result	Save scanned results
Display list	Display Saved Data List
Internet	Connect to URL > Yahoo! Keitai or PC Site Browser → YES ● Alternatively, select URL to connect to Internet.
Compose S! Mail	Create S! Mail to selected address (☞From Step 4 on P.13-4) ● Alternatively, select address to create S! Mail.
Dialing	Call selected phone number > Select a dialing method → Dial ● Alternatively, select phone number to dial.
Add to Phone Book	Save scanned results to Phone Book (☞From Step 2 on P. 4-5)
Add bookmark	Save URL to Bookmark > YES →  [OK]
Copy	Copy selected characters to another place (☞From Step 2 on P.3-9)

Location Settings

Retrieve 832P Location Information.

- Only available within 3G network coverage in Japan.

Emergency Positioning Request

When an emergency call is made from 832P, location detected by nearby base station is reported to Emergency response agencies such as the police (☎P.2-4).

Positioning Lock

<Default> OFF

Activate to lock positioning function.

Main Menu ► Tools ► Location Settings
► Positioning Lock

1 Enter Phone Password → *ON*

Sending Location Information

<Default> Send with Check

Set whether to send location information when requested.

Main Menu ► Tools ► Location Settings
► Send Location Info

1 Enter Phone Password → *Send without Check*