

Security



PIN Settings	4-2
Setting PIN1 Entry	4-2
Changing PIN1/PIN2	4-2
Prohibiting Unauthorized Handset Use	4-3
Dial Lock	4-3
Original Lock	4-3
Disabling Keypad	4-4
Secure Remote Lock	4-4
Prohibiting Outgoing/Incoming Calls	4-5
Rejecting Calls without Caller ID.....	4-5
Rejecting Calls from Unsaved Numbers	4-5
Delaying Ringtone	4-5
Emission OFF Mode	4-5
Secret Modes	4-6
Secret Mode & Secret Data Only Mode	4-6
Hiding Handset Data.....	4-6

4



Setting PIN1 Entry

Set to require PIN1 entry each time handset is turned on.

- 1 → **Settings** → → **Security**
→ → **PIN Setting** →
- 2 Enter Security Code →
- 3 **PIN1 Code Entry Set** → → **ON**
→ → Enter PIN1 →

Changing PIN1/PIN2

● *PIN1 Code Entry Set* must be set to *ON* before changing PIN1.

- 1 → **Settings** → → **Security**
→ → **PIN Setting** →
- 2 Enter Security Code →
- 3 **Change PIN1 Code** or **Change PIN2 Code** →
- 4 Enter current PIN1/PIN2 →
- 5 Enter new PIN1/PIN2 → →
Enter new PIN1/PIN2 again for confirmation →



Dial Lock

Prevent others from operating handset.

1 → **Settings** → → **Security**
→ → **Function Lock** →

2 Enter Security Code →

3 **Dial Lock** →

Tip

- The following operations are available even in Dial Lock.
 - Power on/off
 - Making emergency calls (110, 119 and 118)
 - Answering incoming voice/video calls

Canceling Dial Lock

1 Enter Security Code →

If incorrect Security Code is entered, press and enter correct Security Code.

Tip

- If Security Code is incorrectly entered five times, handset powers off. Turn handset power on and enter correct Security Code.


Original Lock

Prevent others from accessing handset functions/data (e.g. Phone Book, Mail, etc). Select from three locks (1, 2 or 3) and customize as required.

Activating Original Lock

1 → **Settings** → → **Security** →
 → **Function Lock** →

2 Enter Security Code →

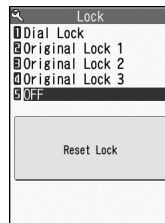

Lock Window

3 Select an Original Lock →

Functions/data specified under the selected lock type are locked.

Tip

- To edit title:
[Lock Window] → Select an Original Lock → → **Edit Title** → → Edit title →
- Security Code entry is requested when accessing a locked function or data. Enter Security Code to unlock and access function/data. Original Lock setting returns when handset returns to Standby.
- *Dial/Sending Mail and Incoming/Mail Disp.* cannot be unlocked temporarily.



Prohibiting Unauthorized Handset Use

Customizing Original Lock

Set lock per function, group or category.

Some functions/groups are locked.

All functions in Group/Category are locked.

Customize by Function/Data

1 [Lock Window] ⇨ Select an Original Lock ⇨

2 Select a category ⇨

3 Select a group ⇨

4 Select an item ⇨

Checked items are locked. To uncheck an item, select the item and press .

■ To Select All Functions
⇨ ⇨ *Select All* ⇨

■ To Deselect All Functions
⇨ ⇨ *Release All* ⇨

5 (three times)

Customize by Category or Group

1 [Lock Window] ⇨ Select an Original Lock ⇨

2 Select a category (⇨ ⇨ Select a group)

3 ⇨ *Select* ⇨

To deselect, press , select *Release* and then press .

■ To Select Lock for Category or Group
⇨ ⇨ *Select All* ⇨

■ To Cancel Lock for Category or Group
⇨ ⇨ *Release All* ⇨

4 (⇨)

Disabling Keypad

Set Keypad Lock to automatically lock handset keys. Customize Lock settings as required.

Setting Keypad Lock

1 ⇨ *Settings* ⇨ ⇨ *Security*
⇨ ⇨ *Keypad Lock* ⇨

2 Enter Security Code ⇨

▶ To Lock When Handset Closed
After Closed ⇨ ⇨ *ON* ⇨

▶ To Lock After Handset Closed a
Certain Time
Timer ⇨ ⇨ Select time until lock
activates ⇨

3

Tip

- All keypad operations are disabled, except for answering incoming calls and turning power on/off.
- appears at bottom of Display when keypad operation is available in Keypad Lock.
- Emergency calls (110, 119 and 118) are available even when *Keypad Lock* is set.

Temporarily Unlocking Keypad Lock

1 Enter Security Code ⇨

Secure Remote Lock

If your handset is lost, lock handset functions remotely from a PC or other mobile phones. All key operations are disabled except Power Key. For details, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>), or access My SoftBank from your handset: ⇨ *メニューリスト* (Menu List) ⇨ ⇨ *My SoftBank* ⇨



Rejecting Calls without Caller ID

Incoming calls from hidden and/or unidentified numbers can be rejected.

- 1 → **Settings** → → **Security** → → **Call Setting W/O ID** →
- 2 Enter Security Code →
- 3 **Unknown, Payphone or User Unset** →
- 4 **Reject** →

Tip

- To allow incoming calls, after Step 3: **Accept** → → **Select Ring Tone** or **Select Calling Disp.** → → Select type → (→ Select a folder → → Select a ringtone or image →

Rejecting Calls from Unsaved Numbers

- 1 → **Settings** → → **Security** → → **Reject Unknown** →
- 2 Enter Security Code →

3 **Reject** →

Note

- This procedure is unavailable when **Set Mute Seconds** under **Ring Time (sec.)** is set to **ON** (P. 4-5).

Tip

- To allow incoming calls, after Step 2: **Accept** →

Delaying Ringtone

Delay ringtone, for callers not saved in Phone Book (including Secret Phone Book). In addition, set **Missed Calls Display** to **Not Display** so missed calls with a short ring time do not appear in Received Calls. This can prevent you from accidentally returning calls from nuisance calls.

- 1 → **Settings** → → **Incoming Call** → → **Ring Time (sec.)** →
- 2 **Set Mute Seconds** → → **ON** → → Enter time before ringtone plays

3 **Missed Calls Display** → → **Display or Not Display** →

Note

- This setting is unavailable when **Reject Unknown** is set to **Reject** (P. 4-5).

Tip

- Setting **Set Mute Seconds** to **OFF** cancels function and ringtone sounds immediately for incoming calls.

Emission OFF Mode

Activate Emission OFF Mode to suspend all transmissions. Incoming and outgoing calls/messages, Yahoo! Keitai, etc. become unavailable.

- 1 → **Settings** → → **Security** → → **Emission OFF Mode** → → **YES** →
- Repeat procedure to cancel Emission OFF Mode.

Tip

- Emergency calls (110, 119 and 118) are available even in Emission OFF Mode.



Secret Mode & Secret Data Only Mode

Activate Secret Mode/Secret Data Only Mode to view secret Phone Book entries, secret Schedule events and secret files.

Secret Mode: View all data and secret data.
Secret Data Only Mode: For Phone Book and Schedule, only secret entries appear. For image files, messages and bookmarks, all saved data appear.

Activating Secret Mode & Secret Data Only Mode

1 ⇒ **Settings** ⇒ ⇒ **Security** ⇒ ⇒ **Secret Mode or Secret Data Only Mode** ⇒

2 Enter Security Code ⇒

Canceling Secret Mode & Secret Data Only Mode

1 In Standby,

Hiding Handset Data

Files stored in Secret Folders are accessible only when Secret Mode or Secret Data Only Mode is activated.

- Storable file types: Images, videos, received and sent messages and bookmarks (Yahoo! Keitai and PC Browser).
- Data saved on memory card or USIM Card cannot be stored in Secret Folders.
- Each Secret Folder of Data Folder has a fixed storage capacity as follows:
 - My Picture: Approx. 2 MB
 - Videos: Approx. 10 MB

Moving Data to Secret Folders

1 Set handset to Secret Mode or Secret Data Only Mode

2 From a folder, select an item ⇒ ⇒ **Keep in Secret** ⇒

Moving Data from Secret Folders

1 Set handset to Secret Mode or Secret Data Only Mode

2 In a folder list ⇒ **Secret** ⇒

3 Select an item ⇒ ⇒ **Put Out** ⇒

4 Select a destination folder ⇒

Tip

- Functions available with Secret Folder data are limited.