


Customization

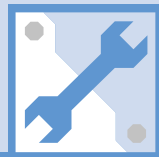

Clock, Display & Sounds	14-2
Phone Book & Calls.....	14-12
Mail.....	14-16
Internet.....	14-19
TV	14-21
Camera	14-23
S! Appli.....	14-24
Entertainment.....	14-25
Other Settings.....	14-27

14



Clock, Display & Sounds

Clock

Start Here ● → **Settings** → ● → **Clock** → ●

Hide Clock	→ Clock Display → ● → Display → ● → OFF → ●
Clock Size	→ Clock Display → ● → Size → ● → Select a size → ●
Clock Color	→ Clock Display → ● → Color → ● → Black or White → ●
Set Auto Time Adjustment	→ Set Main Time → ● → Time Adjustment → ● → Auto → ● → Select a time zone → ● <ul style="list-style-type: none"> • Press ☺ to change city/area name in Time Zone Selection field. • If auto time adjustment is still not performed, open Yahoo! Keitai top page again and perform Reload before returning to Standby.
Manually Adjust Time	→ Set Main Time → ● → Time Adjustment → ● → Manual(Date Time Set) → ● → Select a time zone → ● → Enter date and time → ●
Summer Time	→ Set Main Time → ● → Summer Time → ● → ON → ●

Time Zone (Sub Clock)	→ Set Sub Clock → ● → Display Method → ● → Always → ● (→ YES → ●) → Select a time zone → ●
Hide Sub Clock	→ Set Sub Clock → ● → Display Method → ● → OFF → ●
Summer Time (Sub Clock)	→ Set Sub Clock → ● → Summer Time → ● → ON → ●

Alarm

Start Here ● → **Settings** → ● → **Clock** → ●

Set Priority at Alarm Notification Time	→ Alarm Setting → ● → Operation Preferred or Alarm Preferred → ●
Change Alarm Tone	→ Clock Alarm Tone Set → ● → Select an item → ● → Set an alarm tone



Auto Power On/Off

Set Auto Power On/Off*	<ul style="list-style-type: none"> ● → Settings → ● → Clock → ● → Auto Power ON or Auto Power OFF → ● → ON → ● → Enter time → ● → 1 Time or Daily → ●
------------------------	--

* When near high precision electronic devices or devices using weak signals, or in areas where handset use is forbidden (aboard aircraft, in hospitals, etc.), set *Auto Power ON* to *OFF* and turn handset power off.

Style Mode Settings

Start Here ● → Settings → ● → Style Mode Setting → ●

Set Display Design Collectively	<ul style="list-style-type: none"> → Select a style → ● → YES → ● (→ YES or NO → ●)
Check Style Mode Settings	<ul style="list-style-type: none"> → Select a style → ☺
Edit Title of a Style	<ul style="list-style-type: none"> → Select a style → ☺ → Edit Title → ● → Edit title → ●
Save Current Style Mode Settings as Favorite	<ul style="list-style-type: none"> → お気に入り (Favorites) → ☺ → ☺ → Take Setting Info → ● → YES → ● <ul style="list-style-type: none"> • The current style mode settings can later be recalled collectively from お気に入り when they are changed.

Change Each Item for Favorites	<ul style="list-style-type: none"> → お気に入り (Favorites) → ☺ → Select an item → ● → Set an image
Clear All Favorite Settings	<ul style="list-style-type: none"> → お気に入り (Favorites) → ☺ → Reset Setting Info → ● → YES → ●

Display Settings

Start Here ● → Settings → ● → Display → ●

Wallpaper	<ul style="list-style-type: none"> → Display Setting → ● → Stand-by Display → ● → My Picture or Videos → ● → Set an image/video (→ Select a layout → ● (twice))
Show Calendar in Standby	<ul style="list-style-type: none"> → Display Setting → ● → Stand-by Display → ● → Calendar → ● → Background → ● → Set an image → Select a layout → ● (twice) <ul style="list-style-type: none"> • Select <i>No Background</i> if you do not want any image in the background of the calendar. • Press ☺, use ☺ to select the calendar and press ● to operate it. Use ☺ to switch to the previous/next month. Press ● to activate Schedule.



Clock, Display & Sounds

Set Wallpaper Image to Change When Handset Returns to Standby	<p>⇒ Display Setting ⇒ ● ⇒ Stand-by Display ⇒ ● ⇒ Random Display ⇒ ● ⇒ Select a folder ⇒ ● ⇒ Select a layout ⇒ ●</p> <ul style="list-style-type: none"> Each time handset returns to Standby, a different wallpaper image appears. Images are randomly selected from the set folder.
Set a Wake-up Image	<p>⇒ Display Setting ⇒ ● ⇒ Wake-up Display ⇒ ● ⇒ My Picture ⇒ ● ⇒ Set an image</p>
Set a Wake-up Message	<p>⇒ Display Setting ⇒ ● ⇒ Wake-up Display ⇒ ● ⇒ Message ⇒ ● ⇒ Enter message ⇒ ●</p>
Set an Outgoing Call/Message Image	<p>⇒ Display Setting ⇒ ● ⇒ Dialing, Video Call Dialing or Mail Sending ⇒ ● ⇒ Set an image</p>
Set Image or Video for Incoming Call/Message	<p>⇒ Display Setting ⇒ ● ⇒ Calling, Video Call Calling or Mail Receiving ⇒ ● ⇒ Select Calling Disp. or Select Receiving Disp. ⇒ ● (⇒ My Picture or Videos ⇒ ●) ⇒ Set an image/video</p>
Set Image for New Message/Received Result Window	<p>⇒ Display Setting ⇒ ● ⇒ Retrieve New or Mail Rec'd Result ⇒ ● ⇒ Set an image</p>
Display Color Scheme	<p>⇒ Display Design ⇒ ● ⇒ Color Theme ⇒ ● ⇒ Select a color ⇒ ●</p>

Battery Level Indicator/Signal Strength Indicator Design	<p>⇒ Display Design ⇒ ● ⇒ Icon Pattern ⇒ ● ⇒ Battery Icon or Antenna Icon ⇒ ● ⇒ Select a pattern ⇒ ●</p>
Set Softkey Color	<p>⇒ Display Design ⇒ ● ⇒ Soft Key ⇒ ● ⇒ Select a color ⇒ ●</p>
Set Font Type	<p>⇒ Font ⇒ ● ⇒ Font Type ⇒ ● ⇒ Gothic or Ming-cho ⇒ ●</p> <ul style="list-style-type: none"> Alternatively, press and hold [7] in Standby to make font settings.
Set Font Thickness	<p>⇒ Font ⇒ ● ⇒ Thickness ⇒ ● ⇒ Thin or Bold ⇒ ●</p> <ul style="list-style-type: none"> Alternatively, press and hold [7] in Standby to make font settings.
Set Font Sizes Collectively	<p>⇒ Font ⇒ ● ⇒ Character Size ⇒ ● ⇒ Standard or X-large ⇒ ●</p> <ul style="list-style-type: none"> Items settable with Separate Setting for Character Size can be set collectively. Alternatively, press and hold [7] in Standby to make font settings.
Set Font Size for Each Function Window	<p>⇒ Font ⇒ ● ⇒ Character Size ⇒ ● ⇒ Separate Setting ⇒ ● ⇒ Select a window ⇒ ● ⇒ Select a size ⇒ ● ⇒ ☺</p> <ul style="list-style-type: none"> Alternatively, press and hold [7] in Standby to make font settings. In PC Site Browser, only available in Small Screen view.



Interface Language	⇨ 言語選択 ⇨ ● ⇨ 日本語 (or <i>English</i>) ⇨ ● • To change interface language from Japanese to English: ● ⇨ 設定 ⇨ ● ⇨ ディスプレイ ⇨ ● ⇨ Language ⇨ ● ⇨ English ⇨ ●
Set Image List View	⇨ Viewer Settings ⇨ ● ⇨ <i>Picture</i> or <i>Title</i> ⇨ ●
Guard from Prying Eyes	⇨ Privacy Angle ⇨ ● ⇨ ON ⇨ ● • Alternatively, press and hold [B] in Standby to toggle on and off. • When <i>Privacy Angle</i> is set, Display is whitish and the viewing angle is narrower. • Turn power off then on again to cancel Privacy Angle.
Show New Message Info While Viewing TV	⇨ Quick Info Setting ⇨ ● ⇨ Display Sender or Display Sender/Subject ⇨ ●
Set Effect for Screen Change	⇨ Screen Effect ⇨ ● ⇨ Select an item ⇨ ● • Select an item and press (⊕) to check details.

Backlight

Start Here ● ⇨ **Settings** ⇨ ● ⇨ **Display** ⇨ ● ⇨ **Backlight** ⇨ ●

Set Backlight & Power Saving	⇨ Lighting ⇨ ● ⇨ ON or OFF ⇨ ● ⇨ ● ⇨ ON or OFF ⇨ ● (⇨ Enter a time before the Power Saver Mode is activated) • When the Power Saver Mode is activated, nothing appears in Standby. Pressing any key cancels the Power Saver Mode.
Set Backlight during Charging	⇨ Charging ⇨ ● ⇨ Standard or All Time ON ⇨ ●
Illuminate Display Only or Display and Keys	⇨ Area ⇨ ● ⇨ LCD+Keys or LCD ⇨ ●
Set Brightness of Backlight	⇨ Brightness ⇨ ● ⇨ ON or OFF ⇨ ● ⇨ Select a Level ⇨ ● • When set to ON , Display Backlight automatically adjusts to surrounding brightness. • Middle is set by default. Setting to Bright decreases battery time.



Desktop Icons

Start Here ● → **Settings** → ● → **Display** → ●

Set Desktop Theme	→ Desktop Icon → ● → Select a theme → ● → YES → ● • Press ⊞ to see details of the selected theme.
Change Icon Design of a Theme	→ Desktop Icon → ● → Select a theme → ⊞ → Select an icon → ⊞ → CHG Icon Image → ● → Select Icon Image or Default Icon Image → ● (→ Set and icon)
Change Order of Icons of a Theme	→ Desktop Icon → ● → Select a theme → ⊞ → Select an icon → ⊞ → Sort → ● → Select a position → ●
Copy Icons to Another Theme	→ Desktop Icon → ● → Select a theme → ⊞ → Select an icon → ⊞ → Copy → ● → Copy This, Copy Selected or Copy All → ● → Select a destination theme → ● (→ Select icons → ● → ⊞)(→ YES → ●)
Move Icons to Another Theme	→ Desktop Icon → ● → Select a theme → ⊞ → Select an icon → ⊞ → Move → ● → Move This, Move Selected or Move All → ● → Select a destination theme → ● (→ Select icons → ● → ⊞) → YES → ●

Delete Icons of a Theme	→ Desktop Icon → ● → Select a theme → ⊞ → Select an icon → ⊞ → Delete → ● → Delete This, Delete Selected or Delete All → ● (→ Select icons → ● → ⊞) → YES → ●
Show New Message Indicator in 3D	→ 3D Display Setting → ● → ON → ●



Menu Display Settings

Start Here → **Settings** → → **Display** → → **Menu Display Set** →

List View and Details View	<p>→ Menu Display → → List or Detail → </p> <ul style="list-style-type: none"> Select View for menus from → Settings → .
Set Main Menu Theme	<p>→ Theme → → Select a theme → </p> <p>(→ YES or NO → </p>
Change Icon Design (Original Theme)	<p>→ Theme → → Original Theme → </p> <p>→ Select a menu item → → Set an image</p> <ul style="list-style-type: none"> Change Main Menu icons to any preferred image. Press to check current setting.
Change Background (Original Theme)	<p>→ Theme → → Original Theme → </p> <p>→ Background Image → → Set an image</p> <ul style="list-style-type: none"> Change Main Menu background to any preferred image. Press to check current setting.
Reset Original Theme Settings	<p>→ Theme → → Original Theme → </p> <p>→ Select a menu item → → Reset or All reset → → YES → </p> <ul style="list-style-type: none"> Only available when any Original theme settings have been changed.

Save Last Selected Menu Item to Memory

→ **Memory Focus** → → **ON** →

Start Here →

Add a Menu Item to Original Menu

→ Select an item → → Select a function → (→ **YES** →

Change Order of Original Menu Items

→ Select an item → → **Sort** → → Select a position →

Cancel Original Menu Items

→ Select an item → → **Release** or **Release All** → → **YES** →

Reset Original Menu

→ → **Reset Org. Menu** → → **YES** →

Standby Indicators

Enable Indicator Selector

→ **Settings** → → **Display** → → **Icons Setting** → → **ON** →

- The indicators at the top of Display are enabled by pressing in Standby. Use to select an indicator and press to access the corresponding function.



Sub-display

Start Here ● ⇒ **Settings** ⇒ ● ⇒ **Display** ⇒ ● ⇒
Sub-display Setting ⇒ ● ⇒ **ON** ⇒ ●

Notifications/ Animation	⇒ Disp. Clock Only ⇒ ● ⇒ ON ⇒ ● ⇒ ☹ • Select OFF to set notifications (incoming messages, etc.) and animation (alarm, etc.) to appear.
Set Clock Pattern	⇒ Clock Type ⇒ ● ⇒ Select a pattern ⇒ ● ⇒ ☹
Set Messages to Appear	⇒ Called, Mail or Connection ⇒ ● ⇒ ON ⇒ ⇒ ● ⇒ ☹
Set Time Signal	⇒ Time Signal ⇒ ● ⇒ ON ⇒ ● ⇒ 30 Minutes or 60 Minutes ⇒ ● ⇒ ☹
Set Viewable Time	⇒ Display Time ⇒ ● ⇒ 15 Seconds, 30 Seconds or 60 Seconds ⇒ ● ⇒ ☹

Incoming Call/Message Alerts

Start Here ● ⇒ **Settings** ⇒ ● ⇒ **Incoming Call** ⇒ ●

Adjust Ringtone Volume	⇒ Ring Volume ⇒ ● ⇒ Phone, Video Call or Mail ⇒ ● ⇒ ☹ to adjust volume ⇒ ● • When Step is set, the ringtone volume increases every three seconds. When Silent is set, no ringtone sounds.
Set a Ringtone	⇒ Select Ring Tone ⇒ ● ⇒ Phone, Video Call or Mail ⇒ ● ⇒ Select Ring Tone ⇒ ● ⇒ Select an item ⇒ ● (⇒ Select a folder ⇒ ●) ⇒ Set a ringtone
Set Random Playback of Melodies as Ringtones	⇒ Select Ring Tone ⇒ ● ⇒ Phone, Video Call or Mail ⇒ ● ⇒ Select Ring Tone ⇒ ● ⇒ Random Melody ⇒ ● ⇒ Select a folder ⇒ ● • Melodies in the selected folder are played at random as ringtones.
Set Ringtone Duration for Incoming Message	⇒ Mail Ring Time ⇒ ● ⇒ ON ⇒ ● ⇒ Enter ringing duration • When OFF is set, no ringtone sounds and handset does not vibrate when receiving messages.



Set Vibration*	<p>⇒ Vibrator ⇒ ● ⇒ Phone, Video Call or Mail ⇒ ● ⇒ Select a pattern ⇒ ●</p> <ul style="list-style-type: none"> When <i>Melody Linkage</i> is set, handset vibration is linked to the set ringtone melody. Handset may not vibrate depending on the set ringtone.
Set Illumination Color	<p>⇒ Illumination ⇒ ● ⇒ Set Color ⇒ ●</p> <p>⇒ Phone, Video Call or Mail ⇒ ● ⇒ Select a color ⇒ ●</p>
Set Illumination Pattern	<p>⇒ Illumination ⇒ ● ⇒ Set Pattern ⇒ ●</p> <p>⇒ Select a pattern ⇒ ●</p> <ul style="list-style-type: none"> When <i>Melody Linkage</i> is set, illumination pattern is linked to the set ringtone melody. Illumination may not flash depending on the set ringtone.
Set Illumination to Flash for Missed Calls/New Messages	<p>⇒ Illumination ⇒ ● ⇒ Missed Info ⇒ ● ⇒ ON ⇒ ●</p>
Set Handset Action When Handset Opened	<p>⇒ Setting when Opened ⇒ ● ⇒ Select action ⇒ ● ⇒ ☺</p>
Set an Incoming Call/Message Image	<p>⇒ Select Ring Tone ⇒ ● ⇒ Phone, Video Call or Mail ⇒ ● ⇒ Select Calling Disp. or Select Receiving Disp. ⇒ ● (⇒ My Picture or Videos ⇒ ●) ⇒ Set an image/video</p>

Show Phone Book Entry Images for Incoming Calls/ Messages

⇒ **Disp. Phone Book Image** ⇒ ● ⇒ **ON** ⇒ ●

* When *Vibrator* is not set to *OFF*, be careful not to let handset fall off a desk or slide too close to a stove, etc. when it vibrates.

Answering Incoming Calls

Start Here ⇒ ● ⇒ **Settings** ⇒ ● ⇒ **Incoming Call** ⇒ ●

Set to Answer Calls by Pressing Any Key

⇒ **Answer Setting** ⇒ ● ⇒ **Any Key Answer** ⇒ ●

- Answer incoming voice calls by pressing a key from [] , ● , [] - [] , [*] , ☺ , ☹ , ☎ and ☎ . The any key answer function is disabled for incoming video calls.

Set to Mute Ringtone by Pressing Any Key

⇒ **Answer Setting** ⇒ ● ⇒ **Quick Silent** ⇒ ●

- Mute the ringtone by pressing a key from [] - [] , [*] , ☺ (for voice calls only), ☹ , ☎ and ☎ or by opening handset.



Clock, Display & Sounds

Manner Mode

Start Here ● → **Settings** → ● → **Incoming Call** → ● → **Manner Mode Set** → ●

Set Manner Mode Type	→ Select a Manner Mode → ● • When <i>Super Silent</i> is set, all tones emitted through the earpiece are also muted.
Configure Original Manner Mode	→ Original → ● → Set each item → ☺

Checking Call Logs

Start Here ● → **Settings** → ● → **Incoming Call** → ●

Notify Missed Calls with Tone (When Pressed)	→ Info Notice Setting → ● → ON → ● • Two short beeps sound twice when there are missed calls, and three short beeps sound when there are none.
Change Colors of Names, Phone Numbers and E-mail Addresses in Call and Message Log Windows	→ Disp. Call/Receive No. → ● → Select a color → ● • Press ☺ to toggle the color palette between 16 colors and 256 colors. • To reset the color settings, press ☹.

Sounds

Start Here ● → **Settings** → ● → **Other Settings** → ●

Set Key Sound Off	→ Keypad Sound → ● → OFF → ●
Set to Play Charging Start/End Tones	→ Charge Sound → ● → ON → ●

Start Here ● → **Tools** → ● → **Voice Announce** → ●

Record Sound to Set as Ringtone or Outgoing Message	→ Select an item → ● → YES → ● → Record sound (for about 15 seconds) • Press ● to stop recording.
Play Recorded Sound	→ Select an item with ★ → ●
Delete Recorded Sound	→ Select an item with ★ → ☺ → Erase → ● → YES → ●



Earphone-Microphone

Start Here ● ⇒ **Settings** ⇒ ●

Audio Output	⇒ External Connection ⇒ ● ⇒ Headset Usage Setting ⇒ ● ⇒ Headset+speaker or Headset Only ⇒ ●
Microphone Setting	⇒ External Connection ⇒ ● ⇒ Headset Mic. Setting ⇒ ● ⇒ Built-in Microphone or Headset Microphone ⇒ ●
Answer Calls Automatically	⇒ External Connection ⇒ ● ⇒ Auto Answer Setting ⇒ ● ⇒ Phone or Video Call ⇒ ● ⇒ ON ⇒ ● ⇒ Enter ring time
Save a Phone Number for One-touch Dialing from Earphone-Microphone	⇒ Dialing ⇒ ● ⇒ Headset SW to Dial ⇒ ● ⇒ Voice Call ⇒ ● ⇒ Search Phone Book ⇒ Select an entry ⇒ ● ⇒ Select a phone number ⇒ ●



Phone Book

Set Preferred Search Method	[Phone Book Search Window] (P. 2-20) ⇨ Select a search method ⇨ ☺ ⇨ OK ⇨ ● • To cancel the preferred search method, press CLEAR in Phone Book Search window, select the search method with ★, and then press ☺.
Change Group Name	[Phone Book Entry List] (P. 2-20) ⇨ Ⓜ ⇨ Group Setting ⇨ ● ⇨ Select a group ⇨ ● ⇨ Edit group name ⇨ ● • The name remains the same only for <i>No Group</i> .
Do Not Send Phone Book Entry Images via Infrared	● ⇨ Tools ⇨ ● ⇨ Forwarding Image ⇨ ● ⇨ OFF ⇨ ●

Set Auto Synchronize Off	⇨ Auto Sync Settings ⇨ ● ⇨ ON/OFF ⇨ ● ⇨ OFF ⇨ ●
Check Auto Synchronize Settings	⇨ Auto Sync Settings ⇨ ● ⇨ Confirm Settings ⇨ ●

Outgoing Calls

Start Here ● ⇨ **Settings** ⇨ ● ⇨ **Dialing** ⇨ ●

Save Area Code and Country Code as Prefix Numbers	⇨ Prefix Setting ⇨ ● ⇨ Select an item ⇨ ☺ ⇨ Enter name ⇨ ● ⇨ Enter prefix numbers ⇨ ●
Save Touch Tones	⇨ Pause Dial ⇨ ● ⇨ ☺ ⇨ Enter touch tone numbers ⇨ ● • Press and hold [*] to enter "p" (Pause).
Set Numbers after "*" as Sub Address	⇨ Sub-address Setting ⇨ ● ⇨ ON ⇨ ●

S! Addressbook Back-up

Start Here ● ⇨ **Tools** ⇨ ● ⇨ **S! Addressbook Back-up** ⇨ ●

Set Auto Synchronize	⇨ Auto Sync Settings ⇨ ● ⇨ ON/OFF ⇨ ● ⇨ ON ⇨ ● ⇨ Enter Security Code ⇨ ● ⇨ Select synchronize timing ⇨ ● (⇨ Set synchronize cycle and day) ⇨ Select synchronize type ⇨ ● ⇨ YES ⇨ ● (twice)
----------------------	--



International Calls

Start Here ● ⇒ **Settings** ⇒ ● ⇒ **Dialing** ⇒ ● ⇒ **Int'l Dial Assistance** ⇒ ●

Change International Access Code Automatically Dialed with "+"	<p>⇒ Auto Int'l Call Set. ⇒ ● ⇒ ON ⇒ ●</p> <p>⇒ Select a country code ⇒ ● ⇒ Select an international access code ⇒ ●</p> <ul style="list-style-type: none"> • When OFF is set, the international access code is not entered when you press and hold <input type="text"/>. • Select an international access code you set in IDD Prefix Setting.
Change a Country Code	<p>⇒ Country Code Setting ⇒ ● ⇒ Select an item ⇒ ☺ ⇒ Enter country name ⇒ ● ⇒ Enter country code ⇒ ●</p>
Save an International Access Code	<p>⇒ IDD Prefix Setting ⇒ ● ⇒ Select an item ⇒ ☺ ⇒ Enter international access name ⇒ ● ⇒ Enter international access code ⇒ ●</p>

Call Settings

Start Here ● ⇒ **Settings** ⇒ ● ⇒ **Talk** ⇒ ●

Set Reconnection Tone	<p>⇒ Reconnect Signal ⇒ ● ⇒ High Tone or Low Tone ⇒ ●</p>
-----------------------	--

Set Noise Reduction	<p>⇒ Noise Reduction ⇒ ● ⇒ ON ⇒ ●</p>
Set Weak Signal Alarm	<p>⇒ Quality Alarm ⇒ ● ⇒ High Tone or Low Tone ⇒ ●</p> <ul style="list-style-type: none"> • Alarm may not sound before call is disconnected, if signal strength drops suddenly.
Set Clarity of Other Party Voice	<p>⇒ Hyper Clear Voice ⇒ ● ⇒ High, Low or OFF ⇒ ●</p>
Change Color of Illumination While Calling	<p>⇒ Illumination in Talk ⇒ ● ⇒ Select a pattern ⇒ ●</p>
Set Outgoing Message while Call is on Hold	<p>⇒ Set Hold Tone ⇒ ● ⇒ On Hold Tone ⇒ ● ⇒ Select a hold tone ⇒ ● (⇒ ●)</p> <ul style="list-style-type: none"> • Select a hold tone and press ☺ to check guidance message.
Set Closing Sound Off	<p>⇒ Setting when Folded ⇒ ● ⇒ No Tone ⇒ ●</p>
End Call By Closing Handset	<p>⇒ Setting when Folded ⇒ ● ⇒ End the Call ⇒ ●</p>



Call Costs

Start Here ● → **Settings** → ● → **Call Time/Charge** → ●

Set Auto Reset of Total Call Cost

→ **Auto Reset Total Cost** → ● → Enter Security Code → ● → **Auto Reset** → ● → **ON** or **OFF** → ● (→ Enter PIN2 → ●)

- When **ON** is set, the total call cost indication is automatically reset to zero at twelve midnight on the first day of each month.

Set a Maximum Call Cost Limit*

→ **Set Max Cost Limit** → ● → Enter Security Code → ● → → ● → Enter cost limit → ● → → ● → **ON** → ● → → ● → Set alarm tone → → ● → to adjust volume → ● → → ● → Enter PIN2 → ●

- A call ends automatically and appears in Display when the total call cost exceeds the set maximum limit.
- When the set total call cost limit has been reached, all outgoing calls are disabled. To enable outgoing calls, set the maximum call cost limit to 0:
→ **Set Max Cost Limit** → ● → Enter Security Code → ● → → ● (twice) → → ● → Enter PIN2 → ●

Video Calls

Start Here ● → **Settings** → ● → **Video Call** → ●

Set Outgoing Image for Video Calls

→ **Select Image** → ● → Select an item → ● → **Pre-installed** or **Original** → ●

- To set an image other than the preinstalled image:
→ **Original** → ● → **Change Setting** → ● → Set an image
- Press to check image.

Redial Automatically as Voice Call When Video Call Connection Fails

→ **Auto Redial as Voice** → ● → **ON** → ●

Set an Image to Appear in Main Window

→ **Display Setting** → ● → **Main Display** → ● → **Other Side** or **My Side** → ●

Automatically Switch to Handsfree Mode in Video Calls

→ **Hands-free Switch** → ● → **ON** → ●

* Cost display may not be available depending on your subscription. If unavailable, you will also be unable to set a cost limit.



Global Roaming

Start Here ⇒ **Settings** ⇒ ⇒ **Int'l Roaming Set** ⇒

Set Operator	<p>⇒ NW Search Mode ⇒ <input checked="" type="radio"/> ⇒ Manual ⇒ <input checked="" type="radio"/></p> <p><input checked="" type="radio"/> ⇒ Select an operator ⇒ <input checked="" type="radio"/></p> <ul style="list-style-type: none"> • When <i>Auto</i> is set, an available operator is set automatically. • Use this procedure when handset is out of the service area of the currently used operator.
Search Available Operator	<p>⇒ NW Search Mode ⇒ <input checked="" type="radio"/> ⇒ Network Re-search ⇒ <input checked="" type="radio"/> ⇒ Select an operator ⇒ <input checked="" type="radio"/></p> <ul style="list-style-type: none"> • Available when <i>NW Search Mode</i> is set to <i>Manual</i>.
Set Priority for Operators	<p>⇒ NW Search Mode ⇒ <input checked="" type="radio"/> ⇒ PLMN Setting ⇒ <input checked="" type="radio"/> ⇒ Select an operator ⇒ <input checked="" type="radio"/></p> <p>⇒ Change Priority ⇒ <input checked="" type="radio"/> ⇒ Select a position on the priority list ⇒ <input checked="" type="radio"/> ⇒ <input checked="" type="radio"/> ⇒ YES ⇒ <input checked="" type="radio"/></p> <ul style="list-style-type: none"> • When <i>Auto</i> is set under <i>NW Search Mode</i>, you are automatically connected to the highest priority operator among available operators.
Show Operator Name While Roaming	<p>⇒ Display Operator Name ⇒ <input checked="" type="radio"/> ⇒ Display ON ⇒ <input checked="" type="radio"/></p>



S! Mail Settings

Start Here → Mail Setting → ●

Edit Header/ Signature	→ Header/Signature → ● → Edit Header or Edit Signature → ● (twice) → Edit header/signature →
Insert Header/ Signature Automatically	→ Header/Signature → ● → Insert Setting → ● → Check item(s) → ● →
Request Delivery Report	→ S! Mail Settings → ● → Delivery Report → ● → ON → ● • Delivery Report arrives when recipient has received your S! Mail. S! Mail Report appears in Subject field of Delivery Report.

SMS Settings

Start Here → Mail Setting → ● → SMS Settings → ●

Request Delivery Report	→ SMS Report Request → ● → ON → ● • Delivery Report arrives when recipient has received your SMS message. SMS Report appears in Subject field of Delivery Report.
Set Server Storage Period of SMS Messages	→ SMS Validity Period → ● → Select a period → ● • When None is set, SMS messages you send are not stored on the server.

Set SMS Input Language	→ SMS Input Character → ● → Japanese (70char.) or English(160char.) → ●
---------------------------	--

Incoming Message Settings

Start Here → Mail Setting → ●

Customize E-mail Address	→ Custom Mail Address → ● → Follow onscreen instructions • Confirmation message arrives when setup is complete. Use the information to update Account Details.
Do Not Show Emotion Indicators	→ Emotion/Keyword → ● → Uncheck Disp. Emotion →
Show Keyword Indicators	→ Emotion/Keyword → ● → Put a checkmark to Disp. Keyword → Select a keyword entry field → ● → Enter keyword → ● → • When handset receives an S! Mail containing the specified keyword, a keyword indicator - appears. • In case a message contains both the content that matches an emotion indicator (P. 5-9) and a specified keyword, the keyword indicator takes priority.



Delete Keywords	<p>⇒ Emotion/Keyword ⇒ ● ⇒ Select a keyword ⇒ ● ⇒ Delete Keyword or Delete All Keyword ⇒ ● ⇒ YES ⇒ ● ⇒ ●</p> <p>• To delete all keywords, uncheck <i>Disp. Keyword</i>.</p>
Set Priority When Receiving Messages during Operation	<p>⇒ Receiving Setting ⇒ ● ⇒ Alarm Preferred or Operation Preferred ⇒ ●</p>
Read Out Received Mail (Text to Speech) Setting	<p>⇒ Read Out Setting ⇒ ● ⇒ Read Out Received Mail ⇒ ● ⇒ ON or OFF ⇒ ●</p> <p>• Mail is only read out while in Japanese Language Mode.</p>
Set Voice to Read Out Messages	<p>⇒ Read Out Setting ⇒ ● ⇒ Select Voice ⇒ ● ⇒ Select a voice type ⇒ ●</p> <p>• Mail is only read out while in Japanese Language Mode.</p>
Manually Retrieve Complete Messages	<p>⇒ S! Mail Settings ⇒ ● ⇒ Message Download ⇒ ● ⇒ Manual ⇒ ●</p> <p>• Complete messages are retrieved manually.</p>

Reply Settings

Quote Message Marks	<p>⇒ Mail Setting ⇒ ● ⇒ Header/Signature ⇒ ● ⇒ Edit Quotation Marks ⇒ ● ⇒ Edit quotation mark ⇒ ●</p>
---------------------	--

Message Window/Messaging Settings

Start Here ⇒ ● ⇒ **Mail Setting** ⇒ ●

Set Message List View	<p>⇒ Mail List Disp. ⇒ ● ⇒ 2 Lines, 1 Line or 1 Line+Body ⇒ ● ⇒ Subject, Name or Address ⇒ ●</p>
Set Auto-Play for Melody Attachments	<p>⇒ Start Attachment(auto) ⇒ ● ⇒ ON ⇒ ●</p> <p>• Automatic play only for received mail.</p>
Set Scroll Unit	<p>⇒ Scroll ⇒ ● ⇒ 1 Line, 3 Lines or 5 Lines ⇒ ●</p>
Set Font Size	<p>⇒ Font Size ⇒ ● ⇒ Select a size ⇒ ●</p>
Change Address for Reporting Spam	<p>⇒ Report Spam Setting ⇒ ● ⇒ Edit address ⇒ ● ⇒ YES ⇒ ●</p>
Check Mail Settings	<p>⇒ Check Mail Settings ⇒ ●</p>
Restore to Default Settings	<p>⇒ Reset Mail Settings ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ●</p>



SMS Server Settings

Start Here ⇒ **Settings** ⇒ **Connection Settings**
 ⇒ ⇒ **SMS Center Selection** ⇒

Change SMS Center Address	⇒ 819066519300 ⇒ <input type="radio"/> ⇒ Enter SMS Center address ⇒ <input type="radio"/> ⇒ International or Unknown ⇒ <input type="radio"/> • Address is 819066519300 by default. SMS may become unavailable if Center address is changed.
Reset to SoftBank SMS Center Address	⇒ Reset ⇒ <input type="radio"/> ⇒ Enter Security Code ⇒ <input type="radio"/> <input type="radio"/> ⇒ YES ⇒ <input type="radio"/>



Internet

Start Here for Yahoo! Keitai Press and hold → **Browser Settings** →

Start Here for PC Site Browser Press and hold → **PC Site Browser** → → **PC Site Brw. Settings** →

Set Scroll Unit/Speed	→ Scroll → → Whole Page, Half Page or Single Line →
Enable/Disable Image Download	→ Downloads → → Display Images → → ON or OFF →
Set Auto-Play for Melody Attachments	→ Downloads → → Play Sounds → → ON or OFF →
Clear Cache	→ Memory Manager → → Delete Cache → → Enter Security Code → → YES →
Delete Cookies	→ Memory Manager → → Delete Cookies → → YES →
Initialize Memory Status of Internet	→ Initialized Browser → → Enter Security Code → → YES →
Set Whether to Send Manufacture Number	→ Security → → Manufacture Number → → ON or OFF →

Set Whether to Send Referer	→ Security → → Send Referer → → ON or OFF →
Enable/Disable Cookies	→ Security → → Cookie Settings → → Select an option →
Check Internet Settings	→ Check Settings or Check PC Site Brw. Set →
Reset Internet Settings	→ Reset or Reset PC Site Brw. Set → → Enter Security Code → → YES →

Yahoo! Keitai

Start Here Press and hold → **Browser Settings** →

Set Font Size	→ Font Size → → Select a size →
Set Flash® Sound On/Off	→ Flash Sound Effect → → ON or OFF →



PC Site Browser

Start Here Press and hold → **PC Site Browser** → → **PC Site Brw. Settings** →

Do Not Show Alert When Activating PC Site Browser & Switching Browsers	→ Warning Messages → → OFF →
Set Page Layout	→ Display Mode Settings → → PC Screen or Small Screen → → Select a size →
Select a Script Setting	→ Security → → Script Settings → → Select an option →

Providing Location Info

Provide/Restrict Location Info When Requested	→ Settings → → Send Location Info → → Enter Security Code → → Confirm, Send or Not Send → <ul style="list-style-type: none"> Information unretrievable when set to <i>Not Send</i>.
---	---



Channel List

Start Here **Channel List**

Change Title of Channel List	<p>⇒ Select a channel list ⇒ ⇒ Edit Title ⇒ ⇒ Edit title ⇒ </p>
Delete a Channel List	<p>⇒ Select a channel list ⇒ ⇒ Delete This ⇒ ⇒ YES ⇒ </p> <ul style="list-style-type: none"> The currently used channel list cannot be deleted.
Assign Channels to Remote Control Numbers	<p>⇒ Select a channel list ⇒ ⇒ ⇒ Remote Control No. ⇒ ⇒ Select a remote control number ⇒ ⇒ Select a channel ⇒ ⇒ Repeat the same step ⇒ ⇒ YES ⇒ </p>
Delete a Channel	<p>⇒ Select a channel list ⇒ ⇒ Select a channel ⇒ ⇒ Delete This ⇒ ⇒ YES ⇒ </p> <ul style="list-style-type: none"> Delete a channel from any channel list except for the currently used list.

Image & Sound

Start Here **User Settings**

Set Subtitle Display	<p>⇒ Subtitles ⇒ ⇒ ON(Wide:Bottom), ON(Wide:Top) or OFF ⇒ </p>
Show/Hide Icons in Landscape View	<p>⇒ Icon Always Show ⇒ ⇒ ON or OFF ⇒ </p>
Save Battery by Dimming Backlight	<p>⇒ TV Power Saving ⇒ ⇒ YES ⇒ </p> <ul style="list-style-type: none"> Following these steps when TV Power Saving is on will cancel TV Power Saving.
Set Sound On While Handset Closed	<p>⇒ TV Sound While Closed ⇒ ⇒ ON ⇒ </p> <ul style="list-style-type: none"> When set to ON and handset is closed, a page connected from data broadcast automatically updates. Packet transmission fees apply.
Keep Backlight On When Viewing TV	<p>⇒ Display Light ⇒ ⇒ Constant Light ⇒ </p> <ul style="list-style-type: none"> TV Power Saving must be off to set Display Light.
Set Backlight Duration for Viewing TV	<p>⇒ Display Light ⇒ ⇒ Lighting Duration ⇒ ⇒ Enter lighting time</p> <ul style="list-style-type: none"> TV Power Saving must be off to set Display Light.



Data Broadcasts

Start Here ● → TV → ● → User Settings → ● → Data BC Settings → ●

Set Whether to Show Images in Pages Accessed from Data Broadcasts	→ Set Image Disp. → ● → ON or OFF → ●
Enable/Disable Sound Effects of Data Broadcasts	→ Sound Effect → ● → ON or OFF → ●
Show Confirmation Window Again	→ Reset Disp. Set. → ● → YES → ● <ul style="list-style-type: none"> Once you select YES (By default) in a confirmation window for accessing a web page from Data Broadcast, the window no longer appears. Use this procedure to set the window to reappear.

Recording Programs

Continue/End Recording at Low Battery	● → TV → ● → User Settings → ● → Rec. While Low Battery → ● → ON or OFF → ●
---------------------------------------	---

Other Settings

Start Here ● → TV → ● → User Settings → ●

Check TV Settings	→ Check TV Settings → ●
Reset Channel Settings	→ Reset Channel Setting → ● → Enter Security Code → ● → YES → ●
Clear Data Broadcast Memory	→ Reset Storage Area → ● → Select an affiliated station → ● → Delete This or Delete All → ● (→ Enter Security Code → ●) → YES → ●
Reset TV Settings	→ Reset TV Settings → ● → Enter Security Code → ● → YES → ●



Camera/Video Settings

Set Shutter Sound	<p>[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) ⇨ ⇨ Shutter Sound ⇨ ⇨ Select a shutter sound ⇨ </p>
Set Interval for Continuous Shooting	<p>[Continuous Shooting Viewfinder] (P. 7-9) ⇨ ⇨ Interval/Number ⇨ ⇨ Shot Interval ⇨ ⇨ 0.5 Seconds, 1.0 Seconds or 2.0 Seconds ⇨ </p> <ul style="list-style-type: none"> • <i>Shot Interval</i> is available when <i>CHG Camera-mode</i> (P. 7-5) is set to <i>A-Continuous Mode</i>.
Set Number of Shots for Continuous Shooting	<p>[Continuous Shooting Viewfinder] (P. 7-9) ⇨ ⇨ Interval/Number ⇨ ⇨ Shot Number ⇨ ⇨ Enter Shot Number ⇨ </p>

File Storage

Set Storage Location for Still Images/Videos	<p>[Photo Viewfinder] (P. 7-5)/[Video Viewfinder] (P. 7-7) ⇨ ⇨ Select to Save ⇨ ⇨ Phone or microSD ⇨ ⇨ Select a folder ⇨ </p> <ul style="list-style-type: none"> • To save videos on memory card, select a folder of Inbox.
--	--



When Running S! Appli

Start Here ● → **S! Appli** → ● → **Settings** → ●

Set Sound Volume	→ Sound/Vib Settings → ● → Volume → ● → to adjust volume → ●
Set Vibration	→ Sound/Vib Settings → ● → Vibration → ● → ON or OFF → ●
Set Backlight	→ Backlight Settings → ● → Switch ON/OFF → ● → Always ON, Always OFF or Link To Phone Set. → ●
Set Blinking of Backlight	→ Backlight Settings → ● → Blink → ● → ON or OFF → ●

Start Here ● → **S! Appli** → ● → **S! Appli List** → ●

Allow/Prohibit S! Appli to Connect to Network	→ Select an S! Appli → → Security Settings → ● → Net Access → ● → All Permit, Prompt at 1st only, Prompt each time or Disable → ● • Available with network-capable S! Appli.
Allow/Prohibit S! Appli to Write Personal Information	→ Select an S! Appli → → Security Settings → ● → Write/Del User Data → ● → All Permit, Prompt at 1st only, Prompt each time or Disable → ● • Available with S! Appli that can write and delete user data.

Reset Security Settings of S! Appli	→ Select an S! Appli → → Security Settings → ● → Reset Security Set. → ● → YES → ●
-------------------------------------	--

S! Appli

Start Here ● → **S! Appli** → ● → **Settings** → ● → **Reset** → ●

Reset S! Appli Settings	→ Set to Default → ● → Enter Security Code → ● → YES → ●
Delete All S! Appli	→ Delete All S! App → ● → Enter Security Code → ● → YES → ● • Some S! Appli are not deleted.



S! Quick News

Start Here ● → **Entertainment** → ● → **S! Quick News**
 → ● → **Settings** → ●

Set Automatic Updates for S! Quick News	→ Auto Refresh → ● → Select an item → ● → Select update interval, ON or OFF → ● (twice)
Hide S! Quick News in Standby	→ Standby Settings → ● → Standby Disp. Set. → ● → OFF → ● (twice)
Set Ticker Speed	→ Standby Settings → ● → Speed Settings → ● → Fast, Normal or Slow → ● (twice)
Set Information to Appear in S! Quick News	→ Standby Settings → ● → Unread & Read Set. → ● → Unread Only or Unread & Read → ● (twice)
Hide S! Quick News Images	→ Set Image Disp. → ● → OFF → ● (twice)
Reset S! Quick News Registered Contents	→ Del. Quick News → ● → YES → ● (twice) → Enter Security Code → ● (three times)

S! Info Channel

Start Here ● → **Entertainment** → ● → **S! Info Ch./Weather** → ● → **Settings** → ●

Set Whether to Display Desktop Icon For New Received Information	→ S! Information Notif. → ● → ON or OFF → ●
Set Font Size for Web Pages	→ Font Size → ● → Select font size → ●



Weather Indicators

Start Here ● ⇒ **Entertainment** ⇒ ● ⇒
S! Info Ch./Weather ⇒ ● ⇒ **Weather**
Indicator ⇒ ● ⇒ **Settings** ⇒ ●

Set Whether to Automatically Update Weather Information	⇒ Weather Update ⇒ ● ⇒ ON or OFF ⇒ ● (⇒ YES ⇒ ●)
Set Whether to Display Weather Indicators in Standby	⇒ Standby Setting ⇒ ● ⇒ ON or OFF ⇒ ●
Set Whether to Display Desktop Icon For New Received Information	⇒ Weather Notif. ⇒ ● ⇒ ON or OFF ⇒ ●



Text Entry

Start Here ● ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●
 ⇒ **Character Input Set** ⇒ ●

Set Text Input Method	⇒ Input Mode ⇒ ● ⇒ Select an input method ⇒ ●
Set Word Prediction	⇒ Prediction ⇒ ● ⇒ ON or OFF ⇒ ●
Set to Show T9 Suggestion Words in Kanji or Hiragana	⇒ T9 Change Mode ⇒ ● ⇒ T9 Kanji Change Mode or T9 Kana Change Mode ⇒ ●
Clear Learning History	⇒ Clear Learned ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ T9/Expect Words/Pic. or Kana/Kanji Change/Face ⇒ ●
Change Font Size	⇒ CHG Input Size ⇒ ● ⇒ Select a size ⇒ ●
Set Auto Cursor Movement in 5-Touch Mode	⇒ Auto Cursor ⇒ ● ⇒ Fast, Normal, Slow or OFF ⇒ ●

Shortcut Key

Change Function Assigned to Shortcut Key ● ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ● ⇒ **Shortcut-key Setting** ⇒ ● ⇒
 Select a function ⇒ ● ⇒ **YES** ⇒ ●

- Alternatively, press and hold **Ⓜ** in Standby to access Shortcut-key Setting window.
- To return to original settings, press **Ⓜ**, select **Reset Shortcut-key**, and press ●.

Closed Illumination

Start Here ● ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ● ⇒
Closed Illum. ⇒ ● ⇒ **ON** ⇒ ●

Set Flashing Color for Handset Close	⇒ Set Illumination ⇒ ● ⇒ Select a color ⇒ ●
Set Flashing Pattern for Handset Close	⇒ Set Pattern ⇒ ● ⇒ Select a pattern ⇒ ●



Resetting Handset

Start Here ● ⇒ **Settings** ⇒ ● ⇒ **Other Settings** ⇒ ●

Reset All Settings to Default	⇒ Reset Settings ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ●
Initialize Handset to Default Status	⇒ Initialize ⇒ ● ⇒ Enter Security Code ⇒ ● ⇒ YES ⇒ ● ⇒ YES ⇒ ● <ul style="list-style-type: none"> • When the initialization is completed, handset automatically shuts down and restarts. • When handset is initialized, all data downloaded and saved on handset are deleted and cannot be restored. • Your Security Code will also be reset to default.