

# Media Player

<b>Overview .....</b>	<b>7-2</b>
<b>Saving Music/Video .....</b>	<b>7-3</b>
Downloading Music (Chaku-Uta®/Chaku-Uta Full®)/Video .....	7-3
Music Search .....	7-3
<b>Using Media Player.....</b>	<b>7-4</b>
Playback Window Indicators .....	7-4
Playing Music (Audio Player).....	7-4
Playing Video (Video Player).....	7-6
Playback Window Operations.....	7-7
Functions while Playing Files.....	7-7
Using Playlist.....	7-8
Playlist Functions .....	7-9

## Overview

Play music (**Audio Player**) or videos (**Video Player**) saved on handset/Memory Card.

- Playlist: (📄) P.7-8

### Notes

- Files may not play due to file support issues or Memory Card status, etc.
- When battery is low, Media Player cannot play files.
- When playing files, Notification Light flashes.
- Playback stops for incoming calls, Alarm and low battery.
- If messages are received while Media Player is active, ringtone does not sound. Ticker scrolls across Display, Notification Light flashes and handset vibrates to inform you of new messages.
- Notification Light/Charging Indicator lights during playback; playback notification light does not light.

#### Copy Protected Files

Copy protected files may not play, be saved or forwarded. To play a copy protected file, obtain Content Key (📄) P.8-6).  
Confirm file expiry date or usage limitations (📄) P.7-8).

#### Saving Music Files on PCs

When saving music files to Memory Card via PC for use with 840P, observe the following guidelines:

- Copyrighted Works
  - Do not infringe on third party/intellectual property rights.
  - Memory Card music files are limited to private use.
- Save files to specified Memory Card directory (📄) P.8-17)

## Saving Music/Video

### Downloading Music (Chaku-Uta®/Chaku-Uta Full®)/Video

Access websites directly from Media Player to download music (Chaku-Uta®/Chaku-Uta Full®) or video files.

- View details (price, expiry date, etc.) on source website.

Main Menu ► Media

1 **Download Music (Chaku-Uta®/Chaku-Uta Full®)**  
*Audio* → *Download Music* → 

**Download Video**

*Video* → *Download Videos* → 

Handset connects to the Network and Download site appears.  
Follow onscreen instructions to download files.

## Music Search

Search by artist or title to download music files.

Main Menu ► Media ► Audio ► Music Search

1 

Follow onscreen instructions to download music files.

## Using Media Player

### Playback Window Indicators



### Playback Mode Indicators



- Change playback mode: P.7-7

### Note

- Titles or artist names may not appear depending on files.

## Playing Music (Audio Player)

### Supported File Formats

File Format	Extensions	
MPEG-4 File	AMR-NB	.3gp .mp4 .m4a
	AAC-LC	
	aacPlus	
	Enhanced aacPlus	
SMC	.smc	

- Some files may not play even if format is supported.
- Some copy protected files have extensions different from the ones above.

1 Select an item (See below)

Item	Operation/Description
All	Select files from handset & Memory Card
Music	Select files from Music folder
Ring Song	Select files from Ring Song folder
Playlist	Select group of files saved to Playlist > Select a Playlist

● Press  to select files from Memory Card.

2 Select a file


Selected file plays.

● Playback Window Operations:  P.7-7

3 To end,  or  [Back] →  [NO]




● To return to Playback window: 



### ■ Change Playback Position

> During playback,  [Menu] → *Set Playback Position* → Enter time to start playback




## Background Music

Listen to music while using other handset functions.

1 While music plays,  or  [Back] → 

● To cancel Background Music: In Standby,  → 





### Note

- Unavailable for some functions (S! Appl, etc.).
- While Background Music plays, volume level and playback mode settings cannot be changed.
- Alternatively, end playback from **Main Menu ► Media ► Audio ► Display Playback Screen** ►  or  [Back] ►  [NO].

## Playing SMC Files

Play SMC (Softbank Music Content) files; CD jackets and lyrics appear during playback.

The first jacket appears when playback starts.

- When  appears, press  to toggle jacket window and lyric window.
- To view next or previous jacket/lyric window, press  or .

## Playing Video (Video Player)

### Supported File Formats

File Format	Extensions
MPEG-4	.3gp
H.263	.mp4

- 840P supports Sub-QCIF, QCIF, QVGA, CIF and video files recorded by SoftBank handsets to send via S! Mail.
- Playing QVGA video switches display to Full Screen (⏏ Right), and image rotates 90°. Press (O) to switch to normal Playback window.
- Some files may not play even if format is supported.
- Some copy protected files have extensions different from the ones above.

## Main Menu ▶ Media ▶ Video

- 1 Select an item (See below)

Item	Operation/Description
All	Select files from handset & Memory Card
Video Folder	Select files from Videos folder
Playlist	Select group of files saved to Playlist

- Press (C) to select files from Memory Card/Video Camera folder.

- 2 Select a file

Selected file plays.

- Playback Window Operations: ⏏ P.7-7

- 3 To end, (⏏)

### Full Screen Playback

Press (O) to switch to Full Screen during playback. Playback window rotates 90°.

- To return to Normal Screen, press (O) again.
- Press (S) in Full Screen mode to rotate Playback window 180°. To return to Normal Screen, press (S) again.
- Last Playback window selected appears first.

## Playback Window Operations

Adjust Volume <sup>1</sup>	
Replay Track	<ul style="list-style-type: none"> <li>● Play previous within first three seconds of a track.</li> </ul>
Play Previous	twice (once, within first three seconds of a track)
Play Next	
Rewind <sup>2</sup>	Press and hold
Forward <sup>2</sup>	Press and hold
Pause/Resume	
Stop	Music:  twice or  → Video:  or
View Next Jacket/Lyric <sup>3</sup>	
View Previous Jacket/Lyric <sup>3</sup>	
Switch Jacket/Lyric Display <sup>3</sup>	
Show Full Screen <sup>4</sup>	
Rotate Playback window 180° in Full Screen mode <sup>4</sup>	

<sup>1</sup> Media Player activates at last used volume level.

<sup>2</sup> Rewind/Forward may be unavailable when playing files via other applications.

<sup>3</sup> Supports during SMC file playback only

<sup>4</sup> Supports during video playback only

## Functions while Playing Files

### Change Playback Mode

<Default> Play All

- Confirm playback mode settings in Playback window (Playback Mode Indicators: P.7-4).

- Media Player activates in last used mode.

> **Main Menu** ► **Media** ► **Audio** or **Video** ► **Playback Mode**

► Select a mode (See below)

Item	Operation/Description
Play All	Play all files in selected folder/Playlist
Play Once	Play selected file
Repeat Track	Repeat selected file
Continuous Play	Repeat all files in selected folder/Playlist
Random Play	Play selected folder/Playlist files randomly

**Options**

> During playback, [Menu] → Select an item (See below)

Item	Operation/Description
<b>Playback/ Pause</b>	Play or pause files
<b>Playback Mode</b>	Select playback mode (☞ P.7-7)
<b>Display Jacket/ Display Lyric<sup>1</sup></b>	Show lyric or jacket
<b>Next Jacket/ Next Lyric<sup>1</sup></b>	Show next jacket or lyric
<b>Previous Jacket/ Previous Lyric<sup>1</sup></b>	Show previous jacket or lyric
<b>Full Screen (Video)/Normal Screen<sup>2</sup></b>	Select display size for video playback
<b>Upside down(Full Screen)<sup>2</sup></b>	Rotate Full Screen Playback 180°
<b>Set Playback Position</b>	Start playback from specified point
<b>Connect to URL<sup>3</sup></b>	Open site link; music plays as BGM
<b>Property</b>	Show file details
<b>Help</b>	Show Playback window key assignments

<sup>1</sup> Supports during SMC file playback only

<sup>2</sup> Supports video playback only

<sup>3</sup> May not be available for some files

**Using Playlist**

Use Playlists to organize Data Folder music/video files. Select Ring Songs-Tones, Music or Videos folder files to create Playlist links to each file in its original folder.

**Note**

- A single Playlist cannot contain both music and video files, or files from both handset and Memory Card.
- Some files cannot be added to Playlist.



## Creating New Playlists

- Create up to 30 Playlists on handset and Memory Card each.
- Add up to 99 files to a single Playlist.

Main Menu ► Media ► Audio or Video ► Playlist

1 [Menu] → **Create Playlist**

2 Enter a Playlist name

A new Playlist is added to top of list.

3 Select a Playlist → [Menu] →  
**Add**

4 **Add Files to Music Playlists**

**Music** or **Ring Song** → Select a file

**Add Files to Video Playlists**

Select a file

- To playback Playlist: P.7-5, P.7-6



Playlists Window

## Playlist Functions

### Functions Available in Playlist Window

> Main Menu ► Media ► Audio or Video ► Playlist

► (highlight a Playlist ►) [Menu] ► Select an item (See below)

Item	Operation/Description
Select	Select a Playlist
Playback Mode	Change playback mode (P.7-7)
Create Playlist	Create new Playlists (Left)
Edit Playlist Name	Change Playlist name > Edit name
Delete	Delete Playlists (P.7-10)

### Change Playlist Order

> Main Menu ► Media ► Audio or Video ► Playlist

► Select a Playlist ► Highlight a file ► [Menu] ► Change Order  
► Select new playback order

- The Playlist moves to above the selected order.

## Deleting Playlists/Files

From ► **Main Menu** ► **Media** ► **Audio or Video** ► **Playlist**

### Delete Playlists

> Follow the steps below

Item	Operation/Description
One	> Highlight a Playlist → [Menu] → <i>Delete</i> → <i>One</i> → [YES]
Selected items	> [Menu] → <i>Delete</i> → <i>Selected Files</i> → Check Playlists → [OK] → [YES]
All	> [Menu] → <i>Delete</i> → <i>All</i> → [YES] → Enter Phone Password

### Delete Files in a Playlist

> Select a Playlist → Follow the steps below

Item	Operation/Description
One	> Highlight a file → [Menu] → <i>Delete</i> → <i>One</i> → [YES]
Selected items	> [Menu] → <i>Delete</i> → <i>Selected Files</i> → Check files → [OK] → [YES]
All	> [Menu] → <i>Delete</i> → <i>All</i> → [YES] → Enter Phone Password