

# Handset Security

- Changing Phone Password ..... 10-2**
- Security Functions ..... 10-2**
  - USIM PINs ..... 10-2
  - Keyguard ..... 10-3
  - Password Lock ..... 10-4
  - Secure Remote Lock ..... 10-4
- Restricting Calls/Messages ..... 10-5**
  - Rejecting Incoming Calls ..... 10-5
  - Phone Book Lock ..... 10-6
  - Messaging Lock ..... 10-6
  - Secret Mode/Secret Data Only ..... 10-7
  - Secret Mail Setting ..... 10-8
  - Mail Security Setting ..... 10-8
- Reset ..... 10-9**
  - Reset Settings ..... 10-9
  - All Reset ..... 10-9

## Changing Phone Password

<Default> 9999

### Change Phone Password as required.

- For Phone Password details:  P.1-23

Main Menu ► Settings ► Security ► Change Password

- 1 Enter current 4 to 8-digit Phone Password
- 2 Enter new 4 to 8-digit Phone Password
- 3 Reenter new Phone Password

#### Note

- If Phone Password is incorrectly entered three times, warning message appears. Turn off handset and retry to enter.

## Security Functions

### USIM PINs

- For more information about PINs:  P.1-3

### PIN Certification

Activate to require PIN entry each time handset is turned on.

Main Menu ► Settings ► Security ► PIN Certification

- 1 *ON* or *OFF*
- 2 Enter PIN

#### Note

- When PIN Certification is ON :
  - Signal Indicator may take some time to appear in Standby after entering PIN.
  - Enter PIN to dial emergency numbers (110, 119, 118).

## Changing PIN/PIN2

- Set PIN Certification to **ON** before changing PIN (☞ P.10-2).

**Main Menu ▶ Settings ▶ Security ▶ Change PIN or Change PIN2**

- 1 Enter current PIN/PIN2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2

## PIN/PIN2 Lock & Cancellation (PUK/PUK2)

**PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering PIN Unlocking Key (PUK/PUK2).**

- For information about PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞ P.16-30).

- 1 In PIN lock mode, enter PUK/PUK2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2





### Note

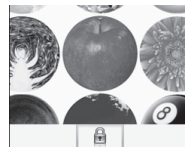
- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled (turning off power counts as one incorrect entry). Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞ P.16-30).

## Keyguard




**Lock handset keys to prevent accidental operation.**

- While locked,  appears in Standby.

- 1 In Standby, press and hold   
→ 
  - To cancel: In Standby,  →  [YES]



### Note

- Alternatively, **Main Menu ▶ Settings ▶ Phone Settings ▶ Keyguard ▶** .
- Emergency numbers (110, 119, 118) are dialable even when Keyguard is active (Entered numbers do not appear on Display). To correct misentries, press , then re-enter number.
- When Keyguard is active, handset will not power down. Cancel Keyguard then press and hold .

## Password Lock

<Default> OFF

Set Password Lock to require Phone Password after handset powers up, or after two minutes of inactivity in Standby.

- While set,  appears in Standby.

Main Menu ▶ Settings ▶ Security ▶ Password Lock

1 **ON** → 



- To cancel, select **OFF**.

2 Enter Phone Password

### Temporary Unlock

> When  appears in Standby, enter Phone Password

#### Note

- Emergency numbers (110, 119, 118) are dialable even when Password Lock is active.
- When Keyguard is set to ON while Password Lock is temporarily deactivated, both Keyguard and Password Lock are activated after two minutes of inactivity in Standby. (/ appears.) To cancel both, cancel Keyguard first (➔P.10-3).
- Turning off power does not cancel Password Lock.

## Secure Remote Lock

If handset is lost or stolen, remotely lock handset from a PC or mobile. If Secure Remote Lock is active, all operations are unavailable except to turn handset on.

- For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) or My SoftBank.

### Accessing My SoftBank from Handset (Japanese)

For service details, visit SOFTBANK MOBILE Corp. Website.

Main Menu ▶ Yahoo! ▶ Yahoo! Keitai  
▶ **メニューリスト** ▶ My SoftBank ▶ English

Follow onscreen instructions.

# Restricting Calls/Messages

## Rejecting Incoming Calls

### Rejecting Calls by Call-type

<Default> OFF

Reject calls from unknown numbers (numbers not saved in Phone Book, blocked Caller ID, pay phones, etc.).

Main Menu ► Settings ► Call Settings  
► Reject Incoming Calls

- 1 Select an item
- 2 *ON* or *OFF*

## Rejecting Specific Numbers


Add numbers to Reject List to reject specific incoming calls, then set *Activate Reject List* to *ON*.

Main Menu ► Settings ► Call Settings  
► Reject Incoming Calls ► Reject List

- 1 Select an item (See below)

| Item                        | Operation/Description   |
|-----------------------------|---|
| <b>Activate Reject List</b> | Reject incoming calls from numbers in Reject List<br>> <i>ON</i> or <i>OFF</i>  |
| <b>Edit Reject List</b>     | Add numbers to Reject List to reject specific incoming calls<br>> [Menu] → <i>Add</i> → Select an item → Highlight number in Phone Book/Call Log → [Select] (For <i>Direct Entry</i> , enter number directly) |

### Edit/Delete Numbers in Reject List

> In Step1, select *Edit Reject List* → Highlight number → [Menu] → *Edit* or *Delete* (→ For *Delete*, )


### Calls from Rejected Numbers

Handset does not ring/vibrate, but Information window appears. Press

 to confirm.

- If call is rejected because Caller ID was not sent (Withheld), caller is instructed via voice message or Picture to send ID.



### Note

- Set handset to reject all incoming calls or incoming calls while abroad (Call Barring:  P.2-19).

## Phone Book Lock

<Default> OFF

While Phone Book Lock is active, viewing Phone Book, saving new entries, changing settings, etc. are restricted.

- When Phone Book Lock is active,  appears. When Phone Book Lock and Messaging Lock are both active,  appears.

Main Menu ► Settings ► Security ► Phone Book Lock

1 **ON** → 

- To cancel, select **OFF**.

2 Enter Phone Password



### Note

- Mail & Call Log, Account Details, S! Address Book and Phone Book backup to Memory Card are available while Phone Book is active.
- When Phone Book Lock is active, only phone numbers/mail address appear for incoming communications from Phone Book entries.

## Messaging Lock

[Default] OFF

While Messaging Lock is active, creating messages, viewing Messaging folders, changing settings, etc. are restricted.

- When Messaging Lock is active,  appears. When Phone Book Lock and Messaging Lock are both active,  appears.

Main Menu ► Settings ► Security ► Messaging Lock

1 **ON** → 

- To cancel, select **OFF**.

2 Enter Phone Password

### Note

- When receiving a new message while Messaging Lock is active, sender information does not appear in Standby or ticker.
- When Messaging Lock is active, Message/template backup to Memory Card, template download etc. are available, but templates cannot be edited or used for S! Mail messages.

## Secret Mode/Secret Data Only

<Default> Normal Mode

Phone Book entries saved as secret data appear only when Secret Mode/Secret Data Only is active.

- Saving to Phone Book:  P.4-3

Main Menu ► Settings ► Security ► Secret Mode Setting

1 Select an item (See below)

| Item             | Operation/Description  |
|------------------|--|
| Secret Mode      | View all data including secret Phone Book entries <ul style="list-style-type: none"><li>● When Secret Mode is active, <b>***</b> appears in Standby.</li></ul> |
| Secret Data Only | View only secret Phone Book entries <ul style="list-style-type: none"><li>● When Secret Data Only is active, <b>**</b> appears in Standby.</li></ul>           |

2 Enter Phone Password

**Cancel Secret Mode/Secret Data Only from Standby**

> 

- **\*\*\*** or **\*\*** disappears.
- When Information window or Standby Window is open, press  to close, then press  again.

### Note



- Only numbers/mail addresses appear for incoming communications from Secret entries in Normal Mode.
- Turning off power cancels Secret Mode/Secret Data Only.

## Secret Mail Setting

<Default> Show







Hide messages to/from secret Phone Book entries.

- Even if Secret Mail Display is set to **Hide**, secret mail appears when Secret Mode/Secret Data Only is active.

- 1  [] → **Settings** → **Universal Settings**
- 2 **Display Settings** → **Secret Mail Display**
- 3 Enter Phone Password → **Hide**

## Mail Security Setting

Set handset to require Phone Password for opening messaging folders or operating Server Mail.

- 1  [] → **Settings**
  - 2 **Universal Settings** → **Mail Security Setting**
  - 3 Enter Phone Password → Check items →  [OK]
- **Set/Cancel Mail Security for Folders in Incoming Mail/Sent Messages Folders**
- >  [] → **Incoming Mail** or **Sent Messages** → Highlight a folder →  [Menu] → **Set Mail Security** or **Cancel Mail Security** → Enter Phone Password



# Reset

## Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu ► Settings ► Security ► Reset  
► Reset Settings



2 Enter Phone Password

Handset automatically turns off and restarts.

### Note

- Some default settings may not be restored.

## All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries etc.

Main Menu ► Settings ► Security ► Reset ► All Reset



2 Enter Phone Password

Handset automatically turns off and restarts.

3 Enter Date → Enter Time

### Note

- Fully Charge battery (🔋) beforehand.
- Phone Password is reset to default.
- USIM Card/Memory Card files are not affected.
- Non-restorable items when deleted by All Reset:
  - Customized settings, call logs, downloaded S! Appli, etc.
- Pre-installed S! Appli, Flash®, e-Book files, Mail Art or My Pictograms deleted by user are not recovered by All Reset.

## 10

### Handset Security