

Internet

Getting Started	13-2
Using Yahoo! Keitai	13-3
Opening Yahoo! Keitai Main Menu	13-3
Web Search	13-3
Entering URL	13-4
Using Access Histories	13-4
Exiting Mobile Internet	13-4
Using PC Site Browser	13-5
Opening Menu	13-5
Web Search	13-5
Entering URL	13-5
Using Access Histories	13-5
Exiting Internet	13-5
Basic Operations.....	13-6
Using Cursor	13-6
Text Entry & Item Selection	13-7
Using Information	13-8
Bookmarks & Saved Pages.....	13-8
Managing Bookmarks & Saved Pages	13-9
Bookmarks/Saved Pages Functions.....	13-10
Downloading Image/Sound Files	13-11
Using Number, Address or URL.....	13-11
Streaming	13-12
Option Menu Items.....	13-13

Getting Started

Access Yahoo! Keitai Mobile Internet and PC sites.

"Yahoo! Keitai" is both a SoftBank Mobile Internet service and the SoftBank Mobile Internet portal.

View PC Internet websites via PC Site Browser.

Internet

Yahoo! Keitai

- View Mobile Internet Websites (☞ P.13-3)
- Download image/sound files, etc. (☞ P.13-11)
- Video/Music Streaming (☞ P.13-12)
- Register S! Quick News (☞ P.6-5)

PC Sites

- View PC Sites (☞ P.13-5)
- Download still images (☞ P.13-11)

13

Internet

Note

- Separate subscription is required for Network access.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).
- Video Calls cannot be received while connecting to the Network.

Cache Memory

Retrieved information is temporarily saved in Cache Memory.

When full, oldest is deleted first.

- Previously viewed pages may load from Cache Memory. To view the latest, update information (☞ P.13-13).
- Cached items with expiry dates are deleted upon expiry.
- Information remains even after handset is disconnected from the Network or handset power is turned off.

Tip



Settings

- Clear Cache ● Delete Cookies (☞ P.15-22)
- Initialize Browser (☞ P.15-23)

SSL/TLS

SSL (Secure Sockets Layer) and TLS (Transport Layer Security) are encryption protocols for secure Internet transmissions of important/sensitive information such as credit card numbers.

Server certificates are saved on handset (👉P.15-22).

Notes

When a security notice appears, subscribers must decide for themselves whether or not to open the page.

SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co.,Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust Systems Co., Ltd. cannot be held liable for any damages associated with the use of SSL and TLS.

Tip

Settings ● Security Settings (👉P.15-22)

Using Yahoo! Keitai

Opening Yahoo! Keitai Main Menu

Select Yahoo! Keitai Main Menu items to access websites.

Main Menu ► Yahoo!

1 Yahoo! Keitai

Handset connects to the Network.

2 Select a menu item

- Repeat Step 2 as required.
- Basic Operations: 👉P.13-6

Note

- Shortcut: In Standby, press  [

Web Search

Main Menu ► Yahoo! ► Web Search

1 Enter text

Entering URL

Enter URLs (addresses beginning with "http://" or "https://") directly to access websites, or open previously viewed pages using URL histories.

- Up to 20 URL histories are stored.

Main Menu ► Yahoo! ► Enter URL

 
1 Enter URL Directly

Direct Entry → Enter URL

Use URL History

URL History List →

Select a URL

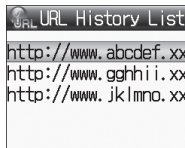

URL History List Window

Edit URL Histories

> In Step 1, **URL History List** → Highlight URL → [Menu] → **Edit** → Edit URL

Delete URL Histories

> In Step 1, **URL History List** → (Highlight URL →) [Menu] → **Delete** → **One** or **All** → [YES]

Using Access Histories

Open previously viewed pages using access histories.

- Up to 100 access histories are stored. (The number of savable histories varies depending on data amount.)

Main Menu ► Yahoo! ► History

1 Select a history



History Window

Delete Access Histories

> In Step 1, (Highlight URL →) [Menu] → **Delete** → **One** or **All** → [YES] (→ For **All**, enter Phone Password)

Exiting Mobile Internet




Note

- Closing handset does not affect active browser.

Using PC Site Browser

Opening Menu

View PC websites using PC Site Browser.


- When PC Site Browser is active,  appears.
- Some pages may not be viewable.
- Viewing PC websites may incur high charges.

Main Menu ► Yahoo! ► PC Site Browser

1 *Homepage* →  [OK] →  [YES]/ [NO]

2 Select a menu item
Repeat Step 2 as required.


Tip

Settings ● Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai ( P.15-21)

Web Search

Follow same operation accessed from Yahoo! Keitai.


Main Menu ► Yahoo! ► PC Site Browser ► Web Search

- Follow Step 1 of same operation accessed from Yahoo! Keitai. ( P.13-3)

Entering URL

Follow same operation accessed from Yahoo! Keitai.


Main Menu ► Yahoo! ► PC Site Browser ► Enter URL

- Follow Step 1 of same operation accessed from Yahoo! Keitai. ( P.13-4)

Using Access Histories

Follow same operation accessed from Yahoo! Keitai.

Main Menu ► Yahoo! ► PC Site Browser ► History

- Follow Step 1 of same operation accessed from Yahoo! Keitai. ( P.13-4)

Exiting Internet












1  → 

Note

- Closing handset does not affect active browser.

Basic Operations

Using Cursor

Move Cursor	Use cursor to select underlined menu items.  to move right  to move left  to move to previous line  to move to next line
Scroll Pages	Scroll bar appears on right side or at bottom of Display when page content continues beyond view.  scroll up/down  scroll left/right  scroll page up by a screenful  scroll page down by a screenful ● To scroll continuously, press and hold above keys.
Move to previous page/ next page	Previously viewed pages are temporarily saved in Cache Memory ( P.13-2).  [Back] : Return to previous page  [Menu] → Forward : View next page ● Some web pages may not appear after performing the steps above.

13

Internet

When Authentication is Required


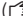
Some pages require user authentication for access.

If required, enter user ID or password.

Tip

Settings

 


- Change Font Size
- Scroll Unit
- Images Off
- Sounds Off ( P.15-21)
- Delete User ID or Password Entered when Authentication is Required ( P.15-22)

Text Entry & Item Selection

Enter text or select items to send information.

Example:

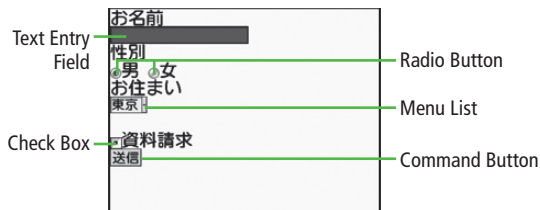

- Actual web pages may differ in appearance.

Text Entry Field	Highlight field → <input type="text"/> → Enter text → <input type="text"/> ● Enter previously entered text (input memory). ☒ [Menu] → <i>Insert</i> → <i>Input Memory</i> → Select input memory
Menu List	Highlight field → <input type="text"/> Menu list appears. Highlight an item → <input type="text"/> Selected items are highlighted.
Radio Button	Highlight <input type="radio"/> → <input checked="" type="radio"/> When selected, <input checked="" type="radio"/> appears.
Check Box	Highlight <input type="checkbox"/> → <input checked="" type="checkbox"/> When selected, <input checked="" type="checkbox"/> appears. Press <input checked="" type="checkbox"/> again to cancel selection.
Command Button	Highlight the button → <input type="button"/> Corresponding command is executed.

Tip

Settings ● Delete Input Memory (🗑️ P.15-22)

Using Information

Bookmarks & Saved Pages

Bookmark websites or save page content to **Saved Pages**.

- Some copy protected materials cannot be saved.

Bookmarks	Save links to websites. Handset connects to the Network to open the link.
Saved Pages	Save page content. Handset opens saved pages without connecting to the Network.

Saving Web Pages

1 Open a web page → [Menu] → **Bookmarks** or **Saved Pages** → **Add**

2 **Save Bookmarks**

Select title → Edit title → [Save]

- To save to folders: Select Folder → Select a folder (Not selectable when no folders exist in Bookmarks.)

Save Saved Pages

Edit title

Viewing Bookmarks & Saved Pages

Main Menu ▶ Yahoo! (▶ PC Site Browser)

1 **Bookmarks** or **Saved Pages** → Select an item

Example: Yahoo! Keitai Browser



Bookmarks List Window



Saved Pages List Window

■ **Open Bookmarks/Saved Pages while Online**

> Open a web page → [Menu] → **Bookmarks** or **Saved Pages** → **List**

Note

- Create folders in Bookmarks List to organize Bookmarks (☞P.13-9).

Tip

- Sending Bookmarks via Infrared (☞P.9-3)
- Save URLs to Bookmarks ● Send Bookmark URLs via S! Mail (☞P.13-10)

Managing Bookmarks & Saved Pages

Follow the steps below to open Bookmarks or Saved pages list:

■ **Yahoo! Keitai**

Main Menu ► **Yahoo!** ► **Bookmarks** or **Saved Pages**

■ **PC Site Browser**

Main Menu ► **Yahoo!** ► **PC Site Browser**
► **Bookmarks** or **Saved Pages**

Note

- Panasonic site bookmark cannot be edited/deleted.
- When a different USIM Card is inserted, Saved Pages do not appear or title name cannot be changed.

Creating New Bookmark Folders

- Folders cannot be created within existing folders.

- 1 In Bookmarks list window, [Menu] → **Create**
- 2 **Folder** → Enter title

■ Move Bookmarks to Folder

> In Step 1, highlight a bookmark → [Menu] → **Move to** → Select a folder

■ Edit Folder Title

> In Step 1, highlight a folder → [Menu] → **Edit** → Edit folder title

Editing Bookmark Titles/URLs

- 1 In Bookmark list window, highlight a bookmark → [Menu] → **Edit**
- 2 Select a title/URL
- 3 Edit title/URL → [Save]

Renaming Saved Pages

- 1 In Saved Pages list window, highlight an item → [Menu] → **Rename**
- 2 Edit title

Tip

●Delete Bookmarks/Folders ●Delete Saved Pages ●Reorder Bookmarks/Folders (P.13-10)

Bookmarks/Saved Pages Functions

From **Main Menu** ► **Yahoo!** (► **PC Site Browser**)
► **Bookmarks** or **Saved Pages**

Save URLs to Bookmarks

> [Create]* → **Bookmark** → <Title> → Enter Title → <URL> → Enter URL → When saving to a folder, select Folder → Select a folder → [Save]

* When saved items exist: [Menu] → **Create**

Delete Bookmarks/Folders

> Highlight a bookmark/folder → [Menu] → **Delete** → Follow the steps below

Item	Operation/Description
One	> []
Selected Files	> Check bookmarks/folders → [Delete] → []
All	> [YES] → Enter Phone Password

- Panasonic site bookmark cannot be edited/deleted.

Delete Saved Pages

> (Highlight a saved page →) [Menu] → **Delete** → Follow the steps below

Item	Operation/Description
One	> []
Selected Files	> Check saved pages → [Delete] → []
All	> [YES] → Enter Phone Password

Reorder Bookmarks/Folders

> Highlight a bookmark/folder → [Menu] → **Reordering** → [] to select new order

Send Bookmark URLs

> Highlight a bookmark → [Menu] → **Send Bookmark** → **S! Mail** or **SMS** → Create message (S! Mail: [] From Step 2 on P.12-4/ SMS: [] From Step 2 on P.12-8)

Downloading Image/Sound Files

Save images, sounds, etc. to Data Folder or Memory Card.

- For PC Site Browser, only still images can be saved.

1 Open a web page →  [Menu] → **Select item**

2 Select a file

File details appear.

3  [Save] → **Phone** or **Memory Card**

Available menu items vary by saved content.

Note

- 840P does not support Progressive JPEG files.
- Do not remove/install Memory Card while saving files to it.
- Do not turn handset power off while downloading or saving files. Files may be damaged.
- Some copy protected files may not be saved.




Using Number, Address or URL

Use linked numbers, addresses or URLs to make calls, send messages, access websites, or save them directly to Phone Book.

1 Open a web page containing phone numbers, mail addresses or URLs






2 **Phone Number**

Select a phone number → Select an item (See below)

Item	Operation/Description
Voice Call	Make a Voice Call > 
Video Call	Make a Video Call > 
Phone Book	Save number to Phone Book ( From Step 2 on P.4-5)

E-mail Address

Select an address → Select an item (See below)

Item	Operation/Description
S! Mail	Create S! Mail ( From Step 4 on  P.12-4)
SMS	Create SMS ( From Step 4 on  P.12-8)
Phone Book	Save mail address to Phone Book ( From Step 2 on P.4-5)

URL

Select URL

Handset connects to the Network.




Streaming

- Supported by compatible files on Yahoo! Keitai sites only.
- Streaming files cannot be saved.

Main Menu ► Yahoo! ► Yahoo! Keitai


1 Open a web page → Select a file

Media Player activates and streaming starts.

- To pause:  →  to resume
- Playback Window Operations:  P.7-7
(Replay Track, Play Previous and Play Next are unavailable)

2 or [Back] to exit

Note

- Streaming requires a continuous Network connection. Network remains connected even during a pause (Transmission fees apply).
- Streaming indicator appears ( P.1-8).
- Paused streams may stop after three minutes of inactivity.
- When roaming abroad, streaming may be unavailable or not be performed properly.

Incoming Voice Calls while Streaming



Incoming call pauses an active stream.

- Video Calls cannot be received while streaming.

Option Menu Items

In Yahoo! Keitai, press  [Menu] for these options:

- Some functions may not be available depending on web pages.

Item	Operation/Description
Forward	Go to next page ( P.13-6)
Bookmarks	View Bookmarks list, add bookmarks, or access web pages
Saved Pages	View Saved Pages list or save page content to Saved Pages
Text Copy	Copy page text
Reload Page	Refresh page information
Small Screen/PC Screen¹	Toggle display size
Page Operation	Frame In/Frame Out : Select full screen frame Jump to Top : Jump to top of page Jump to Bottom : Jump to end of page Zoom In/Out¹ : Zoom page in/out
Select Item	View, play or save file to Data Folder (Downloading Images/Sounds:  From Step 2 on P.13-11)
More	Web Search : Search text in Internet Search in this page : Search text within page History : Open previously viewed pages Send Bookmark : Send URL via S! Mail/SMS Enter URL : Enter URL directly or select URL from URL History list to open site Property : View page details or electronic certificates for secure pages Flash(R) Menu : Playback/pause Flash® files

Item	Operation/Description
To PC Site Browser²/Change Browser¹	Toggle Yahoo! Keitai/PC site
Yahoo! Keitai²/Homepage¹	View top menu
Settings²/PC Site Browser Settings¹	Change font size and encoding type

¹ PC Site Browser only

² Yahoo! Keitai only

13

Internet