

Appendix

Function List	16-2
Troubleshooting	16-8
Warning Signs	16-10
Software Update	16-10
Updating Software Manually.....	16-10
Updating Software Automatically	16-11
Key Assignments	16-12
Symbol List	16-13
Character Code List	16-14
Weather Indicator List	16-19
Memory List	16-20
Specifications	16-21
Index	16-22
Warranty & Service	16-29
Warranty	16-29
After-Sales Service	16-29
Customer Service	16-30


Function List


From Main Menu, press key corresponding to a menu number for direct access. (☞ P.1-17)


Example: To select S! Mail Settings in Messaging menu:


1 first column **0** second column **3** third column


(1) (Messaging) → (0) (Settings) → (3) (S! Mail Settings)


 Messaging		
	Menu Number/Function Name	Page
1	Messaging	–
1	Incoming Mail	P.12-12
2	Create New S! Mail	P.12-4
3	Retrieve New	P.12-17
4	Drafts	P.12-18
5	Templates	P.12-6
6	Sent Messages	P.12-18
7	Unsent Messages	P.12-18
8	Server Mail Box	–
1	Mail List	P.12-17
2	Delete Server Mail All	P.12-18
9	Create New SMS	P.12-8
0	Settings	–
1	Custom Mail Address	P.12-3
2	Universal Settings	P.15-18
3	S! Mail Settings	P.15-19
4	SMS Settings	P.15-21
*	Memory Status	–
1	Phone	P.12-3
2	USIM	P.12-3

 Yahoo! (Yahoo! Keitai)		
	Menu Number/Function Name	Page
2	Yahoo!	–
1	Yahoo! Keitai	P.13-3
2	Bookmarks	P.13-8
3	Saved Pages	P.13-8
4	Web Search	P.13-3
5	Enter URL	–
1	Direct Entry	P.13-4
2	URL History List	P.13-4
6	History	P.13-4
7	PC Site Browser	–
1	Homepage	P.13-5
2	Bookmarks	P.13-8
3	Saved Pages	P.13-8
4	Web Search	P.13-5
5	Enter URL	P.13-5
6	History	P.13-5
7	Yahoo! Keitai	P.13-3
8	PC Site Browser Settings	P.15-21
8	Settings	–
1	Font Size	P.15-21
2	Scroll Unit	P.15-21
3	Downloads	P.15-21
4	Memory Manager	P.15-22
5	Security	P.15-22
6	Initialized Browser	P.15-23
7	Reset Defaults	P.15-23

 S! Appli			
Menu Number/Function Name		Page	
3	S! Appli	–	
	1	S! Appli List	–
		Tab 1 Phone	P.14-2
		Tab 2 Memory Card	P.14-2
	2	S! Appli Settings	–
		1 Volume	P.15-23
		2 Display Backlight	P.15-23
		3 Vibration	P.15-23
		4 Auto Suspend Timer	P.15-23
	5 Synchronize Memory Card	P.15-23	
	3 Information	P.14-2	

 News/Ent. (News/Entertainment)			
Menu Number/Function Name		Page	
4	News/Ent.	–	
	1	S! Information Channel/Weather	–
		1 What's New?	P.6-3
		2 History	P.6-3
		3 Register/Cancel	P.6-2
		4 Get Latest Contents	P.6-2
		5 Missed Event settings(S! Information Channel)	P.6-2
		6 Weather Indicator	P.6-3
	2	S! Quick News	–
		1 S! Quick News List	P.6-5
		2 Settings	P.15-17
	3 BookSurfing	P.6-6	
	4 e-Book Viewer	P.6-6	


 Camera			
Menu Number/Function Name		Page	
5	Camera	–	
	1 Camera	P.5-5	
	2 Video Camera	P.5-6	
	3 Bar Code Reader	1 Scan Barcodes	P.11-10
		2 Saved Data List	P.11-11
		4 Magnifying Loupe	P.5-8

 Media (Media Player)			
Menu Number/Function Name		Page	
6	Media	–	
	1 Audio	1 All	–
		2 Music	P.7-5
		3 Ring Song	P.7-5
		4 Playlist	P.7-5
		5 Display Playback Screen	P.7-5
		6 Playback Mode	P.7-7
		7 Download Music	P.7-3
		8 Music Search	P.7-3
	2 Video	1 All	–
		2 Video Folder	P.7-6
		3 Playlist	P.7-6
		4 Display Playback Screen	–
		5 Playback Mode	P.7-7
		6 Download Videos	P.7-3


Tools		
	Menu Number/Function Name	Page
7	Tools	—
1	Alarms	P.11-6
2	Calendar	P.11-2
3	Calculator	P.11-7
4	Notepad	P.11-8
5	Count Down Timer	P.11-9
6	Answer Phone	—
1	Message List	P.2-13
2	Settings	P.2-12
7	Voice Recorder	P.11-9
8	Bar Code Reader	P.11-10
1	Scan Barcodes	P.11-10
2	Saved Data List	P.11-11
9	Software Update	—
1	Software Update	P.16-10
2	Regular Updates	P.16-11
3	Update Result	P.16-11
0	One Touch Guide	—
1	Display New Messages	P.11-12
2	Calendar	P.11-12
3	Speed Dial	P.11-12
4	Simple Mode	P.11-12
5	Set as Wallpaper	P.11-12
6	Private Menu	P.11-12
7	View Blind	P.11-12
8	Manner	P.11-12
9	Magnifying Loupe	P.11-12
0	Create New Phone Book	P.11-12


7	0	*	Keyguard	P.11-12
		#	Drive	P.11-12
			Yahoo! Keitai Menu*	P.11-12
			Create Message*	P.11-12
			Key Customization*	P.11-12

* Direct access unavailable

 Data Folder		
Menu Number/Function Name		Page
8	Data Folder	–
1	Pictures	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
	Tab 3 Digital Camera	P.8-2
2	Ring Songs-Tones	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
3	SI Appli	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
4	Music	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
5	Videos	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
	Tab 3 Video Camera	P.8-2
6	Books	–
	Tab 1 Phone	P.8-2
	Tab 2 Memory Card	P.8-2
7	Templates	P.8-2
8	Flash(R)	–
	Tab 1 Phone	P.8-3
	Tab 2 Memory Card	P.8-3
9	Other Documents	–
	Tab 1 Phone	P.8-3
	Tab 2 Memory Card	P.8-3

8	0	Memory Status	–
	1	Phone	P.8-3
	2	Memory Card	P.8-3


 Infrared		
Menu Number/Function Name		Page
9	Infrared	–
1	Infrared ON/OFF	P.9-3
2	Send Account Details	P.9-3
3	Send All Phone Book	P.9-4

 Bar Code (Bar Code Reader)		
Menu Number/Function Name		Page
*	Bar Code	–
1	Scan Barcodes	P.11-10
2	Saved Data List	P.11-11

Phone		
Menu Number/Function Name		Page
	Phone	–
1	Phone Book	P.4-6
2	Create New Entry	P.4-3
3	Mail & Call Log	–
	Tab 1 All Calls/All Mails Logs	P.2-10, P.12-15
	Tab 2 Incoming/Receive Logs	P.2-10, P.12-15
	Tab 3 Outgoing/Send Logs	P.2-10, P.12-15
4	Group	P.4-5
5	Account Details	P.1-24, P.4-14
6	One Touch Key	–
	1 One Touch Key	P.4-8
	2 Speed Dial	P.4-8
7	S! Addressbook Back-up	–
	1 Start Sync	P.4-12
	2 Auto Sync Settings	P.4-13
	3 Sync Log	P.4-13
8	Memory Manager	–
	1 Copy All from USIM	P.4-10
	2 Copy All to USIM	P.4-10
	3 Delete All (Phone)	P.4-10
	4 Delete All (USIM)	P.4-10
	5 Send All Phone Book via Infrared	P.9-4

9	Settings	–
	1 Save Settings	P.15-13
	2 Change View	P.15-13
	3 Search Method	P.4-6
	4 Font Size	P.15-13
	5 Mail Group Setting	P.12-21
0	Memory Status	P.4-11


- Number in first column is not available for Phone Book.

 Settings		
#	Menu Number/Function Name	Page
#	Settings	–
1	Sound Settings	–
1	Assign Ringtone	P.15-2
2	Ringer Volume	P.15-2
3	Ringtone Duration	P.15-2
4	Warning Tone	P.15-3
5	Vibration Alert	P.15-2
6	Key Tone	P.15-3
2	Display Settings	–
1	Customize Main Display	P.15-4
2	Font Size	P.15-5
3	Font Pattern	P.15-5
4	Change Menu Theme	P.15-5
5	Backlight Settings	P.15-6
6	Main Menu Icons	P.15-5
7	Themes	P.15-4
8	Standby Display	P.15-4
9	S! Quick News Settings	P.15-17
0	View Blind	P.1-24
3	Phone Settings	–
1	言語選択	P.15-4
2	Date & Time	P.15-8
3	Dictionaries	P.3-9
4	Notification Light	P.15-12
5	Keyguard	P.10-3
6	Key Settings	P.15-6
7	Change Simple Mode	P.1-22

#	Menu Number/Function Name	Page
# 4	Security	–
1	Password Lock	P.10-4
2	Phone Book Lock	P.10-6
3	Messaging Lock	P.10-6
4	Secret Mode Setting	P.10-7
5	Reset	P.10-9
6	PIN Certification	P.10-2
7	Change PIN	P.10-3
8	Change PIN2	P.10-3
9	Change Password	P.10-2
5	Call Settings	–
1	Optional Services	P.2-14
2	Call Time & Cost	P.15-10
3	Video Call	P.15-14
4	Reject Incoming Calls	P.10-5
5	Emission OFF Mode	P.1-16
6	Show My Number	P.2-20
7	Any Key Answer	P.15-11
8	Clamshell Control	P.15-11
9	Auto Answer	P.15-11
0	Ear Volume	P.15-11
6	Manner Mode Settings	P.15-7
7	Location Settings	–
1	Positioning Lock	P.9-6
2	Send Location Info	P.9-6
8	Memory Card Manager	–
1	Format Memory Card	P.8-15
2	Check Memory Card	P.8-18
3	Memory Card Backup/Restore	P.8-16
9	Retrieve NW Info	P.1-14

Troubleshooting

Handset does not turn on

- Was  pressed for more than three seconds?
- Is battery level sufficient?
- Is battery inserted properly? (☞ P.1-12)





Handset functions do not work after turning power on

- Does PIN entry window appear?
PIN Certification is **ON**. Enter PIN. (☞ P.10-2)

Insert **USIM** or **INVALID USIM** appears when handset is turned on or operations attempted

- Is USIM Card inserted correctly? (☞ P.1-3)
- Unusable USIM Card may be inserted (☞ P.1-2).
- USIM Card IC chip may be dirty.
Wipe with a clean cloth, then insert USIM Card correctly.





Keypad does not respond

- Does  appear in Standby?
Keyguard is active (☞ P.10-3).
Cancel Keyguard.
- Does  appear in Standby?
Password Lock is active (☞ P.10-4).
Cancel Phone Password.
- Does  or  appear in Standby?
Keyguard and Password Lock are both active (☞ P.10-3, P.10-4).
Cancel Keyguard, and then cancel Password Lock.

Display is blurred

- Adjust display brightness (☞ P.15-6)
- Is View Blind active?
Cancel View Blind (☞ P.1-24)

Outgoing calls or Video Calls will not connect or message and Internet connections are unavailable

- Does **OUT**  (red) appear?
Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.
- Does  appear?
Cancel Emission OFF Mode (☞ P.1-16).
- Are you using handset overseas?
Set international settings (e.g. select operator) to use abroad (☞ P.2-9, P.15-9).
- Does  or  appear?
Messaging Lock is active (☞ P.10-6).
Deactivate Messaging Lock.

Outgoing calls will not connect

- Is area code entered?
- Is restricting outgoing calls in Call Barring? (☞ P.2-19)

Outgoing calls will not connect or busy signal sounds

- Did you enter area code?



Call is interrupted or disconnected

- Does **OUT** appear? Is handset out-of-range or in a location where signal is weak?
Move to a location where signal is strong.



Display clock is reset

- Replacing battery does not reset Display clock; however, if battery is removed for long periods, the clock may be reset. Set Date & Time (☞ P.15-8) or Retrieve NW Info (☞ P.1-14) again.

Calls cannot be made via a Phone Book entry

- Entry may be saved as Secret.
Activate Secret Mode or Secret Data Only (☞ P.10-7).
- Does  or  appear?
Phone Book Lock is active (☞ P.10-6).
Deactivate Phone Book Lock.

Phone Book entry names do not appear in Call Log or message lists

- Phone Book may not activate immediately after powering handset on.
Phone Book entry information/settings are unavailable during this time.
Return to Standby and retry later.
- Does  or  appear?
Phone Book Lock is active (☞ P.10-6).
Deactivate Phone Book Lock.

Handset response differs from Phone Book entry settings

- Phone Book may not activate immediately after powering handset on.
Phone Book entry information/settings are unavailable if calls are received during this time. Ringer and Illumination follow general settings.

Battery Operating Time is greatly reduced

- Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (☞ P.1-10) and "Battery Time" (☞ P.1-11).

Cannot charge battery

- Is AC Charger (sold separately) firmly connected to handset or Desktop Holder (not included)? (☞ P.1-13)
- Is AC Charger securely plugged into an outlet?
- Is battery installed in handset correctly? (☞ P.1-12)
- Is handset correctly mounted in Desktop Holder?
- Make sure handset, battery, Desktop Holder and AC Charging terminals are clean.
- Is ambient temperature between +5°C and +35°C?
Otherwise, battery may not reach full charge.
- When charging battery during a call/data transmission, Notification Light/Charging Indicator may go out due to handset temperature increase. When handset temperature returns to normal level, Notification Light/Charging Indicator illuminates again.
- Battery may need to be replaced.





Handset/accessories feel warm

- AC Charger/Desktop Holder may warm during charging.
Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.

Note


- If you did not find the remedy to your problem here, please contact SoftBank Mobile Customer Center (☞ P.16-30).

Warning Signs

Problem	Causes and Remedies
 appears	Handset is out-of-range. Move to a location where signal is strong.
 appears	Keyguard is active (➔ P.10-3). Cancel Keyguard to use keys. Answer calls even if Keyguard is active.
 appears	Password Lock is active (➔ P.10-4). Cancel Password Lock to use handset. Answer calls even if Password Lock is active.
 appears	Keyguard and Password Lock are both active (➔ P.10-3, P.10-4). Cancel Keyguard, and then cancel Password Lock to use keys. Answer calls even if Keyguard and Password Lock are both active.
Low battery message appears and battery alarm tone sounds	Battery is low. Charge (➔ P.1-13) or replace battery (➔ P.1-12).


Software Update

Check for 840P software updates and download as required. Choose to begin update or schedule update.

 
- Transmission fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- The update may take some time.

Updating Software Manually

Main Menu ► Tools ► Software Update
► Software Update

1  → Follow onscreen instructions

Follow onscreen instructions.
After download is complete, handset automatically turns off and restarts before Software Update begins.
After Software Update is complete, handset automatically turns off and restarts before information appears for successful update.
(This process takes approximately 30 seconds.)



Software Update
Software has been successfully updated

Updating Software Automatically

Main Menu ► Tools ► Software Update

► Regular Updates

1 → Follow onscreen instructions

- Internet connection required for updates (transmission fees do not apply for updates). For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Update Results

In Information window, Select

Update Results

- In Standby, **Main Menu ► Tools**
 - Software Update
 - Update Results




Scheduled Update

Follow onscreen instructions for setup.

Confirmation appears at scheduled update time. Press or wait ten seconds for update to start.

- Software Update will not start while handset is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.

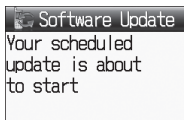

Note





- Software Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance (☎P.16-30).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup, as appropriate, of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Update may temporarily cancel Keyguard.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Key Assignments

Key	Kanji (Hiragana) [Double-byte]	Katakana [Double-/Single-byte]	Alphanumerics [Double-/Single-byte]	Numbers [Double-/Single-byte]
①	あいうえおあいうえお ¹	アイウエオアイウエオ ¹	. / @ - : ■ ¹ ■ ² _ 1	1
②	かきくけこ ²	カキクケコ ²	a b c A B C 2	2
③	さしすせそ ³	サシスセソ ³	d e f D E F 3	3
④	たちつてとっ ⁴	タチツテトッ ⁴	g h i G H I 4	4
⑤	なにぬねの ⁵	ナニヌネノ ⁵	j k l J K L 5	5
⑥	はひふへほ ⁶	ハヒフヘホ ⁶	m n o M N O 6	6
⑦	まみむめも ⁷	マミムメモ ⁷	p q r s P Q R S 7	7
⑧	やゆよやゆよ ⁸	ヤユヨヤユヨ ⁸	t u v T U V 8	8
⑨	らりるれる ⁹	ラリルレロ ⁹	w x y z W X Y Z 9	9
⑩	わをんわー ⁰	ワワン ⁰ ² ー ⁰	0	0 [Press and hold] + ¹
✳	✳ ³ /Pictograph List		Pictograph List	✳
	[Press and hold] Notepad List			[Press and hold] P (pause) ⁴
#	、 。 ? ! ・ (Single-byte Space)		, . ? ! ' - & () ¥ (Space)	#
	[Press and hold] Symbol List			

¹ Appears when entering single-byte character. ³ Appears after entering characters

² Appears when entering double-byte character. ⁴ Available only when entering phone numbers in Phone Book, etc.

- Press and hold numeric keys (⑩ to ⑨) to enter single-byte numbers assigned to each key (In Kanji/Hiragana input mode, all characters must be converted beforehand). To enter +, press and hold ⑩ in single-byte number mode.
- To toggle input modes: 
- To toggle double-byte/single-byte: Press and hold 
- To toggle upper/lower letter: After entering hiragana, katakana or alphanumerics, 
- To insert a line break: 

Symbol List

Double-byte Symbol List

、	。	，	．	：	；	？	！
“	”	‘	’	^	—	—	\\
>	ゞ	〃	全	々	メ	○	—
/	\	~	〃		…	…	’
”	()	[]	[]	{ }	<		
>	《 》	「 」	『 』	【 】	+		
-	±	×	÷	=	≠	<	>
∞	∴	♂	♀	°	′	”	℃
¥	\$	φ	£	%	#	&	*
@	§	☆	★				
○	●	◎	◇	◆	□	■	△
▲	▼	※	〒	→	←	↑	↓
≡	≅	⊂	⊃	U	∩	∧	∨
⇌	∇	∃	∠	⊥	∩	∅	∇
≡	≅						
≪	≫	√	∞	∞	∴	∫	∫
Å	%	#	b	♪	†	‡	¶
○	ゐ	ゑ	き				
エ	ヴ	カ	ケ	A	B	Γ	Δ
E	Z	H	Θ	I	K	Λ	M
N	Ξ	O	Π	P	Σ	T	Υ
Φ	X	Ψ	Ω	α	β		

γ	δ	ε	ζ	η	θ	ι	κ	λ	μ
ν	ξ	ο	π	ρ	σ	τ	υ	φ	χ
ψ	ω	A	B	B	Г	Д	Е	Ё	Ж
З	И	Й	К	Л	М	Н	О	П	Р
С	Т	У	Ф	Х	Ц	Ч	Ш	Щ	Ъ
Ы	Ь	Э	Ю	Я	а	б	в	г	д
е	ё	ж	з	и	й	к	л	м	н
о	п	р	с	т	у	ф	х	ц	ч
ш	щ	ъ	ы	ь	э	ю	я	—	
Г	Г	┘	┘	┘	┘	┘	┘	┘	┘
	┘	┘	┘	┘	┘	┘	┘	┘	┘
┘	┘	┘	┘	┘	┘	┘	┘	┘	┘
①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩
⑪	⑫	⑬	⑭	⑮	⑯	⑰	⑱	⑲	⑳
I	II	III	IV	V	VI	VII	VIII	IX	X
ミ	キ	キ	ル	ル	ト	ル	ル	ル	ル
ル	ル	ル	ル	ル	ル	mm	cm	km	mg
kg	cc	m ³	平	平	平	No	KK	TEL	⊕

⊕	⊕	⊕	⊕	(株)	(有)	(代)	明	大	昭
≡	≡	∫	∫	Σ	√	⊥	∠	∠	∠
∴	∩	U							

Single-byte Symbol List

!	"	#	\$	%	&	'	()
*	+	,	-	.	/	:	;
<	=	>	?	@	[¥]
^	_	'	{		}	~	.
「	」	,	·	—	”	°	

Character Code List

First Three Digits	Last Digit	0	1	2	3	4	5	6	7	8	9
010	→	→	→	→	→	→	→	→	→	→	→
011	←	←	←	←	←	←	←	←	←	←	←
012	↑	↑	↑	↑	↑	↑	↑	↑	↑	↑	↑
013	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓	↓
014	↖	↖	↖	↖	↖	↖	↖	↖	↖	↖	↖
015	↗	↗	↗	↗	↗	↗	↗	↗	↗	↗	↗
016	↘	↘	↘	↘	↘	↘	↘	↘	↘	↘	↘
017	↙	↙	↙	↙	↙	↙	↙	↙	↙	↙	↙
018	↕	↕	↕	↕	↕	↕	↕	↕	↕	↕	↕
019	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
020	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
021	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
022	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
023	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
024	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
026	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
027	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
028	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
029	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
031	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
032	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
033	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
034	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
035	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
036	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
037	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
038	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
039	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
040	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
041	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
042	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
043	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
044	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
045	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
046	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
047	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔
048	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔	↔

First Three Digits	Last Digit	0	1	2	3	4	5	6	7	8	9
050	ア	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
051	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
052	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
053	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
054	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
055	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
056	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
057	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
058	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
060	A	Λ	Φ	Γ	Δ	Ω	β	μ	Ε	Ο	Ι
061	K	Y	ϕ	ψ	α	λ	ξ	η	ρ	σ	τ
062	κ	υ	φ	ψ	α	λ	ξ	η	ρ	σ	τ
063	κ	υ	φ	ψ	α	λ	ξ	η	ρ	σ	τ
064	κ	υ	φ	ψ	α	λ	ξ	η	ρ	σ	τ
065	κ	υ	φ	ψ	α	λ	ξ	η	ρ	σ	τ
066	κ	υ	φ	ψ	α	λ	ξ	η	ρ	σ	τ
067	κ	υ	φ	ψ	α	λ	ξ	η	ρ	σ	τ
070	A	I	Y	U	B	K	F	J	L	M	N
071	A	I	Y	U	B	K	F	J	L	M	N
072	A	I	Y	U	B	K	F	J	L	M	N
073	A	I	Y	U	B	K	F	J	L	M	N
074	A	I	Y	U	B	K	F	J	L	M	N
075	A	I	Y	U	B	K	F	J	L	M	N
076	A	I	Y	U	B	K	F	J	L	M	N
077	A	I	Y	U	B	K	F	J	L	M	N
078	A	I	Y	U	B	K	F	J	L	M	N
080	G	Q	O	1	2	3	4	5	6	7	8
081	G	Q	O	1	2	3	4	5	6	7	8
082	G	Q	O	1	2	3	4	5	6	7	8
083	G	Q	O	1	2	3	4	5	6	7	8
130	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X
131	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X
132	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X
133	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X
134	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X
135	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X
136	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X
137	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X
138	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X
139	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X
160	ア	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
161	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
162	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
163	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
164	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
165	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
166	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
167	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
168	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
169	オ	カ	サ	タ	ド	ビ	ボ	ヨ	エ	ケ	セ
170	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
171	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
172	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
173	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
174	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
175	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
176	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
177	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
178	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
179	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
180	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
181	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
182	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
183	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
184	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
185	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
186	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
187	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
188	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
189	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
190	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
191	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
192	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ
193	イ	ウ	エ	ケ	セ	テ	バ	ハ	ヤ	ウ	グ










First Three Digits				Last Digit				First Three Digits				Last Digit				First Three Digits				Last Digit																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																	
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														
382	383	384	385	386	386	387	388		388	389	390		390	391	392		392	393		393	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410	411	412	413	414	415	415	416	417	418	419	420	421	422	422	423	424	425	426	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	441	441	442	443	444	444	445	446	447	448	449	449	450	451	452	452	453	454	455	456	456	457	458	459	460	461	462	463	464	465	465	466	467		467	468	469	470	471	472	473	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	506	507	508	509	510	511	512	513	514	515	515	516	517	518	519	520	521	522	522	523	524	525	526	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600	601	602	603	604	605	606	607	608	609	610	611	612	613	614	615	616	617	618	619	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700	701	702	703	704	705	706	707	708	709	710	711	712	713	714	715	716	717	718	719	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800	801	802	803	804	805	806	807	808	809	810	811	812	813	814	815	816	817	818	819	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900	901	902	903	904	905	906	907	908	909	910	911	912	913	914	915	916	917	918	919	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000





First Three Digits										Last Digit									
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9
507	吩	咭	啞							550	廖	慶	慶	慶	慶	慶	慶	慶	慶
508	咭	啞	啞							551	慶	慶	慶	慶	慶	慶	慶	慶	慶
509	咭	啞	啞							552	慶	慶	慶	慶	慶	慶	慶	慶	慶
510	咭	啞	啞							553	慶	慶	慶	慶	慶	慶	慶	慶	慶
511	咭	啞	啞							554	慶	慶	慶	慶	慶	慶	慶	慶	慶
512	咭	啞	啞							555	慶	慶	慶	慶	慶	慶	慶	慶	慶
514	咭	啞	啞							556	慶	慶	慶	慶	慶	慶	慶	慶	慶
515	咭	啞	啞							557	慶	慶	慶	慶	慶	慶	慶	慶	慶
516	咭	啞	啞							558	慶	慶	慶	慶	慶	慶	慶	慶	慶
517	咭	啞	啞							559	慶	慶	慶	慶	慶	慶	慶	慶	慶
518	咭	啞	啞							561	慶	慶	慶	慶	慶	慶	慶	慶	慶
519	咭	啞	啞							562	慶	慶	慶	慶	慶	慶	慶	慶	慶
520	咭	啞	啞							563	慶	慶	慶	慶	慶	慶	慶	慶	慶
521	咭	啞	啞							564	慶	慶	慶	慶	慶	慶	慶	慶	慶
522	咭	啞	啞							565	慶	慶	慶	慶	慶	慶	慶	慶	慶
523	咭	啞	啞							566	慶	慶	慶	慶	慶	慶	慶	慶	慶
524	咭	啞	啞							567	慶	慶	慶	慶	慶	慶	慶	慶	慶
525	咭	啞	啞							568	慶	慶	慶	慶	慶	慶	慶	慶	慶
526	咭	啞	啞							569	慶	慶	慶	慶	慶	慶	慶	慶	慶
527	咭	啞	啞							570	慶	慶	慶	慶	慶	慶	慶	慶	慶
528	咭	啞	啞							571	慶	慶	慶	慶	慶	慶	慶	慶	慶
529	咭	啞	啞							572	慶	慶	慶	慶	慶	慶	慶	慶	慶
530	咭	啞	啞							573	慶	慶	慶	慶	慶	慶	慶	慶	慶
531	咭	啞	啞							574	慶	慶	慶	慶	慶	慶	慶	慶	慶
532	咭	啞	啞							575	慶	慶	慶	慶	慶	慶	慶	慶	慶
533	咭	啞	啞							576	慶	慶	慶	慶	慶	慶	慶	慶	慶
534	咭	啞	啞							577	慶	慶	慶	慶	慶	慶	慶	慶	慶
535	咭	啞	啞							578	慶	慶	慶	慶	慶	慶	慶	慶	慶
536	咭	啞	啞							579	慶	慶	慶	慶	慶	慶	慶	慶	慶
537	咭	啞	啞							580	慶	慶	慶	慶	慶	慶	慶	慶	慶
538	咭	啞	啞							581	慶	慶	慶	慶	慶	慶	慶	慶	慶
539	咭	啞	啞							582	慶	慶	慶	慶	慶	慶	慶	慶	慶
540	咭	啞	啞							583	慶	慶	慶	慶	慶	慶	慶	慶	慶
541	咭	啞	啞							584	慶	慶	慶	慶	慶	慶	慶	慶	慶
542	咭	啞	啞							585	慶	慶	慶	慶	慶	慶	慶	慶	慶
543	咭	啞	啞							586	慶	慶	慶	慶	慶	慶	慶	慶	慶
544	咭	啞	啞							587	慶	慶	慶	慶	慶	慶	慶	慶	慶
545	咭	啞	啞							588	慶	慶	慶	慶	慶	慶	慶	慶	慶
546	咭	啞	啞							589	慶	慶	慶	慶	慶	慶	慶	慶	慶
547	咭	啞	啞							590	慶	慶	慶	慶	慶	慶	慶	慶	慶
548	咭	啞	啞							591	慶	慶	慶	慶	慶	慶	慶	慶	慶
549	咭	啞	啞							592	慶	慶	慶	慶	慶	慶	慶	慶	慶





Table of Chinese characters with 9 columns and 48 rows. Each cell contains a character corresponding to a specific column and row index. The table is organized into four groups of 12 columns each, each with its own 'First Three Digits' and 'Last Digit' headers.





Weather Indicator List





- Indicators and categories are subject to change without notice.




Weather	
	Clear (day)
	Clear (night)
	Cloudy
	Rain
	Snow
	Thunderstorm
	Chance of Precipitation 0% - 100%
	Later
	Occasionally




Pollen Level	
	Low
	Moderate
	High
	Very High

Cherry Blossom	
	Blossoms Opening
	Near Full Bloom
	Peak Bloom
	Past Peak

Fall Foliage	
	No Color
	Moderate Color
	Peak Color
	Past Peak

UV Level	
	Low
	Moderate
	High
	Very High

Typhoon	
	Formed
	Approaching
	Severe

Other Information	
	Heavy Rain
	Storm Winds
	Notifications

Memory List

Data Folder	Up to 1000 items/approx. 31 MB (Including pre-installed data)
--------------------	--

- Shared with Notepad/S! Appli List
(One S! Appli corresponds to three to six items.)

Schedule Events	Up to 100 items
------------------------	-----------------

Phone Book	Up to 1000 items
-------------------	------------------

Messaging (SMS and S! mail combined)	Incoming Mail	Up to 1000 items/approx. 5 MB
	Drafts/Sent Messages/Unsent Messages	Up to 500 items/approx. 5 MB

Yahoo! Keitai	Saved Pages	[Yahoo! Keitai] Up to 20 items/750 KB [PC Site Browser] Up to 20 items/1150 KB
	Bookmarks	[Yahoo! Keitai] Up to 100 items (Including pre-installed data) [PC Site Browser] Up to 100 items
	URL History	[Yahoo! Keitai] URL Entry: Up to 20 items URL Access: Up to 100 items* [PC Site Browser] URL Entry: Up to 20 items URL Access: Up to 100 items*
	Cache	[Yahoo! Keitai] 750 KB [PC Site Browser] 1150 KB

* The number of savable items varies depending on URL length.

Specifications

840P

Weight (including battery)		116 g*
Dimensions (closed)		50 x 108 x 17.6 mm*
Standby Time (closed)	3G	460 hours*
	GSM	360 hours*
Talk Time	3G	230 minutes*
	Video Call	110 minutes*
	GSM	250 minutes*
Charging Time	AC Charger	150 minutes*
	In-Car Charger	150 minutes*
Maximum Output	3G	0.25 W
	GSM	2.0 W

* Approximate value

- Values above were calculated with battery installed.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when an S! Appli is active.

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	920 mAh
Dimensions	45 x 5.4 x 37 mm*

* Approximate value

- Specifications subject to change without notice.

Index

Numerics

3D Pictograms	12-16
Settings	15-18
3G	2-9

A

AC Charger	1-13
Access History	
PC Site	13-5
Yahoo! Keitai	13-4
Account Details	1-24, 4-14
After-Sales Service	16-29
Alarms	11-6
All Reset	10-9
Alternative Picture	2-5, 15-14
Answer Phone	2-12
Answer Time (Answer Phone)	2-13
Answering Calls	
Video Calls	2-6
Voice Calls	2-4
Any Key Answer	15-11
Attachment Auto-play	15-19
Attachments	
Adding/deleting	12-9
Opening/saving	12-15
Audio Player	7-4
Authentication Code	9-4
Auto Answer	15-11
Auto Delete (Messages)	12-3, 15-18
Auto Focus Lock	5-6
Auto Save (Camera)	15-15, 15-16
Auto Suspend Timer (S! Appli)	15-23
Available Memory (Camera)	15-15, 15-16
Away Clock	15-8

B

Background Music	7-5
Backlight	
Display	15-6
Keys	15-6
S! Appli	15-23
Video Calls	15-14
Backup	
Memory Card	8-15
S! Address Back-up	4-11
Bar Code Reader	11-10
Basic Operations (Internet)	13-6
Battery	1-10
Battery Strength Indicator	1-11
Bookmarks	13-8
Books folder	8-2
BookSurfing®	6-6
Brightness	
Camera	5-3
Display	15-6
Video Camera	5-4
Browser (Initializing)	15-23

C	
Cache Memory.....	13-2
Calculator	11-7
Calendar	11-2
Call Barring.....	2-19
Call Barring Password.....	1-23
Call Cost	15-10
Call Forwarding	2-14
Call Log.....	2-10
Call Operations.....	2-9
Call Settings	15-9
Call Time	15-10
Call Waiting	2-17
Caller ID.....	2-2, 2-20
Camera [Section Contents].....	5-1
Center Access Code	1-23
Certificate Retention	15-23
Change View	
Data Folder.....	8-4
Memory	8-4
Phone Book	15-13
Character Code List	16-14
Input Options	3-4
Charging Time	1-10
Clamshell Control	15-11, 15-18
Clock/Calendar Display.....	15-4
Close-to-End Call	15-11
Content Key	8-6
Continuous Shooting.....	5-5
Conversion Candidates.....	3-5
Conversion Methods.....	3-5

D	
Data Folder	8-2
Date & Time Settings.....	15-8
Deleting	
Folders/files	8-12
Messages.....	12-24
Phone Book	4-10
S! Appli.....	14-4
Schedule	11-5
Delivery Report	12-11
Display.....	1-8
Display Indicators.....	1-8
Display Pattern (Date & Time).....	15-8
Settings	15-4
Download	
From web pages.....	13-11
Music/Video files	7-3
S! Appli.....	14-2
Templates	12-11
Download Dictionary.....	3-9
Drafts.....	12-10, 12-18
Drive Mode.....	1-16, 15-7

E	
e-Book Viewer	6-6
Earpiece Volume	
Video Calls.....	2-6
Voice Calls	2-4
Effect (Camera).....	5-3, 5-4
Emergency Calls (110, 119, 118)	2-3
Emergency Positioning Request	2-3
Emission OFF Mode	1-16
Emoticons.....	3-4
Expiry (SMS)	15-21

F

Feeling Mail	
Creating.....	12-5
Receiving.....	12-12
Settings.....	12-5, 15-20
Flash(R) folder.....	8-3, 8-8
Flash® files.....	8-3
Flash® Ringtone files.....	8-3
Focus Setting.....	5-3, 5-4
Folder/files (Data Folder).....	8-12
Font Settings.....	15-5
Font Size	
Candidates.....	15-5
Character Input.....	15-5
Collective Setting.....	15-5
Mail & Call Log.....	15-5
Messaging.....	15-5
PC Site Browser.....	15-5
Phone Book.....	15-5
Yahoo! Keitai.....	15-5
Full Screen Playback (Video).....	7-6
Function List.....	16-2

G

Graphic Mail.....	12-6
Group Calling.....	2-18
Group Settings.....	4-5
GSM.....	2-9

H

Handset	
Menus.....	1-16
Parts & Functions.....	1-4
Power On/Off.....	1-14
Handset Security [Section Contents]....	10-1
Handsfree Setting.....	15-11
Help	
Media Player.....	7-8
Text Entry.....	3-2
Hold	
During a Call.....	2-9
Incoming Call.....	2-4
Home Clock.....	15-8
HTML Mail.....	12-6

I

Image Size (Camera).....	5-3
Incoming Options (S! Mail).....	15-19
Information Window.....	1-18
Infrared.....	9-2
Input Character Settings (SMS).....	15-21
International Call	
From abroad.....	2-8
From Japan.....	2-7
International Code.....	2-7, 15-9
International Setting.....	2-9, 15-9
Internet [Section Contents].....	13-1

K

Key Assignments.....	16-12
Key Backlight Time.....	15-6
Key Operation List	
Camera.....	15-15
Video Camera.....	15-16
Key Settings.....	15-6
Key Tone.....	15-3
Keypad.....	10-3

L

Language.....	15-4
Learning from Received Message.....	15-18
Letter Narrow Input.....	3-7
License Information (S! Appli).....	14-2
Location Settings.....	9-6

M	
Magnifying Loupe.....	5-8
Mail Delivery Rule	12-19
Mail Group.....	12-21
Mail Log.....	12-15
Mail Security Setting.....	10-8
Main Menu	1-16
Main Menu Icons	15-5
Making Calls	
International Calls.....	2-7, 2-8
Video Calls.....	2-6
Voice Calls	2-2
Manner Mode	1-15
Setting.....	15-7
Manufacture Number	15-22
Media Player [Section Contents].....	7-1
Memory Card.....	8-13
Backup.....	8-16
Check Memory Card	8-18
Formatting.....	8-15
Synchronizing.....	15-23
Memory List.....	16-20
Memory Manager (Internet).....	15-22
Memory Status	
Calendar.....	11-5
Data Folder.....	8-3
Messages.....	12-3
Phone Book	4-11
Menu Numbers	1-17
Menu Theme	1-16

Messaging [Section Contents].....	12-1
Messaging Lock	10-6
Missed Call Notification	2-16
Multi Selector.....	ix
Multi Shot.....	5-3
Music folder.....	8-2
Music Search	7-3
Mute Voice.....	2-10
My Number.....	1-24
My Pictograms.....	12-7

N	
Network Information	1-14
Network Mode	2-9
Network S! Appli.....	14-2
New Messages	
Retrieving.....	12-17
Viewing	12-12
Night Mode	5-3
Normal Mode	
Manner Mode Settings.....	15-7
Simple Mode Menu	1-21
Notepad.....	11-8
Notification Light Settings	15-12

O	
One Touch Guide.....	11-12
One Touch Key	4-8
Open-to-Answer Call	15-11
Open-to-Display Missed Call	15-11
Operator	
Operator Name.....	15-4
Selecting.....	15-9
Optional Services	2-14
Original Manner Mode	15-7
Other Documents folder.....	8-3

P	
Password Lock	10-4
Passwords	1-23
Passwords (Changing)	
Call Barring Password	2-19
Center Access Code	1-23
Phone Password	10-2
PC Site Browser	13-2
Access	13-5
Display Settings	15-21
Memory Manager & Settings	15-22
Reset	15-23
Security Settings	15-22
Phone Book [Section Contents]	4-1
Phone Book Lock	10-6
Phone Password	1-23
Phone Password (Changing)	10-2
Pictographs	3-3
Picture Size	5-3
Pictures folder	8-2
Pictures (Still Images)	
Capturing	5-5
Editing	8-11
PIN/PIN2	1-3
Changing	10-3
PIN Certification	10-2
PIN Lock & Cancellation (PUK/PUK2)	10-3
Playback Method	8-5
Playback Mode	7-7
Playback Mode Indicators	7-4

Playback Position	7-5
Playlist	7-8
Predictive Conversion	3-5
Preview Window	
Camera	5-3
Video Camera	5-4
Private Menu	1-20
PUK/PUK2	1-3, 10-3

Q	
QR Code	11-10
Quality (Camera)	5-3, 5-4
Quick Phone Book Search	4-7, 4-8
R	
Recipients (Adding/editing/deleting) ...	12-9
Referer Information	15-22
Reject Incoming Calls	10-5
Reject List	10-5
Remaining Cost	15-10
Reset	
All Reset	10-9
Browser Settings	15-23
Camera Settings	15-15, 15-16
Group Settings	4-6
Key Settings	15-6
Main Menu Icons	15-5
Settings	10-9
Restoring	
Memory Card	8-16
S! Addressbook Back-up	4-12
Ring Songs·Tones folder	8-2
Ringer Volume	15-2
Ringtone Duration	15-2
Ringtone Settings	8-9, 15-2
Roaming	2-8
Root Certificates	15-22

S	
S! Addressbook Back-up.....	4-11
S! Appli [Section Contents]	14-1
S! Information Channel	6-2
S! Mail	12-2
Creating/sending.....	12-4
S! Mail Notice	12-14
Settings	15-19
Universal Settings	15-18
S! Quick News	6-5
Save Location	
Phone Book	15-13
Still Images.....	5-3
Videos.....	5-4
Saved Pages.....	13-8
Saving	
Notepad	11-8
Phone Book	4-3
Reject List.....	10-5
Schedules	11-2
Shortcuts	1-20
User's Dictionary.....	3-9
Schedules (Schedule Events)	11-2
Script	15-22
Scroll Unit.....	15-21
Secret Data Only.....	10-7
Secret Mail Display.....	10-8
Secret Mode	10-7
Secure Remote Lock	10-4
Security Functions	10-2
Security Level (S! Appli)	14-4

Security Settings (Internet)	15-22
Self-Timer	5-3, 5-4, 5-6
Server Mail	12-17
Settings [Section Contents].....	15-1
Shortcuts	1-19
Shutter Sound.....	15-15
Simple Mode	1-21
SMC files.....	7-5
SMS.....	12-2
Creating/sending.....	12-8
Settings	15-21
Universal Settings	15-18
Snooze.....	11-6, 11-7
SoftBank Utility Software	9-5
Softkeys.....	ix
Software Update	16-10
Sort (Messages).....	12-18, 12-23
Spam Filter	12-20
Speaker	
Video Calls.....	2-10
Voice Calls	2-9
Speed Dial	4-8
SSL.....	13-3
Standby Display.....	15-4
Standby Window.....	1-19
Still Images (Pictures)	
Capturing	5-5
Editing	8-11
Streaming	13-12
Symbols	3-3
Symbol List.....	16-13
System Message.....	12-17

T	
Text Entry [Section Contents].....	3-1
Text Predict.....	15-13
Themes	15-4
Time Correction.....	15-8
TLS	13-3
Total Call Charge	15-10
Total Call Time	15-10
U	
URL History	
PC Site	13-5
Yahoo! Keitai.....	13-4
USB	9-5
User's Dictionary	3-9
USIM Card.....	1-2
USIM Card Phone Book	4-3
USIM PINs.....	1-3

V

Vibration	
Incoming Alert.....	15-2
S! Appli.....	15-23
Video Calls.....	2-5
Video Player.....	7-6
Videos (Recording).....	5-6
Videos folder.....	8-2
View Blind.....	1-24
View Format	
Calendar.....	11-5
Date & Time.....	15-8
Voice Mail.....	2-15
Voice Recorder.....	2-9, 11-9
Volume	
Key Tone.....	15-3
Ringtone.....	15-2
S! Appli.....	15-23
Video Calls.....	2-6
Voice Calls.....	2-4

W

Wallpaper.....	8-9
Warning Messages (PC Site Browser).....	15-21
Warning Tone.....	15-3
Warranty.....	16-29
Weather Indicator.....	6-3
Web Search	
PC Site.....	13-5, 13-13
Yahoo! Keitai.....	13-3, 13-13
White Balance	
Still Images.....	5-3
Video Calls.....	15-14
Videos.....	5-4

Y

Yahoo! Keitai.....	13-2
Access.....	13-3
Display Settings.....	15-21
Memory Manager & Settings.....	15-22
Reset.....	15-23
Security Settings.....	15-22

Z

Zoom (Camera).....	5-3, 5-4
--------------------	----------

Warranty & Service

Warranty

Warranty is provided when you purchase a 840P.

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

SoftBank is not liable for any damage resulting from use of this product.

After-Sales Service

See "Troubleshooting" (☞ P.16-8) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (☞ P.16-30) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.

Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.

Check phone number before you dial.

SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at
**157 for General Information or
113 for Customer Assistance**

SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(Please take care to dial the correct number.
International charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Toll Free Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113