

# Basic Operations



<b>Accessing Functions</b> .....	<b>2-2</b>
Using Shortcuts .....	2-2
Using Main Menu.....	2-2
Using Shortcut Keys .....	2-3
<b>Incoming Settings</b> .....	<b>2-4</b>
Changing Volume .....	2-4
Changing Ringtone .....	2-4
Setting Vibration .....	2-4
<b>Standby Display Options</b> .....	<b>2-5</b>
Wallpaper .....	2-5
Slide Show .....	2-5
Color Theme .....	2-6
<b>Text Entry</b> .....	<b>2-7</b>
Text Entry Window .....	2-7
Changing Entry Mode.....	2-8
Kana/Kanji .....	2-8
Katakana/Alphabet/Number .....	2-9
Symbol .....	2-9
Pictograms/Emoticons .....	2-9
Line Break.....	2-10
Entering Space .....	2-10
Hangul.....	2-11
Using Quick Address List .....	2-11
Deleting/Editing .....	2-11
<b>User's Dictionary (Japanese)</b> .....	<b>2-12</b>
Editing User's Dictionary.....	2-12
Saving to User's Dictionary .....	2-12

<b>Phone Book</b> .....	<b>2-13</b>
Phone Book Window.....	2-13
Creating New Entries .....	2-13
Entry Search .....	2-14
Calling from Phone Book.....	2-15
Deleting Phone Book Entries.....	2-15
<b>Advanced Settings</b> .....	<b>2-16</b>
Standby .....	2-16
Text Entry.....	2-16
User's Dictionary .....	2-17
Phone Book .....	2-17

## Accessing Functions

Use following methods to access handset applications:




- Shortcuts
- Main Menu (Standard Menu)
- Main Menu (Simple Menu)
- Shortcut Keys

### Using Shortcuts

Select *Call*, *Messaging*, *Yahoo!*, or *Media*. Use multiple functions at the same time (e.g. use the Internet during a call).

#### 1 In Standby or active function,

#### 2 to highlight item → (Select)


- To exit an active function, open the window and press .
- To exit all active functions, highlight  at the Shortcuts and press  (Yes).

- When you exit all active functions, a confirmation may appear for some functions. When the confirmation appears, choose *Yes*.
- If Camera is active, shortcuts do not appear in text entry window.

## Using Main Menu

### Using Standard Menu

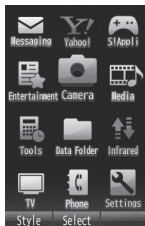

 
 
#### 1 In Standby,



Main Menu

#### 2 Highlight item →


#### 3 Repeat Step 2 to select item

- Press  to return to the previous operation step.
- Press  to exit menu. Handset returns to Standby. If multiple functions are active, active window appears.
- Press  to cancel operation. Handset returns to Standby or previous window. In some menus, a confirmation appears.
- Speed Dial numbers appear in item or list window. Press corresponding Keypad key to select an item.
- If menu title is too long to view, hold menu to show. Change text scroll speed whole menu title ( P.14-6).


Example: Selecting *Wallpaper*  
*Settings* → *Display settings* → *Wallpaper*




Highlight *Settings*  
 →  (Select)

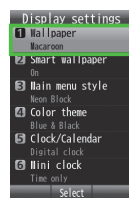

Highlight *Wallpaper*  
 →  (Select)

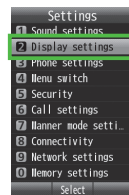


Highlight *Display settings*  
 →  (Select)

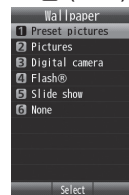



Wallpaper Setting Window Appears

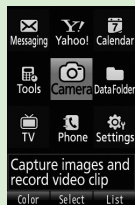- Perform the same operation from simple menu. However, some functions are unavailable.













 


## Toggle Standard Menu/Simple Menu

- 1  → *Settings* → *Menu switch*
- 2 *Standard menu/Simple menu* →  (Select)

### Using Shortcut Keys

In Standby, use the following keys to access functions.

	Key	Menu/Function
	Short Press	Messaging menu
	Long Press	Create S! Mail
	Short Press	Yahoo! Keitai main menu
	Long Press	Yahoo! Keitai menu
	Short Press	TV menu
	Long Press	Activate TV
	Short Press	Shortcuts
	Short Press	Favorites
	Short Press	Open Call Log (Received)
	Short Press	Open Call Log (Dialed)
	Short Press	Search Phone Book
	Long Press	Add to Phone Book
	Short Press	Main menu
	Long Press	Activate/Cancel Key Lock
	Short Press	Open Call Log (All)


	Key	Menu/Function
	Short Press	Play answering machine
	Long Press	Activate/Cancel Answering Machine
	Long Press	Manner mode setting window
	Long Press	Toggle Manner mode On/Off
	Short Press	Adjust Earpiece volume
	Long Press	UV Checker
	Short Press	Adjust Earpiece volume
	Long Press	Activating Dummy Call (set by Side Key (down))

## Incoming Settings

Adjust Volume, Ringtone and Vibration settings.  
Use Ringtone/Vibration pattern to identify caller.


### Changing Volume

Select from six volume levels: 0 (off) to 5.


- 1  → *Settings* → *Sound settings* → *Volume*



- 2 Select incoming type


- 3  to adjust volume →  (Select)

- Alternatively, press  /  to adjust volume.

- Highlight volume →  (Play) to playback.


### Changing Ringtone

Besides presets, get Ring songs, music, videos, or Flash® Ringtones via Internet for handset use.

- 1  → *Settings* → *Sound settings* → *Ringtone*




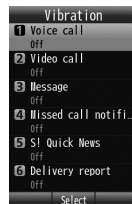
- 2 Select incoming type
- 3 Select Ringtone type
- 4 Select Ringtone file

- Highlight file name →  (Play) to playback.

### Setting Vibration

Select Vibration Pattern from following options: *Off*, *Pattern 1* to *Pattern 5*.


- 1  → *Settings* → *Sound settings* → *Vibration*



- 2 Select incoming type
- 3 Select Vibration

- To Cancel Vibration  
*Off*

- To Select Vibration Pattern  
*Pattern 1* to *Pattern 5*

- Highlight file name →  (Play) to view a pattern.


## Settings

- Adjust Volume (☎ P.14-4)
- Set Ringtone for Voice Call/Video Call (☎ P.14-4)
- Set Ringtone to Something Other than Voice Call/Video Call (☎ P.14-4)
- Set Ringtone Duration to Something Other than Voice Call/Video Call (☎ P.14-4)
- Search Machi-Uta™ (☎ P.14-4)
- Set Machi-Uta™ (☎ P.14-4)
- Register/Cancel Machi-Uta™ (☎ P.14-4)
- View Instruction for Machi-Uta™ (☎ P.14-4)
- Set Vibration (☎ P.14-4)

## Standby Display Options




## Wallpaper

Set still image, animation or Slide show to appear in Standby. Alternatively, set *Wallpapers* to *None*.

- 1  → *Settings* → *Display settings* → *Wallpaper*




- 2 Highlight file name



- **To Set Preset Pictures**  
*Preset pictures* → Select file →  (Set)
  - **To Set Image from Pictures**  
*Pictures* → Select file →  (Set)
  - **To Set Image from Digital Camera Folder**  
*Digital camera* → Select file →  (Set)
  - **To Set Flash® File as Wallpaper**  
*Flash®* → Select file →  (Set)
  - **To Set Slide Show**  
*Slide show* → (☎ P.2-5 Slide Show 2)
  - **To Set None**  
*None*
- Set file in Memory Card, confirmation appears. Press *Yes* to set.


## Slide Show

Set up to nine images to appear in sequence in Standby.

- 1  → *Settings* → *Display settings* → *Wallpaper* → *Slide show*




- 2  (Add) → *Check Images* →  (Done)


- With Memory Card inserted, press  to toggle handset and Memory Card.
- Set file in Memory Card for slide show, confirmation appears. Press *Yes* to set.

### 3 Edit Slide show


#### ■ To Preview

 (Preview) → *Yes* or *No*

#### ■ To Set Effect

Highlight effect →  to select item

#### ■ To Change Transmission Time for a Still Image

Highlight duration →  to select time



### 4 (Set) → *Yes* or *No*


#### • To adjust slide size

To fit image to Display, choose *Yes* in [4](#).  
For original proportion, choose *No*.


### Color Theme

Set background/title/focus color to your favorite color.

1  → *Settings* → *Display settings* → *Color theme* → *Customize* →  (Edit)

2 Highlight background color →  (Next)

3 Highlight title color →  (Next)

4 Highlight focus color →  (Save)

### Advanced
















#### Settings

- Change User Interface Language ([P.14-2](#))
- Set Time Zone Updating ([P.14-2](#))
- Change Home Zone Time ([P.14-2](#))
- Activate/Cancel Daylight Savings Time ([P.14-2](#))
- Set Time ([P.14-2](#))
- Set Date ([P.14-2](#))
- Change Time Format ([P.14-2](#))
- Change Date Format ([P.14-2](#))
- Set Time Correction ([P.14-2](#))
- Set Earphone Settings ([P.14-2](#))
- Change Wallpaper ([P.14-5](#))
- Set/Cancel Smart Wallpaper ([P.14-5](#))
- Change Wallpaper for Smart Wallpaper ([P.14-5](#))
- Change Main Menu Settings ([P.14-5](#))
- Set the Color Theme for Menu ([P.14-5](#))

- Change Clock/Calendar ([P.14-6](#))
- Set Mini Clock ([P.14-6](#))
- Set Font Type ([P.14-6](#))
- Set Text Size in List Font ([P.14-6](#))
- Change Text Scroll Speed for Menu List ([P.14-6](#))
- Adjust Display Brightness ([P.14-6](#))
- Set Backlight Time ([P.14-6](#))
- Set Backlight Dimmer Time ([P.14-6](#))
- Set Battery Saving Mode ([P.14-6](#))
- Set Text Type in Dialling Display ([P.14-6](#))
- Set Text Size in Dialling Display ([P.14-6](#))
- Set Text Color in Dialling Display ([P.14-6](#))
- Set Background Color in Dialling Display ([P.14-7](#))
- Set Operator Name ([P.14-7](#))


## Text Entry

Enter Kanji, Hiragana, Katakana (single-/double-byte), alphanumerics (single-/double-byte), symbols (single-/double-byte), pictograms, emoticons or Hangul.


Icon	Entry Mode	Icon	Entry Mode
	Kanji or Hiragana (☞P.2-8)		Symbols (single-byte) (☞P.2-9)
	Katakana (double-byte) (☞P.2-9)		Pict. (Common) (☞P.2-9)
	Katakana (single-byte) (☞P.2-9)		Pict. (All) (☞P.2-9)
	Alphanumerics (double-byte) (☞P.2-9)		Emoticons (☞P.2-9)
	Alphanumerics (single-byte) (☞P.2-9)		Hangul (☞P.2-11)
	Number (double-byte) (☞P.2-9)		Alphanumerics (double-byte, lower case) (☞P.2-9)
	Number (single-byte) (☞P.2-9)		Alphanumerics (single-byte, lower case) (☞P.2-9)
	Symbols (double-byte) (☞P.2-9)		



See "Changing Entry Mode" (☞P.2-8) about toggling Entry mode.
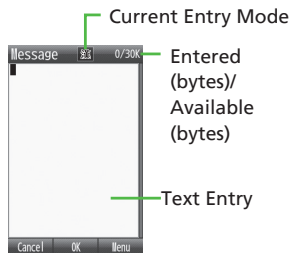
## Text Entry Window

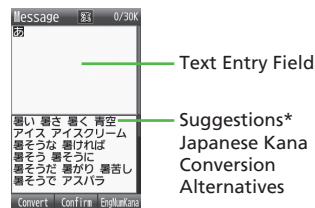

## Suggestions



\*Suggestions do not appear in Katakana, Alphanumeric (double-byte), or Number entry mode. If **Prediction** is set to **Off** in Kanji/Kana entry mode, press  (Convert) /  (EngNumKana) to convert text.

- Suggestions differ by season or time of day.
- Only numbers can be entered in Date & Time or Alarm time. Text entry window does not appear. Enter numbers directly in Text entry field.
- When Voice Call or Video Call arrives while entering text, simply answer the call. When the call ends, text entry window returns. When Alarm is activated, end Alarm to return to text entry window.






 


 


 


 

## Katakana/Alphabet/Number

Use the suggested characters shown in text entry window to input text, when entering single-byte characters.

### 1 In text entry window, →

→ カナ / か / Ab / Ab / 12 / 12

### 2 Enter katakana/alphabet/number


- After entering katakana, press  to add \* or °.
- After entering katakana, press  to toggle case.
- In Alphabet entry mode (, , , )  
enter a character then press  to toggle case.
- Press  to cancel a mistaken entry.
- If you over-toggle character, press  to toggle in reverse.
- To enter same character continuously, press  to move cursor to the right.
- In Kanji/Kana entry mode, enter characters and press  (EngNumKana) to toggle Katakana/Alphanumerics/Numbers entry mode.  
Example: Enter <img alt="k" data-bbox="85 640 105 660"/><img alt="o" data-bbox="110 640 130 660"/> and press  (EngNumKana), <img alt="k" data-bbox="85 670 105 690"/><img alt="o" data-bbox="110 670 130 690"/>, C, or 2227777 appears in Suggestions.


 



## Symbol

For available symbols, see "Symbols" (P.15-14).

 
 
 
### 1 In text entry window, →

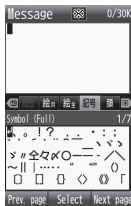! @ # ! ! @ #



- Press  →  /  to toggle text entry mode.
- Press  (Prev.page) /  (Next page) until symbol appears.

### 2 Select character






- Enter symbols continuously. To cancel Symbols entry, press .
- Once entered symbols remain as history and appear in **All History**.
- In Kanji/Kana entry mode, enter characters and press  (Convert) to convert to symbols.  
Example: Enter <img alt="tsu" data-bbox="375 750 395 770"/><img alt="n" data-bbox="400 750 420 770"/> and press  (Convert), . or ... appear in Suggestions.

## Pictograms/Emoticons




Combine symbols to enter emoticons as well as pictograms (P.15-15).

### 1 In text entry window, → Pictogram/Emoticon



- Press  →  /  to toggle text entry mode.
- Press  (Prev.page) /  (Next page) until the pictogram or emoticon appears.

### 2 Select pictogram/emoticon

- You can continuously enter pictograms and emoticons. To stop entering pictograms or emoticons, press .
- Selecting Pict. (Common)  is available only in Message window/Subject window. Select  to send message to non-SoftBank devices.
- Once entered pictograms remain as history and appear in **All History**.
- In Kanji/Kana entry mode, enter はーと, でんわ and convert to pictograms. Similarly, わーし) or えーん can be converted to emoticons.

## Line Break

To enter line break in *Hangul* entry mode, place cursor at the end of the text.

- 1 In text entry window, **[#][#][#]** (five times) → **[OK]** (OK)



- In *Symbol (Full)/Symbol (Half)* entry mode, highlight line break → **[Select]**.
- Place cursor at the end of the text → Press **[Enter]** / **[Enter]** to insert line breaks.

• Line breaks cannot be inserted in some entry windows (e.g., Subject window in Messaging).

## Entering Space

Entering space varies by Entry mode.

漢かな / カナ / カ



- 1 **[0][Space]** (five times)

- In 漢かな entry mode, press **[Confirm]** (Confirm) to enter space.

A b /Ab



- 1 **[0][Space]** (twice)

## Symbol (Full)/Symbol (Half)



- 1 **[Symbol (Full)/Symbol (Half)]** and highlight **[Line Break]** → **[Select]** (Select)

## Hangul



- 1 **[0][Space]** (three times)

- When Entry mode is *1 2 | 12 | Pictogram/Emoticon*, toggle the above Entry mode and enter.
- When cursor is at the end of a sentence, entering space with **[Enter]** is also available.
- Space cannot be inserted in some entry windows (e.g., Recipient window in Messaging).

## Hangul

### 1 In text entry window, → *Hangul*



- If confirmation appears, select **OK**.

### 2 Enter characters

- Press number keys to enter assigned character units that appear; combine several consonants and vowels.

Consonant Example (Key Assignment)	
ㄱ	[4] (once)
ㅋ	[4] (twice)
ㆁ	[4] (three times)
Vowel Example (Key Assignment)	
ㅏ	[0] [1] [2]
ㅑ	[0] [1] [2] [2]
ㅓ	[0] [2] [1]
ㅕ	[0] [2] [2] [1]
ㅗ	[0] [2] [3]
ㅛ	[0] [2] [2] [3]
ㅜ	[0] [2] [3] [1]
ㅠ	[0] [2] [3] [1] [2]
ㅡ	[0] [2] [3] [1] [2] [1]

## Using Quick Address List

Save mail addresses/URLs for easy entry.



### 1 In Mail address or URL entry window or field, → *Insert* → *Quick address list*



### 2 Select mail address/URL

## Deleting/Editing

### 1 Move cursor to character, and

- When a space is highlighted, the character before the cursor is deleted.
- To delete all characters after cursor, press  for 1 + seconds. If there are no characters after cursor, all characters are deleted.
- Press  for text entry window exit confirmation.

## Advanced

### *Advanced Settings* (P.2-16)

- Inserting Saved Information
- Jumping Cursor to Top/End
- Changing Text Entry Setting




### *Settings*

- Set Text Size in Editor (P.14-6)

## User's Dictionary (Japanese)

Save frequently used words/phrases of up to 40 characters; entries appear in Suggestions when Reading is entered.




### Editing User's Dictionary

- 1  → *Settings* → *Phone settings* → *User's dictionary* → *Japanese dictionary*/*English dictionary* → *New entry*
- 2 Select **Word** field → Enter word or sentence →  (OK)
- 3 Select **Reading** field → Enter reading →  (OK)





- 4  (Save)

### Saving to User's Dictionary

- 1 In text entry window,  → *Add to dictionary*
- 2 Highlight the first character →  (Start)
- 3 Highlight the last character →  (End)



- 4 *Japanese dictionary*/*English dictionary*
- 5 Select **Reading** field → Enter reading →  (OK)
- 6  (Save)

• If selecting the range which includes a line break, character strings before the line break are saved.

### Advanced

 **Advanced Settings** (☰ P.2-17)

- Deleting Entries from User's Dictionary

 **Settings**

- Save Entries to User's Dictionary (☰ P.14-3)
- Edit User's Dictionary Entries (☰ P.14-3)
- Delete User's Dictionary Entries (☰ P.14-3)

## Phone Book

Create up to 1000 entries. Number of savable items per entry varies by USIM Card. Insert USIM Card into compatible SoftBank handsets to access USIM Card entries.

For savable data for a Phone Book entry, see "Phone Book" (P.15-17).

### Note

#### • Protect Important Information

Phone Book entries may be lost/alterd if battery is removed or left uncharged for an extended period; accidents/malfunctions may also affect entries. Back up entries and store separately. SoftBank Mobile is not liable for damages from lost information.

- If different USIM Card with saved entries is inserted, copy saved USIM entries to handset, confirmation appears when handset is first powered on. Choose **Yes** to copy entries.

## Phone Book Window

Phone Book entries (P.2-13) are divided into three tabs. Select tabs to view desired information.



Each Phone Book tab contains items listed below:

Tab	Item	
	Phone number	
	E-mail address	
	Photo	Homepage
	Group	Company
	Birth day	Job title
	Blood type	Memo
	Address	
	Secret mode	
	Tone : Voice call	Vibe : Video call
	Tone : Video call	Vibe : Message
	Tone : Message	
	Vibe : Voice call	

## Creating New Entries

Save new Phone Book entries to Phone or USIM Card. Default: **Phone**.

Set save location to USIM Card as required (P.14-12). Create new entry or save from Call Log record.

## Saving Information as a New Entry

Create new entry; save name, reading, phone number, and mail address.

- For other items, see "Adding Information to Phone Book Entry" (P.2-17).

### 1 → (New entry)


- If Save setting (P.14-12) is set to **Always ask**, save location prompt appears. Select **Phone/USIM**.





New Entry Items

### 2 Select Last name field → Enter last name

### 3 Select First name field → Enter first name


- 4 Select Reading : Last name field → Edit reading as required
- 5 Select Reading : First name field → Edit reading as required
- 6 Select Phone number field → Enter number → Select phone type
- 7 Select E-mail address field → Enter mail address → Select address type
- 8  (Save)

- 0 through 9, #, \*, -, P (pause), and + (International Code) can be registered for entering in the Phone number field. Press  to toggle \*, - and P. Press  (1 + seconds) to enter +.
- If a Memory Card file is selected for incoming image or Ringtone, copy file to handset confirmation appears. For a copy protected file, move file to handset first confirmation appears. Choose **Yes** to complete setting.
- When using Samsung New PC Studio to synchronize Phone Book entries with a PC, secret entries are not synchronized to PC. If an entry is changed to a secret entry, it can no longer be synchronized and is deleted from the PC. Samsung New PC Studio is available for download from SAMSUNG Website (<http://jp.samsungmobile.com/pc/lineup/840download.html>).





## Saving Entries from Call Log Records

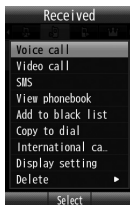Save numbers in Call Log records to new or existing entries.

- 1  /  / 
- 2 Highlight/select record → 



- 3 Add to Phonebook
- 4 Select saving method

- To Save as a New Entry  
New →  P.2-13 Creating New Entries 2)
- To Update Existing Entry  
Update → Search and select entry  P.2-14  
→ Save a number to Phone Book  P.2-13
- If save setting ( P.14-12) is set to **Always ask**, a message appears to prompt you to specify a saving location. Select **Phone/USIM**.


## Entry Search

Use **ABC/Group/Reading** to search entries.

- 1 



Phone Book List

- 2  → Settings → Search method
- 3 **ABC/Group/Reading**
  - Selected search method is saved.

## 4 Search entry

- **To Search Alphabetically**  
 [F1] to select letter → [F2] to select entry
- **To Search by Group**  
 Select a group → View entry from search result
- **To Search by Reading**  
 View entry from search result



Entry Details

- Search by entering a lead-off letter.
- If **Security** → **Secret mode** is set to **Hide**, secret entries do not appear. In Phone Book search window, press [F1] → **Unlock temporarily** → Enter Phone Password → [F2] (OK) to see secret entries.

## Calling from Phone Book

- 1 Search and select entry (☞P.2-14) → [F2] (Select)



- 2 Highlight phone number → [F2] (Call)

- 3 Place a call

- **To Place a Voice Call**  
*Voice call*
- **To Place a Video Call**  
*Video call*
- **To Place a Call before Editing Number**  
*Copy to dial* → Edit phone number → [F2] (Call) / [F1] → *Video call* / [F1] → *International call* (☞P.3-12 International Calling)
- **To Place an International Call**  
*international call* (☞P.3-12 International Calling)

## Deleting Phone Book Entries

### Deleting an Entry

- 1 [F1] → **Highlight entry** → [F1] → *Delete* → *Selected* → *Yes*

- Alternatively, in Entry details window, press [F1] → *Delete* → *Yes*.

### Deleting Multiple Entries

- 1 [F1] → [F1] → *Delete*
- 2 Delete entries

- **To Delete Multiple Entries**  
*Multiple* → Check entries → [F1] (Delete) → *Yes*
- **To Delete All Entries**  
*All* → Enter Phone Password → [F2] (OK) → *Yes*

## Advanced

## Advanced Settings (P.2-17)

- Adding Information to Phone Book Entry
- Sending Phone Book Entry
- Copying Entries between Phone & USIM
- Temporarily Canceling Phone Book Secret Mode
- Viewing USIM Card Service Number
- Editing Phone Book Entry
- Copying Item
- Saving Face Link to Phone Book Entry
- Adding Phone Book Entry to Favorites
- Saving Phone Book Entry
- Entering & Saving Phone Number

## Settings

- Activate/Cancel Simple Search (P.14-3)
- Set Text Size in Phone Book (P.14-6)
- Select Phone Book Save Location (P.14-12)
- Change Phone Book Preference (Phone/USIM) (P.14-12)
- Change Search Method (P.14-12)
- Set Font Size (P.14-12)
- Copy All Phone Book Entries & Save on Handset & USIM Card (P.14-12)

## Advanced Settings

## Standby

## Editing Slide Show

☐ → **Settings** → **Display settings** → **Wallpaper** → **Slide show**

## ■ To Replace Image

☑ → **Replace** → Select image

- With Memory Card inserted, select file in **Digital camera**.

## ■ To Change Image Order

Highlight image → ☑ → **Change order** → ☒ to move image to desired position → ☑ (Save)

## ■ To Delete Image

Highlight image → ☑ → **Delete** → **Yes**

## Text Entry

## Entering Date/Time

In text entry window, select Kanji/Kana entry mode → Enter Hiragana with Keypad → ☑ (EngNumKana) → Highlight entry in Suggestions → ☑ (Select)

## Toggling between Suggested Symbols/Pictograms/Emoticons

In text entry window, while Suggestions appear, press ☑ / ☑

## Specifying Range to Copy/Cut

In text entry window, ☑ → **Edit** → **Copy** or **Cut** → Highlight the first character of the range to cut/copy → ☑ (Start) → Highlight the last character to specify the range → ☑ (End)

- To copy or cut all text in text entry window, press ☑ (All).
- Copied or cut text remains even after powering off.

## Pasting Copied/Cut Text

In text entry window, move cursor to the position to paste → ☑ → **Edit** → **Paste**

## Undoing Text Entry

In text entry window, ☑ → **Edit** → **Undo**

- In Kanji/Kana entry mode and Alphabet(single-bytes) entry mode, undo operations immediately after performing text entry or conversion. In other entry modes, undoing **Cut**, **Paste**, or **Delete** is available.

## Inserting Saved Information

In text entry window, ☑ → **Insert**

## ■ To Insert Text on Notepad

**Notepad** → Select item

## ■ To Insert Barcode

**Bar code reader** → Scan barcode (P.10-8)

## ■ To Insert Information in Phone Book

**Phonebook** → Search and select entry (P.2-14) → Select item

## ■ To Insert Account Details

**Account details** → Select item



## ■ To Insert Signature


*Signature*

## ■ To Insert a Part of Mail Address

*Quick address list* (☞ P.2-11)

- For some text entry windows, inserting items above may not be available.

## Jumping Cursor to Top/End

In text entry window,  → *Cursor position* → Select item

## Changing Text Entry Setting

In text entry window,  → *Settings*

## ■ To Activate/Cancel Prediction

*Prediction* → *On* or *Off*

## ■ To Activate/Cancel Learning Function

*Learning* → *On* or *Off*


## ■ To Activate/Cancel Auto Capitalization

*Auto capitalization* → *On* or *Off*

## ■ To Activate/Cancel Flexible Search

*Flexible search* → *On* or *Off*

## ■ To Reset Learning Function

*Reset learning* → Enter Phone Password →  (OK) → *Yes*

## ■ To Clear History for Pictograms/Emoticons

*Clear history* → *Yes*

## ■ To Change Font Size


*Font size* → *Large/Standard/Small*

## ■ To Change Cursor Speed

 
*Auto cursor* → *Off/Slow/Normal/Fast/Very fast*

## User's Dictionary

### Deleting Entries from User's Dictionary

 → *Settings* → *Phone settings* → *User's dictionary* → *Japanese dictionary/English dictionary*



#### ■ To Delete an Entry

Highlight item →  → *Delete* → *Selected* → *Yes*

#### ■ To Delete Multiple Entries

 → *Delete* → *Multiple* → Check items →  (Delete) → *Yes*

#### ■ To Delete All Entries



 → *Delete* → *All* → Enter Phone Password →  (OK) → *Yes*

## Phone Book



### Adding Information to Phone Book Entry

 →  (New entry)




Or

 → Search entry (☞ P.2-14) →  (Edit)



#### ■ To Save Group

 → Select Group field → Select item →  (Save)



 
#### ■ To Save Birthday

 → Select Birthday field → Enter birthday →  (OK) →  (Save)



#### ■ To Save Blood Type

 → Select Blood type field → Select item →  (Save)



#### ■ To Save Address

 → Select Address field → Select Type field → Private/Business/Others → Select Zip code field → Enter zip code → Select Country field → Enter country name → Select Province field → Enter province name → Select City field → Enter city name → Select Street field → Enter street name → Select Additional information field → Enter additional information →  (Done) →  (Save)

#### ■ To Save URL

 → Select Homepage field → Enter URL → Select type →  (Save)

#### ■ To Save Company

 → Select Company field → Enter company →  (Save)

### ■ To Save Job Title

→ Select Job title field → Enter job title  
→ (Save)

### ■ To Save Memo

→ Select Memo field → Enter text → (Save)

### ■ To Set Secret Mode

→ Select Secret mode field *On* or *Off* →  
 (Save)

- Items other than Group are unavailable in USIM Card Phone Book.

### Setting Incoming Image to Phone Book Entry

→ (New entry) → → Select Photo field  
Or

→ Search entry (⊕P.2-14) → (Edit) →   
→ Select Photo field

### ■ To Set from Saved Still Image

*Pictures* → Select file → (Save)

- With Memory Card inserted, select a file from Pictures or Digital Camera folder.

### ■ To Set Character

*Character icon* → Select item → (Save)

### ■ To Set by Capturing Still Image

*Take photo* → Capture still image → (Save)

### ■ To Cancel Set Incoming Image

*Off* → (Save)

- If a Memory Card file is set as incoming image, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose *Yes* to complete setting.

### Setting Ringtone to Phone Book Entry

→ (New entry) → → Select Ringtone settings field

Or

→ Search entry (⊕P.2-14) → (Edit) →   
→ Select Ringtone settings field

### ■ To Set Ringtone for Voice Call/Video Call

*Tone: Voice call* or *Tone: Video call* → Select file location → Select file → (Save)

### ■ To Set Ringtone for Message

*Tone: Message* → *Ringtone* → Select a file location → Select a file → *Duration* → Enter duration → (OK) → (Done)

- To reset setting, select file → (Reset).
- While selecting a file, press (Play) to playback.
- If a Memory Card file is set as Ringtone, copy file to handset first confirmation appears. If file is copy protected, move file to handset first confirmation appears. Choose *Yes* to complete setting.

### Setting Vibration to Phone Book Entry

→ (New entry) → → Select Vibration settings field

Or

→ Search entry (⊕P.2-14) → (Edit) →   
→ Select Vibration settings field  
→ Select Vibration pattern → (Save)

- While selecting a Vibration pattern, press (Play) to check the pattern.

### Creating Message from Phone Book Entry

→ Search and select entry (⊕P.2-14)

### ■ To Create Message from Phone Book

Highlight phone number → () → *S! Mail* or *SMS* → (⊕P.4-4 S! Mail , P.4-5 SMS )

### ■ To Create Message from Mail Address

Highlight mail address → () → (⊕P.4-4 S! Mail )

### Opening Website from Phone Book Entry

→ Search and select entry with homepage saved (⊕P.2-14) → → Highlight homepage →  
 (Access) → *Yes*

### Sending Phone Book Entry

→ → *Send*

- In Entry details window, press → *Send*.

### ■ To Send via Message

*Via message* → Check entries → (Send) → (⊕P.4-4 S! Mail )

### ■ To Send via Infrared

*Via infrared* → Check entries → (Send) → (⊕P.13-3)

### Copying Entries between Phone & USIM

#### ■ To Copy an Entry

→ Highlight entry → → *Copy to USIM* or *Copy to phone* → *Selected* → *Yes*

- In Entry details window, press → *Copy to USIM* or *Copy to phone* → *Yes*.

### ■ To Copy Multiple Entries

[Q] → [Y] → *Copy to USIM/Copy to phone* → *Multiple* → Check entries → [E] (Copy) → *Yes*

### ■ To Copy All Entries from Phone to USIM/USIM to Phone

[Q] → [Y] → *Copy to USIM/Copy to phone* → *All* → *Yes*

### Temporarily Canceling Phone Book Secret Mode

[Q] → [Y] → *Unlock temporarily* → Enter Phone Password → [OK] (OK)

- If *Security* → *Secret mode* is set to *Hide*, numbers set as *Secret mode On* appear temporarily in Phone Book.

### Viewing USIM Card Service Number

[Q] → [Y] → *Service number*

- The item *Service number* may not appear for some USIM Cards.

### Specifying Saving Destination for Phone Book Entries

[Q] → [Y] → *Settings* → *Save to* → *Phone/USIM/Always Ask*

### Toggleing Phone Book View between USIM & Phone

[Q] → [Y] → *Settings* → *Change view* → *Phone/USIM/Phone & USIM*

- Change remains even if handset is powered off.

### Editing Phone Book Entry

[Q] → Search and select entry (⊕P.2-14) → [E] (Edit) → (⊕P.2-13 Creating New Entries ②)

- To edit secret Phone Book entry, set *Secret mode* to *Show*.  
Or  
Press [Y] → *Unlock temporarily* → Enter Phone Password → [OK] (OK).

### Copying Item

[Q] → Search and select entry (⊕P.2-14) → Highlight item → [Y] → *Copy item*

### Saving Face Link to Phone Book Entry

[Q] → Search and select entry (⊕P.2-14) → [Y] → *Face link*

#### ■ To Save Face Link from a Saved Still Image

*Face registration* → Select from *Image 1* to *Image 5* → *Pictures* → Select file → [OK] (Register)

#### ■ To Save Face Link by Capturing a Still Image

*Face registration* → Select from *Image 1* to *Image 5* → *Take photo* → Capture still image

#### ■ To Remove Face Link

*This person's photo*

- To Remove a Face Link  
Highlight Face Link → [Y] → *Release* → *Selected* → *Yes*
- To Remove Multiple Face Links  
[Y] → *Release* → *Multiple* → Check Face Link → [E] (Remove) → *Yes*

- To Remove All Face Links

[Y] → *Release* → *All* → Enter Phone Password → [OK] (OK) → *Yes*

### Adding Phone Book Entry to Favorites

[Q] → Search and select entry (⊕P.2-14) → [Y] → *Add to Favorites* → Select number/*No setting* → Select address/*No setting* → [E] (Save)

- Alternatively, press [Add] → [Add] → Select entry to add.
- Add entry to Favorites and in Standby, press Softkey to call or message.

### Saving Phone Book Entry

[Q] → Search and select entry (⊕P.2-14) → [Y] → *Save to Data Folder* → *Phone/Memory card* → *Yes*

- To save a file to *Memory card*, insert Memory Card.

### Entering & Saving Phone Number

Enter phone number → [Y] → *Add to Phonebook*

#### ■ To Save New Entry

*New* → (⊕P.2-13 Creating New Entries ②)

#### ■ To Update Entry

*Update* → Search and select entry (⊕P.2-14) → Enter each item (⊕P.2-13)

- Only name, reading, mail address, and group can be saved to USIM Card.

## Adding Groups

☐ → **Phone** → **Group setting** → ☑ (Add)

### ■ To Set Group Names

Select Group name field → Enter group name →

☑ (Save)

### ■ To Set Group Icon

Select Group icon field → Select icon → ☑

(Save)

### ■ To Set Incoming Image

Select Group photo field → **Pictures/Character icon/Take photo/Off** → Set incoming image →

☑ (Save)

- If **Pictures** is selected, select file.
- If **Character icon** is selected, select icon.
- If **Take photo** is selected, capture a still image.
- If **Off** is selected, incoming image will not be set.

### ■ To Set Ringtone

• To Set Ringtone for Voice Call or Video Call  
**Tone: Voice call/Tone: Video call** → Select a file location → Select a file → ☑ (Save)

• To Set Ringtone for Message  
**Tone: Message** → **Ringtone** → Select a file location → Select a file → **Duration** → Enter duration → ☐ (OK) → ☑ (Done) → ☑ (Save)

### ■ To Set Vibration

Select Vibe field → Select Vibration pattern → ☑ (Save)

- For USIM Card, only group name and group icon can be set.
- Images and Ringtones set for individual entries take priority over Group setting.

## Changing Group Settings

☐ → **Phone** → **Group setting** → Highlight group → ☐ (Edit) → Edit each item the same way as items are added (📍P.2-20).