

Handset Customization

14

Phone Settings	14-2
Handset Settings	14-2
Sounds & Vibration & External Light Settings	14-4
Sounds & Vibration	14-4
External Light Settings.....	14-5
Display & Font Settings	14-5
Manner Mode Settings	14-7
Call Settings	14-7
Phone Book Settings	14-12
Messaging Settings	14-12
Custom Mail Address	14-12
S! Mail & SMS.....	14-12
S! Mail.....	14-15
SMS.....	14-16
Internet Settings	14-16
Yahoo! Keitai.....	14-16
PC Site Browser	14-17
Digital TV Settings	14-18
TV Alarm.....	14-18
Data Broadcast	14-19
Display & Sound.....	14-19
Recording	14-20
Incoming Calls & Alarms	14-20
Auto Power Off	14-20
Camera Settings	14-20
Photo.....	14-20
Video.....	14-21















Media Player Settings	14-22
Music.....	14-22
Movie	14-22
Entertainment Settings	14-23
S! Information Channel.....	14-23
S! Applications.....	14-23
Security Settings	14-24
Memory Settings	14-25
Connectivity Settings	14-26
Infrared.....	14-26
USB	14-26
Network.....	14-26

Phone Settings

Handset Settings

Start Here → *Settings* → *Phone settings*


Change User Interface Language	Default 日本語	言語選択 → Select an item
Set Time Zone Updating	Default Prompt first	<i>Date & Time</i> → <i>Set date & time</i> → <i>Time zone updating</i> → Select an item → (Save)
Change Home Zone Time	Default GMT+09:00	<i>Date & Time</i> → <i>Set date & time</i> → <i>Home zone</i> → to select city → <input type="checkbox"/> (Select) → (Save) • Select the zone closest to your locality.
Activate/Cancel Daylight Savings Time		<i>Date & Time</i> → <i>Set date & time</i> → <i>Home zone</i> → to select city → Highlight Daylight saving → (Mark) → <input type="checkbox"/> (Select) → (Save)
Set Time		<i>Date & Time</i> → <i>Set date & time</i> → In Time field, enter time → (Save) • Some functions are disabled when time is not set.
Set Date		<i>Date & Time</i> → <i>Set date & time</i> → In Date field, enter date → (Save) • Some functions are disabled until date is set.
Change Time Format	Default 24 H	<i>Date & Time</i> → <i>Set date & time</i> → <i>Time format</i> → Select an item → (Save)
Change Date Format	Default YYYY/MM/DD	<i>Date & Time</i> → <i>Set date & time</i> → <i>Date format</i> → Select an item → (Save)
Set Time Correction	Default On, Correction timing: Via S! Information Channel	<i>Date & Time</i> → <i>Time correction</i> → <i>Auto correction</i> → <i>On</i> or <i>Off</i> • To specify when to correct the time, select <i>Correction timing</i> → Check an item → (Save). • Selecting <i>Manual correction</i> → <i>Yes</i> immediately corrects the time.
Set Earphone Settings	Default Earphone	<i>Earphone settings</i> → <i>Earphone/Earphone + Speaker</i>
Activate/Cancel Prediction	Default On	<i>Text input settings</i> → <i>Prediction</i> → <i>On</i> or <i>Off</i>
Activate/Cancel Learning	Default On	<i>Text input settings</i> → <i>Learning</i> → <i>On</i> or <i>Off</i>
Activate/Cancel Auto Capitalization	Default On	<i>Text input settings</i> → <i>Auto capitalization</i> → <i>On</i> or <i>Off</i>
Activate/Cancel Flexible Search	Default On	<i>Text input settings</i> → <i>Flexible search</i> → <i>On</i> or <i>Off</i>
Reset Learning Function		<i>Text input settings</i> → <i>Reset learning</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>








 

Clear History for Pictograms/Emoticons		<i>Text input settings</i> → <i>Clear history</i> → <i>Yes</i>
Change Font Size	Default Standard	<i>Text input settings</i> → <i>Font size</i> → <i>Large/Standard/Small</i>
Change Cursor Speed	Default Off	<i>Text input settings</i> → <i>Auto cursor</i> → <i>Off/Slow/Normal/Fast/Very fast</i>
Save Entries to User's Dictionary		<i>User's dictionary</i> → <i>Japanese dictionary/English dictionary</i> → <i>New entry</i> → Select Word field → Enter word or sentence → Select Reading field → Enter reading →  (Save)
Edit User's Dictionary Entries		<i>User's dictionary</i> → <i>Japanese dictionary/English dictionary</i> → Select entry → Edit word and reading →  (Save)
Delete User's Dictionary Entries		<p><i>User's dictionary</i> → <i>Japanese dictionary/English dictionary</i> → Highlight word →  → <i>Delete</i> → <i>Selected</i> → <i>Yes</i></p> <ul style="list-style-type: none"> To delete several words, select <i>Japanese dictionary/English dictionary</i> →  → <i>Delete</i> → <i>Multiple</i> → Check words →  (Delete) → <i>Yes</i>. To delete all the words, select <i>Japanese dictionary/English dictionary</i> →  → <i>Delete</i> → <i>All</i> → Enter Phone Password →  (OK) → <i>Yes</i>.
Activate/Cancel Simple Search	Default Off	<p><i>Simple search</i> → <i>On</i> or <i>Off</i></p> <ul style="list-style-type: none"> On: In Standby, press keys assigned to characters used in Phone Book entry Readings.
Set Side Keys to Activate Reject Call/Mute Ringer	Default Silence	<p><i>Side key</i> → Select item</p> <ul style="list-style-type: none"> Set settings for pressing  /  for 1 + seconds during a call.
Set Any Key Answer	Default Off	<p><i>Any key answer</i> → <i>On</i> or <i>Off</i></p> <ul style="list-style-type: none"> On: Press any keys except , , , ,  and  to answer a call.
Answer Incoming Call by Opening Handset	Default Off	<p><i>Active folder</i> → <i>On</i> or <i>Off</i></p> <ul style="list-style-type: none"> On: Open the handset to answer a call.
Set Keypad Light Illumination Mode	Default Normal mode	<p><i>Keypad light</i> → Select item</p> <ul style="list-style-type: none"> Normal mode: Keypad light illuminates for Backlight time duration. Saving mode: Keypad light turns off for set duration. If Saving mode is set, in Starting time field, enter start time → In Ending time field, enter end time →  (Save).

Sounds & Vibration & External Light Settings

Sounds & Vibration

Start Here

 → *Settings* → *Sound settings*

<p>Adjust Volume</p> <p>Default Voice call/Video call/Message/Missed call notification/Delivery report/Phone sounds: Level 3, S! Quick News: Off</p>	<p>Volume → Select item →  to adjust image</p> <ul style="list-style-type: none"> • If Ringtone reducer is On (⊖P:14-11), Ringtone volume is reduced to Level 1 for the first four seconds, regardless of Ringtone volume set for Voice/Video Call. • Use  /  to adjust Ringtone volume while handset rings. • To mute Voice/Video Call or Message tones, set Volume 0 and Vibration to Off.  appears.
<p>Set Ringtone for Voice Call/Video Call</p> <p>Default Voice call/Video call : Samsung Tune</p>	<p>Ringtone → Voice call, or Video call → Select save location for a file → Select a file</p> <ul style="list-style-type: none"> • Press  (Play) to playback.
<p>Set Ringtone to Something Other than Voice Call/Video Call</p> <p>Default Message: Samsung Tune, Missed call notification/S! Quick News/Delivery report: BusinessTone</p>	<p>Ringtone → Select a Ringtone field → Ringtone → Select save location for a file → Select a file</p> <ul style="list-style-type: none"> • Press  (Play) to playback.
<p>Set Ringtone Duration to Something Other than Voice Call/Video Call</p> <p>Default 5 Seconds</p>	<p>Ringtone → Select an item → Duration → Enter duration →  (Select)</p>
<p>Search Machi-Uta™</p>	<p>Machi-Uta → Music search → Follow onscreen instructions</p>
<p>Set Machi-Uta™</p>	<p>Machi-Uta → Settings → Follow onscreen instructions</p>
<p>Register/Cancel Machi-Uta™</p>	<p>Machi-Uta → Register/Cancel → Follow onscreen instructions</p>
<p>View Instruction for Machi-Uta™</p>	<p>Machi-Uta → What's Machi-Uta</p>
<p>Set Vibration</p> <p>Default Off</p>	<p>Vibration → Select an item → Select a pattern</p> <ul style="list-style-type: none"> • Press  (Play) to view a pattern.
<p>Set Phone Sounds</p> <p>Default Off</p>	<p>Phone sounds → Keypad tones → Select item</p>
<p>Set System Sounds</p> <p>Default Popup box alerts/Call end tone/Alerts on call: On, Minute minder/Call connect tone/Power on/Power off/Open/Close folder: Off</p>	<p>Phone sounds → System sounds → Check items →  (Save)</p> <ul style="list-style-type: none"> • Available items vary depending on mode.

• Open **Sound settings** to change sounds for Normal mode. Settings cannot be changed for other modes.


External Light Settings

Start Here → *Settings* → *Sound settings* → *External light*

Set External Light Color for Incoming Transmissions

Default Voice call/Video call/Missed call notification: Pattern4, Message/Delivery report: Pattern1, S! Quick News: Pattern3, Alarm: Pattern2

Incoming → Select an item → Select a color

- When selecting **Off**, Notification light does not blink.
- Press  (Check) to blink a light.

Set External Light Color for Notification

Default Missed call/Missed call notification: Pattern 4, Message/Answering Machine: Pattern 3, Missed alarm: Pattern 2, Delivery report: Pattern1


Notification → Select an item → Select a color

- When selecting **Off**, Notification light does not blink.
- Press  (Check) to view color.

Set External Light Color When Handset is Closed

Default Pattern 2

Close folder → Select an item

- When selecting **Off**, Notification light does not blink.
- Press  (Check) to view color.

Display & Font Settings

Start Here → *Settings* → *Display settings*

Change Wallpaper

Default Macaroon

Wallpaper → ( P.2-5 Wallpaper )

Set/Cancel Smart Wallpaper

Default On

Smart wallpaper → **On/Off** → **On** or **Off**

Change Wallpaper for Smart Wallpaper

Default St.Valentine's day: Valentine's day, Girl's day: Girl's day, White day: White day, Mother's day: Mother's day, Father's day: Father's day, Halloween: Halloween, Christmas: Christmas

Smart wallpaper → **Wallpapers** → Select Wallpaper

Change Main Menu Settings





Default Neon Block

Main menu style → Select an item → Select a color →  (Select)

Set the Color Theme for Menu

Default Blue & Black

Color theme → Select an item

- To use customized color theme, select **Color theme** → Highlight **Customize** →  (Edit) → Highlight background color →  (Next) → Highlight title color →  (Next) → Highlight focus color →  (Save)

Change Clock/Calendar	Default Digital clock	<p>Clock/Calendar → Select an item</p> <ul style="list-style-type: none"> If Digital clock is selected, in Style field, select style → In Position field, select position → <input type="checkbox"/> (Save). If Dual clock is selected, in First clock field, select time zone → In Second clock field, select time zone → <input type="checkbox"/> (Save). If Calendar (1 month) is selected, select Large/Small.
Set Mini Clock	Default Time only	Mini clock → Select an item
Set Font Type	Default Regular	Font → Font weight → Select an item
Set Text Size in List Font	Default Standard	Font → Font size → List font → Select item
Set Text Size in Yahoo! Keitai Pages	Default Standard	Font → Font size → Yahoo! Keitai → Select an item
Set Text Size in PC Site Browser	Default Standard	Font → Font size → PC site browser → Select an item
Set Text Size in Phone Book	Default Standard	Font → Font size → Phonebook → Select item
Set Text Size in Editor	Default Standard	Font → Font size → Editor → Select item
Change Message Text Font Size	Default Standard	Font → Font size → Messages → Select an item
Change Text Scroll Speed for Menu List	Default Normal	Text scroll speed → Fast/Normal/Slow
Adjust Display Brightness	Default Level 3	Backlight → Brightness → <input type="checkbox"/> to adjust brightness → <input type="checkbox"/> (OK)
Set Backlight Time	Default 15 seconds	<p>Backlight → Duration → Backlight on → Select an item</p> <ul style="list-style-type: none"> When Backlight time is set to Off, Display becomes dim. Display becomes dimmer when Backlight time elapses.
Set Backlight Dimmer Time	Default 15 seconds	<p>Backlight → Duration → Backlight dim → Select an item</p> <ul style="list-style-type: none"> When Backlight time elapses, Display turns off.
Set Battery Saving Mode	Default On	Battery saving mode → On or Off
Set Text Type in Dialling Display	Default Normal	Dialling display → Font type → Select an item
Set Text Size in Dialling Display	Default Standard	Dialling display → Font size → Select an item
Set Text Color in Dialling Display	Default Basic	<p>Dialling display → Font color → Select an item</p> <ul style="list-style-type: none"> If Monochrome is selected in Color field, select color.



Set Background Color in Dialling Display	<i>Dialling display</i> → <i>Background color</i> → Select an item
Set Operator Name	Default Off <i>Operator name</i> → <i>On</i> or <i>Off</i>




 
 
Manner Mode Settings









Switch Manner Mode	<input type="checkbox"/> → <i>Settings</i> → <i>Manner mode settings</i> → Select an item <ul style="list-style-type: none"> To edit each setting in Manner mode, highlight mode →  (Edit) → Set each item.
--------------------	--

Call Settings







Start Here → *Settings* → *Call settings*

Forward All Calls to Voicemail (Handset Does Not Ring)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail on</i> → <i>Always (0 sec.)</i>
Forward Unanswered Calls to Voicemail (Specify Ring Time)	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Voice mail on</i> → <i>No reply (5 - 30 sec.)</i>
Activate & Set Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Call forwarding on</i> → Select a call type → Select a setting → Select an item → Set number to forward
Cancel Voicemail/Call Forwarding	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Deactivate All</i> → <i>Yes</i>
Confirm Current Voicemail/Call Forwarding Settings	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Get status</i>
Listen to Voicemail Message	<i>Optional services</i> → <i>Voice mail/Call forwarding</i> → <i>Call voice mail</i> →  or <input type="checkbox"/> ()
Activate/Cancel Call Waiting	<i>Optional services</i> → <i>Call waiting</i> → <i>On</i> or <i>Off</i>
Confirm Current Call Waiting Settings	<i>Optional services</i> → <i>Call waiting</i> → <i>Get status</i>
Activate/Cancel Outgoing Call Barring	<i>Optional services</i> → <i>Call barring</i> → <i>Outgoing call</i> → Select an item → <i>On</i> or <i>Off</i> → Enter Network Password → <input type="checkbox"/> (OK)


Activate/Cancel Incoming Call Barring		<i>Optional services</i> → <i>Call barring</i> → <i>Incoming call</i> → Select an item → On or Off → Enter Network Password →  (OK)
Cancel All Call Barring		<i>Optional services</i> → <i>Call barring</i> → <i>Cancel all barring</i> → Enter Network Password →  (OK) → Yes
Confirm Current Call Barring Settings		<i>Optional services</i> → <i>Call barring</i> → <i>Get status</i> → Select an item
Set Missed Call Notification		<i>Optional services</i> → <i>Missed call notification</i> →  or  ()
Check Call Time/Cost		<i>Call time & cost</i> → <i>All calls</i> • To reset call time/cost, press  (Reset) → Enter PIN2 →  (OK).
Check Last Call Time/Cost		<i>Call time & cost</i> → <i>Last call</i> • To reset last call time/cost, press  (Reset).
Check Data Counter		<i>Call time & cost</i> → <i>Data counter</i> • To reset sent/received data counter, press  (Reset).
Show/Hide Call Time/Cost after Calls	Default Off	<i>Call time & cost</i> → <i>Show charge after call</i> → On or Off • This function may not be available.
Change Call Cost Currency		<i>Call time & cost</i> → <i>Set currency</i> → Enter PIN2 →  (OK) → In Price field, enter rate in yen → In Currency field, enter currency unit →  (Save)
Set Call Cost Limit		<i>Call time & cost</i> → <i>Set max cost limit</i> →  (Edit) → Enter PIN2 →  (OK) → In New upper limit (YEN) field, enter upper limit →  (Save) • After reaching the Call Cost Limit, only emergency calls can be placed; messaging, web connections (fee-based operations) are disabled. • When <i>Show charge after call</i> is not available, this function is also unavailable.
Cancel Call Cost Limit		<i>Call time & cost</i> → <i>Set max cost limit</i> →  (Reset) → Enter PIN2 →  (OK)
Activate/Cancel Answering Machine	Default Off	<i>Answering machine</i> → <i>On/Off</i> → On or Off
Set Answering Machine Response Time	Default 18seconds	<i>Answering machine</i> → <i>Ringling duration</i> → Select an item • If Other is selected, enter time.
Play Answering Machine Records		<i>Answering machine</i> → <i>Play answering machine</i> → Select a record • To delete record, in list, highlight record →  (Delete) → Yes . • Alternatively, press  → All → Select a record →  () → Message.

Set Answering Machine Response Language	Default 日本語	<i>Answering machine</i> → <i>Sound language</i> → Select an item • Press  (Play) to play message.
Set Preset Picture as Outgoing Image		<i>Video call</i> → <i>Alternative picture</i> → <i>Preset picture</i> →  (Set)
Set Alternative Picture as Outgoing Image		<i>Video call</i> → <i>Alternative picture</i> → <i>Pictures</i> → Select a file →  (Set) • When Memory Card is inserted, Digital camera is selectable.
Adjust Incoming Video Quality	Default Standard	<i>Video call</i> → <i>Incoming video quality</i> → Select an item
Adjust Outgoing Video Quality	Default Standard	<i>Video call</i> → <i>Outgoing video quality</i> → Select an item
Set Preset Picture to Appear When Video Call is on Hold		<i>Video call</i> → <i>Hold settings</i> → <i>Hold during call</i> → <i>Preset picture</i> →  (Set)
Set Hold Setting		<i>Video call</i> → <i>Hold settings</i> → <i>Hold during call</i> → <i>Pictures</i> → Select a file →  (Set) • When Memory Card is inserted, Digital camera is selectable.
Set Preset Picture to Appear When Video Call is on Hold without Answering		<i>Video call</i> → <i>Hold settings</i> → <i>Hold answer</i> → <i>Preset picture</i> →  (Set)
Set Hold Answer Setting		<i>Video call</i> → <i>Hold settings</i> → <i>Hold answer</i> → <i>Pictures</i> → Select a file →  (Set) • When Memory Card is inserted, Digital camera is selectable.
Activate/Cancel Mute for Video Call	Default Off	<i>Video call</i> → <i>Mute my voice</i> → <i>On</i> or <i>Off</i> • If On , press  (Unmute) to temporarily send voice.
Activate/Cancel Speakerphone during Video Call	Default On	<i>Video call</i> → <i>Speaker</i> → <i>On</i> or <i>Off</i>
Set Backlight	Default On	<i>Video call</i> → <i>Backlight</i> → <i>On</i> or <i>Off</i> • When Off is set, Display becomes dim.
Set Handset Response When Video Call Cannot be Connected	Default Always ask	<i>Video call</i> → <i>Retry with</i> → Select an item • None : Calls are disconnected with no notification. • When a Video Call cannot be connected, prompt appears to retry with the selected setting.
Answer Video Call from Specified Party Automatically	Default Off	<i>Video call</i> → <i>Auto answer</i> → <i>On/Off</i> → <i>On</i> or <i>Off</i> • When a Video Call arrives from the specified party, a tone sounds and the call is automatically answered.

Create Auto Answer List		<p>Video call → Auto answer → Auto answer list → <input type="checkbox"/> (Add) → Phonebook/Call log/ Direct input → Enter Phone Password → <input type="checkbox"/> (OK) → Add an entry</p> <ul style="list-style-type: none"> To delete the selected party, after selecting Auto answer list, highlight party → <input type="checkbox"/> (Delete) → Selected → Yes. To delete multiple parties, select Auto answer list → <input type="checkbox"/> (Delete) → Multiple → Check parties → <input type="checkbox"/> (Delete) → Yes. To delete all parties, select Auto answer list → <input type="checkbox"/> (Delete) → All → Yes → Enter Phone Password → <input type="checkbox"/> (OK).
Show/Hide Your Own Image for Video Calls	Default On	Video call → Show my image → On or Off
Accept/Reject Calls from Specified Phone Numbers	Default Off	<p>Reject incoming calls → Set reject number → On/Off → On or Off</p> <ul style="list-style-type: none"> When a call on the Black list is received, the caller hears a busy tone and call is not connected. Missed call appears in Standby. Select the message to check missed call.
Create/Edit Black List		<p>Reject incoming calls → Set reject number → Black list → <input type="checkbox"/> (Add) → Select an item → Add an entry</p> <ul style="list-style-type: none"> To delete a phone number, select Black list → Highlight party → <input type="checkbox"/> → Delete → Selected → Yes. To delete all phone numbers, select Black list → <input type="checkbox"/> → Delete → All → Yes → Enter Phone Password → <input type="checkbox"/> (OK).
Accept/Reject Calls from Unknown Numbers	Default Off	Reject incoming calls → Unknown → On or Off
Accept/Reject Calls When Number is Withheld	Default Off	Reject incoming calls → Withheld → On or Off
Accept/Reject Calls from Payphones	Default Off	Reject incoming calls → Payphone → On or Off
Accept/Reject Calls When Number is Unavailable	Default Off	Reject incoming calls → Unavailable → On or Off
Save International Code	Default 0046010	International call → International code → Enter Phone Password → <input type="checkbox"/> (OK) → Enter an international code
Add/Change/Delete Country Number		<p>International call → Country number → Add, change, or delete item</p> <ul style="list-style-type: none"> To add, press <input type="checkbox"/> (Add) → Country name → Enter country name → Country code → Enter country code → <input type="checkbox"/> (Save). To change, select an item from country code → Country name → Enter country name → Country code → Enter country code → <input type="checkbox"/> (Save). To delete, highlight item → <input type="checkbox"/> (Delete) → Yes.

Select Network to Access	Default Automatic	<i>International call</i> → <i>Select operator</i> → <i>Select Automatic/Manual</i> → Select an item • When you set Manual , select a network.
Select Preferred Network from List		<i>International call</i> → <i>Select operator</i> → <i>Set priority</i> →  → <i>Insert</i> → <i>Network list</i> → Select a network
Add a New Preferred Network		<i>International call</i> → <i>Select operator</i> → <i>Set priority</i> →  → <i>Insert</i> → <i>New Network</i> → In Country code field, enter country code → In Network code field, enter Network code → In Network name field, enter Network name →  (Save)
Set Roaming Dial Assistant	Default On	<i>International call</i> → <i>Roaming dial assistant</i> → On or Off • If Roaming dial assistant is set to On , popup appears while dialing. If you add international number before phone number, popup does not appear.
Activate/Cancel Offline Mode	Default Off	<i>Offline</i> → On or Off
Show/Hide Your Own Number		<i>Show my number</i> → On or Off • To check current status, select Get status .
Set Handset to Automatically Redial Busy Numbers	Default Off	<i>Auto redial</i> → On or Off • On : Handset automatically disconnects call and redials busy numbers. Auto redial dials up to ten times until  (Cancel) /  is pressed. • Auto redial setting takes priority when Video Call retry setting is selected. • If called party uses Call Forwarding or Voicemail, call is forwarded accordingly.
Activate/Cancel Automatic Ringer Reduction	Default On	<i>Ringtone reducer</i> → On or Off • When Ringtone volume level is high, the volume level is reduced to Level 1 for the first four seconds, then returns to the set level.
Enable/Disable Calling via Stereo Earphone Microphone	Default Off	<i>Earphone call</i> → On/Off → On or Off → <i>Call number</i> → Select an item → Add a phone number • On : Press Stereo Earphone Microphone (optional) switch for 1 + seconds to call specified number. To change specified number, repeat setup operation, to save the new number.
Adjust Earpiece Volume	Default Level 3	<i>Hearing volume</i> →  to adjust volume


Phone Book Settings

Start Here  → *Phone* → *Settings*

Select Phone Book Save Location Default Phone	<i>Save to</i> → Select an item <ul style="list-style-type: none">• <i>Always ask</i>: A confirmation appears each time a new entry is saved.
Change Phone Book Preference (Phone/USIM) Default Phone	<i>Change view</i> → Select an item
Change Search Method Default ABC	<i>Search method</i> → Select an item
Set Font Size Default Standard	<i>Font size</i> → Select item
Copy All Phone Book Entries & Save on Handset & USIM Card	<i>Copy all</i> → <i>Phone to USIM/USIM to Phone</i> → <i>Yes</i>

Messaging Settings

Custom Mail Address

Customize/Change Handset Mail Address	 → <i>Settings</i> → <i>Custom mail address</i> → Follow onscreen instructions <ul style="list-style-type: none">• Change mail account name (alphanumerics before @). Default: Account name consists of random alphanumerics.
---------------------------------------	--

S! Mail & SMS

Start Here  → *Settings* → *Universal settings*




Request/Cancel Delivery Report Default Off	<i>Sending settings</i> → <i>Delivery report</i> → <i>On</i> or <i>Off</i> <ul style="list-style-type: none">• <i>On</i>: Receive a message confirming successful delivery of a sent message.
Quote Text From Received Message Default On (Except SMS & Graphic mail)	<i>Sending settings</i> → <i>Reply with history</i> → Select an item
Select Reply Setting Default Off	<i>Sending settings</i> → <i>Reply settings</i> → <i>On</i> or <i>Off</i> <ul style="list-style-type: none">• <i>On</i>: Replies to sent messages are automatically addressed to "<i>Reply to</i>" address• <i>Off</i>: Replies to sent messages are addressed to handset number/mail address• Set address that appears in To: field of message recipient handset.

Set "Reply to" Address		<i>Sending settings</i> → "Reply to" address → Enter an item → Enter address
Change Quick Reply Message		<i>Sending settings</i> → <i>Quick reply setting</i> → Select items → Enter message
Show/Hide Transmission Progress Bar	Default On	<i>Sending settings</i> → <i>Sending progress</i> → On or Off
Set Received Message Notice Content/Hide Notice	Default From	<i>Receiving settings</i> → <i>Message notice</i> → <i>View setting</i> → Select an item <ul style="list-style-type: none"> Received message notice scrolls above active function windows.
Select Secret Folder Message Notice Setting	Default Show	<i>Receiving settings</i> → <i>Message notice</i> → <i>Secret folder</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select an item <ul style="list-style-type: none"> Not show: Incoming message notice window for messages sorted to secret folders or <i>Message notice</i> does not appear.
Link External Light to Incoming Feeling Mail	Default On	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Light color</i> → On/Off → On or Off
Link External Light Color to Incoming Feeling Mail	Default Happy/Glad: Pattern 1, OK/Good: Pattern 3, Sad/Sorry: Pattern 4, NG/Bad/Important/Notice: Pattern 2	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Light color</i> → <i>Light color</i> → Select a feeling → Select a pattern <ul style="list-style-type: none"> Press (Check) to view color.
Link Vibration to Incoming Feeling Mail	Default On	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Vibration pattern</i> → Select an item
Set Whether to Sound Handset When Feeling Mail Arrives	Default Off	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → On/Off → On or Off
Link Ringtone to Incoming Feeling Mail	Default Happy/Glad: One Fine Day, OK/Good: Sunny day, Sad/Sorry: Jazzy House_Pleasure, NG/Bad: Vintage Cinema, Important/Notice: On my way home	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → <i>Assign tone</i> → Select a feeling → Select a save location → Select a Ringtone <ul style="list-style-type: none"> Press (Play) to playback the file.
Set Feeling Mail Ringtone Duration	Default 5 Seconds	<i>Receiving settings</i> → <i>Link to feeling</i> → <i>Ringtone</i> → <i>Duration</i> → Enter time → <input type="checkbox"/> (OK)
Change Font Size	Default Standard	<i>Display settings</i> → <i>Font size</i> → Select an item
Change Scroll Unit	Default Single line	<i>Display settings</i> → <i>Scroll unit</i> → Select an item
Change Received Message View	Default Folder view	<i>Display settings</i> → <i>Received msg. view</i> → Select an item
Change Sent Message View	Default Folder view	<i>Display settings</i> → <i>Sent msg. view</i> → Select an item

Set/Cancel Auto Delete for Received Messages When Received Memory is Full Default On (Except protected)	<p><i>Auto delete</i> → <i>Received msg.</i> → Select an item</p> <p>On (Except protected) : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is Off, memory full confirmation appears. Delete messages and retry.</p> <p>On (Only read) : Unprotected messages are automatically deleted from the oldest one to make room for new ones. If <i>Auto delete</i> is Off, memory full confirmation appears. Delete messages and retry.</p> <p>Off: Memory full confirmation appears. Delete messages and retry.</p>
Set/Cancel Auto Delete for Sent Messages When Sent Memory is Full Default On (Except protected)	<p><i>Auto delete</i> → <i>Sent msg.</i> → Select an item</p> <p>On (Except protected) : Unprotected messages are automatically deleted oldest first to make room for new ones. If <i>Auto delete</i> is Off, memory full confirmation appears. Delete messages and retry.</p> <p>Off: Memory full confirmation appears. Delete messages and retry.</p>
Sort Unregistered Mobile Address as Spam Default Off	<p><i>Anti-spam measures</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Unregistered → On</p>
Sort Message with Spam Filter Default Off	<p><i>Anti-spam measures</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Unregistered → On</p> <ul style="list-style-type: none"> To specify list, Spam filter → (Edit) → (If address already exists in the list, <input type="checkbox"/>) → Add filter → Sender/Sender (Partial match)/Subject.
Add Address to Permitted List Default Off	<p><i>Anti-spam measures</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Permitted list → On</p> <ul style="list-style-type: none"> To specify list, Permitted list → (Edit) → (If address already exists in the list, <input type="checkbox"/>) → Add filter → Sender/Sender (Partial match)/Subject. Available only when Unregistered/Spam filter is On.
Set Address for Report Spam Default stop@meiwaku.softbankmobile.co.jp	<p><i>Anti-spam measures</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Address for report spam</p> <p>→ Enter mail address → <input type="checkbox"/> (OK) → Yes</p>
Select Save Location for Message Default Memory card prior	<p>Save to → Select an item</p> <ul style="list-style-type: none"> If Always ask is selected, confirmation appears each time a message item is saved.

S! Mail

Start Here  → *Settings* → *S! Mail settings*

Set Max Creation Size	Default 2MB	<p><i>Sending options</i> → <i>Max creation size</i> → Select an item</p> <ul style="list-style-type: none"> In S! Mail creation window, press  → <i>Sending options</i> → <i>Max creation size</i> can change maximum size temporarily.
Set Message Sending Priority	Default Normal	<i>Sending options</i> → <i>Priority</i> → Select an item
Set Picture Auto Resize	Default 500KB	<i>Sending options</i> → <i>Picture auto resize</i> → Select item
Set Max Receiving Size	Default 2MB	<i>Receiving options</i> → <i>Max receiving size</i> → 2MB/300KB
Set S! Mail Receiving Options	Default On (Up to 1MB)	<p><i>Receiving options</i> → <i>Auto receiving</i> → Select an item</p> <p>On (Up to 1MB) : Receives maximum 1 MB automatically.</p> <p>On (Up to 300KB) : Receives maximum 300 KB automatically.</p> <p>Off: Mail Service Center sends S! Mail Notice; retrieve complete message.</p>
Set Auto Receiving Condition	Default All messages	<i>Receiving options</i> → <i>Auto receiving conditions</i> → <i>All messages/Specified address</i>
Edit Auto Receiving Condition		<p><i>Receiving options</i> → <i>Auto receiving conditions</i> →  (Edit) → Check item → <input type="checkbox"/> (OK)</p> <ul style="list-style-type: none"> If Individual address is checked, press  (Edit) →  → Add → Select item → Select/Enter address →  (OK).
Insert/Hide Signature	Default Off	<p><i>Signature</i> → <i>Auto insert</i> → Select an item</p> <ul style="list-style-type: none"> In <i>Signature texts</i> field, enter signature.
Edit Signature		<i>Signature</i> → <i>Signature texts</i> → Enter a signature
Set Attached Image Appearance	Default Normal	<i>Picture appearance</i> → Select an item
Set Attached Image Auto Playback	Default On	<i>Auto play file</i> → <i>Picture</i> → On or Off
Set Attached Sound Auto Playback	Default Off	<i>Auto play file</i> → <i>Sound</i> → On or Off

SMS

[Start Here](#)  → *Settings* → *SMS settings*

Set Mail Service Center Message Expiry Time	Default None	<i>Expiry time</i> → Select an item • Upon expiry Mail Service Center SMS messages are automatically deleted.
Set Message Center Number	Default Setting 1 +819066519300	<i>Message center</i> → Select an item
Change Character Code	Default Unicode	<i>Char-code</i> → Select an item

Internet Settings

Yahoo! Keitai

[Start Here](#)  → *Yahoo!* → *Browser settings*

Change Page Font Size	Default Standard	<i>Font size</i> → Select an item
Set Encoding	Default Auto	<i>Encoding</i> → Select item
Set Page Scroll Unit	Default Single line	<i>Scroll unit</i> → Select an item
Show/Hide Page Images	Default Show images	<i>Downloads</i> → <i>Images</i> → Select item • Select Do not show to help reduce download time.
Play/Mute Page Sounds	Default Play sounds	<i>Downloads</i> → <i>Sounds</i> → Select item • Select Do not play to help reduce download time.
Set Save Location for Images in a Page, etc.	Default Memory card prior	<i>Save to</i> → <i>Memory card prior/Phone/Always ask</i> • To save a file to Memory Card, insert Memory Card and select Memory card prior .
Delete Cache/Cookie/Certificates		<i>Memory manager</i> → Select an item → Yes
Show/Hide Manufacture Number	Default On	<i>Security</i> → <i>Manufacture number</i> → On or Off • On : Handset automatically sends Manufacture Number to websites upon request as user ID.
Send/Hide Referrer	Default Send	<i>Security</i> → <i>Send referer</i> → Select an item • Referrer is a link source URL information. It is sent to Web server when accessing websites.

Select Cookie Setting	Default Enabled	Security → Cookies → Select an item <ul style="list-style-type: none"> • Select Confirm to show for acceptance confirmation every time before a cookie is saved. • Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.
Confirm Root Certificate		Security → Root certificates → Select a certificate <ul style="list-style-type: none"> • View electronic certificate preinstalled on handset.
Set Certificate Retention Period	Default Per browsing	Security → Certificate retention → Select an item
Initialize Browser		Initialized browser → Enter Phone Password → <input type="checkbox"/> (OK) → Yes <ul style="list-style-type: none"> • Initialize browser settings or information such as Bookmarks or Saved pages.
Reset Settings		Reset settings → Enter Phone Password → <input type="checkbox"/> (OK) → Yes

PC Site Browser

Start Here → **Yahoo!** → **PC site browser** → **PC site browser settings**

Change Page Font Size	Default Standard	Font size → Select an item
Set Encoding	Default Auto	Encoding → Select item
Set Scroll Unit	Default Single line	Scroll unit → Select item
Show/Hide Page Images	Default Show images	Downloads → Images → Select item <ul style="list-style-type: none"> • Select Do not show to help reduce download time.
Play/Mute Page Sounds	Default Play sounds	Downloads → Sounds → Select item <ul style="list-style-type: none"> • Select Do not play to help reduce download time.
Set Save Location for Images in a Page, etc.	Default Memory card prior	Save to → Memory card prior/Phone/Always ask <ul style="list-style-type: none"> • To save a file to Memory Card, insert Memory Card and select Memory card prior.
Delete Cache/Cookie/Certificates		Memory manager → Select an item → Yes
Show/Hide Manufacture Number	Default On	Security → Manufacture number → On or Off <ul style="list-style-type: none"> • On: Handset automatically sends Manufacture Number to websites upon request as user ID.
Send/Hide Referrer	Default Send	Security → Send referer → Select an item <ul style="list-style-type: none"> • Referrer is a link source URL information. It is sent to Web server when accessing websites.

Select Cookie Setting	Default Enabled	<i>Security</i> → <i>Cookies</i> → Select an item <ul style="list-style-type: none"> Select Confirm to show acceptance confirmation every time before Cookie is saved. Cookie automatically saves identification information of visitors to handset. Cookies contain user information and allow sites to recognize users and track preferences.
Select Script Setting	Default On	<i>Security</i> → <i>Script</i> → Select an item
Confirm Root Certificate		<i>Security</i> → <i>Root certificates</i> → Select a certificate <ul style="list-style-type: none"> View electronic certificate preinstalled on handset.
Set Certificate Retention Period	Default Per browsing	<i>Security</i> → <i>Certificate retention</i> → Select an item
Show/Hide Warning	Default On	<i>Warning messages</i> → On or Off <ul style="list-style-type: none"> Show or hide PC Site Browser activation, or Yahoo! Keitai/PC Site Browser switching warning.
Initialize Browser		<i>Initialized browser</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Yes <ul style="list-style-type: none"> Initialize browser settings or information such as Bookmarks or Saved pages.
Reset Settings		<i>Reset settings</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Yes

Digital TV Settings

TV Alarm

Start Here → *TV* → *Settings* → *TV alarm*

Set Alarm	Default On	<i>Alarm</i> → On or Off
Set Alert Tone	Default Samsung Tune.mp4	<i>Alert tone</i> → Select a save location → Select a file <ul style="list-style-type: none"> Press (Play) to playback.
Set Volume	Default Level 3	<i>Volume</i> → to adjust volume <ul style="list-style-type: none"> Press (Play) to confirm volume setting.
Set Vibration	Default Off	<i>Vibration</i> → Select an item <ul style="list-style-type: none"> Press (Play) to view a pattern.
Set Notification Light	Default On	<i>Light</i> → On or Off

Set Reminder Time	Default 1 minute before	<i>Reminder time</i> → Select an item
Set Alarm Duration	Default 10 seconds	<i>Duration</i> → Select an item
Set Alarm Sound/Vibration in Manner Mode	Default Alarm sound:Off, Vibration:On	<i>Manner mode setting</i> → <i>Alarm sound/Vibration</i> → <i>On</i> or <i>Off</i>

Data Broadcast

Start Here → *TV* → *Settings* → *Set broadcast data*


Set Recording Type	Default Image+Text	<i>Set recording</i> → Select an item
Select Save Location	Default Memory card prior	<i>Image location</i> → Select an item
Select Connection Notification Type	Default Ask each time	<i>Notify connection</i> → Select an item
Show/Hide Manufacture Number	Default On	<i>Manufacture number</i> → <i>On</i> or <i>Off</i>
Delete Station Data		<i>Delete station data</i> → Highlight item → <input type="checkbox"/> → <i>Delete</i> → <i>Yes</i> <ul style="list-style-type: none"> To delete all stations, press <input type="checkbox"/> → <i>Delete all</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>.

Display & Sound

Start Here → *TV* → *Settings*

Show/Hide Indicators in Landscape View	Default Off	<i>Display</i> → <i>Display pict</i> → <i>On</i> or <i>Off</i>
Set Whether to Show Videos in Landscape View	Default Normal	<i>Display</i> → <i>Landscape style</i> → Select an item
Set Whether to Show Videos in Portrait View	Default Normal	<i>Display</i> → <i>Portrait style</i> → Select an item
Adjust Display Brightness	Default Level 3	<i>Display</i> → <i>Display brightness</i> → <input type="checkbox"/> to adjust brightness
Set View Mode When TV is Activated	Default Landscape	<i>Display</i> → <i>First view</i> → <i>Landscape/Portrait</i>
Adjust Sound Quality	Default Standard	<i>Sound</i> → <i>Sound mode</i> → Select an item
Select Language	Default Main	<i>Sound</i> → <i>Sound language</i> → Select an item




Recording

Set Save Location **Default** Memory card prior  → *TV* → *Settings* → *Save recording to* → Select an item

Incoming Calls & Alarms

Handle Incoming Calls & Alarms

Default Voice call/Video call: Call priority, Alarms: Alarm priority

-  → *TV* → *Settings* → *Calls & Alarms* → Select an item → Select action
- When **Call priority** or **Alarm priority** is set, TV window pauses temporarily and Incoming call window or Alarm window appears.
 - When **Notice a call** or **Alarm notice** is set, a notification appears at top of Display and handset vibrates (TV reception continues). Press  to accept a call; press  to hold a call.

Auto Power Off

Start Here  → *TV* → *Settings* → *Auto power off*

End TV after Setting Duration **Default** Off *Auto power off* → Select an item

End TV after Phone Closed **Default** On *Phone closing* → *On* or *Off*

Camera Settings

Photo



Start Here  → *Camera* → *Camera* →  →  → *Settings*

Select Quality **Default** Superfine *Quality* → Select an item

Set ISO **Default** Auto *ISO* → Select an item

Set Exposure Metering **Default** Center-weight *Exposure metering* → Select an item

Select Effect **Default** None *Effect* → Select item

Activate/Cancel Auto Save	Default On (Preview manual)	<p>Setup → Auto save → On (Preview off)/On (2 sec)/On (Preview manual)/Off</p> <ul style="list-style-type: none"> • On (Preview off) : Image is automatically saved. After saving, handset returns to Viewfinder without showing preview. • On (2 sec) : Image is automatically saved. After saving, preview appears for two seconds, and handset returns to Viewfinder. • On (Preview manual) : After capturing, image is automatically saved and preview appears. • Off : Select save or cancel the image. To redo, press . To save, press .
Set Save Location When Memory Card is Inserted	Default Memory card prior	<p>Setup → Save to → Select an item</p> <ul style="list-style-type: none"> • This setting is active with Memory Card inserted. • If Memory Card is not inserted, images are automatically saved to Phone.
Show/Hide Guideline	Default Off	Setup → Guideline → On or Off
Set Face Link Display	Default Off	<p>Setup → Face link display → On or Off</p> <ul style="list-style-type: none"> • When you set this On, after the face you captured is recognized, the name linked to Face Link appears.
Set Shutter Sound	Default Pattern1	Setup → Shutter sound → Select an item
Set Timer Sound	Default Pattern1	Setup → Timer sound → Select an item

Video

Start Here  → **Camera** → **Video camera** →  →  → **Settings**

Select Quality	Default Superfine	Quality → Select an item
Set Effect	Default None	Effect → Select item
Set Sound Recording	Default On	Sound recording → On or Off
Activate/Cancel Auto Save	Default On	Setup → Auto save → On or Off
Set Save Location	Default Memory card prior	<p>Setup → Save to → Select item</p> <ul style="list-style-type: none"> • To save a file to Memory Card, insert Memory Card.
Show/Hide Guideline	Default Off	Setup → Guideline → On or Off
Set Shutter Sound	Default Pattern1	Setup → Shutter sound → Select an item
Set Timer Sound	Default Pattern1	Setup → Timer sound → Select an item

Media Player Settings

Music

Start Here → *Media* → *Settings* → *Music settings*

Set Repeat Mode	Default All	<i>Repeat mode</i> → Select an item <ul style="list-style-type: none">Play a single track repeatedly, all music, or all files in playlist randomly repeatedly.
Set Shuffle	Default Off	<i>Shuffle</i> → <i>On</i> or <i>Off</i>
Set Equalizer	Default Off	<i>Equalizer</i> → Select an item
Set 3D Sound	Default Off	<i>3D sound</i> → <i>On</i> or <i>Off</i>

Movie

Start Here → *Media* → *Settings* → *Movie settings*

Set Repeat Mode	Default All	<i>Repeat mode</i> → Select an item <ul style="list-style-type: none">Play a single file repeatedly, all movies, or all files in playlist repeatedly.
Set Shuffle	Default Off	<i>Shuffle</i> → <i>On</i> or <i>Off</i>
Set Backlight	Default Always on	<i>Backlight</i> → Select an item
Set Portrait Style	Default 240 * 180	<i>Display</i> → <i>Portrait style</i> → Select an item
Set Display for Activating Movie	Default Landscape	<i>Display</i> → <i>First view</i> → Select an item
Show/Hide Movie Preview	Default On	<i>Display</i> → <i>Preview</i> → <i>On</i> or <i>Off</i>
Access/Ignore Linked Information	Default On	<i>Web link</i> → <i>On</i> or <i>Off</i> <ul style="list-style-type: none"><i>On</i>: After playing a file with linked info, access confirmation appears.

Entertainment Settings




S! Information Channel

Start Here → *Entertainment* → *S! Information Channel/Weather* → *Weather Indicator* → *Settings*

Set Weather Indicator Display Settings	Default On	<i>Display setting</i> → <i>On</i> or <i>Off</i>
Set Weather Indicator Update Notification	Default On	<i>Missed event setting</i> → <i>On</i> or <i>Off</i>
Set Weather Indicator Automatic Update	Default On	<i>Auto update</i> → <i>On</i> or <i>Off</i>

S! Applications

Start Here → *S! Appli* → *Settings*

Set S! Appli Volume	Default Level 3	<i>Volume</i> →  to adjust volume
Adjust Display Backlight Setting	Default Normal settings	<i>Backlight</i> → <i>Always On/Always Off/Normal settings</i> • When <i>Normal settings</i> is set, <i>Backlight</i> settings in <i>Display settings</i> is applied.
Set S! Appli Vibration Settings	Default On	<i>Vibration</i> → <i>On</i> or <i>Off</i>
Set Operation of Incoming Call/Alarm/S! Appli Start Request Default Voice call/Video call: Call Priority, Alarms: Alarm priority, Start demand: Start notice		<i>Calls & Alarms</i> → Select an item → Select action • When <i>Call Priority</i> or <i>Alarm priority</i> or <i>Start priority</i> is set, S! Appli pauses temporarily and incoming call, Alarm or Start request window appears. • When <i>Notice a call</i> , <i>Alarm notice</i> or <i>Start notice</i> is set, Call, Alarm or Start request notification appears at the top of Display. Press  to receive a call. Press  to hold a call. • Even when <i>Notice a call</i> is set, if Answering machine is <i>On</i> , S! Appli pauses and Answering machine activates after the response time.
Reset Settings of S! Appli		<i>Reset S! Appli settings</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>






Security Settings

Start Here → *Settings* → *Security*

Activate/Cancel Phone Lock	Default Off	<i>Phone lock</i> → <i>On</i> or <i>Off</i> → Enter Phone Password → <input type="checkbox"/> (OK)
Activate/Cancel Password Lock	Default Off	<i>Password lock</i> → <i>On</i> or <i>Off</i> → Enter Phone Password → <input type="checkbox"/> (OK)
Change Phone Password	Default 9999	<i>Change password</i> → Enter current password → <input type="checkbox"/> (OK) → Enter new password → <input type="checkbox"/> (OK) → Enter new password again → <input type="checkbox"/> (OK)
Activate/Cancel Function Lock	Default All unlocked	<i>Function lock</i> → Check an item → (Save) → Enter Phone Password → <input type="checkbox"/> (OK)
Activate/Cancel Secret Mode	Default Hide	<i>Secret mode</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select an item
Activate/Cancel USIM Lock	Default Off	<i>USIM lock</i> → <i>On</i> or <i>Off</i> → Enter USIM Password (four- to eight-digit) → <input type="checkbox"/> (OK) → Enter USIM Password again as required → <input type="checkbox"/> (OK)
Activate/Cancel PIN Certification	Default Off	<i>PIN certification</i> → <i>On</i> or <i>Off</i> → Enter PIN → <input type="checkbox"/> (OK)
Change PIN		<i>Change PIN</i> → Enter current PIN → <input type="checkbox"/> (OK) → Enter new PIN → <input type="checkbox"/> (OK) → Enter new PIN again → <input type="checkbox"/> (OK) <ul style="list-style-type: none"> To change PIN code, set <i>PIN certification</i> to <i>On</i>.
Change PIN2		<i>Change PIN2</i> → Enter current PIN2 → <input type="checkbox"/> (OK) → Enter new PIN2 → <input type="checkbox"/> (OK) → Enter new PIN2 again → <input type="checkbox"/> (OK)
Set Secret Mode on Sub-folder in Data Folder	Default Hide	<i>Secret data folder</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select item
Delete Phone Book Entries, Message etc.		<i>Reset</i> → <i>All reset</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Restore Settings to Default Values		<i>Reset</i> → <i>Reset settings</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Set Mobile Tracker	Default Off	<i>Mobile tracker</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Activation</i> → <i>On</i> → <i>Recipients</i> → Select To field → <i>Phonebook/Direct input</i> → Search and select entry/Enter phone number → (Done) → <i>Sender</i> → Enter Sender name → (Save)

Memory Settings

Start Here → *Settings*

Check Memory Card Details		<i>Memory settings</i> → <i>Memory card</i> • Check Memory Card name, memory capacity, or remaining memory.
Rename Memory Card		<i>Memory settings</i> → <i>Memory card</i> → <i>Name</i> → Enter name
Format Memory Card		<i>Memory settings</i> → <i>Memory card</i> →  (Format) → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>
Confirm Total/Remaining Phone Memory		<i>Memory settings</i> → <i>Phone memory</i> • View Phone memory capacity or remaining memory.
Clear Phone Memory		<i>Memory settings</i> → <i>Phone memory</i> →  (Clear) → Check an item →  (Clear) → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Yes</i>
View Memory Status		<i>Memory settings</i> → <i>Memory status</i> → Select an item • If <i>Data Folder</i> is selected, select <i>Phone memory/Memory card</i> . • To delete viewed memory, press  (Delete) (P.12-12 Deleting Registered/Saved Data).
Back up Memory		<i>Backup & Restore</i> → <i>Backup</i> → <i>Yes</i> → Enter Phone Password → <input type="checkbox"/> (OK) → Select an item → <i>Yes</i>
Setting frequency for Auto Back up		<i>Backup & Restore</i> → <i>Auto backup</i> → <i>Backup cycle</i> → <i>Cycle</i> → <i>Every week/Every month</i> → Select day/Enter date → <i>Start time</i> → Enter start time • After selecting <i>Cycle</i> , select <i>Off</i> to cancel Auto back up.
Setting Item to Back up Automatically	Default All	<i>Backup & Restore</i> → <i>Auto backup</i> → <i>Backup items</i> → Check items →  (Save)
Setting Encryption for Items to Back up Automatically	Default On	<i>Backup & Restore</i> → <i>Auto backup</i> → <i>Encryption settings</i> → Select item → <i>On</i> or <i>Off</i>
Restore Memory		<i>Backup & Restore</i> → <i>Restore</i> → <i>Yes</i> → Enter Phone Password → <input type="checkbox"/> (OK) → <i>Selected item</i> → Select item → Select a file → <i>Add</i> or <i>Overwrite</i>

Set Default Memory to Phone/Memory Card **Default** Memory card prior

Connectivity → **Save to** → Select an item

- With Memory Card inserted, select **Phone** or **Memory card prior**. Available when editing images, saving S! Mail attachments, downloading files, etc.
- Even when **Always ask** is selected with no Memory Card inserted, files are automatically saved to handset.

Connectivity Settings

Infrared

Start Here → **Settings** → **Connectivity** → **Infrared**

Receive Infrared Transmission

Receive

Transfer Account Details

Transfer my details

Transfer Files

Transfer files → Select Data Folder → Check files →  (Send)

Transfer All Phone Book Entries, Calendar/Tasks, Bookmarks, Notes or Messages at Once

Transfer all → Enter Phone Password → (OK) → Select an item → Enter Authorization Code (four-digit) → (OK)

- For **Phonebook**, choose **Yes** to transfer images.

USB

Activate Mass Storage

→ **Settings** → **Connectivity** → **Mass storage** → **Yes** → Enter Phone Password → (OK) → Exchange files with PC

- You need to connect handset and your PC before this operation.

Network

Start Here → **Settings** → **Network settings**

Retrieve Network Information Manually

Retrieve NW info → **Yes** or **No**

Seek the Most Prioritized Network

Re-search signal → **Yes** or **No**