

Handset Parts	1-2
Parts & Functions	1-2
Charging Battery	1-4
Charging Battery (AC Charger)	1-4
Charging Battery (In-Car Charger)	1-5
Power On/Off	1-6
Handset Power On/Off.....	1-6
Display & Indicators	1-7
Display	1-7
Indicators	1-8


Accessing Functions	1-11
Main Menu.....	1-12
Key Shortcut	1-13
Using Simplified Menus (Simple Menu)	1-14
Mobile Manners	1-15
Security Codes	1-16
Basic Tools	1-17
My Details & Basic Tools	1-17
Additional Functions	1-18

1

Getting Started

1 Parts & Functions

Getting Started

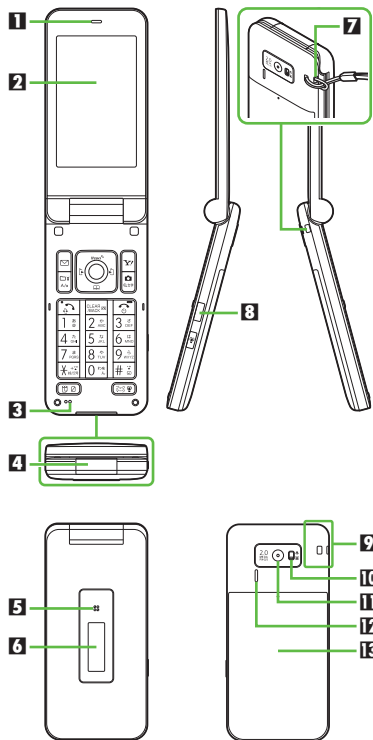

- 1** Earpiece
- 2** Display
- 3** Microphone
- 4** External Device Port (with Port Cover)
- 5** Small Light
- 6** External Display
- 7** Strap Eyelet
- 8** Infrared Port
- 9** Internal Antenna Location
- 10** Portrait/Macro Selector
- 11** Camera (lens cover)
- 12** Speaker
- 13** Battery Cover

- Do not cover or place stickers, etc. over Internal Antenna area.
- Replace Port Cover after Port use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Handset Positions

Handset Closed




Keep handset closed when not in use.


Handset Open









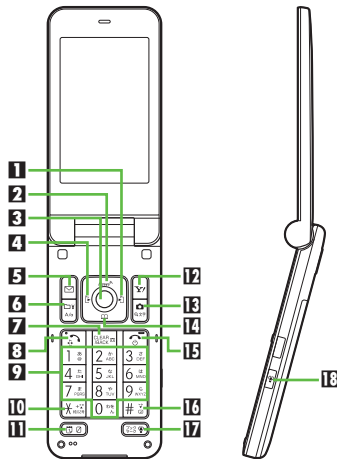











Open handset to place or answer calls, enter text, etc.

Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with  via Set Key Shortcut as needed.



- 1 Multi Selector (right)**  Open Received Calls. Long Press to activate/cancel Infrared^{*}.
- 2 Multi Selector (up)**  Open Standby Window. Long Press to open PC Site Browser menu^{*}.
- 3 Center Key**  Open Main Menu. Long Press to activate/cancel Keypad Lock.
- 4 Multi Selector (left)**  Open Dialed Numbers. Long Press to open Alarm list^{*}.
- 5 Mail Key**  Open Messaging menu. Long Press to open S! Mail Composition window^{*}.
- 6 Data Folder & A/a Key**  Open Data Folder. Long Press to activate Display Light.
- 7 Clear/Back Key**  Play Answer Phone messages. Long Press to activate/cancel Answer Phone.
- 8 Start Key**  Open All Calls.
- 9 Keypad**  -  Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.
- 10 * Key**  Enter *, +, P, ? and -.
- 11 Calendar Key**  Open Calendar. Long Press to activate/cancel VeilView.
- 12 Yahoo! Keitai Key**  Open Yahoo! Keitai portal. Long Press to open Yahoo! Keitai menu^{*}.












- 13 Camera & Text Key**  Activate mobile camera. Long Press to open Change Menu window.
- 14 Multi Selector (down)**  Open Phone Book. Long Press to create new Phone Book entries^{*}.
- 15 Power On/Off Key**  Toggle Standby display. Long Press to power handset off.
- 16 # Key**  Enter #. Long Press to activate/cancel Manner mode.
- 17 Bookmarks & Manner Key**  Open Bookmarks. Long Press to activate/cancel Manner mode.

Side Key

- 18 Manner Key**  **Closed:** Long Press to activate/cancel Manner mode.

Multi Selector


- In this guide, Multi Selector operations are indicated as follows:

Press  or 	
Press  or 	
Press  ,  ,  or 	

1 Charging Battery (AC Charger)

Battery must be inserted in handset to charge it.


- Use specified AC Charger **ZTDAA1** (sold separately) only. In this guide, ZTDAA1 is referred to as "AC Charger."
- Handset and AC Charger may warm while charging.

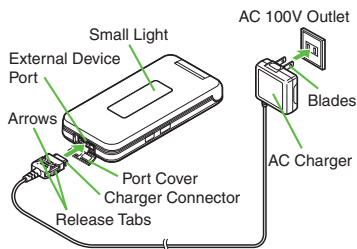

Important AC Charger Usage Note

- Fold back blades after charging. Do not pull, bend or twist the cord.

 
1 Open Port Cover as shown



2 Insert Charger Connector

- With arrows up, insert connector until it clicks.

 3 Extend blades and plug AC Charger into AC outlet



- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

4 Unplug AC Charger

- Pull AC Charger straight out.

5 Disconnect handset

- Squeeze Charger Connector release tabs and pull straight out to remove.

6 Fold back blades and replace Port Cover

When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.

USB Charge


- Connect handset (with power on) to PC via USB Cable to charge battery.
 - Download and install USB Cable driver beforehand.
 - Battery may not charge if handset is connected through a USB hub.

Advanced


- Disabling USB Charge (P.1-18)

Charging Battery (In-Car Charger)

In-Car Charger may be purchased separately.

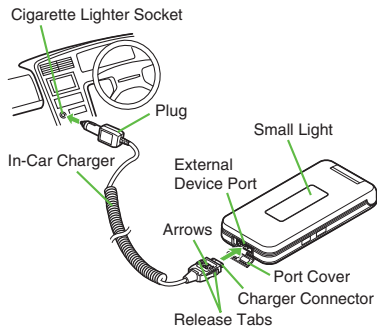

1 Open Port Cover as shown

 

2 Insert Charger Connector

- With arrows up, insert connector until it clicks.

3 Plug Charger into cigarette lighter socket

4 Start car engine

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

5 Unplug Charger

6 Disconnect handset

- Squeeze Charger Connector release tabs and pull straight out to remove.

7 Replace Port Cover

Important In-Car Charger Usage Notes

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Avoid charging battery inside extremely hot vehicles.

1 Handset Power On/Off

Power On

Follow these steps when powering on 840SH for the first time:

1 (Long)

 
- After Power On Graphic, follow the steps below.

→ → → → → → 設定
 → → Language → → English
 → → (Long) → (Long) →

Change Menu window opens

2 Select option →

Guide descriptions are based on Standard Menu.



- My Details setup starts.

3 Enter last name →

Enter first name →

- Change Menu display option confirmation appears.

4 Yes or No →



Standby

- Choose **No** to enter Standby immediately after powering on.

When USIM Card is Not Installed

- Insert USIM Card** appears; insert the card to use handset.

Retrieving Network Information

Handset initiates Network Information retrieval when , or is pressed for the first time.



Follow these steps to retrieve Network Information to use Network-related services and Camera; retrieval automatically sets Clock:

1 Yes → → Retrieval starts

2


Power Off

1 (Long)

- After Power Off Graphic, handset shuts down.

Display

Standby

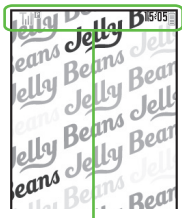

- Indicators (signal strength, battery strength, etc.) appear.
- Information window opens at the bottom for Missed Calls, new mail, etc.




Information Window

- Information label (e.g., **Message**, etc.) and count appear in Information window. Select an item and press to open it.

Softkeys

Functions/operations assigned to , and appear at the bottom.

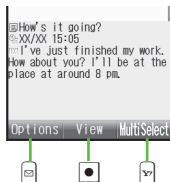

Display Saving

- Display goes dark after Display Saving time elapses. Press any key to activate it.

Backlight

- Backlight turns off after Time Out time elapses. Press - to illuminate it (key press may affect active function).
- Display goes dark during a call. (Backlight does not turn off first).


Advanced

- Handling Information list (P.1-18)

Indicators

Display Indicators


Basic Status



1		Signal strength*
2		Packet transmission available
3		Battery strength


*The more bars the better.

Function Status




1		Active S! Application
		Paused S! Application
		Music playback in progress
2		Memory Card inserted
		Accessing Memory Card
		Reading Memory Card
		Formatting Memory Card

Notifications




1		Unread mail
		Unread Delivery Report
2		Answer Phone active & message recorded
		Answer Phone canceled & message recorded
3		New Voicemail
4		S! Appli Notification
5		Contents Key received
6		Unread S! Information Channel info
		Software Update result
		Unread S! Quick News info

Warnings



1		Mail memory low
2		Message delivery failure
3		Memory Card unusable/ misinserted

 
■ Transmissions



1		SSL browsing in progress
		Waiting packet transmission
		Packet transmission protocol ready
2		Receiving mail
		Sending mail
3		Positioning in progress*
		Software Update in progress
5		USB Cable connected
		USB transmission in progress
		Infrared transmission in progress
		Infrared file transfer in progress
		S! Addressbook Back-up transmission in progress
6		PC Site Browser in use
		Weather Indicator
7		Infrared transmission ready

*Flashes while positioning.

 ■ Settings



1		Offline Mode active
		Answer Phone active
3		Call Forwarding or Voicemail active (forwarding condition: Always)*
		Schedule/Task (Alarm set)
4		Schedule/Task (Alarm unset)
		Alarm set
5		Manner mode active
		Drive mode active
		Original mode active
		VeilView active
6		Keypad Lock active
		Auto Answer or Remote Monitor active

8		Ringtone (Silent)
		Ringtone (Increasing Volume)
9		Vibration active
		Show Secret Data active
		Function Lock active

*Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

External Display Indicators

■ Basic Status



1	Signal strength*
2	Battery strength

*The more bars the better.

■ Notifications

	Missed Calls
	Answer Phone message recorded
	Missed Call Notification
	New Voicemail
	Unread mail
	Unread Delivery Report
	Contents Key received
	Unread S! Information Channel info
	Weather Indicator update
	Weather Indicator
	Location Info request

■ Warnings

	Message delivery failure
	S! Information Channel info reception failure
	Weather Indicator update failure

■ Handset Status

	Alarm
	Schedule Alarm
	Task Alarm
	S! Appli Widget Notification

Activating Backlight




External Display Date & Time

- Press  to toggle Clock view.

Accessing Functions


Use the following methods as needed.

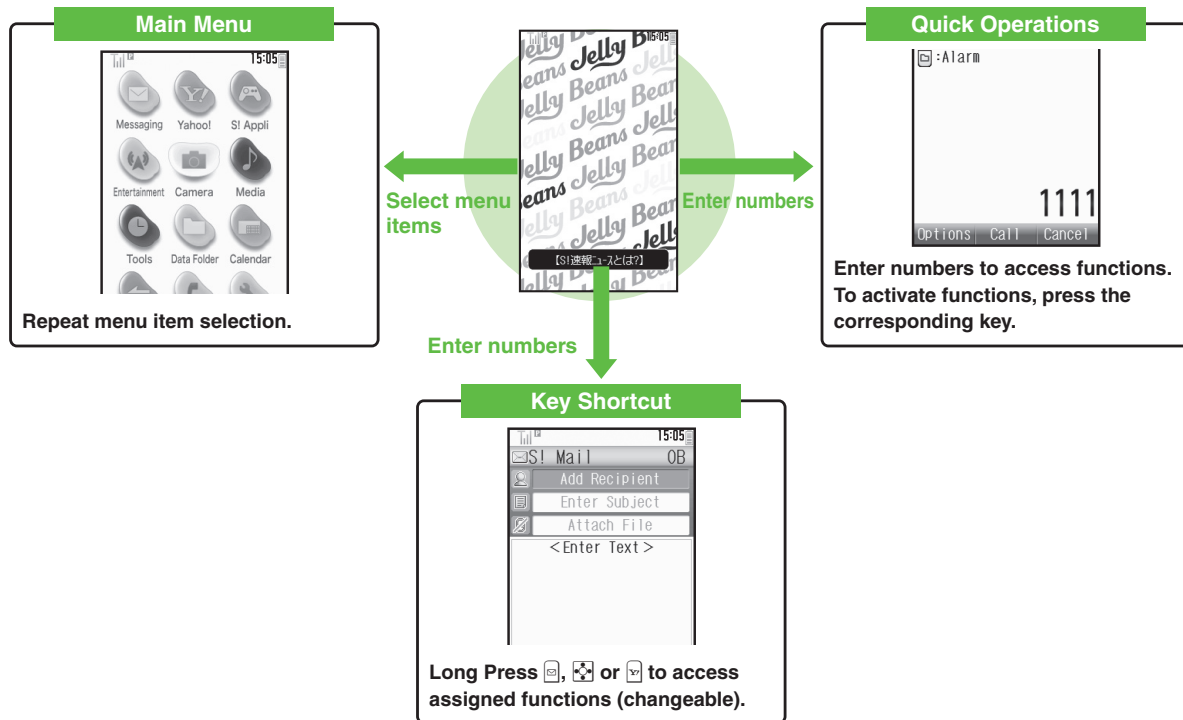

Main Menu

Menu Item Selection

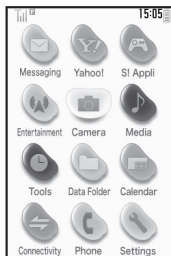

1 




- Main Menu opens.


2 Use  to select menu item
➔ 



- Menu/window opens.
- If Sub Menu opens, use  to select an item and press .


Tabs

- Menus/lists in a single window appear in separate tabs; use  to toggle tabs.

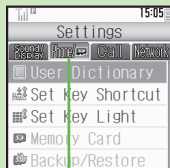


Tab

Reverse Navigation

- Press . If a confirmation appears, follow onscreen prompts.

Returning to Standby

- Press . If a confirmation appears, follow onscreen prompts.




Simple Menu







- Simplify menus and enlarge fonts; ideal for users who use only basic handset functions.

Main Menu Items


Messaging	Open/create messages, etc.
Yahoo!	Browse the Internet
S! Appli	Use S! Applications including games
Entertainment	Receive news, read e-Books, etc.
Camera	Capture images or record video
Media	Play/download media files
Tools	Set Alarm, scan QR Codes, etc.
Data Folder	Open files saved on handset/Memory Card
Calendar	Manage schedules
Connectivity	Exchange files with other devices
Phone	Search contacts, add entries, etc.
Settings	Customize handset interface, sounds, etc.

Key Shortcut

In Standby, Long Press ,  or  to access assigned functions.

	Open S! Mail Composition window
	Open PC Site Browser menu
	Create new Phone Book entries
	Open Alarm list
	Activate/cancel Infrared
	Open Yahoo! Keitai menu

Changing Assigned Functions


Follow these steps to assign Calculator to  (Long Press):

-  ➔ **Settings** ➔ 
-  **Phone/Key Shortcut** ➔ **Set Key Shortcut** ➔ 



Key Shortcut Menu

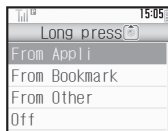


-  **Long press**  ➔ 






-  **From Appli** ➔ 



-  **Tools** ➔  ➔ **Calculator** ➔ 

Bookmark

In  **From Bookmark** ➔  ➔
Select title ➔  ➔ **Yes** ➔ 

Infrared or Show Secret Data On/Off
In  **From Other** ➔  ➔ Select
item ➔ 

Canceling Assigned Function


In  **Off** ➔ 

1 Using Simplified Menu (Simple Menu)

Getting Started

Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.

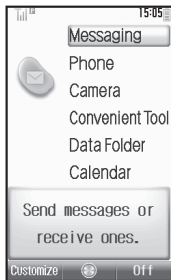

- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).


Menu Items

Messaging	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
Phone	Phone Book, Add New Entry, Call Log, Play Messages, Answer Phone, Call Voicemail, My Details, Speed Dial/Mail
Camera	Photo Camera, Video Camera, Scan Barcode
Convenient Tool	Alarms, Calculator, Assignment, Notepad, Change Menu
Data Folder	-
Calendar	-

Key assignments are largely the same as those in Standard Menu.

Activating Simple Menu

 1 (Long)



2 **Simple Menu** →

While Using an Incompatible Function

- End the function before activating Simple Menu.

Canceling Simple Menu

 (Long) → **Standard Menu** → 

Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.


- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mutes most handset function sounds.

1 (Long)



- Manner mode is set.
- Alternatively, Long Press .

When Manner Mode is Active

- Ringtones and other sounds are muted.
- 840SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.

Canceling Manner Mode

(Long)

Offline Mode

Temporarily suspends all transmissions.

1 **Settings**



Network

2 **Offline Mode**

3 **On**

- Offline Mode is set.

Canceling Offline Mode

In  **Off** 

Advanced

-   Changing handset modes  Creating a custom mode  Resetting Mode Settings (P.1-18)

Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

Handset Code	9999 by default; use or change some functions
Center Access Code	4-digit code selected at contract; access Optional Services via landlines or change contract details
Network Password*	4-digit code selected at contract; restrict incoming/outgoing calls (Call Barring)

*Change as needed.


Incorrect Code Entry

- Message appears for incorrect code entries; retry.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed.


Changing Handset Code

Enter four to eight digits for new Handset Code.

1 → **Settings** →

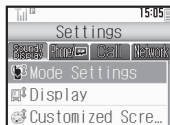

2 **Phone/** → **Locks** →

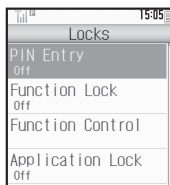

3 **Chg. Handset Code** →




4 **Enter current Handset Code** →

5 **Enter new Handset Code** →

6 **Re-enter new Handset Code** →

My Details & Basic Tools

My Number

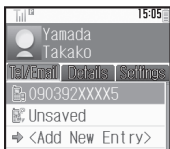

- Handset phone number and the name entered at initial setup appear.

Editing My Details

After **1**, (select tab) **➔** Select item **➔** **➔** Select item **➔** **➔** Edit **➔**

VeilView

Activate VeilView to prevent peeking.



Canceling VeilView

(Long)

Keypad Lock

Lock handset keys and prevent accidental operation/function activation.



- Keypad Lock activates.
- does not turn off handset power.

Incoming Calls while Keypad Lock is Active

- Keypad Lock is temporarily canceled; press to answer calls. Keypad Lock reactivates after the call.

Canceling Keypad Lock

(Long)

Display Light



- Display turns white and Backlight brightens.

Canceling Display Light

- Press any key to turn Display Light off.

Advanced

- Clearing My Details
- Changing VeilView pattern/density (P.1-18)

USB Charge

Disabling USB Charge → *Connectivity* → → *USB Charge* → → *Disable* →

Information

Handling Information list

Start Here → → *Phone* → → *See below*

Opening List Manually
Information →

Clearing List
Information → → → *Yes* →

Mode Settings

Changing handset modes

Start Here → → *Settings* → → *In Sound/Display menu, Mode Settings* → → *See below*

Selecting a Handset Mode
Select mode →

Customizing Handset Modes
Select mode → → *Select item* → → *Adjust settings*

- Not available for Normal mode.

Creating a custom mode

→ *Settings* → → *In Sound/Display menu, Mode Settings* → → *Original* → → *Select item* → → *Adjust settings*

Resetting Mode Settings

→ *Settings* → → *In Sound/Display menu, Mode Settings* → → *Select mode* → → *Enter Handset Code* → → *Yes* →

My Details

Clearing My Details → *0-7* → → *Reset My Details* → → *Yes* →

VeilView

Changing VeilView pattern/density

Start Here → → *Settings* → → *In Sound/Display menu, Display* → → *VeilView* → → *See below*

Pattern
Pattern Setting → → *Select pattern* →

Pattern Scale
Scale Setting → → *Select scale or Animation* →

Pattern Color
Color Setting → → *Select color* →

Density
Density Setting → → *Adjust density* →

- For *Density:2* or *Density:3*, use before pressing to adjust the pattern appearance for straight view.