

Font Size	2-2
Changing Font Size	2-2
Wallpaper	2-3
Customized Screen	2-4
Customized Screen (Japanese)	2-4
Sounds & Alerts	2-5
Customizing Handset Responses ...	2-5
Text Entry	2-6
Entering Characters.....	2-7
Editing Characters	2-10

User Dictionary	2-11
Saving Frequently Used Words	2-11
Phone Book	2-12
Creating Phone Book Entries	2-12
Using Phone Book Entries	2-14
Additional Functions	2-15
Troubleshooting	2-18

2

 
Universal Operations, Etc.



Changing Font Size

Enlarging All Fonts

Activate Large Font Menu to enlarge fonts for menus, text entry, etc. as follows:

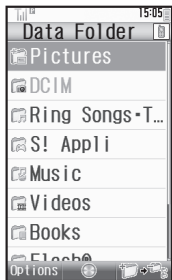





- 1  (Long)
- 2 **Large Font Menu** → 

Canceling Large Font Menu




In 2, **Standard Menu** → 

Customizing Font Sizes


- 1  → **Settings** → 
- 2 In **Sound/Display menu**, **Display** → 
- 3 **Font Settings** → 



Font Settings Menu

- 4 **Font Size** →  → **Select item** → 
- 5 **Select size** → 

Changing Font Weight

 
- 1 In **Font Settings menu**, **Font Weight** → 
- 2 **Select weight** → 



Wallpaper

1  ➔ **Settings** ➔  ➔ In **Sound/Display menu, Display** ➔ 


2 **Wallpaper** ➔ 

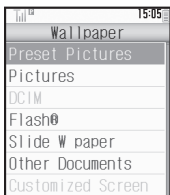

Wallpaper Menu



3 **Select folder** ➔ 



4 **Select image** ➔ 

- Some files may not be usable.
- Omit the next step when **Preset Pictures** is selected in .



5 

Selecting Images Smaller or Larger than Display

After 4, select option ➔  ➔ 

- For **Centered**, use  to zoom in/out or press  to rotate.

Selecting Images with Limited Usage Period


- A confirmation appears. Follow these steps:
Yes ➔  ➔ 

Slide Show Wallpaper

Set Slide Show to appear in Standby. Some images may not appear.

1 **In Wallpaper menu, Slide W paper** ➔ 

2 **Folder Setting** ➔ 

3 **Pictures or DCIM** ➔ 



4 **Select sub folder** ➔  ➔ **Set this folder** ➔ 

- Omit steps for sub folder if none.


If There is No Image in Set Folder


- Preset images appear.

Using Preset Images

In , **Preset Pictures** ➔ 

Changing Pattern

In 2, **Pattern Setting** ➔  ➔ **Select pattern** ➔ 

- To check patterns, select one and press .



Customized Screen (Japanese)

Customized Screen Setup

1 →



2 **Preset Screens** →

3 **Select pattern** →

4

When Selected Customized Screen is Active

- Cancellation confirmation appears after ③.
To cancel, choose **Yes** and press .

Canceling Customized Screen

1 →

2 **Off** →

 
3 **Yes** →



Customizing Handset Responses

Ringtone

- 1 ➔ **Settings** ➔ ➔ In **Sound/Display** menu, **Sounds & Alerts** ➔

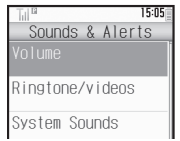

Sounds & Alerts Menu

- 2 **Ringtone/videos** ➔
- 3 **Select item** ➔
For *For New Message*, etc., select **Assign Tone** and press .
- 4 **Select folder** ➔
- 5 **Select tone/file** ➔

Setting Ring Time for Incoming Mail, etc.
 After , **Duration** ➔ ➔ Enter time ➔

Playing Video for Incoming Transmissions
 In , **Videos** ➔ ➔ Select file ➔

If Portion of File Content is Specifiable
 • After , start point selection window opens. Follow these steps:
Select start point ➔

Selecting Files with Limited Usage Period
 • A confirmation appears. Choose **Yes** and press to proceed.

Vibration

- 1 In **Sounds & Alerts** menu, **Vibration** ➔
- 2 **Select item** ➔ ➔ **Switch On/Off** ➔
- 3 **On** ➔
- 4 **Vibration Pattern** ➔
 • To check vibration patterns, select one and press .
- 5 **Select pattern** ➔

 
Setting Ringtones to Control Vibration
 In , **Link to Sound** ➔

Important Vibration Usage Note
 • Cancel Vibration when charging battery to help avoid accidents.



Text Entry

Unless noted otherwise, text entry descriptions are for text entry windows.



Text Entry Window (Message Text)

 
Opening Help




Note

- Pressing repeatedly may not close text entry windows.

Switching Entry Modes

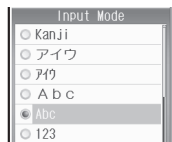

- Available entry modes appear.

 

- Select mode
- Entry Mode Indicators:

	Kanji (hiragana)
	Double/single-byte katakana
	Double-byte alphanumerics (upper/lower case)
	Single-byte alphanumerics (upper/lower case)
	Single-byte number
	Character Code

appears when Predictive is active.

Character Entry Basics

Use Keypad to enter characters. Multiple characters are assigned to each key. Press a key to toggle character options for that key.

Example: In double-byte katakana entry, press three times.



- Press to toggle options in reverse. To type characters assigned to the same key, press first.

Example: In single-byte alphanumerics mode, enter no.



- Long Press a key to enter the current character and advance cursor.



 
 
Advanced

- Using Character Codes
- Using Pager Code (P.2-15)

Entering Characters

Hiragana

Follow these steps to enter **すずぎ** in kanji (hiragana) mode:




Kanji

Convert **すずぎ** to **鈴木**.

1 Type すずぎ



 - In kanji (hiragana) mode, word suggestions change as hiragana are typed. (Predictive)
- Press [No Conv] to toggle suggestion mode between Standard, Business, Male and Female. (Personal Mode)



3 鈴木

- To exit suggestion list, press [No Conv].



- Words likely to follow the entry appear based on previous entries. (Previous Usage)

When Target Word is Not Listed

- Press [No Conv] or [No Conv] to segment hiragana to convert separately.
 - Press [No Conv] to toggle Predictive and Non-Predictive suggestions.

Phonetic Conversion

Type reading in hiragana → [No Conv]

Advanced

- Inserting line breaks
- Inserting spaces
- Using Keypad to enter words/phrases from suggestion list
- Clearing entry log
- Changing Font Size
- Disabling suggestions based on entered characters
- Disabling suggestions based on entered words
- Disabling emoticon/Pictogram suggestions based on entered words
- Lowering type priorities in suggestion list
- Selecting a suggestion mode (P.2-15)



One-Hiragana Conversion

Type the first hiragana to access previously selected words.

Example: **すずき** was previously converted to **鈴木**.

 
1 3 **す** (す) →

2 Select word/phrase →


Katakana

Follow these steps to switch to double-byte katakana mode and enter **ジュン**.

1 → **アイウ** →



 
2 3 **シ** (シ) → (シ) →
 8 **ユ** (ユ) → (ユ) →
 0 **ン** (ン) →



Pictograms & Symbols

May be unavailable depending on the entry mode.

 1

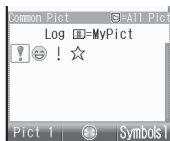

- Pictogram/Symbol Log appears.

2 or → **List toggles**



- While entering message subject or text, press in Pictogram List to toggle Cross-Carrier Pictograms and all Pictograms.

3 **Select Pictogram or Symbol**
 →

- Pictograms are double-byte even in single-byte modes.

4 → **List closes**

Emoticons

1 → **Emoticons** →

2 **Select emoticon** →

Alternative Emoticon Entry Method

- In kanji (hiragana) mode, type **かお** or a descriptive word such as **わーい** or **うーん**, then convert the entry.

EmoticonWordLink

- Immediately after inserting a descriptive word such as **嬉しい** or **悲しい**, corresponding emoticons may appear in the suggestion list.



Mail & Web Extensions

Enter **.co.jp**, **http://**, etc., easily.

1 ➔ **Quick Addr. List** ➔

2 **Select extension** ➔

- Extensions are single-byte even in double-byte entry modes.

 
Hiragana to Katakana/ Alphanumeric Conversion

Enter katakana and alphanumerics in kanji (hiragana) mode.

Example: To enter **PM**

Use key inscriptions.

1 ➔

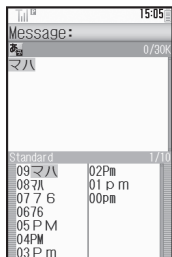

2 **Select word/phrase (PM)** ➔

Quick Conversion (for Hiragana)

A list of word suggestions appears based on the key pressed.

Example: To enter **終電**

1 (さ) ➔ (や) ➔ (あ)
➔ (た) ➔ (か) ➔



2 **Select word/phrase (終電)** ➔

One Hiragana Word Call

- Type the first hiragana of entries you used Quick Conversion for and press .

 


Editing Characters


Deleting & Editing

Follow these steps to correct **また、お願
いします** to **また明日お願いします**.

1 Select character




2

 

- The highlighted character is deleted.

 3 Select target location → Enter characters



Recovering Deleted Characters

- Press once for each character after deletion.

Deleting All Text

 
- Long Press at the end of text. To delete characters on and after cursor, select the first character of text and Long Press .

Jumping to the End or Top of Text

- **Cursor Position** → → **Jump to End or Jump to Top** →

Copy/Cut & Paste

1 → **Cut or Copy** → → **Select first character** →




Cut

- To cancel and start over, press .

2 **Highlight text range** →

 3 **Select target location** → (Long)



- Text is entered.

Pasting Previously Cut/Copied Text

Select target location → → **Paste**

→ → **Select text** →

- Available when Paste List appears.

Advanced

 
- Undo conversion or recover deleted characters
- Inserting Phone Book entry items (P.2-15)

Saving Frequently Used Words

Saving Words (Japanese)

Saved words appear among suggestions.

- 1 ➔ **Settings** ➔ ➔
Phone/ ➔ **User**
Dictionary ➔



User Dictionary Menu

- 2 **New Entry** ➔ ➔ **Enter**
word ➔
- 3 **Enter reading** ➔

Editing Entries

- In , **Saved Word List** ➔ ➔
Select word ➔ ➔ **Edit** ➔ ➔
Edit reading ➔ ➔ **Yes** ➔

840SH Download Dictionary (Japanese)

Get specialized 840SH Download Dictionaries via SH-web Mobile Internet site (*ソフトメーカー* *ソフトSH-web* in Bookmarks; see P.5-7).

Activate dictionaries to improve handset character conversion. Dictionary words appear among suggestions.

Some dictionary files may not be usable.

- 1 **In User Dictionary menu,**
Acquire Dictionary ➔
- 2 **Select number** ➔ ➔
Select dictionary ➔
• Existing dictionary is replaced.

Canceling Dictionary

- In , **select dictionary** ➔ ➔
Cancel ➔

Viewing Dictionary Information

- In , **select dictionary** ➔ ➔ **Info**
➔

Advanced

- Deleting entries (P.2-15)



Creating Phone Book Entries

Enter a name, phone number and mail address (enter at least one of these items) and classify the entry.

1 **Phone** **Add New Entry**



2 **Last Name:** **Enter last name** **First Name:** **Enter first name**



 
• Characters entered for names (reading for kanji) appear.

3 **Add Phone Number:** **Enter phone number** **Select type**




• To save additional phone numbers, repeat .

4 **Add Email Address:** **Enter mail address** **Select type**

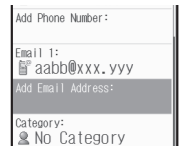

• To save additional mail addresses, repeat .

 5 **Category:** **Select Category**

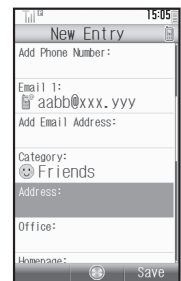

Phone Book Entry Window

6 **Entry is saved to Phone Book.**









Incoming Calls while Creating Entry
 • Contents are temporarily saved. End the call to return.

Advanced

- Saving other information
- Changing vibration pattern
- Editing Phone Book entries
- Setting incoming mail ring time
- Renaming Categories
- Changing Category icons
- Changing Category Order (P.2-16 - 2-17)





Personal Ringtone

Set tone for calls from saved numbers.

- 1 In Phone Book entry window, select item, e.g., *Tone-Voice Call*:**  
- 2 Assign Tone**   **Select folder** 
- 3 Select tone/file**   

Saving Secret Entries















Hide Phone Book entries to require Handset Code for access.

- 1 In Phone Book entry window, *Secret*:** 
- 2 On**   

Accessing Secret Entries

-    **Unlock Temporarily** 
 **Enter Handset Code** 

Customizing Response by Category

 
- 1**   **Phone**   **Set Category** 
- 2 Select Category**   **Select item** 
- 3 Select item**   **Select item, e.g., *Assign Tone***   **Customize responses**  
 - Customize responses in the same way as Phone Book entries.
 - Not available for USIM Card.






Responses Set by Phone Book Entry

- Settings for each entry take priority.

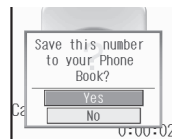






Saving Numbers After Calls

After a call, save number to Phone Book.



- 1 When confirmation appears, *Yes*:** 
- 2 As New Entry**   **Complete other fields**  

Saving to an Existing Entry

- In , **As New Detail**   **Select entry**   **Complete other fields**  



Using Phone Book Entries

Dialing via Phone Book

- 1 → Select katakana row



Entry Search Window (By あかさたな)

- 2 Select entry →



- 3 Select phone number

- 4

Placing Video Calls

After → Video Call →

Changing Search Method

- 1 In entry search window, → Ph.Book Settings →

- 2 Sort Entries →

- 3 Select method →


• Phone Book Search Methods:

By あかさたな	Shows entries with Readings that start with katakana in the specified row
By Category	Opens entries in the specified Category
By Reading	Shows all entries in Reading order (katakana, alphabetical then numerical)

Changing Search Method Temporarily
[Entry Search Window] (press to toggle search methods)

Opening from Other Functions

 Example: Enter a recipient via Phone Book when sending a message.

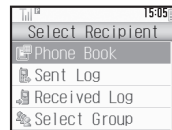

Select Recipient Window

- 1 Phone Book →

• Entry search window opens.

- 2 Select entry →

- 3 Select phone number or mail address →

• Recipient is entered.

• Omit if only one number or address is saved.

Advanced

- Changing view for entry search window • Assigning images to Phone Book entries for incoming transmissions • Messaging via Phone Book
• Deleting Phone Book entries • Checking memory status • Copying Phone Book entries (And more on P.2-16 - 2-17)



Text Entry	
Entry & Edit	
Using Character Codes	In a text entry window, → <i>Character Code</i> → → Enter four digits
Using Pager Code	In a text entry window, → <i>Input/Conversion</i> → → <i>Input Method</i> → → <i>Pager Code</i> → ● Return to text entry window and enter two digits.
Inserting line breaks	At the End of Text In a text entry window,
	Mid-Entry In a text entry window, → → → → →
Inserting spaces	In a text entry window,
Using Keypad to enter words/phrases from suggestion list	In a text entry window, → <i>Input/Conversion</i> → → <i>Select Candidate</i> → → <i>Enable 1-9, 0, *, #</i> →
Clearing entry log	In a text entry window, → <i>Input/Conversion</i> → → <i>Reset Log</i> → → <i>Yes</i> →
Undo conversion or recover deleted characters	In a text entry window, → <i>Undo/Recover</i> →
Inserting Phone Book entry items	In a text entry window, → <i>Insert/Font Size</i> → → <i>Phone Book</i> → → <i>Select entry</i> → → <i>Select item</i> →
Changing Font Size	In a text entry window, → <i>Insert/Font Size</i> → → <i>Font Size</i> → → <i>Select size</i> →

Conversion

Disabling suggestions based on entered characters	In a text entry window, → <i>Input/Conversion</i> → → <i>Predictive</i> → → <i>Off</i> →
Disabling suggestions based on entered words	In a text entry window, → <i>Input/Conversion</i> → → <i>Previous Usage</i> → → <i>Off</i> →
Disabling emoticon/Pictogram suggestions based on entered words	In a text entry window, → <i>Input/Conversion</i> → → <i>EmoticonWordLink</i> → → <i>Off</i> →
Lowering type priorities in suggestion list	In a text entry window, → <i>Input/Conversion</i> → → <i>Set Low Priority</i> → → <i>Select type</i> → →
Selecting a suggestion mode	In a text entry window, → <i>Input/Conversion</i> → → <i>Personal Mode</i> → → <i>Select mode</i> →

User Dictionary

Deleting entries	→ <i>Settings</i> → → <i>Phone/Phone</i> → → <i>User Dictionary</i> → → <i>Saved Word List</i> → → <i>Select word</i> → → <i>Yes</i> →
------------------	---------------------------------------------------------------------------------------------------------------------------------------------



Phone Book

■ View Settings

Changing view for entry search window	<ul style="list-style-type: none"> ☐ → Phone → ☐ → Ph.Book Settings → ☐ → View Settings → ☐ → List Only → ☐
Assigning images to Phone Book entries for incoming transmissions	<ul style="list-style-type: none"> Start Here ☐ → Phone → ☐ → Add New Entry → ☐ → Picture: → ☐ → See below <p>Assigning Images</p> <ul style="list-style-type: none"> Assign Picture → ☐ → Select image → ☐ <p>Capturing Images</p> <ul style="list-style-type: none"> Take Picture → ☐ → Frame image on Display → ☐ → ☐
Hiding confirmation after calls to/from unsaved numbers	<ul style="list-style-type: none"> ☐ → Phone → ☐ → Ph.Book Settings → ☐ → New Number Prompt → ☐ → Incoming Call or Outgoing Call → ☐ → Off → ☐

■ Saving Entries

Press **[Y]** at the end to save entry. (At least a name, phone number or mail address must be entered.)

Saving other information	<ul style="list-style-type: none"> Start Here ☐ → Phone → ☐ → Add New Entry → ☐ → See below <p>Address</p> <ul style="list-style-type: none"> Address: → ☐ → Select item → ☐ → Complete field → ☐ → [Y] <p>Office</p> <ul style="list-style-type: none"> Office: → ☐ → Select item → ☐ → Enter text → ☐ → [Y] <p>Homepage</p> <ul style="list-style-type: none"> Homepage: → ☐ → Enter URL → ☐ → Select type → ☐ <p>Note</p> <ul style="list-style-type: none"> Note: → ☐ → Enter text → ☐ <p>Birthday</p> <ul style="list-style-type: none"> Birthday: → ☐ → Enter date → ☐
	<ul style="list-style-type: none"> ☐ → Phone → ☐ → Add New Entry → ☐ → Select item, e.g., <i>Vibration-Message</i>: → ☐ → Switch On/Off → ☐ → Select option → ☐ → Vibration Pattern → ☐ → Select pattern → ☐
	<ul style="list-style-type: none"> ☐ → [Y]
	<ul style="list-style-type: none"> ☐ → [Y]

■ Editing Entries & Categories

Editing Phone Book entries	<ul style="list-style-type: none"> ☐ → Select entry → ☐ → Edit → ☐ → Select item → ☐ → Edit → ☐ → [Y] • Edit Reading after editing names.
Setting incoming mail ring time	<ul style="list-style-type: none"> ☐ → Select entry → ☐ → Edit → ☐ → Tone-New Message: → ☐ → Duration → ☐ → Enter time → ☐ → [Y] • Available for compatible ringtones.



Renaming Categories	<ul style="list-style-type: none"> ☐ → Phone → ☐ → Set Category → ☐ → Select Category → ☐ → Edit Name → ☐ → Enter name → ☐
Changing Category icons	<ul style="list-style-type: none"> ☐ → Phone → ☐ → Set Category → ☐ → Select Category → ☐ → Change Icon → ☐ → Select Pictogram → ☐
Changing Category Order	<ul style="list-style-type: none"> ☐ → Phone → ☐ → Set Category → ☐ → Select Category → ▾ → Select target location → ☐ <ul style="list-style-type: none"> • View for <i>By Category</i> Phone Book search changes accordingly.

■ Using Entries

Messaging via Phone Book	<ul style="list-style-type: none"> Start Here ☐ → Select entry → ☐ → See below <p>Phone Numbers</p> <ul style="list-style-type: none"> Select phone number → ☐ → Create Message → ☐ → S! Mail or SMS → ☐ → Complete message → ▾ <p>Mail Addresses</p> <ul style="list-style-type: none"> Select mail address → ☐ → Complete message → ▾
	<ul style="list-style-type: none"> ☐ → Select entry → ☐ → Select phone number → ☐ → Int'l Call → ☐ → Select country → ☐ → ☐
	<ul style="list-style-type: none"> ☐ → Select entry → ☐ → Select phone number → ☐ → Int'l Call → ☐ → Select country → ☐ → ☐

■ Managing Entries

Deleting Phone Book entries	<p>One Entry</p> <ul style="list-style-type: none"> ☐ → Select entry → ☐ → Delete → ☐ → Yes → ☐
	<p>All Entries</p> <ul style="list-style-type: none"> ☐ → Phone → ☐ → Manage Entries → ☐ → Delete All → ☐ → Select entry type → ☐ → Yes → ☐ → Enter Handset Code → ☐
Checking memory status	<ul style="list-style-type: none"> ☐ → Phone → ☐ → Manage Entries → ☐ → Memory Status → ☐

Copying Phone Book entries	<p>One Entry (Handset → USIM Card)</p> <ul style="list-style-type: none"> ☐ → Select entry → ☐ → Manage Entries → ☐ → Copy Entry to USIM → ☐ → Yes → ☐ <p>One Entry (USIM Card → Handset)</p> <ul style="list-style-type: none"> ☐ → ☐ → Ph.Book Settings → ☐ → Select Phone Book → ☐ → USIM Memory → ☐ → Select entry → ☐ → Manage Entries → ☐ → Copy Entry to Phone → ☐ <p>All Entries</p> <ul style="list-style-type: none"> ☐ → ☐ → Manage Entries → ☐ → Copy All → ☐ → Select method → ☐ → Yes → ☐ <ul style="list-style-type: none"> • If handset/USIM Card memory is low, some entries may not be copied.
	<ul style="list-style-type: none"> Start Here ☐ → Phone → ☐ → Set Category → ☐ → ☐ → ☐ → Change to USIM → ☐ → See below <p>Renaming Categories</p> <ul style="list-style-type: none"> Select Category → ☐ → Edit Name → ☐ → Enter name → ☐ <p>Changing Order</p> <ul style="list-style-type: none"> Select Category → ▾ → Select target location → ☐ <p>Changing Icons</p> <ul style="list-style-type: none"> Select Category → ☐ → Change Icon → ☐ → Select Pictogram → ☐
	<p>Changing default storage media for new entries</p> <ul style="list-style-type: none"> ☐ → Phone → ☐ → Ph.Book Settings → ☐ → Save New Entry → ☐ → USIM Memory or Ask Each Time → ☐ <p>Switching reference Phone Book</p> <ul style="list-style-type: none"> ☐ → Phone → ☐ → Ph.Book Settings → ☐ → Select Phone Book → ☐ → USIM Memory or Both → ☐



Phone Book

Assigned images do not appear for incoming transmissions

- Source files may be deleted or moved to Memory Card; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Images do not appear if corresponding Phone Book entry is set to Secret.
- Images may not appear when another function is active, etc.

Handset does not ring for incoming transmissions as set

- Source files may be deleted; reassign files.
- When using copy protected files, etc., confirm that source file license/usage period has not expired.
- Ringtone/ringvideo settings are disabled if corresponding Phone Book entry is set to Secret.
- Memory Card with source files may be removed; reinsert the card to restore settings.

Cannot enter 16 characters for Category names

- Character entry limit for Category names may be lower depending on the USIM Card in use.

