

<b>Internet Services .....</b>	<b>5-2</b>
Service Basics .....	5-2
<b>Yahoo! Keitai .....</b>	<b>5-3</b>
Using Yahoo! Keitai.....	5-3
<b>PC Site Browser .....</b>	<b>5-4</b>
Using PC Site Browser .....	5-4

<b>Browsing .....</b>	<b>5-5</b>
Basic Operations .....	5-5
<b>Bookmarks &amp; Saved Pages .....</b>	<b>5-7</b>
Using Bookmarks & Saved Pages....	5-7
<b>Additional Functions .....</b>	<b>5-8</b>
<b>Troubleshooting.....</b>	<b>5-14</b>

# 5

## Internet



## Service Basics

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser.

- Service requires a separate contract; retrieve Network Information to use these services.
- For more about Yahoo! Keitai, see SoftBank Mobile Website (P.14-21).

### Transmission/Information Fees

Some page content may automatically activate Internet connection incurring transmission fees. Information fees may also apply.

### Security

Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

### Secure Pages

- A confirmation appears before entering and exiting secure pages.
- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GMO GlobalSign, RSA Security, SECOM Trust Systems and Comodo Japan cannot be held liable for any damages associated with the use of SSL.

## Advanced

- Clearing cache (temporarily saved information)
- Clearing authentication information (And more on P.5-8)
- Disabling manufacture number auto send for authentication
- Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.) (And more on P.5-13)



# Using Yahoo! Keitai

## Using Yahoo! Keitai Main Menu

Browse Yahoo! Keitai sites from Yahoo! Keitai Main Menu.


Internet pages may not open depending on connection/Server status, etc.

### 1 → Connection starts



Cursor

Internet Page

- Yahoo! Keitai Main Menu appears.
- To disconnect, press .

### 2 Highlight menu item →

- Corresponding page opens.
- Repeat 2 to open additional links.

### 3 → Yes → → Page closes

## Returning to Previous Pages

[Internet Page]  → Previous page opens


- Follow these steps to return to the initial page:

[Internet Page]  → Forward → 

Returning to Yahoo! Keitai Main Menu

[Internet Page]  → Yahoo! Keitai → 


## User Authentication

Enter user ID or password →  → 

## Accessing メニューリスト Directly

 → Yahoo! →  → Menu List → 

## Playing Media Streams (Streaming)

[Internet Page] Select file → 

- Downloaded content cannot be saved.
- Packet transmission fees apply even while stream is paused.

## Using History

1  →  → Yahoo! →  →  → History → 

2 Select record →  →  → Connection starts

- Corresponding page opens.

3  → Yes →  → Page closes

## Entering URLs Directly

1  →  → Yahoo! →  → Enter URL → 

2 Enter URL →  →  → Connection starts

- Corresponding page opens.

3  → Yes →  → Page closes

## Advanced

- Switching browsers
- Using previously entered URLs
- Deleting History records
- Opening History properties
- Sorting History records
- Sending History records via mail (P.5-8)
- Customizing streaming settings
- Streaming from Media Player (P.5-11)



## Using PC Site Browser

Browse PC sites from Yahoo! JAPAN (preset home page).

- Internet pages may not open depending on connection/Server status, etc.
- Browsing PC sites may incur high charges depending on subscribed price plan.

1 [Home] → **Yahoo!** → [Home] → **PC Site Browser** → [Home]

2 [Home] → **Homepage** → [Home] → **Connection starts**



Internet Page

- Yahoo! JAPAN Home opens.
- If a message appears, follow onscreen prompts.
- To disconnect, press [Power Off].

3 **Highlight menu item** → [Home]

- Corresponding page opens.
- Repeat [Home] to open additional links.

4 [Home] → **Yes** → [Home] → **Page closes**

### Returning to Previous Pages

[Internet Page] [Home] → **Previous page opens**

- Follow these steps to return to the initial page:

[Internet Page] [Home] → **Forward** → [Home]

### Returning to Yahoo! JAPAN Home

[Internet Page] [Home] → **Homepage** → [Home]

### User Authentication

Enter user ID or password → [Home] → [Home]

### Using History

In [Home], **History** → [Home] → Select record → [Home]

### Entering URLs Directly

In [Home], **Enter URL** → [Home] → Enter URL → [Home]

### Hiding Softkeys

[Internet Page] [Home] → **Convenient Functions** → [Home] → **Softkey Area** → [Home] → **Off** → [Home]

### Browsing in Wideview

[Internet Page] [Home] → **Convenient Functions** → [Home] → **Rotation** → [Home]

- Use Multi Selector according to page orientation.

## Advanced

- Switching browsers
- Using previously entered URLs
- Deleting History records
- Opening History properties
- Sorting History records
- Sending History records via mail (P.5-8)
- Hiding navigation map for continuous scroll
- Changing scroll unit
- Hiding PC Site Browser messages (P.5-10)



 
## Basic Operations

### Page Browsing

#### Scrolling Pages


If page content continues beyond view, use to scroll pages.

Long Press to scroll continuously.

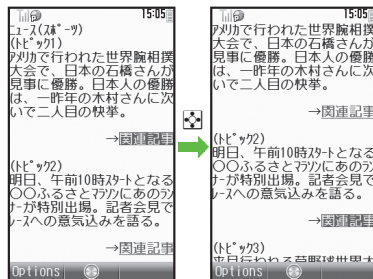

### Switching Frames

 On framed pages, Long Press to select other frames.

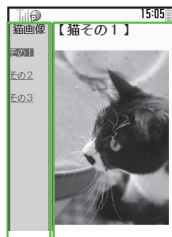

Frames

- In pointer navigation, point to a frame and press to select it.
- Otherwise, use to select one.

#### Viewing Single Frame

[Internet Page] Select frame

Convenient Functions

Frame In

- To return, press .

 
### Tabbed Browsing

Open another page in a new tab and switch between tabs.

#### Opening a New Tab

##### 1 On a page, select menu item

##### 2 Open in New Tab



#### Switching Tabs

##### 1 (Long) Select tab

- In pointer navigation, point to a tab and press to open it.

#### Closing Tabs

(Long) Select tab

Close Tab or

Close All Other Tabs

### Advanced

- Using Web Search
- Searching current page
- Jumping to page top/bottom
- Saving files to Data Folder
- Changing Font Size
- Enlarging specific areas
- Disabling automatic image display/sound playback
- Changing scroll unit (And more on P.5-9 - 5-10)



## Selecting Text

 
Activate pointer navigation to enable text selection (Drag Mode). Select text to copy.

- Text may not be selectable or linked page may open depending on the site or page.
- Follow these steps to create a message:

### 1 On a page, point to first character ➡ (Long)

- Drag Mode is activated.

### 2 Highlight text range

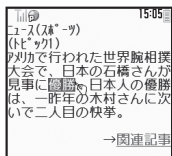

### 3

### 4 ➡ *Create Message* ➡

### 5 Select mail type ➡ ➡

### Complete message ➡

 
- S! Mail Composition window opens automatically depending on character count.

## Starting Over

- After , point to first character ➡   
➡ From

## Additional Page Operations

Enter text or select/execute items.

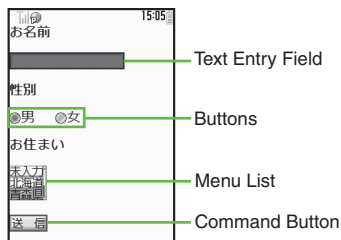

## Text Entry

### 1 On a page, select text entry field ➡

### 2 Enter text ➡

- Internet page returns.

## Using Entered Text (Input Memory)

[Internet page] Select text entry field ➡

➡  ➡ *Insert/Font Size* ➡  ➡

*Input Memory* ➡  ➡ *Select text* ➡

## Pull-down Menu Item Selection

### 1 On a page, select menu list field ➡

### 2 Select item ➡

## When Multiple Selection is Supported

- Select items as needed and press .

## Page Item Indicators

### ■ Selection Items

Buttons  or boxes  appear.

### 1 On a page, select button or box ➡



- /  changes to / .

### ■ Execution Items

Execute the assigned command.

### 1 On a page, select command ➡








## Using Bookmarks & Saved Pages

### Bookmarks

Bookmark sites for quick access.

#### Saving Bookmarks

- 1 On a page,  ➔ **Bookmarks**  
➔  ➔ **Save** ➔ 
  - Save appears only for savable pages.
- 2 Enter/edit title ➔ 
- 3 Save ➔ 

### Opening Bookmarks


1  



2 Select title ➔ 

- Corresponding page opens.

#### Switching Bookmarks Lists

After 1,  ➔ **Change List** ➔  ➔  
Select type ➔ 

#### Opening Bookmarks Online

[Internet Page]  ➔ Select title ➔ 

### Saved Pages

Save page content; handset opens saved pages without connecting to the Internet.

#### Saving Pages

- 1 On a page,  ➔ **Saved Pages** ➔  ➔ **Save** ➔ 
  - Save appears only for savable pages.

2 Enter/edit title ➔ 





#### Opening Saved Pages

- 1  ➔ **Yahoo!** ➔  ➔ **Saved Pages** ➔ 

2 Select page ➔ 

- Corresponding page opens.









#### Opening Saved Pages Online

[Internet Page]  ➔ **Saved Pages** ➔  
 ➔ **Open List** ➔  ➔ Select page  
➔ 

5

Internet

### Advanced

-   Deleting titles  Editing titles  Changing title order  Sorting titles into folders  Deleting pages  Editing page titles  Changing page order (And more on P.5-11 - 5-12)



## Connecting & Browsing

### General

Switching browsers	On a page,  → <i>Convenient Functions</i> →  → <i>Change to PC Browser or Switch Browser</i> →  → <i>This Page or Linked Page</i> →  → <i>Yes or No</i> →
Using previously entered URLs	<i>Start Here</i> →  → <i>Yahoo!</i> →  → <i>See below</i> <b>Yahoo! Keitai</b> <i>Enter URL</i> →  →  → <i>URL Entry Log</i> →  → <i>Select URL</i> →  → <b>PC Site Browser</b> <i>PC Site Browser</i> →  → <i>Enter URL</i> →  →  →  →  → <i>URL Entry Log</i> →  → <i>Select URL</i> →  →  →

### History

Deleting History records	<i>Start Here</i> →  → <i>Yahoo!</i> →  → <i>History</i> →  →  → <i>Change to PC Browser or Switch Browser</i> →  → <i>See below</i> <b>One Record</b> <i>Select record</i> →  → <i>Delete</i> →  → <i>Yes</i> → <b>All Records</b> → <i>Delete All</i> →  → <i>Enter Handset Code</i> →  → <i>Yes</i> →
Opening History properties	→ <i>Yahoo!</i> →  → <i>History</i> →  → <i>Select record</i> →  → <i>Details</i> →
Sorting History records	→ <i>Yahoo!</i> →  → <i>History</i> →  →  →  → <i>Sort</i> →  → <i>By Domain or By Date</i> →

### Sending History records via mail

→ *Yahoo!* → → *History* → → *Select record* → → *Send URL* → → *S! Mail or SMS* → → *Complete message* →

- S! Mail Composition window opens automatically depending on character count.

### Memory Operation

For PC Site Browser, perform the following sequence instead of *Browser Settings* → .

*PC Site Browser* → → *PC Site Browser Settings* →






























































Clearing cache (temporarily saved information)	→ <i>Yahoo!</i> →  → <i>Browser Settings</i> →  → <i>Memory Operation</i> →  → <i>Delete Cache</i> →  → <i>Yes</i> →
Clearing cookies	→ <i>Yahoo!</i> →  → <i>Browser Settings</i> →  → <i>Memory Operation</i> →  → <i>Delete Cookies</i> →  → <i>Yes</i> →
Clearing authentication information	→ <i>Yahoo!</i> →  → <i>Browser Settings</i> →  → <i>Memory Operation</i> →  → <i>Delete Auth Info</i> →  → <i>Yes</i> →










## Page Operations

## ■ Yahoo! Keitai &amp; PC Site Browser

Using linked info	<b>Dialing Numbers</b> On a page, highlight number →   → <i>Call or Video Call</i> →  
	<b>Sending Messages</b> On a page, highlight number or mail address →   → <i>Create Message</i> →   → <i>S! Mail or SMS</i> →   → <i>Complete message</i> →   • For mail addresses, omit mail type selection step.
Copying text	On a page,   → <i>Copy Text</i> →   → <i>Select first character</i> →   → <i>Highlight text range</i> →  
Using Web Search	On a page,   → <i>Convenient Functions</i> →   → <i>Web Search</i> →   → <i>Enter search text</i> →  
Searching current page	On a page,   → <i>Convenient Functions</i> →   → <i>Search</i> →   → <i>Enter search text</i> →   • Press  to jump to next search result, if any.
Jumping to page top/bottom	On a page,   → <i>Convenient Functions</i> →   → <i>Jump In Page</i> →   → <i>Page Top or Page Bottom</i> →  
Opening page properties	On a page,   → <i>Convenient Functions</i> →   → <i>Details</i> →   → <i>Select item</i> →  
Sending URLs via mail	On a page,   → <i>Convenient Functions</i> →   → <i>Send URL</i> →   → <i>S! Mail or SMS</i> →   → <i>Complete message</i> →   • S! Mail Composition window opens automatically depending on character count.

## Handling Flash® files

  *Start Here* On a page,   → *Convenient Functions*  
 →   → *Flash@Menu* →   → *See below*

## Pausing/Playing

*Pause, Resume or Replay* →  

## Selecting Image Quality

*Quality* →   → *Select quality* →  

## Saving files to Data Folder

  *Start Here* On a page,   → *Save Items* →   → *See below*

## Files on Page

*Select file* →   → *Save* →   → *Enter name*  
 →   → *Save here* →  

- Some files are saved automatically.
- Confirm signal is strong, battery is adequately charged and that there is enough free memory beforehand.

## Background Images

*Save Background Image* →   → *Save* →   → *Enter name* →   → *Save here* →  

## Updating page content

On a page,   → *Reload* →  

- To update content in Saved Pages, open a page and follow the steps above.

## Changing encoding to read garbled text






On a page,   → *Settings* →   → *Char-code*  
 →   → *Select option* →  

## Opening function shortcuts

On a page,   → *Help* →  

## ■ Yahoo! Keitai

## Changing Font Size

On a page,    (Long) to enlarge or   (Long) to reduce



## ■ PC Site Browser

Switching view	On a page,  → <i>PC Screen or Small Screen</i> → <ul style="list-style-type: none"> <li>In Small Screen view, PC sites are redesigned to fit Display.</li> </ul>
Zooming on pages (Zoom Factor)	On a page,  (Long) to enlarge or  (Long) to reduce
Jumping to specific locations	On a page,  (Long) → Quick Movement map appears → Select target location →
Enlarging specific areas	On a page, point to area →  (Long) <ul style="list-style-type: none"> <li>Pointed area is enlarged while  is pressed.</li> </ul>

## Internet Page Settings

### ■ Yahoo! Keitai & PC Site Browser

For PC Site Browser, perform the following sequence instead of *Browser Settings* → .

*PC Site Browser* → → *PC Site Browser Settings* →

Disabling automatic image display/sound playback	<i>Start Here</i> →  → <i>Yahoo!</i> →  → <i>Browser Settings</i> →  → <i>Downloads</i> →  → See below
	<b>Image Display</b> <i>Images</i> →  → <i>Do not Show</i> →
	<b>Sound Playback</b> <i>Sounds</i> →  → <i>Do not Play</i> →
Changing Font Size	→ <i>Yahoo!</i> →  → <i>Browser Settings</i> →  → <i>Font Size</i> →  → Select size →

Using pointer navigation	<i>Start Here</i> →  → <i>Yahoo!</i> →  → <i>Browser Settings</i> →  → <i>Cursor Settings</i> →  → See below
	<b>Activating</b> <i>Cursor Mode Settings</i> →  → <i>Normal Mode</i> →
	<b>Changing Pointer Speed</b> <i>Speed Settings</i> →  → Select speed →
Using Memory Card as primary download storage	→ <i>Yahoo!</i> →  → <i>Browser Settings</i> →  → <i>Download to</i> →  → <i>Prefer Card</i> → <ul style="list-style-type: none"> <li>Some files may be saved to handset regardless of this setting.</li> </ul>

### ■ Yahoo! Keitai

Changing scroll unit	→ <i>Yahoo!</i> →  → <i>Browser Settings</i> →  → <i>Scroll Unit</i> →  → Select unit →
----------------------	---

### ■ PC Site Browser

Hiding navigation map for continuous scroll	→ <i>Yahoo!</i> →  → <i>PC Site Browser</i> →  → <i>PC Site Browser Settings</i> →  → <i>Scroll Settings</i> →  → <i>Page Navigation</i> →  → <i>Off</i> →
Changing scroll unit	→ <i>Yahoo!</i> →  → <i>PC Site Browser</i> →  → <i>PC Site Browser Settings</i> →  → <i>Scroll Settings</i> →  → <i>Scroll Unit</i> →  → Select unit →
Hiding PC Site Browser messages	→ <i>Yahoo!</i> →  → <i>PC Site Browser</i> →  → <i>PC Site Browser Settings</i> →  → <i>Warning Message</i> →  → <i>PC Site Browser or Yahoo! Keitai</i> →  → <i>Off</i> →



Streaming	
Customizing streaming settings	<p><b>Start Here</b> <input type="checkbox"/> While streaming, <input type="checkbox"/> <b>Settings</b> <input type="checkbox"/></p> <p>➔ See below</p> <p><b>Changing Playback Size</b></p> <p><b>Display Size</b> <input type="checkbox"/> ➔ <b>Select size</b> <input type="checkbox"/></p> <ul style="list-style-type: none"> <li>• Playback size may not change depending on file/stream.</li> </ul> <p><b>Setting Backlight Status</b></p> <p><b>Backlight</b> <input type="checkbox"/> ➔ <b>Select option</b> <input type="checkbox"/></p> <ul style="list-style-type: none"> <li>• Selecting <b>Normal Settings</b> applies Display Backlight settings.</li> </ul> <p><b>Adjusting Sound Effects</b></p> <p><b>Sound Effects</b> <input type="checkbox"/> ➔ <b>Select effect</b> <input type="checkbox"/></p>
	<p><b>Start Here</b> <input type="checkbox"/> ➔ <b>Media</b> <input type="checkbox"/> ➔ <b>Streaming</b> <input type="checkbox"/></p> <p>➔ See below</p> <p><b>Resuming from Stopped Point</b></p> <p><b>Last Played</b> <input type="checkbox"/></p> <p><b>Using Bookmarks</b></p> <p><b>Bookmarks</b> <input type="checkbox"/> ➔ <b>Select title</b> <input type="checkbox"/></p> <p><b>Using History</b></p> <p><b>History</b> <input type="checkbox"/> ➔ <b>Select record</b> <input type="checkbox"/></p>

Bookmarks	
Deleting titles	<p><b>One Title</b></p> <p><input type="checkbox"/> ➔ <b>Select title</b> <input type="checkbox"/> ➔ <b>Delete</b> <input type="checkbox"/> ➔ <b>Yes</b> <input type="checkbox"/></p> <p><b>All Titles</b></p> <p><input type="checkbox"/> ➔ <b>Delete All</b> <input type="checkbox"/> ➔ <b>Enter Handset Code</b> <input type="checkbox"/> ➔ <b>Yes</b> <input type="checkbox"/></p>
	<p><b>Editing titles</b></p> <p><input type="checkbox"/> ➔ <b>Select title</b> <input type="checkbox"/> ➔ <b>Edit</b> <input type="checkbox"/> ➔ <b>Title:</b> <input type="checkbox"/> ➔ <b>Enter title</b> <input type="checkbox"/> ➔ <input type="checkbox"/></p>
Editing bookmarked URLs	<p><input type="checkbox"/> ➔ <b>Select title</b> <input type="checkbox"/> ➔ <b>Edit</b> <input type="checkbox"/> ➔ <b>URL:</b> <input type="checkbox"/> ➔ <b>Edit</b> <input type="checkbox"/> ➔ <input type="checkbox"/></p>
Sending bookmarked URLs via mail	<p><input type="checkbox"/> ➔ <b>Select title</b> <input type="checkbox"/> ➔ <b>Send</b> <input type="checkbox"/> ➔ <b>As Message</b> <input type="checkbox"/> ➔ <b>SI Mail or SMS</b> <input type="checkbox"/> ➔ <b>Complete message</b> <input type="checkbox"/></p> <ul style="list-style-type: none"> <li>• SI Mail Composition window opens automatically depending on character count.</li> </ul>
Changing title order	<p><input type="checkbox"/> ➔ <b>Select title</b> <input type="checkbox"/> ➔ <b>Change Order</b> <input type="checkbox"/> ➔ <b>Select target location</b> <input type="checkbox"/></p>
Opening title properties	<p><input type="checkbox"/> ➔ <b>Select title</b> <input type="checkbox"/> ➔ <b>Details</b> <input type="checkbox"/></p>



## Sorting titles into folders

## Creating Folders

**Create Folder** Enter name

## Moving to Folders

**Select title** **Move** **Move**

## Moving from Folders

**Select folder** **Select title** **Move**

## Renaming Folders

**Select folder** **Rename** Enter name

## Deleting All Titles within a Folder

**Select folder** **Delete All** Enter Handset Code **Yes**

## Deleting Folders

**Select folder** **Delete** Enter Handset Code **Yes**

## Saved Pages

Deleting pages	<b>Start Here</b> <b>Yahoo!</b> <b>Saved Pages</b> <b>See below</b>
	<b>One Page</b> <b>Select page</b> <b>Delete</b> <b>Yes</b>
Editing page titles	<b>All Pages</b> <b>Delete All</b> Enter Handset Code <b>Yes</b>
	<b>Yahoo!</b> <b>Saved Pages</b> <b>Select page</b> <b>Rename</b> Enter title
Changing page order	<b>Yahoo!</b> <b>Saved Pages</b> <b>Select page</b> <b>Change Order</b> Select target location
Opening page properties	<b>Yahoo!</b> <b>Saved Pages</b> <b>Select page</b> <b>Details</b>
Switching page list view	<b>Yahoo!</b> <b>Saved Pages</b> <b>Select page</b> <b>List View or Preview View</b>



## Security Settings

For PC Site Browser, perform the following sequence instead of **Browser Settings** ➤ [●].

**PC Site Browser** ➤ [●] ➤ **PC Site Browser Settings** ➤ [●]

Disabling manufacture number auto send for authentication	[●] ➤ <b>Yahoo!</b> ➤ [●] ➤ <b>Browser Settings</b> ➤ [●] ➤ <b>Security Settings</b> ➤ [●] ➤ <b>Manufacture Number</b> ➤ [●] ➤ <b>Off</b> ➤ [●]
Disabling referer information delivery to the Server	[●] ➤ <b>Yahoo!</b> ➤ [●] ➤ <b>Browser Settings</b> ➤ [●] ➤ <b>Security Settings</b> ➤ [●] ➤ <b>Send Referer</b> ➤ [●] ➤ <b>Not Send</b> ➤ [●]
Enabling/disabling cookies	[●] ➤ <b>Yahoo!</b> ➤ [●] ➤ <b>Browser Settings</b> ➤ [●] ➤ <b>Security Settings</b> ➤ [●] ➤ <b>Cookies</b> ➤ [●] ➤ <b>Select option</b> ➤ [●]
Selecting script execution option	[●] ➤ <b>Yahoo!</b> ➤ [●] ➤ <b>Browser Settings</b> ➤ [●] ➤ <b>Security Settings</b> ➤ [●] ➤ <b>Script Settings</b> ➤ [●] ➤ <b>Select option</b> ➤ [●]
Hiding confirmations before entering/exiting secure pages	[●] ➤ <b>Yahoo!</b> ➤ [●] ➤ <b>Browser Settings</b> ➤ [●] ➤ <b>Security Settings</b> ➤ [●] ➤ <b>Secure Prompt</b> ➤ [●] ➤ <b>Do not Show</b> ➤ [●]
Opening electronic certificates saved on handset	[●] ➤ <b>Yahoo!</b> ➤ [●] ➤ <b>Browser Settings</b> ➤ [●] ➤ <b>Security Settings</b> ➤ [●] ➤ <b>Root Certificates</b> ➤ [●] ➤ <b>Select certificate</b> ➤ [●]

Changing validity of entered user ID/password

- [●] ➤ **Yahoo!** ➤ [●] ➤ **Browser Settings** ➤ [●]  
➤ **Security Settings** ➤ [●] ➤ **Keep Auth Info** ➤ [●]  
➤ **Select option** ➤ [●]
- **Per Browsing** retains entered user ID/password during browsing sessions. **On** retains such authentication information even after turning handset off.
  - Authentication information may not be retained depending on the site.

Enabling/disabling Ajax (for asynchronous communication)

- [●] ➤ **Yahoo!** ➤ [●] ➤ **Browser Settings** ➤ [●]  
➤ **Security Settings** ➤ [●] ➤ **Restrict Ajax** ➤ [●]  
➤ **Select option** ➤ [●]

## Resetting

For PC Site Browser, perform the following sequence instead of **Browser Settings** ➤ [●].

**PC Site Browser** ➤ [●] ➤ **PC Site Browser Settings** ➤ [●]

Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.)

- [●] ➤ **Yahoo!** ➤ [●] ➤ **Browser Settings** ➤ [●]  
➤ **Initialized Browser** ➤ [●] ➤ **Enter Handset Code** ➤ [●] ➤ **Yes** ➤ [●]

Restoring default handset settings

- [●] ➤ **Yahoo!** ➤ [●] ➤ **Browser Settings** ➤ [●]  
➤ **Reset Settings** ➤ [●] ➤ **Enter Handset Code** ➤ [●] ➤ **Yes** ➤ [●]



## Connecting & Browsing

### ? What is the bar at Display bottom?

- This is a data progress bar; the number beside it indicates transmitted (green) or received (red) data.

## Page Operations

### ? Internet page does not open completely

- Portions of page content may not appear in tabbed browsing; close other tabs.

### ? Text overlaps

- The site may be designed for browsing on PCs; try *Tiny* font size.
- Text may overlap when Zoom Factor is used; adjust scale.

