

Media Player	7-2
Media Basics	7-2
Music	7-4
Playing Music.....	7-4
Video	7-5
Playing Video.....	7-5

Playlists	7-6
Using Playlists	7-6
S! Appli	7-7
Using S! Applications	7-7
Additional Functions	7-8
Troubleshooting	7-12

7

Media Player & S! Applications



Media Basics

Use Media Player to play music/video on 840SH.

- Download media files from Mobile Internet sites via Media Player directly.
- Transfer PC music files and save them on Memory Card.

Music File Support

My Music

(Handset/Memory Card)
Downloads/Transferred Files

Video File Support

My Videos

(Handset/Memory Card)
Downloads/Recorded Files

Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- If battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.

Compatibility

- Files transferred from PCs cannot be used as ringtones or System Sounds.

 
Streaming

- Handset plays media while it downloads.
 - Packet transmission fees apply even while stream is paused.
 - Downloaded content cannot be saved.



Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

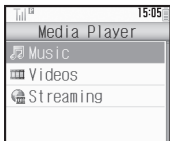

- Follow the links to download media.

Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

Saving AAC Files

Convert PC music files to 840SH-compatible format (P.14-20), then save to corresponding Memory Card folder (P.14-22) via Mass Storage. Install USB Cable driver beforehand.



Playing Music

1

2 *My Music* **Select tab (folder)**



3 *All Music*

4 **Select file**



Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files.

Using Other Functions while Playing Music

After , or

- To stop playback, follow these steps in Standby:

Searching Music Files

After , **Search** **Enter search text**

Lyric Display-Compatible Files


- Press to display lyrics.

Music Playback Operations

Replay	(Long Press: Rewind*)
Skip Forward	(Long Press: Fast Forward*)
Volume Down	(Long Press: Mute)
Volume Up or Cancel Mute	
Pause	
Stop	In Pause,
Open Help	

*Release for playback.

 Music Playback Window Description



1	Title	6	Elapsed time
2	Artist name	7	Volume
3	Track number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

 
Advanced

- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Playing repeatedly or randomly
- Changing Sound Effects (P.7-8)

Playing Video


1

2 *My Videos*

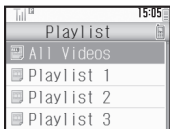

3 *All Videos*

 4 *Select file*

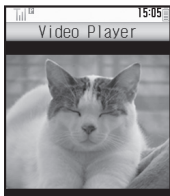

Video Playback Window

5

Searching Video Files

After *Search*

At Alarm Time

- Playback pauses.

Video Recorded on Other Devices

- Video image may appear rotated.

Video Playback Operations

For pause, volume up/down or help, see P.7-4 "Music Playback Operations."

Replay	(Long Press: Rewind*)
Skip Forward	(Long Press in Pause: Advance Frame, Long Press: Fast Forward*)
Toggle Display Size	

*Release for playback.

Video Playback Window Description



1	Title	6	Elapsed time
2	Author name	7	Volume
3	Clip number	8	Information link
4	Status	9	Sound Effects
5	Playback Mode		

Advanced

- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Playing repeatedly or randomly
- Changing Sound Effects
- Changing playback size
- Setting Backlight status
- Hiding linked information (P.7-8)



Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.

Adding to Playlist

Follow these steps to add a music file to **プレイリスト 1**:

1 ➔ **Media** ➔ ➔ **Music**
➔

2 **My Music** ➔



 
Playlists Window

3 **All Music** ➔ ➔ **Select file**
➔

4 **Add to Playlist** ➔ ➔ **プレイリスト 1** ➔

Renaming Playlists

1 **In Playlists window, select Playlist** ➔

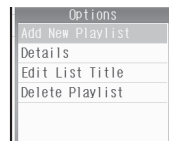

2 **Edit List Title** ➔ ➔ **Enter name** ➔



Advanced

- Organizing Playlists ● Sorting files ● Opening properties ● Downloading Contents Keys (P.7-9)
- Organizing Playlists ● Sorting files ● Downloading Contents Keys ● Opening properties (P.7-9)

 


Using S! Applications

Try out the preloaded S! Applications or download and use 840SH-compatible S! Applications, including games. Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.

1   **S! Appli** 

2 **S! Appli Library** 

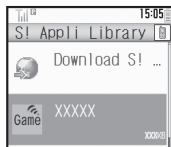

S! Appli Library

3 **Select application** 

Network S! Applications

 
- A message appears indicating that Internet connection is required. Follow onscreen instructions.

Incoming Calls

- Incoming calls automatically pause S! Application.

Exiting S! Applications

1 

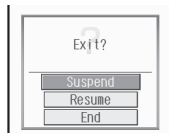

2 **End** 

Pausing S! Applications






 
 





















In  **Suspend** 

Resuming S! Applications

  **Resume** 

- Select **Cancel** to open Main Menu and keep the S! Application paused. (Additional function activation may be disabled depending on the S! Application.)
- Select **End** to exit the S! Application.

Advanced

-   Downloading S! Applications
-   Adjusting S! Application sound volume
-   Canceling surround effect
-   Setting handset responses to incoming transmissions
-   Setting S! Application to activate in Standby
-   Setting Permissions
-   Opening properties (P.7-10)
-   Moving S! Applications to Memory Card
-   Changing S! Application settings
-   Deleting S! Applications
-   Restoring default S! Application settings
-   Restoring default S! Appli Library
-   Synchronizing Memory Card S! Applications with 840SH
-   Opening Java™ license information (P.7-11)



Media Playback

Music & Video

Resuming from stopped point	<ul style="list-style-type: none"> Media Music or Videos Last Played Music or Last Played Video
Specifying start point	<ul style="list-style-type: none"> During playback, Time Search Enter time
Accessing linked information	<ul style="list-style-type: none"> During playback, Access Web Link Yes

Music


Playing repeatedly or randomly	<ul style="list-style-type: none"> During playback, Playback Mode See below
	<ul style="list-style-type: none"> Repeat One File Repeat
	<ul style="list-style-type: none"> Repeat All Files Repeat All
	<ul style="list-style-type: none"> Play Randomly Random
Changing Sound Effects	<ul style="list-style-type: none"> During playback, Sound Effects Select effect
	<ul style="list-style-type: none"> Repeat Randomly Random Repeat

Video


Playing repeatedly or randomly	<ul style="list-style-type: none"> During playback, Settings Playback Mode See below
	<ul style="list-style-type: none"> Repeat One File Repeat
	<ul style="list-style-type: none"> Repeat All Files Repeat All
Changing Sound Effects	<ul style="list-style-type: none"> During playback, Settings Sound Effects Select effect
	<ul style="list-style-type: none"> Play Randomly Random
Changing playback size	<ul style="list-style-type: none"> During playback, Settings Display Size Select size
Setting Backlight status	<ul style="list-style-type: none"> During playback, Settings Backlight Select option Selecting Normal Settings applies Display Backlight settings.
Hiding linked information	<ul style="list-style-type: none"> During playback, Settings Web Link Setting Off



Managing Music Files

Organizing Playlists	<p>Start Here → Media → Music → My Music → Select tab (folder) → See below</p> <p>Adding New Playlists Add New Playlist → Enter name</p> <p>Deleting Playlists Select Playlist → Delete Playlist → Yes</p> <p>Deleting Playlist Files Select Playlist → Select file → Delete → Yes</p> <p>Changing File Order Select Playlist → Select file → Change Order → Select target location</p>
	<p>Media → Music → My Music → Select tab (folder) → All Music → Sort → Select option</p>
	<p>Media → Music → My Music → Select tab (folder) → Select Playlist → Select file → Details</p>
	<p>Media → Music → My Music → Select tab (folder) → Select Playlist → Select file (with ) → Yes</p> <ul style="list-style-type: none"> Follow onscreen instructions.

Managing Video Files

Organizing Playlists	<p>Start Here → Media → Videos → My Videos → Phone Memory or Memory Card → See below</p> <p>Adding New Playlists Add New Playlist → Enter name</p> <p>Deleting Playlists Select Playlist → Delete Playlist → Yes</p> <p>Deleting Playlist Files Select Playlist → Select file → Delete → Yes</p> <p>Changing File Order Select Playlist → Select file → Change Order → Select target location</p>
	<p>Media → Videos → My Videos → Phone Memory or Memory Card → All Videos → Sort → Select option</p>
	<p>Media → Videos → My Videos → Phone Memory or Memory Card → All Videos → Select file (with ) → Yes</p> <ul style="list-style-type: none"> Follow onscreen instructions.
	<p>Media → Videos → My Videos → Phone Memory or Memory Card → Select Playlist → Select file → Details</p>



S! Applications

Downloading S! Applications	<ul style="list-style-type: none"> ● ➔ S! Appli ➔ ● ➔ S! Appli Library ➔ ● ➔ Download S! Appli ➔ ● ● Follow onscreen instructions.
Adjusting S! Application sound volume	<ul style="list-style-type: none"> ● ➔ S! Appli ➔ ● ➔ Settings ➔ ● ➔ Application Volume ➔ ● ➔ Adjust level ➔ ●
Canceling surround effect	<ul style="list-style-type: none"> ● ➔ S! Appli ➔ ● ➔ Settings ➔ ● ➔ Surround ➔ ● ➔ Off ➔ ●
Setting handset responses to incoming transmissions	<ul style="list-style-type: none"> Start Here ● ➔ S! Appli ➔ ● ➔ Settings ➔ ● ➔ Calls & Alarms ➔ ● ➔ See below
	<p>Showing Calls</p> <ul style="list-style-type: none"> Select item ➔ ● ➔ Show Call Notice ➔ ●
	<p>Pausing S! Application for Incoming Mail</p> <ul style="list-style-type: none"> Incoming Message ➔ ● ➔ Message Priority ➔ ●
	<p>Showing Alarm Notice</p> <ul style="list-style-type: none"> Alarm ➔ ● ➔ Alarm Notice ➔ ●
	<p>Showing Incoming S! Appli Request Notice</p> <ul style="list-style-type: none"> Notification ➔ ● ➔ Start Notice ➔ ●

Setting S! Application to activate in Standby	<ul style="list-style-type: none"> Start Here ● ➔ S! Appli ➔ ● ➔ See below
	<p>Activating Screensaver</p> <ul style="list-style-type: none"> Settings ➔ ● ➔ Screensaver ➔ ● ➔ Switch On/Off ➔ ● ➔ On ➔ ●
	<p>Setting Screensaver</p> <ul style="list-style-type: none"> S! Appli Library ➔ ● ➔ Select application ➔ ● ➔ As Screensaver ➔ ● ● As Screensaver appears for compatible S! Applications. ● Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.
	<p>Changing Screensaver Activation Time</p> <ul style="list-style-type: none"> Settings ➔ ● ➔ Screensaver ➔ ● ➔ Activation Time ➔ ● ➔ Enter time ➔ ●
Setting Permissions	<ul style="list-style-type: none"> Start Here ● ➔ S! Appli ➔ ● ➔ S! Appli Library ➔ ● ➔ Select application ➔ ● ➔ Permission ➔ ● ➔ See below
	<p>Customizing Permissions for S! Appli Operations</p> <ul style="list-style-type: none"> Select item ➔ ● ➔ Select option ➔ ●
Opening properties	<p>Resetting Permission Settings</p> <ul style="list-style-type: none"> Reset Settings ➔ ● ➔ Yes ➔ ●
	<ul style="list-style-type: none"> ● ➔ S! Appli ➔ ● ➔ S! Appli Library ➔ ● ➔ Select application ➔ ● ➔ Details ➔ ●



Moving S! Applications to Memory Card	<ul style="list-style-type: none"> ● → S! Appli → ● → S! Appli Library → ● → [Y] → Select application → ● ([] / [v]) → Complete selection → [OK] → Move to Card → ● <ul style="list-style-type: none"> • When an older version of the S! Application is saved, choose Yes or No and press ●. • Repeat application selection step as needed before pressing [OK]. • Some S! Applications may not be moved to Memory Card.
Changing S! Application settings	<p>[Start Here] ● → S! Appli → ● → Settings → ●</p> <p>→ See below</p> <p>Setting Backlight Status</p> <p>Backlight → ● → Switch On/Off → ● →</p> <p>Select option → ●</p> <ul style="list-style-type: none"> • Selecting Normal Settings applies Display Backlight settings. <p>Disabling Backlight Flashing</p> <p>Backlight → ● → Blink → ● → Off → ●</p> <p>Disabling Vibration</p> <p>Vibration → ● → Off → ●</p>
Deleting S! Applications	<ul style="list-style-type: none"> ● → S! Appli → ● → S! Appli Library → ● → Select application → [OK] → Delete → ● → Yes → ● <ul style="list-style-type: none"> • Handset Code may be required. • Cancel Screensaver to delete Screensaver S! Application.

Restoring default S! Application settings	<ul style="list-style-type: none"> ● → S! Appli → ● → Settings → ● → Set to Default → ● → Enter Handset Code → ● → Yes → ●
Restoring default S! Appli Library	<ul style="list-style-type: none"> ● → S! Appli → ● → Settings → ● → Memory All Clear → ● → Enter Handset Code → ● → Yes → ● <ul style="list-style-type: none"> • Memory All Clear deletes all downloaded S! Applications.
Synchronizing Memory Card S! Applications with 840SH	<ul style="list-style-type: none"> ● → S! Appli → ● → Settings → ● → Synchronization → ● → Yes → ●
Opening Java™ license information	<ul style="list-style-type: none"> ● → S! Appli → ● → Information → ●



Music

? How do I delete files in All Music?

- Delete All Music files in My Music via Data Folder (Music or Ring Songs-Tones).

Video

? How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

? Cannot play video files

- Files created with PC software, etc. may not play.

S! Applications

? Cannot move S! Applications to Memory Card

- Memory Card memory may be low or the S! Application may already be saved.

? S! Applications do not pause for incoming transmissions despite *Calls & Alarms* settings

- Regardless of setting, a notice appears for Screensaver S! Applications.

