

S! Information Channel	9-2
S! Information Channel & Weather Indicator (Japanese)	9-2
S! Quick News	9-3
Receiving Content Updates (Japanese)	9-3

Content Downloads	9-4
Downloading Content (Japanese)	9-4
e-Books	9-5
Reading e-Books (Japanese)	9-5
Additional Functions	9-6
Troubleshooting	9-9

9

Entertainment



S! Information Channel & Weather Indicator (Japanese)

Subscribe to Japanese mobile periodicals that download to handset automatically; use Weather Indicator as needed. Packet transmission fees apply.

Service Registration & Content Subscription

- 1 → **Entertainment** →
 → **S! Information Channel/Weather** →



S! Information Channel Menu

- 2 **Registration/Cancel** →
- Handset connects to the Internet. Follow onscreen instructions.

New Received Information

Information window opens for new S! Information Channel info delivery.

- 1 **While Information window appears, S! Info. Channel** →
- S! Information Channel page opens. Follow onscreen instructions.
 - S! Information Channel page handling is similar to that of Yahoo! Keitai.

- 2 → **Standby returns**

Opening Unread Latest Issue

[S! Information Channel Menu]
What's New →

Opening Back Issues

[S! Information Channel Menu]
Back Issue → → **Select date** →

Using Weather Indicator

After S! Information Channel registration, local area weather indicator appears in Standby.

Manual Update

[S! Information Channel Menu]
Weather Indicator → → **Manual Update** → → **Yes** →

Advanced

- Suppressing Information window for new received info
- Changing Display Size
- Changing scroll unit
- Copying text
- Hiding Weather Indicator in Standby
- Canceling Weather Indicator automatic updates
- Suppressing Information window for weather updates (And more on P.9-6)

 


Receiving Content Updates (Japanese)

View content updates or breaking news.
Packet transmission fees apply.

Registering S! Quick News Items

- 1 → **Entertainment** →
→ **S! Quick News** →



S! Quick News Menu

- 2 **S! Quick News List** →



S! Quick News List

- 3 **登録はこちら** → → **Yes**
→

- Handset connects to the Internet.

- 4 **Select item** →

- Follow onscreen instructions.

Opening Information

- 1 **In S! Quick News List, select item** →

- Title list appears.

- 2 **Select title** →

- Information appears.

- Press to return to title list, or to open next title.

Updating Items Manually

[S! Quick News List] **Select item** →

→ **更新** → → **一件 or 全件** →

Indicators

	Unread Special news		Unread General news
	Read Special news		Read General news
	Unread News Flash		Auto update disabled
	Read News Flash		

Standby Window

View S! Quick News in Standby.



- If Standby Window is closed, press to open it.
- In Standby, press then to open S! Quick News List.

Advanced

- Updating S! Quick News List automatically ● Checking update schedule ● Deleting S! Quick News items ● Resetting S! Quick News List ● Adding news items ● Changing background image ● Accessing source sites ● Disabling image download (And more on P.9-7)



Downloading Content (Japanese)

Download media content via Yahoo! Keitai.

Via S! Contents Store

1 → **Entertainment** →



Entertainment Menu

2 **S! Contents Store** →

- Handset connects to the Internet.
Follow onscreen instructions.

Via Free Content Providers

Download free Graphic Mail templates, e-Books, games, etc.

Content downloads are free, however, they require Internet connection incurring packet transmission fees.

1 **In Entertainment menu,**
Free Contents →



2 **Select provider** →


- Handset connects to the Internet.
Follow onscreen instructions.



Reading e-Books (Japanese)

Downloading e-Books

1 **Entertainment**

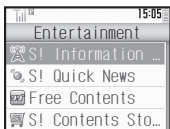

Entertainment Menu

2 **S! Contents Store**

- Follow onscreen instructions.
- Downloaded e-Books are saved to Data Folder (Books).

Note

- Alternatively, go to SH-web Mobile Internet site ([スマートフォンマガジン/SH-web](#) in Bookmarks; see P.5-7) for e-Books.

Downloading Free E-Books

In , **Free Contents**

Tada-Hon or **Tada-Komi**

- Follow onscreen instructions.

e-Book Viewer

Read XPDF books and dictionary files. Some files may not be supported.

1 In Entertainment menu, **e-Book Viewer**

- e-Book Viewer starts. Refer to the e-Book Viewer help menu for operational instructions.

BookSurfing®

Download Contents Keys and read CCF files. Some files may not be supported.

1 In Entertainment menu, **BookSurfing**

- BookSurfing® S! Application starts. Refer to the BookSurfing® help menu for operational instructions.

Moving CCF Files via Memory Card

- When purchasing a new handset, move CCF files and retrieve Contents Keys to open the files. Some files may need to be re-downloaded.

Advanced

- Copying text Opening non-840SH e-Books (Library) Using Library (P.9-8)



S! Information Channel

Receiving Information

Suppressing Information window for new received info	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Notification → ● → Off → ●
Requesting re-delivery	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Get Latest Contents → ● → Yes → ●

Information Pages

Changing Display Size	<ul style="list-style-type: none"> On a page, [⌨] → Settings → ● → Display Size → ● → Select size → ●
Changing scroll unit	<ul style="list-style-type: none"> On a page, [⌨] → Settings → ● → Scroll Unit → ● → Select unit → ●
Copying text	<ul style="list-style-type: none"> On a page, [⌨] → Copy Text → ● → Select first character → ● → Highlight text range → ●
Saving files to Data Folder	<ul style="list-style-type: none"> On a page, [⌨] → Save Items → ● → Select file → ● → Save → ● → Enter name → ● → Save here → ● ● Some files are saved automatically.
Opening page properties	<ul style="list-style-type: none"> On a page, [⌨] → Details → ●

Weather Indicators

Checking weather forecast	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Weather Indicator → ● → Weather → ●
Changing weather forecast page font size	<ul style="list-style-type: none"> On a page, [⌨] → Settings → ● → Font Size → ● → Select size → ●
Hiding Weather Indicator in Standby	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Weather Indicator → ● → Settings → ● → Standby Setting → ● → Off → ●
Canceling Weather Indicator automatic updates	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Weather Indicator → ● → Settings → ● → Icon Update → ● → Off → ●
Suppressing Information window for weather updates	<ul style="list-style-type: none"> ● → Entertainment → ● → S! Information Channel/Weather → ● → Weather Indicator → ● → Settings → ● → Weather Notif. → ● → Off → ●



S! Quick News

■ Opening/Updating Items

<p>Updating S! Quick News List automatically</p>	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Automatic Update</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Select item</i> → <input type="checkbox"/> → <input type="checkbox"/> → <i>Select interval or choose On</i> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> • If a confirmation appears, press <input type="checkbox"/>. • When Special is set to <i>On</i>, items are updated every four hours. • When General is set to <i>On</i>, items are updated once a day. • To cancel automatic update, choose <i>Off</i> and press <input type="checkbox"/>. • Updating items may incur high packet transmission fees.
<p>Checking update schedule</p>	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Check Schedule</i> → <input type="checkbox"/> </p>
<p>Deleting S! Quick News items</p>	<p> <input type="checkbox"/> <i>Start Here</i> → <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>S! Quick News List</i> → <input type="checkbox"/> → <input type="checkbox"/> <input type="checkbox"/> → <i>Select item</i> → <input type="checkbox"/> → <i>See below</i> </p> <p>One Entry</p> <p><i>一件</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/></p> <p>All Entries</p> <p><i>全件</i> → <input type="checkbox"/> → <i>Enter Handset Code</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/></p>
<p>Resetting S! Quick News List</p>	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Delete S! Quick News Lists</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Enter Handset Code</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> • Not available during automatic updates.

■ Standby Window

<p>Adding news items</p>	<p> <input type="checkbox"/> → <input type="checkbox"/> → <i>Add News</i> → <input type="checkbox"/> → <i>S! Quick News List</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>登録はこちら</i> → <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Select genre</i> → <input type="checkbox"/> → <i>Select item</i> → <input type="checkbox"/> </p> <ul style="list-style-type: none"> • Follow onscreen instructions.
<p>Changing news scroll speed</p>	<p> <input type="checkbox"/> → <input type="checkbox"/> → <i>News Display</i> → <input type="checkbox"/> → <i>News Speed</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Select speed</i> → <input type="checkbox"/> </p>
<p>Showing unread news only</p>	<p> <input type="checkbox"/> → <input type="checkbox"/> → <i>News Display</i> → <input type="checkbox"/> → <i>Target News</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Unread Only</i> → <input type="checkbox"/> </p>
<p>Selecting display option</p>	<p> <input type="checkbox"/> → <input type="checkbox"/> → <i>Standby Window</i> → <input type="checkbox"/> → <i>Display Window</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Select option</i> → <input type="checkbox"/> </p>

■ Other

<p>Changing background image</p>	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Change Skin</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Select pattern</i> → <input type="checkbox"/> </p>
<p>Accessing source sites</p>	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>S! Quick News List</i> → <input type="checkbox"/> → <i>Select item</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Select title</i> → <input type="checkbox"/> → <i>Select linked title</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Yes</i> → <input type="checkbox"/> </p>
<p>Disabling image download</p>	<p> <input type="checkbox"/> → <i>Entertainment</i> → <input type="checkbox"/> → <i>S! Quick News</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Settings</i> → <input type="checkbox"/> → <i>Show Image</i> → <input type="checkbox"/> <input type="checkbox"/> → <i>Off</i> → <input type="checkbox"/> </p>



e-Books

Copying text	In open page, Ctrl → 文字列を北 → Enter → Select first character → Enter → Highlight text range → Enter
Opening non-840SH e-Books (Library)	<ul style="list-style-type: none"> • Enter → Entertainment → Enter → e-Book Viewer → Enter → Select file → Enter • Some files may not open.
Using Library	Start Here → Enter → Entertainment → Enter → e-Book Viewer → Enter → See below
	Adding Folders Enter → New Folder → Enter → Enter name → Enter
	Switching Folders Enter → Switch Folders → Enter → Select folder → Enter
	Renaming Folders/Files Select folder/file → Enter → Change Name → Enter → Enter name → Enter
	Moving Files Select file → Enter → Move → Enter → Select folder → Enter → Move here → Enter
	Deleting Folders/Files Select folder/file → Enter → Delete → Enter → Yes → Enter
Opening File Properties Select file → Enter → Details → Enter	



S! Quick News**Cannot receive content updates**

- Update may fail out-of-range or in poor signal conditions.
- Automatic Update does not affect S! Quick News List News Flash update items overnight.
- USIM Card replacement cancels Automatic Update.

