Data Folder	11-2
Opening Files	11-3
Managing Files & Folders	11-4

Memory Card	11-
Using Memory Card	.11-
Additional Functions	11-
Troubleshooting	11-9





Data Folder

Handset files are organized in folders by file format.

■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Large still images on Memory Card (images captured with save location set to DCIM)
Ring Songs-Tones	Downloaded melodies and other sound files
S! Appli	S! Applications
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Books*	Downloaded e-Books, etc.
Flash®	Downloaded Flash® (animation) files
Other Documents	Other files (Dictionary files, etc.)

*Contains corresponding Yahoo! Keitai menu shortcut.

Checking Memory Status

- The category *Others:* includes Data Folder management files, Saved Pages, etc.
- Delete messages/files when memory is low. Handset performance may be affected when memory is full.

Opening Files



 


- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press \(\sigma_1 \).





File List





- The content plays or appears.
- To return to file list, press

Handling Open Images

to open next or previous image. Press rotate 90 degrees clockwise.

Attaching to Mail

After ②, select file ▶ 🖾 ▶ Send ▶ ● As Message ▶ ●

 
■ If a confirmation appears, follow onscreen instructions.

Copy Protected Files () or 90)

Some functions may be unavailable.

Slide Show

Available for Pictures or DCIM folder.






⇒ Slide Show stops

Changing Interval

After ②, □ → Speed → • Select speed **→**

■ When Speed is set to *Manual*, press •/ # or * to advance or reverse frames.

 Advanced



Managing Files & Folders

Adding Folders

May be unavailable for some folders.

 




File List



If **Download** is selected or folder is empty, skip ahead to ②.





Moving/Copying Files

Some files may not be moved/copied.

- n file list, select file ▶ 🖾
- Move or Copy → →
 Phone or Memory Card →
 - For still images, select *Pictures* or *Mail Art* and press .
- Select folder ⇒ •
- Move here or Copy here ⇒

Selecting Multiple Files

- In file list, 🗹
 - Select file 🖈 💿

Hiding Folders

Restrict access to created folders.
Only handset folders can be hidden.

- 🕦 In file list, select folder 🖈 🖻
- Set Secret

 ● Enter Handset Code

 ●

Accessing Secret Folders (Unlock Temporarily)

[File List]

→ Unlock Temporarily

→ → Enter Handset Code → •

Canceling Secret

Unlock Secret folders temporarily and select Secret folder

□

Unset Secret

■

Enter Handset Code

■



Using Memory Card

Use microSD Memory Card (hereafter "Memory Card") to save and organize files for use on 840SH.

 
Use recommended Memory Cards only. For details, see P.14-21 "microSD Memory Card Compatibility."

Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset. • Keep Memory Cards out of infant's reach;
- may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/ alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never power handset off or remove battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.

Inserting & Removing

First, power handset off.



Insert card



- With terminal side down, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.
- Insert battery, then close cover

If Appears after Power On

 Memory Card may not be inserted properly; reinsert the card.

Removing Memory Card

· Gently push in card and release it; card pops out. Pull card straight out gently.



Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.





- Offline Mode is set. Handset transmissions are suspended until format is complete.
- Enter Handset Code ▶ •
- 🗿 Yes 🖈 🖸
 - To cancel, choose *No* and press •.

Precaution

 Never remove Memory Card or battery while formatting; may cause damage.

Opening Memory Card Files





- Memory Card Data Folder opens.
- Select folder

 To open a sub folder, select it and press

 ■.
- Select file ⇒ ■



File/Folder View Settings Select folder > • Amanage Items Switching file list → Change List View → ● → Select view option 🗼 🔳 Changing image Image Quality (Picture Quality for Flash®) quality files) ⇒ • Select quality ⇒ • Showing images in Switch Display ⇒ • Original Size ⇒ original size • Start Here Start Here Select folder ⇒ • Select file ⇒ Slide Show ⇒ □ ⇒ □ ⇒ See below Plaving Once Repeat ⇒ • → Off ⇒ • **Changing Slide Playing Music** Show settings BGM Settings ⇒ • ⇒ Switch On/Off ⇒ • ⇒ On ⇒ • **Changing Music** BGM Settings ⇒ ● Play Ring Tones ⇒ ● Select folder ⇒ ● Select file ⇒ ● Hiding Softkeys in SW Guide Display ⇒ ● → Off ⇒ ● image view

Using Files/Folders	
Using files as Wallpaper	Select folder Select file Select file Set as Wallpaper Select or larger than Display, Wallpaper Display options appear; follow onscreen prompts.
Using files as ringtones	Select folder Select file Set as Ringtone Select item If prompted, enter ring time and press If a confirmation appears, follow onscreen instructions.
Using files as ringvideos	□ Videos Select file Set as Ring Video Select item Select item If prompted, enter ring time and press Select.
Saving Phone Book entries	Select folder Select file Save to Phone Book As New Entry Complete other fields To add to an existing entry, select As New Detail.
Activating mobile camera, etc. in corresponding folders	Select folder Take Picture, Record Video or Record Voice

Managing Files/Folders	
Renaming folders	Select folder Se
Opening file properties	Select folder Select file Select file Details •
Renaming files	Select folder Select file Sele
Sorting files	Select folder
	Start Here Select folder See below
Deleting files & created folders	Single Files Select file → □ → Delete → • → Yes → •
	Folder & Files Within Select folder □ → Delete □ → Enter Handset Code □ → Yes □

Line Scroll ☑	
	Handling SVG files
Page Scroll 2± (Up), 8± (Down), 6± (Right), 4± (Left)	
Zoom 1: (Zoom out), 3± (Zoom in)	
Rotate	
(Counterclockwise), 9 (Clockwise)	
Key Action Mode ○∵	
Default View	
5.2	

Managing Files/Folders



Cannot copy files

• Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)



Copied/moved files cannot be used on PCs, etc.

• Some files may not be usable on other SoftBank handsets or PCs, etc.



Cannot sort files properly

• Check the number of files/folders in the folder. Files/folders in folders containing 241 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.



Cannot use some characters in file/folder names

• Single-byte Symbols \(\frac{1}{2}\), \(\frac{1}\), \(\frac{1}{2}\), \(\frac{1}2\), \(\frac{1}2\), \(\frac{1}2\), \(\frac{1}2\), \(\frac{1}2\), \(\frac{1}2\), \(\frac{1}2\), \ ?, #and " are not supported.

