

<b>Date &amp; Time .....</b>	<b>13-2</b>
<b>Display &amp; Illumination .....</b>	<b>13-3</b>
Language.....	13-3
Image & Text.....	13-3
Display & Key Illumination .....	13-3
External Display.....	13-4
Standby Display.....	13-4
Key Illumination .....	13-4

<b>Ringtones &amp; Sounds .....</b>	<b>13-5</b>
Handset Response.....	13-5
System Sounds .....	13-5
Additional Sound Settings .....	13-5
<b>Connectivity .....</b>	<b>13-6</b>
Network .....	13-6
Location Information.....	13-6
<b>Reset.....</b>	<b>13-7</b>
Restoring Default Settings.....	13-7

# 13

## Handset Customization



# 🔧 Date & Time Settings

## Date & Time

[Start Here](#) → **Settings** → In Sound/Display menu, **Date & Time**

Setting the date and time	<b>Set Date/Time</b> → Enter the year → Enter the month → Enter the day → Enter the time
Correcting Clock manually	<b>Time Correction</b> → <b>Manual</b> → <b>Yes</b>
Disabling auto Clock correction	<b>Time Correction</b> → <b>Auto Corr. Setting</b> → <b>Off</b>
Setting auto Clock correction timing	<b>Time Correction</b> → <b>Auto Corr. Setting</b> → <b>On</b> → Select item
Changing time format to 12 hour	<b>Time Format</b> → <b>12 Hour</b>
Changing date format	<b>Date Format</b> → Select option
Starting the Calendar week on Monday	<b>Calendar Format</b> → <b>Monday-Sunday</b>



# ⌘ Display & Illumination Settings 1

## Language

[Start Here](#) [ ] ➔ **Settings** ➔ [ ] ➔ Sound/Display menu

Switching interface between Japanese and English

**Language** or 言語選択 ➔ [ ] ➔ **English** or 日本語 ➔ [ ]

## Image & Text

[Start Here](#) [ ] ➔ **Settings** ➔ [ ] ➔ In Sound/Display menu, **Display** ➔ [ ]

Showing preloaded images for incoming calls, etc.

**System Graphics** ➔ [ ] ➔ **Select item** ➔ [ ] ➔ **Preset Animation (or Pattern 1 to Pattern 3)** ➔ [ ]

Showing Data Folder images for incoming calls, etc.

**System Graphics** ➔ [ ] ➔ **Select item** ➔ [ ] ➔ **Select folder** ➔ [ ] ➔ **Select image** ➔ [ ] ➔ **Specify image area** ➔ [ ]  
 ● Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

**System Graphics** ➔ [ ] ➔ **Select item** ➔ [ ] ➔ **Customized Screen** ➔ [ ] ➔ [ ]  
 ● Not available for **Power On** or **Power Off**.

Changing font of numbers entered in Standby

**Dial Number** ➔ [ ] ➔ **Select pattern** ➔ [ ]

Showing a message each time handset is turned on

**Greeting Message** ➔ [ ] ➔ **Edit Message** ➔ [ ] ➔ **Enter message** ➔ [ ] ➔ **Switch On/Off** ➔ [ ] ➔ **On** ➔ [ ]

## Display & Key Illumination

[Start Here](#) [ ] ➔ **Settings** ➔ [ ] ➔ In Sound/Display menu, **Display** ➔ [ ]

Changing Display/Keypad Backlight illumination time

**Backlight** ➔ [ ] ➔ **Time Out** ➔ [ ] ➔ **Select time** ➔ [ ]

Changing Display Brightness

**Backlight** ➔ [ ] ➔ **Brightness** ➔ [ ] ➔ **Adjust level** ➔ [ ]

Changing inactivity time after which Display turns off

**Display Saving** ➔ [ ] ➔ **Select period** ➔ [ ]



## Display & Illumination Settings 2

### External Display

[Start Here](#) → Settings → In Sound/Display menu, *Display* → External Display →

Changing inactivity time after which External Display turns off	<i>Duration</i> → Select time →
Hiding new received messages	<i>Messages</i> → Not Display →
Hiding caller info	<i>Caller Display</i> → Off →
Changing Clock view	<i>Display Date&amp;Time</i> → Select type →
Changing Clock font	<i>Clock Type</i> → Select pattern →

### Standby Display

[Start Here](#) → Settings → In Sound/Display menu, *Display* → Standby Display →

Changing Clock/Calendar	<i>Clock/Calendar</i> → Select type →
Selecting display option	<i>Standby Window</i> → Display Window → Select option →
Showing Network service provider name in Standby	<i>Show Operator Name</i> → On →

### Key Illumination

[Start Here](#) → Settings → Phone/ menu

Disabling Keypad light illumination	<i>Set Key Light</i> → Off →
-------------------------------------	------------------------------



# 🔧 Ringtone & Sound Settings

## Handset Response

[Start Here](#) ➤ **Settings** ➤ **In Sound/Display menu, Sounds & Alerts** ➤

Changing ringtone volume	<b>Volume</b> ➤ <b>Select item</b> ➤ <b>Adjust level</b> ➤
Selecting illumination option for incoming transmissions	<b>Event Light</b> ➤ <b>Select item</b> ➤ <b>On, Link to Sound or Off</b> ➤
Enabling/disabling illumination for missed incoming transmissions	<b>Status Light</b> ➤ <b>Select item</b> ➤ <b>On or Off</b> ➤
Answering calls with other keys	<b>Any Key Answer</b> ➤ <b>On</b> ➤ • Use [0-9], *, #, *, *, *, * or * in addition to *.
Muting ringer with other keys	<b>Any Key Answer</b> ➤ <b>Only Mute</b> ➤ • Use [0-9], *, #, *, *, *, * or * in addition to *.

## System Sounds

[Start Here](#) ➤ **Settings** ➤ **In Sound/Display menu, Sounds & Alerts** ➤

Enabling Keypad Tones	<b>System Sounds</b> ➤ <b>Keypad Tones</b> ➤ <b>Select tone</b> ➤
Changing other System Sounds	<b>System Sounds</b> ➤ <b>Select item</b> ➤ <b>Tone or Sound</b> ➤ <b>Select folder</b> ➤ <b>Select tone/file</b> ➤ • For files with limited usage period, choose <b>Yes</b> and press *.
Disabling System Sounds	<b>System Sounds</b> ➤ <b>Select item</b> ➤ <b>Tone or Sound</b> ➤ <b>Off</b> ➤
Changing System Sound duration	<b>System Sounds</b> ➤ <b>Select item</b> ➤ <b>Duration</b> ➤ <b>Select/enter time</b> ➤
Changing System Sound volume	<b>Volume</b> ➤ <b>General Volume</b> ➤ <b>Adjust level</b> ➤

## Additional Sound Settings

[Start Here](#) ➤ **Settings** ➤ **Sound/Display menu**

Disabling Speaker when using Headphones	<b>Ringer Output</b> ➤ <b>Earphone</b> ➤
Activating Speaker surround	<b>Sounds &amp; Alerts</b> ➤ <b>Surround</b> ➤ <b>On</b> ➤



## Connectivity Settings

### Network

[Start Here](#) → Settings → Network

Retrieving Network Information	Retrieve NW Info → Yes
Checking Network status	Network Info
Editing connection names for mobile data communication	External Device → Select name → Edit
Clearing connection names for mobile data communication	External Device → Reset → Enter Handset Code → Yes

### Location Information

[Start Here](#) → Settings → Network → Location Info



















Adding/editing Location Information destination URLs	URL Setting → <Empty> (or select URL) → Edit → Enter URL • Default URL is not editable.
Specifying Location Information destination URL	URL Setting → Select URL
Viewing Location Information destination URL	URL Setting → Select URL → Display
Deleting Location Information destination URLs	URL Setting → Select URL → Delete → Yes
Hiding Location Information	Datum On/Off → Off → Enter Handset Code
Changing Location Information confirmation option	Location Property → Select option
Suppressing Information window after sending Location Information automatically	Inform Location → Do not Show → Enter Handset Code
Opening sent Location Information records	Offer Loc. Logs → Select record
Deleting a sent Location Information record	Offer Loc. Logs → Select record → Delete → Yes
Deleting all sent Location Information records	Offer Loc. Logs → Delete All → Yes



## Reset Settings

### Restoring Default Settings

[Start Here](#)   **Settings**    **Phone/**  **Master Reset**  

Restoring default handset settings	<p><b>Reset Settings</b>   <b>Enter Handset Code</b>   <b>Yes</b>   <b>Yes</b>  </p> <ul style="list-style-type: none"> <li>• Some default settings may not be restored.</li> </ul>
Clearing all Phone Book entries, Data Folder files, etc.	<p><b>Reset All</b>   <b>Enter Handset Code</b>   <b>Yes</b>   <b>Yes</b>   <b>Yes</b>  </p> <ul style="list-style-type: none"> <li>• Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications.</li> <li>• Handset Code returns to the default setting.</li> </ul>

- A confirmation may appear before entering Handset Code; end the current function to proceed.

