

<b>Data Folder</b> .....	<b>11-2</b>
Opening Files .....	11-3
Managing Files & Folders.....	11-4

<b>Memory Card</b> .....	<b>11-5</b>
Using Memory Card .....	11-5
<b>Additional Functions</b> .....	<b>11-7</b>
<b>Troubleshooting</b> .....	<b>11-9</b>

# 11

## Data Folder & Memory Card



## Data Folder

Handset files are organized in folders by file format.

### ■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Still images on Memory Card (images captured with save location set to <b>DCIM</b> )
Ring Songs-Tones*	Downloaded melodies and other sound files
S! Appli*	S! Applications
Widget*	Widgets
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Lifestyle-Appli*	Lifestyle-Appli required to use Osaifu-Keitai®
Books*	Downloaded e-Books, etc.
Customized Screen*	Downloaded Customized Screen files
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status
Flash®	Downloaded Flash® (animation) files
Other Documents	Other files (Dictionary files, etc.)

\*Contains corresponding Yahoo! Keitai menu shortcut.

### Checking Memory Status

 
● ➔ Data Folder ➔ ● ➔ Memory Status ➔ ● ➔ Phone  
Memory or Memory Card ➔ ●

- The category **Others**: includes Data Folder management files, Saved Pages, etc.
- Delete messages/files when memory is low. Handset performance may be affected when memory is full.



# Opening Files

## 1 Data Folder

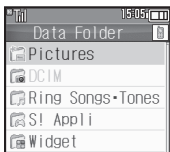

- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press  $\odot$ .

## 2 Select folder

To open a sub folder, select it and press  $\odot$ .



File List

## 3 Select file



- The content plays or appears.
- To return to file list, press  $\text{Back}$ .

### Handling Open Images

- Press  $\odot$  to enlarge, or press  $\text{Home}/\odot$  or  $\text{X}/\odot$  to open next or previous image. Press  $\text{Down}$  to rotate 90 degrees clockwise.

### Attaching to Mail

After  $\odot$ , select file  $\rightarrow \text{Mail}$   $\rightarrow \text{Send/ Blog}$   $\rightarrow \odot \rightarrow \text{As Message}$   $\rightarrow \odot$

- If a confirmation appears, follow onscreen instructions.

### Copy Protected Files ( $\text{Hand}$ or $\text{Key}$ )

- Some functions may be unavailable.

## Slide Show

Available for Pictures or DCIM folder.

### 1 In file list, select file $\rightarrow \text{Mail}$

### 2 Slide Show $\rightarrow \odot$

- Slide Show starts.

### 3 $\odot \rightarrow$ Slide Show stops

### Changing Interval

After  $\odot$ ,  $\text{Mail}$   $\rightarrow \text{Speed}$   $\rightarrow \odot \rightarrow \text{Select speed}$   $\rightarrow \odot$

- When Speed is set to **Manual**, press  $\odot$ / $\text{Home}$  or  $\text{X}/\text{Home}$  to advance or reverse frame.

### Note

- Backlight stays on during Slide Show; exit to save battery power.

## Advanced

- Changing image quality
- Showing images in original size
- Changing Slide Show settings
- Using files as Wallpaper
- Using files as ringtones
- Using files as ringvideos (And more on P.11-7)





## Using Memory Card

Use microSD/microSDHC Memory Card (hereafter "Memory Card") to save and organize files for use on 841SH.

- Use recommended Memory Cards only. For details, see P.14-23 "microSD Memory Card Compatibility."
- If inserted, captured images, downloads and other files save to Memory Card. (My Pictograms and Graphic Mail templates save to handset.)

 
### Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never power handset off or remove battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.

### Inserting & Removing

First, power handset off.

- 1 Remove battery (P.14-4)
- 2 Insert card

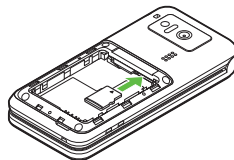

- With terminal side down, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.


- 3 Insert battery, then close cover

### If Appears after Power On

 - Memory Card may not be inserted properly; reinsert the card.





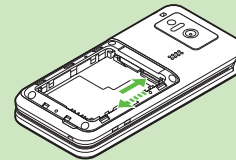





### Removing Memory Card

- Gently push in card and release it; card pops out. Pull card straight out gently.



## Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.

- 1  → **Settings** →  →   
**Phone/**  → **Memory Card**  
→ 
- 2 **Format Card** →  → **Yes**  
→ 
  - Offline Mode is set. Handset transmissions are suspended until format is complete.
- 3 **Enter Handset Code** → 
- 4 **Yes** → 
  - To cancel, choose **No** and press .




## Precaution



- Never remove Memory Card or battery while formatting; may cause damage.

## Opening Memory Card Files



Follow these steps to open files via Data Folder:

(Memory Card Data Folder opens first.)



- 1  → **Data Folder** → 
  - Memory Card Data Folder opens.
- 2 **Select folder** → 

To open a sub folder, select it and press .
- 3 **Select file** → 

## Opening Handset Data Folder Files

After 1,  → **Change to Phone** →  → **From** 2

## Advanced

-   Using HTML files on Memory Card (P.11-8)



## File/Folder View Settings

Switching file list view	<ul style="list-style-type: none"> <li>● → <b>Data Folder</b> → ● → <b>Select folder</b> → ●</li> <li>→ (M) → <b>Manage Items</b> → ● → <b>Change List View</b> → ● → <b>Select option</b> → ●</li> </ul>
Changing image quality	<ul style="list-style-type: none"> <li>● → <b>Data Folder</b> → ● → <b>Select folder</b> → ●</li> <li>→ <b>Select file</b> → ● → (M) → <b>Image Quality</b> (<b>Picture Quality</b> for Flash® files) → ● → <b>Select quality</b> → ●</li> </ul>
Showing images in original size	<ul style="list-style-type: none"> <li>● → <b>Data Folder</b> → ● → <b>Select folder</b> → ●</li> <li>→ <b>Select file</b> → ● → (M) → <b>Switch Display</b> → ● → <b>Original Size</b> → ●</li> </ul>
Changing Slide Show settings	<ul style="list-style-type: none"> <li>(Start Here) ● → <b>Data Folder</b> → ● → <b>Select folder</b> → ● → <b>Select file</b> → ● → (M) → <b>Slide Show</b> → ● → (M) → <b>See below</b></li> </ul>
	<p><b>Playing Once</b></p> <p><b>Repeat</b> → ● → <b>Off</b> → ●</p>
	<p><b>Playing Music</b></p> <p><b>BGM Settings</b> → ● → <b>Switch On/Off</b> → ● → <b>On</b> → ●</p>
	<p><b>Changing Music</b></p> <p><b>BGM Settings</b> → ● → <b>Play Ring Tones</b> → ●</p> <p>→ <b>Select folder</b> → ● → <b>Select file</b> → ●</p>
	<p><b>Changing Key Illumination Pattern</b></p> <p><b>Illumination</b> → ● → <b>Key Pattern</b> → ● → <b>Select pattern</b> → ● → (Y)</p>
	<p><b>Disabling Key Illumination</b></p> <p><b>Illumination</b> → ● → <b>Switch On/Off</b> → ● → <b>Off</b> → ● → (Y)</p>
Hiding Softkeys in image view	<ul style="list-style-type: none"> <li>● → <b>Data Folder</b> → ● → <b>Select folder</b> → ●</li> <li>→ <b>Select file</b> → ● → (M) → <b>SW Guide Display</b> → ● → <b>Off</b> → ●</li> </ul>

## Using Files/Folders

Using files as Wallpaper	<ul style="list-style-type: none"> <li>● → <b>Data Folder</b> → ● → <b>Select folder</b> → ●</li> <li>→ <b>Select file</b> → (M) → <b>Set as Wallpaper</b> → ● → ●</li> </ul> <ul style="list-style-type: none"> <li>• For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts.</li> </ul>
Using files as ringtones	<ul style="list-style-type: none"> <li>● → <b>Data Folder</b> → ● → <b>Select folder</b> → ●</li> <li>→ <b>Select file</b> → (M) → <b>Set as Ringtone</b> → ● → <b>Select item</b> → ●</li> </ul> <ul style="list-style-type: none"> <li>• If prompted, enter ring time and press ●.</li> <li>• If a confirmation appears, follow onscreen instructions.</li> </ul>
Using files as ringvideos	<ul style="list-style-type: none"> <li>● → <b>Data Folder</b> → ● → <b>Videos</b> → ● → <b>Select file</b> → (M) → <b>Set as Ring Video</b> → ● → <b>Select item</b> → ●</li> </ul> <ul style="list-style-type: none"> <li>• If prompted, enter ring time and press ●.</li> </ul>
Saving Phone Book entries	<ul style="list-style-type: none"> <li>● → <b>Data Folder</b> → ● → <b>Select folder</b> → ● → <b>Select file</b> → (M) → <b>Save to Phone Book</b> → ● → <b>As New Entry</b> → ● → <b>Complete other fields</b> → (Y)</li> </ul> <ul style="list-style-type: none"> <li>• To add to an existing entry, select <b>As New Detail</b>.</li> </ul>
Activating mobile camera, etc. in corresponding folders	<ul style="list-style-type: none"> <li>● → <b>Data Folder</b> → ● → <b>Select folder</b> → ●</li> <li>→ (M) → <b>Take Picture, Record Video or Record Voice</b> → ●</li> </ul>



## Managing Files/Folders

Renaming folders	<ul style="list-style-type: none"> <li>● → Data Folder → ● → Select folder → ●</li> <li>→ Select folder → (M) → Manage Items → ●</li> <li>→ Rename → ● → Enter name → ●</li> <li>• Assign different names to folders within a layer.</li> </ul>
Opening file properties	<ul style="list-style-type: none"> <li>● → Data Folder → ● → Select folder → ●</li> <li>→ Select file → (M) → Details → ●</li> </ul>
Renaming files	<ul style="list-style-type: none"> <li>● → Data Folder → ● → Select folder → ●</li> <li>→ Select file → (M) → Manage Items → ● →</li> <li>Rename → ● → Enter name → ●</li> </ul>
Sorting files	<ul style="list-style-type: none"> <li>● → Data Folder → ● → Select folder → ●</li> <li>→ (M) → Manage Items → ● → Sort → ● →</li> <li>Select method → ●</li> </ul>
Deleting files & created folders	<p><b>Start Here</b> ● → Data Folder → ● → Select folder → ● → See below</p> <p><b>Single Files</b> Select file → (M) → Delete → ● → Yes → ●</p> <p><b>Folder &amp; Files Within</b> Select folder → (M) → Delete → ● → Enter Handset Code → ● → Yes → ●</p>

## Handling SVG files

<p><b>Start Here</b> ● → Data Folder → ● → Other Documents → ● → Select file → ● → See below</p> <p><b>Line Scroll</b> ⊕</p> <p><b>Page Scroll</b> 2 (Up), 8 (Down), 6 (Right), 4 (Left)</p> <p><b>Zoom</b> 1 (Zoom out), 3 (Zoom in)</p> <p><b>Rotate</b> 7 (Counterclockwise), 9 (Clockwise)</p> <p><b>Key Action Mode</b> 0</p> <p><b>Default View</b> 5</p>
---

## Memory Card

<p>Using HTML files on Memory Card</p> <ul style="list-style-type: none"> <li>● → Settings → ● → Phone/M →</li> <li>Memory Card → ● → SD Local Contents →</li> <li>● → Select title → ●</li> </ul>
--





## Managing Files/Folders



### Cannot copy files

- Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)



### Copied/moved files cannot be used on PCs, etc.

- Some files may not be usable on other SoftBank handsets or PCs, etc.



### Cannot sort files properly

- Check the number of files/folders in the folder. Files/folders in folders containing 961 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.



### Cannot use some characters in file/folder names

- Single-byte Symbols  $\backslash$ , /, :, ;, ,, <, >, /, ?, \* and " are not supported.

