

 
<b>Handset Parts</b> .....	<b>1-2</b>
Parts & Functions .....	1-2
<b>Charging Battery</b> .....	<b>1-4</b>
<b>Power On/Off</b> .....	<b>1-6</b>
Handset Power On/Off.....	1-6
<b>Display &amp; Indicators</b> .....	<b>1-7</b>
Display .....	1-7
Indicators .....	1-9
<b>Accessing Functions</b> .....	<b>1-12</b>
Main Menu .....	1-13
Function Shortcuts .....	1-14
Toggling Active Functions (Multi Job)	
.....	1-15
Standby Shortcuts .....	1-16
Using Simplified Menus (Simple Menu)	
.....	1-17

<b>Mobile Manners</b> .....	<b>1-18</b>
<b>Security Codes</b> .....	<b>1-19</b>
<b>Basic Tools</b> .....	<b>1-20</b>
My Details & Basic Tools .....	1-20
<b>Double Number</b> .....	<b>1-21</b>
Using Double Number .....	1-21
Modes.....	1-22
<b>Additional Functions</b> .....	<b>1-24</b>

# 1

## Getting Started

## Parts & Functions

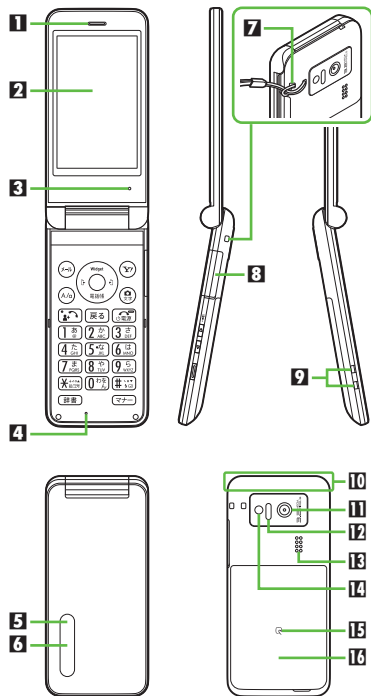

- 1** Earpiece
- 2** Display
- 3** Pressure Vent
- 4** Microphone
- 5** Small Light
- 6** Sub Display
- 7** Strap Eyelet
- 8** External Device Port (with Port Cover)
- 9** Charging Terminals
- 10** Internal Antenna Location
- 11** Camera (lens cover)
- 12** Infrared Port
- 13** Speaker
- 14** Mobile Light
- 15** Logo
- 16** Battery Cover

- Do not cover or place stickers, etc. over Pressure Vent or Internal Antenna area.
- Replace Port Cover after Port use.
- Avoid metallic straps; Antenna sensitivity may be affected.

### Handset Positions

#### Handset Closed



Keep handset closed when not in use.

 
#### Handset Open



Open handset to place or answer calls, enter text, etc.

## Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with <sup>\*</sup> via Set Key Shortcut as needed.

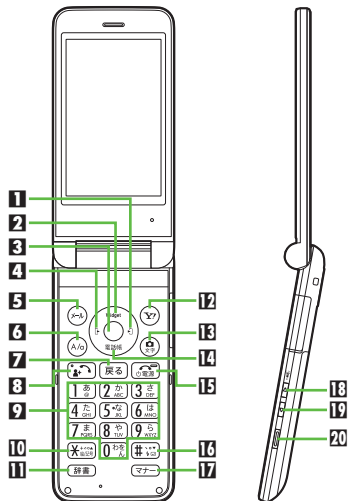

- 1 Multi Selector (right)** ☺  
Open Call Log (Received). Long Press to activate/cancel Infrared<sup>\*</sup>.
- 2 Multi Selector (up)** ☺  
Open Mobile Widget window. Long Press to open PC Site Browser menu<sup>\*</sup>.

- 3 Center Key** ●  
Open Main Menu. Long Press to activate/cancel Keypad Lock.
- 4 Multi Selector (left)** ☺  
Open Call Log (Dialed). Long Press to activate/cancel Bluetooth<sup>®</sup>.
- 5 Mail Key** ☺  
Open Messaging menu. Long Press to open S! Mail Composition window<sup>\*</sup>.
- 6 Shortcuts & A/a Key** ☺  
Open Shortcuts menu. Long Press to show active indicators (Status Icon List).
- 7 Back Key** 戻る  
Play Answer Phone messages. Long Press to activate/cancel Answer Phone.
- 8 Start & Rakutomo Link Key** ☺  
Open Rakutomo Link window. Long Press to open Double Number Mode menu.
- 9 Keypad** 0 ☺ - 9 ☺  
Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.
- 10 Star Key** \* ☺  
Enter \*, +, P, ? and -. Long Press to open S! Friend's Status member list.
- 11 Dictionary Key** 辞書  
Open Dictionary. Long Press to activate/cancel VeilView.
- 12 Yahoo! Keitai Key** ☺  
Open Yahoo! Keitai portal. Long Press to open Yahoo! Keitai menu<sup>\*</sup>.
- 13 Camera & Text Key** ☺  
Activate mobile camera. Long Press to open Change Menu window.

- 14 Multi Selector (down)** ☺  
Long Press to open Exchange Profile menu<sup>\*</sup>.
- 15 Power On/Off & End Key** ☺  
Toggle Standby display. Long Press to power handset off.
- 16 # Key** # ☺  
Enter #. Long Press to activate/cancel Manner mode.
- 17 Multi Job & Manner Key** マナー  
Select handset mode. Long Press to activate/cancel Manner mode.

## Side Keys

- 18 Volume Up Key** ☺  
Long Press to illuminate Mobile Light.
- 19 Volume Down Key** ☺  
**Open:** Show/Hide Softkeys.  
**Closed:** Toggle Clock view.
- 20 Shutter Key** ☺  
**Open:** Long Press to activate mobile camera.  
**Closed:** Toggle Clock view.

## Multi Selector

- In this guide, Multi Selector operations are indicated as follows:

Press ☺ or ☺	☺
Press ☺ or ☺	☺
Press ☺, ☺, ☺ or ☺	☺

## 1 Charging Battery

Battery must be inserted in handset to charge it.

### Charging Battery Outside Japan

- SoftBank Mobile is not liable for problems resulting from charging battery abroad.

### Desktop Holder

Together with Desktop Holder, use specified AC Charger ZTDAA1 (sold separately) only.

 
- In this guide, ZTDAA1 is referred to as "AC Charger."
- **AC Charger and Desktop Holder are not waterproofed or dustproofed. Do not charge battery while handset is wet.**
- Handset and AC Charger may warm while charging.

### Important AC Charger Usage Note

- Fold back blades after charging. Do not pull, bend or twist the cord.

### Important Desktop Holder Usage Notes


- Do not subject to force/pressure.
- Do not attempt to open handset while placed in Desktop Holder.

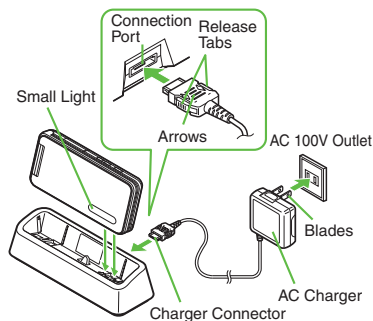

### 1 Insert Charger Connector into Desktop Holder

- With arrows up, insert connector until it clicks.
 
### 2 Extend blades and plug AC Charger into AC outlet



### 3 Place handset onto Desktop Holder

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

### 4 Disconnect 841SH s from Desktop Holder

### 5 Unplug AC Charger

- Squeeze Charger Connector release tabs and pull straight out to remove.

### When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.

 
### Desktop Holder Materials

- Desktop Holder includes a part containing plant-derived resin, a new eco-friendly material which is expected to reduce CO<sub>2</sub> emissions and oil usage in the entire product life cycle compared to conventional petroleum resin.

**Charging with AC Charger Only**

Insert Charger Connector into External Device Port.

Using Desktop Holder helps secure External Device Port waterproofing and dustproofing.

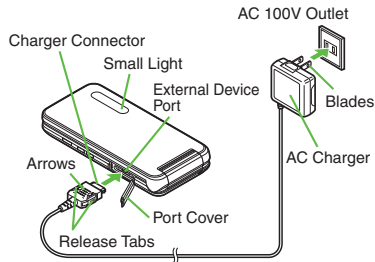
**USB Charge**

Connect handset (with power on) to PC via USB Cable to charge battery.

- Download and install USB Cable driver beforehand.
- Handset must be on to charge battery.
- Battery may not charge if handset is connected through a USB hub.

**In-Car Charger**

 In-Car Charger may be purchased separately.

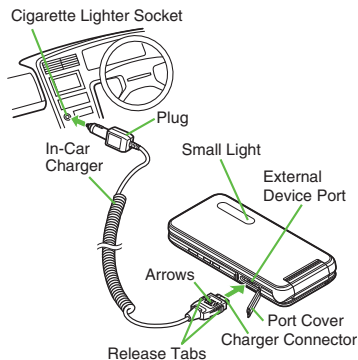**1 Open Port Cover****2 Insert Charger Connector**

- With arrows up, insert connector until it clicks.

**3 Plug Charger into cigarette lighter socket****4 Start car engine**

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

**5 Unplug Charger****6 Disconnect handset**

- Squeeze Charger Connector release tabs and pull straight out to remove.

**7 Replace Port Cover****Important In-Car Charger Usage Notes**

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.

**Advanced**

- Disabling USB Charge (P.1-24)

# Handset Power On/Off

## Power On

Follow these steps when powering on 841SH s for the first time:

- 1 (Long)
  - Waterproofing guidance appears following Power On Graphic; follow the steps below.
  - → → → → **設定**
  - → **Language** → → **English**
  - → (Long) → (Long) → Change Menu window opens

 
- 2 **Select option** →
  - Guide descriptions are based on Large Font Menu.



- My Details setup starts.

- 3 **Enter last name** → → **Enter first name** →
  - Change Menu display option confirmation appears.

- 4 **Yes or No** →

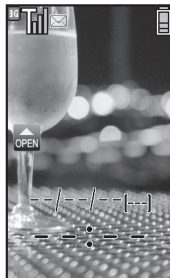

Standby


- Choose **No** to enter Standby immediately after powering on.

### When USIM Card is Not Installed

 - **Insert USIM Card** appears; insert the card to use handset.

## Retrieving Network Information

Handset initiates Network Information retrieval when , , or is pressed for the first time.

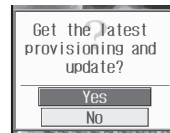

Follow these steps to retrieve Network Information to use Network-related services and camera; retrieval automatically sets Clock:

- 1 **Yes** → → **Retrieval starts**
- 2

## Power Off

- 1 (Long)
  - After Power Off Graphic, handset shuts down.

# Display

## Standby

 




Indicators (signal strength, battery strength, etc.) appear.

## Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)

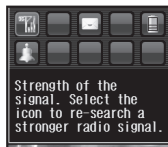
### 1 (Long)




- Active indicators are enlarged; description for selected indicator appears.
- Use  to select indicators to view their descriptions.
- Press  to open menu/window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.

## Information

 Information window opens at the bottom for Missed Calls, new mail, etc.

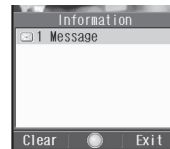




Information Window

Information label (e.g., **Message**, etc.) and count appear in Information window. Select an item and press  to open it.

## Advanced


-   Handling Information list (P.1-24)

## Softkeys

 
 
Functions/operations assigned to , , and  appear at the bottom of Display.



## Display Saving

Display goes dark after Display Saving time elapses. Press any key (except ) during a call to activate it.

## Backlight

- Backlight turns off after Time Out time elapses. Press  -  to illuminate it (key press may affect active function).
- Display goes dark during a call. (Backlight does not turn off first.)




# Indicators
 
## Display Indicators

Descriptions based on Standard Menu. In Dual Mode, line type appears bottom right of some indicators.

### Basic Status




1		Within 3G range
		Within GSM range
2		International roaming in progress
		Signal strength <sup>1</sup>
3		Battery strength <sup>2</sup>

<sup>1</sup>The more bars the better.


<sup>2</sup>Battery strength % (appears when Display activates, etc.) is an approximation.

### Function Status



 
1		Active S! Application
		Paused S! Application
		Music playback in progress
		Memory Card inserted
2		Accessing Memory Card
		Reading Memory Card
		Formatting Memory Card
3		Music playback in progress (via Bluetooth <sup>®</sup> )
4		Multiple functions (Multi Job) active

### Notifications




1		Unread mail
		Unread Delivery Report
2		Answer Phone active & message recorded
		Answer Phone canceled & message recorded
3		New Voicemail
4		Missed Call or new mail on idle line
5		S! Appli Notification
6		Contents Key received
7		Unread S! Information Channel info
		Software Update result
8		Unread S! Quick News info
		Unread S! Friend's Status notification

### Warnings



 1		Mail memory low
2		Message delivery failure
3		Memory Card unusable/misinserted

■ Transmissions




<b>1</b>		SSL browsing in progress <sup>1</sup>
		Packet transmission protocol ready
<b>2</b>		Receiving mail
		Sending mail
<b>3</b>		S! Friend's Status online
		Positioning in progress <sup>2</sup>
<b>4</b>		Software Update in progress
<b>5</b>		USB Cable connected
		USB transmission in progress
		Infrared transmission in progress
		Infrared file transfer in progress
		Bluetooth® transmission ready
		Bluetooth® transmission in progress (⊘ appears for multiple connections)
		Bluetooth® talk in progress
		IC Transmission in progress
		S! Addressbook Back-up transmission in progress
		PC Site Browser in use

<b>6</b>		RSS-compatible site
<b>7</b>		Weather Indicator
<b>8</b>		Infrared transmission ready

<sup>1</sup>Hidden while Mobile Widget is in use.

<sup>2</sup>Flashes while positioning.

 ■ Settings

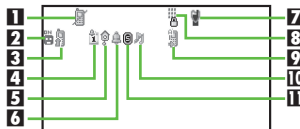

<b>1</b>		Offline Mode active
<b>2</b>		Answer Phone active
<b>3</b>		Call Forwarding or Voicemail active (forwarding condition: <b>Always</b> ) <sup>*</sup>
<b>4</b>		Schedule/Task (Alarm set)
		Schedule/Task (Alarm unset)
<b>5</b>		Hour Minder active
<b>6</b>		Alarm set
		Manner mode active
<b>7</b>		Drive mode active
		Original mode active
		VeilView active

<b>8</b>		Keypad Lock active
		IC Card Lock active
<b>9</b>		Auto Answer or Remote Monitor active
<b>10</b>		Ringtone (Silent)
		Ringtone (Increasing Volume)
<b>11</b>		Vibration for incoming Voice/Video Calls active
		Show Secret Data active
		Function Lock (Once) active

<sup>\*</sup>Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.

## Sub Display Indicators

### Basic Status



<b>1</b>	Signal strength <sup>1</sup>
<b>2</b>	Battery strength <sup>2</sup>

<sup>1</sup>The more bars the better.

<sup>2</sup>Battery strength % is an approximation.

### Notifications

	Missed Calls
	Answer Phone message recorded
	Missed Call Notification
	New Voicemail
	Unread mail
	Unread Delivery Report
	Contents Key received
	Unread S! Information Channel info
	Weather Indicator update
	S! Appli Notification
	Unread S! Friend's Status notification
	Location Info request

### Warnings

	Message delivery failure
	S! Information Channel info reception failure
	IP Service connection failure
	Weather Indicator update failure

### Handset Status

	Alarm
	Schedule Alarm
	Task Alarm

### Activating Backlight




### Sub Display Clock

- Press to toggle view.

 
## 1 Accessing Functions

Use the following methods as needed.


**Main Menu**



**Repeat menu item selection.**

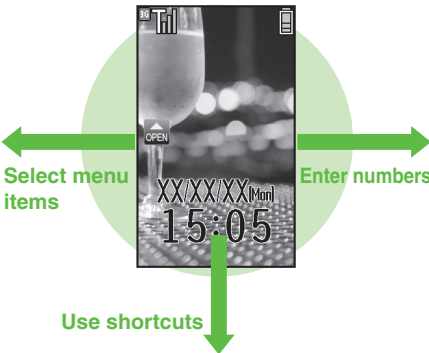


**Quick Operations**

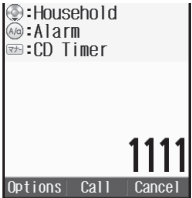 


**Enter numbers to access functions. To activate functions, press the corresponding key.**

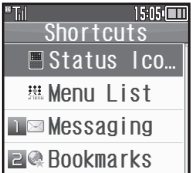 


**Shortcuts**




**Access assigned functions (changeable).**

**Key Shortcut**



**Long Press ,  or  to access assigned functions (changeable).**

**Standby Shortcuts**



**Save functions to Standby.**

Access a function in Shortcuts menu while another is active, then toggle function windows as needed.



# Main Menu

 
## Menu Item Selection



1 



- Main Menu opens.

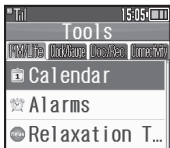2  Select menu item 



- Menu/window opens.
- If Sub Menu opens, use  to select an item and press .


## Tabs

- Menus/lists in a single window appear on separate tabs; use  to toggle tabs.




Tab

## Reverse Navigation

- Press . If a confirmation appears, follow onscreen prompts.

## Returning to Standby

- Press . If a confirmation appears, follow onscreen prompts.

## Simple Menu

- Simplify menus; ideal for users who use only basic handset functions.

## Main Menu Items

<b>Messaging</b>	Open/create messages, etc.
<b>Yahoo!</b>	Browse the Internet
<b>S! Appli</b>	Use S! Applications including games
<b>Entertainment</b>	Read e-Books, receive news updates, etc.
<b>Camera</b>	Capture images or record video
<b>Media</b>	Play/download media files
<b>Tools</b>	Manage schedules, set Alarm, scan QR Codes, etc.
<b>Pictures etc. (Data Folder)*</b>	Open files saved on handset/Memory Card
<b>Widget</b>	Use Mobile Widgets
<b>Infrared</b>	Transfer files via infrared
<b>Phone</b>	Search contacts, add entries, etc.
<b>Settings</b>	Customize handset interface, sounds, etc.

 
\**Pictures etc.* appears as "Data Folder" in this guide.

# Function Shortcuts

## Shortcuts Menu

Access assigned functions via Shortcuts menu.

1 A/a

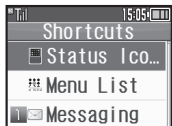

Shortcuts Menu

2 Select function → ●

- Menu/window opens.

### Changing Default Shortcuts

In 2, select numbered function →  
 → Assign Function → ● →  
 Select menu item → ● → Select  
 new item → ●

- To assign menu items, select one and press →.

### Assigning Files & Folders

In 2, select numbered function →  
 → Assign Data → ● → Select  
 file/folder → ●

- For folders, select *Set this folder* and press ●.

## Key Shortcut

In Standby, Long Press →, →, or → to access assigned functions.

→	Open S! Mail Composition window
→	Open PC Site Browser menu
→	Open Exchange Profile menu
→	Activate/cancel Bluetooth®
→	Activate/cancel Infrared
→	Open Yahoo! Keitai menu

## Changing Assigned Functions

Follow these steps to assign Calculator to  
 ● (Long Press):

1 ● → Settings → ● → ●  
 Phone/☎

2 Set Key Shortcut → ●

3 Long press → ●

4 From Appli → ●

5 Tools → ● → In PIM/Life menu, Calculator → ●

### Bookmark

In 4, From Bookmark → ● →

Select title → ● → Yes → ●

Infrared, Show Secret Data, Etc. On/Off  
 In 4, From Other → ● → Select  
 item → ●

### Canceling Assigned Function

In 4, Off → ●

## Advanced

 
- Changing item order
- Restoring default shortcuts (P.1-24)

# Toggle Active Functions (Multi Job)

## Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet

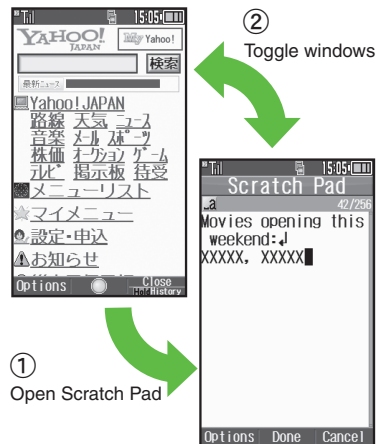


① Open Scratch Pad

Jot down information

Multi Job may not activate from some menus/windows.

## Using Multi Job

 - ① In a function window,  $\text{A}/\text{o}$   
In text entry/dial windows, Long Press  $\text{A}/\text{o}$ .

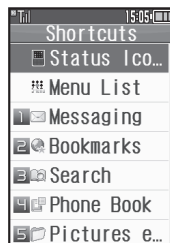

- ② Select function  $\rightarrow$   $\text{O}$   
• Menu/window opens.
- ③ To toggle active windows,  $\text{マナー}$
- ④  $\text{電話}$   $\rightarrow$  Multi Job ends  
• If a confirmation appears, follow onscreen prompts.


# Standby Shortcuts

 Paste shortcuts to functions, files, folders, etc. to Standby for easy access.

## Saving Shortcuts to Standby

1

2 Select (OPEN)

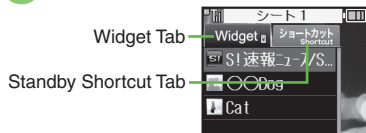

3 **Shortcut**



4 **Select item**

- Corresponding icon appears.
- >> appears when more items are available.

5 **Specify target location**

### Saving from Menu/Window

- In Options menu, select **SetAsStbyShortcut** (may not appear for some items) and press ; select sheet as needed.

### Using Pointer

- After 1, Long Press to activate pointer navigation; select widgets, etc. (To cancel pointer navigation, Long Press .)

## Using Shortcuts

1 **Select icon**

- Menu/window opens or command is executed.

## Toggleing Sheets

Toggle sheets to use Standby Shortcuts and widgets pasted on each sheet.

1

- To toggle further, press or .
- Sheet name appears at the top, then disappears.
- Save Standby Shortcuts as needed; corresponding icons appear on the current sheet.

## Using Locked Sheets

**Select** **Enter**  
**Handset Code**

## Removing Shortcuts from Standby

1 **Select icon**

2 **Operations**

3 **Remove**

4 **Yes**

## Advanced

- Sorting icons
- Moving icons
- Moving icons to front/back
- Removing multiple icons at once
- Slowing pointer speed
- Editing sheet names
- Locking sheets (P.1-24)



 
# Using Simplified Menu (Simple Menu)

1

Getting Started

## Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.

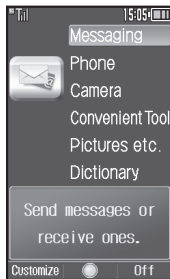


## Menu Items

<b>Messaging</b>	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
<b>Phone</b>	Phone Book, Add New Entry, Call Log, Play Messages, Answer Phone, Call Voicemail, My Details, Rakutomo Link, Speed Dial/Mail
<b>Camera</b>	Photo Camera, Video Camera, Scan Barcode, Scan Card, Kanji Grabber, Review
<b>Convenient Tool</b>	Calendar, Exchange Profile, Alarms, Calculator, Assignment, Notepad, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
<b>Pictures etc.</b>	Saved files
<b>Dictionary</b>	-

Key assignments are largely the same as those in Large Font/Standard Menu.

## Activating Simple Menu
 
### 1 (Long)

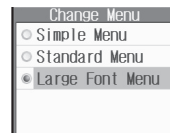

### 2 Simple Menu →

#### While Using an Incompatible Function

- End the function before activating Simple Menu.

#### Canceling Simple Menu

(Long) → Large Font Menu →

## Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Power it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

### Manner Mode

Mutes most handset function sounds.

#### 1 マナー (Long)



- Manner mode is set.

#### When Manner Mode is Active

- Ringtones and other sounds are muted.
- 841SH s vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.
- To unmute Speaker temporarily while playing music, etc., follow these steps:

During playback, ➔ ➔ **Yes or No** ➔ ➔ **Adjust volume**

#### Canceling Manner Mode

(Long)

### Offline Mode

Temporarily suspends all transmissions.

#### 1 ➔ **Settings** ➔ ➔ **Network**

#### 2 **Offline Mode** ➔

#### 3 **On** ➔

- Offline Mode is set.

#### Canceling Offline Mode

In , **Off** ➔

### Advanced

- Changing handset modes Creating a custom mode Resetting Mode Settings Suppressing Manner mode audio output confirmation (P.1-25)

## Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

<b>Handset Code*</b>	<b>9999</b> by default; use or change some functions
<b>Administrator Code*</b>	<b>9999</b> by default; required for Reset Settings and Reset All
<b>Center Access Code (Network Password)</b>	4-digit code selected at contract; access Optional Services via landlines, change service options, or set call restrictions

\*Changeable on handset.

### Incorrect Code Entry

- Message appears for incorrect code entries; retry.
- Incoming/outgoing call restriction settings will be locked if incorrect code is entered three times consecutively during the setting. To resolve, Center Access Code (Network Password) must be changed.
  - If you have previously changed Network Password on a SoftBank handset, enter the latest code.

 
### Changing Security Codes

Enter four to eight digits.

#### Changing Handset Code

**1** → **Settings** → → →

**2** **Locks** →

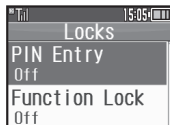

Locks Menu

**3** **Change Code** →

**4** **Enter current Handset Code** →

**5** **Enter new Handset Code** →

**6** **Re-enter new Handset Code** → 

- To change Administrator Code subsequently, choose **Yes** and press .

**7** **No** →

#### Changing Administrator Code

**1** **In Locks menu, Administrator Setting** →

**2** **Change Administrator Code** →

**3** **Enter current Administrator Code** →

**4** **Enter new Administrator Code** →

**5** **Re-enter new Administrator Code** →

# 1 My Details & Basic Tools

## My Number



- Handset phone number and the name entered at initial setup appear.

### Editing My Details

After 1, (select tab) → Select item → → Select item → → Edit →

## VeilView

Activate VeilView to prevent peeking.



### Canceling VeilView

(Long)

## Keypad Lock

Lock handset keys and prevent accidental operation/function activation.



- Keypad Lock activates.
- does not power handset off.

### Incoming Calls while Keypad Lock is Active

- Keypad Lock is temporarily canceled; press to answer calls. Keypad Lock reactivates after the call.

### Canceling Keypad Lock



## Pen Light



- Mobile Light illuminates.



### Important Pen Light Usage Note

- Do not shine Pen Light in eyes.

## Battery Meter



**Clock/Gauge**



- Approximate battery strength appears.

### Battery Strength %

- 100% may not appear even when battery is full. This is by design; not a malfunction.

## Phone Help

Access this handy guide to handset settings and key functions/shortcuts.



**Doc./Rec.**



**Phone Help**



- For **Indicators**, select a category and press .

## Advanced

 
- Selecting My Details items to send
- Clearing My Details
- Toggling My Details in Dual Mode
- Changing battery strength indicator pattern
- Changing VeilView pattern/density (P.1-25)

## Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- Outside Japan, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.14-40).

### Two Phone Numbers & Two Mail Addresses

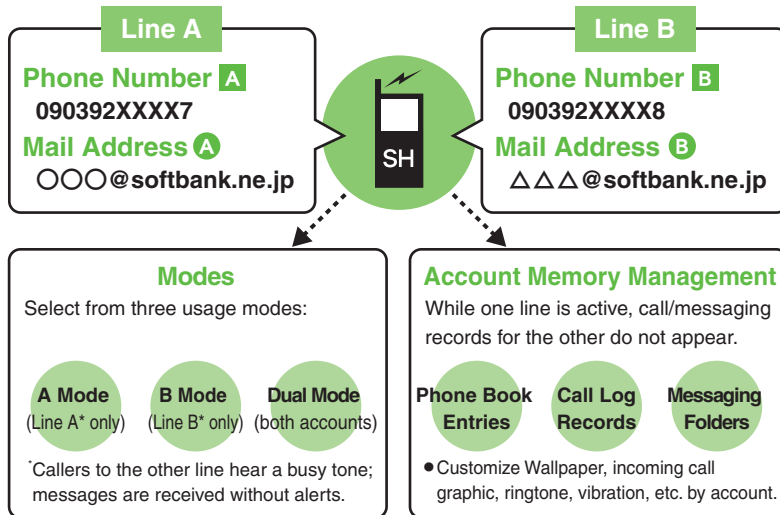

### Activating Double Number

Make sure signal is stable.

- 1 → **Settings** → →
- 2 **Double Number** →
- 3 **Switch On/Off** →
- 4 **On** →
- 5 **Enter Handset Code** → → **Yes** →

### Canceling Double Number

- In 4, **Off** → →
- When Double Number is canceled:
    - Line B calls and SMS messages are redirected to Line A Phone Number.
    - Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
    - Double Number account is not affected.

# Modes

Activate **A Mode** to use Line A only, **B Mode** to use Line B only, or **Dual Mode** to use both accounts.

## A Mode

### Receive Calls to Line A Only

- Place calls or send messages via Line A.

#### A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

## B Mode

### Receive Calls to Line B Only

- Place calls or send messages via Line B.

#### B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status and S! Circle Talk are unavailable.

## Advanced

- Omitting Handset Code entry when switching modes
- Renaming Double Number modes
- Showing indicator for calls missed or new mail on idle line
- Hiding Internet connection confirmation (P.1-26)

## Dual Mode

## Receive Calls to Both Accounts

- Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

## Phone Book Entries

Specify A, B or Dual.

## Messaging


Select Line A or Line B.  
Sender Address changes accordingly.

## Calling

Select Line A or Line B.  
Caller ID changes accordingly.

 
- Line indicators appear in Phone Book entries, message lists, Call Log records, etc.

## Switching Modes

-  (Long)
- Enter Handset Code ➔ ●
- Select mode ➔ ●
  - For *B Mode*, a confirmation appears.
- Yes ➔ ●

## In Dual Mode

During an operation, if prompt window below appears, select a line and press ●.



If customizable by line, line indicator appears bottom right; press ⌘ to switch.



If line selection is otherwise required, follow onscreen prompts.


## Advanced

- Rejecting calls to either line in Dual Mode
- Setting main line for Dual Mode (P.1-26)

USB Charge	
Disabling USB Charge	<ul style="list-style-type: none"> <li>● → <i>Tools</i> → ● → <i>Connectivity</i> → <i>USB Charge</i> → ● → <i>Disable</i> → ●</li> </ul>
Information	
Handling Information list	<ul style="list-style-type: none"> <li>[Start Here] ● → <i>Phone</i> → ● → See below</li> </ul>
	<ul style="list-style-type: none"> <li><i>Opening List Manually Information</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Clearing List Information</i> → ● → <i>Yes</i> → ●</li> </ul>
Shortcuts	
Changing item order	<ul style="list-style-type: none"> <li>Alt → Select numbered function → <i>Move</i> → ● → Select target location → ●</li> </ul>
Restoring default shortcuts	<ul style="list-style-type: none"> <li>Alt → Select numbered function → <i>Set to Default</i> → ● → <i>Yes</i> → ●</li> </ul>
Standby Shortcut	
Operations in Standby	
Sorting icons	<ul style="list-style-type: none"> <li>⏏ → <i>Sort Icon</i> → ● → Select option → ●</li> <li>• Widgets may also be sorted depending on the size.</li> </ul>
Moving icons	<ul style="list-style-type: none"> <li>⏏ → <i>Select icon</i> → <i>Operation</i> → ● → <i>Change Layout</i> → ● → Specify target location → ●</li> </ul>

Moving icons to front/back	<ul style="list-style-type: none"> <li>⏏ → <i>Select icon</i> → <i>Operation</i> → ● → <i>To Front or To Back</i> → ●</li> </ul>
Removing multiple icons at once	<ul style="list-style-type: none"> <li>[Start Here] ⏏ → <i>Operate from List</i> → ● → <i>Remove</i> → ● → See below</li> </ul>
	<ul style="list-style-type: none"> <li><i>All Icons</i></li> <li><i>Remove All</i> → ● → <i>Shortcut</i> → Select sheet → <i>Yes</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Selected Icons</i></li> <li><i>Select &amp; Remove</i> → ● → <i>Shortcut</i> → Select icon → <input checked="" type="checkbox"/> → Complete selection → <i>Yes</i> → ●</li> </ul>
Slowing pointer speed	<ul style="list-style-type: none"> <li>⏏ → <i>Settings</i> → ● → <i>Cursor Speed</i> → ● → <i>Slow</i> → ●</li> </ul>

## Sheets

Editing sheet names	<ul style="list-style-type: none"> <li>[Start Here] ⏏ → <i>Settings</i> → ● → <i>Sheet Settings</i> → ● → <i>ChangeSheetName</i> → ● → See below</li> </ul>
	<ul style="list-style-type: none"> <li><i>Renaming</i></li> <li>Select sheet → ● → Enter name → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Resetting All Sheet Names</i></li> <li><i>Yes</i> → ●</li> </ul>
Locking sheets	<ul style="list-style-type: none"> <li>[Start Here] ⏏ → <i>Settings</i> → ● → <i>Sheet Settings</i> → ● → <i>Set Sheet Lock</i> → ● → Enter Handset Code → ● → See below</li> </ul>
	<ul style="list-style-type: none"> <li><i>Activating Lock</i></li> <li>Select sheet → ● → <i>On</i> → ●</li> </ul>
	<ul style="list-style-type: none"> <li><i>Changing Method for Temporary Access</i></li> <li><i>Unlock Method</i> → ● → <i>No Password</i> → ●</li> <li>• Press ⏏, then select  and press ● to unlock sheet temporarily.</li> </ul>



## Mode Settings

Changing handset modes	<p><b>Start Here</b> → Settings → In Sound/Display menu, <b>Mode Settings</b> → See below</p> <p><b>Selecting a Handset Mode</b> Select mode →</p> <p><b>Customizing Handset Modes</b> Select mode → Select item → Adjust settings • Not available for Normal mode.</p>
	<p>Settings → In Sound/Display menu, <b>Mode Settings</b> → Original → Adjust settings</p>
	<p>Settings → In Sound/Display menu, <b>Mode Settings</b> → Select mode → Enter Handset Code → Yes →</p>
Creating a custom mode	<p>Settings → In Sound/Display menu, <b>Mode Settings</b> → Original → Adjust settings</p>
Resetting Mode Settings	<p>Settings → In Sound/Display menu, <b>Mode Settings</b> → Select mode → Enter Handset Code → Yes →</p>
Suppressing Manner mode audio output confirmation	<p>Settings → In Sound/Display menu, <b>Mode Settings</b> → Manner → Audio Confirmation → Do not Show →</p>
<b>My Details</b>	
Selecting My Details items to send	<p>0 → Set Send Items → Select item → ( ) / (✓) →</p>
Clearing My Details	<p>0 → Reset My Details → Yes →</p>

## Toggling My Details in Dual Mode

0 → Switch to B or Switch to A →

## Battery Meter

## Changing battery strength indicator pattern

Settings → In Sound/Display menu, **Display** → Mini Battery → Select pattern →

- Battery strength (appears as a percentage) is for reference only.

## VeilView

## Changing VeilView pattern/density

**Start Here** → Settings → In Sound/Display menu, **Display** → VeilView → See below

**Pattern**  
Pattern Setting → Select pattern →

**Pattern Scale**  
Scale Setting → Select scale or Animation →

**Pattern Color**  
Color Setting → Select color →

**Density**  
Density Setting → Adjust density →

- For **Density:2** or **Density:3**, use before pressing to adjust the pattern appearance for straight view.

## Double Number

## ■ All Modes

Omitting Handset Code entry when switching modes	● → Settings → ● → Phone/☎ → Double Number → ● → Password Entry → ● → Off → ● → Enter Handset Code → ●
Renaming Double Number modes	● → Settings → ● → Phone/☎ → Double Number → ● → Mode Name → ● → Select mode → ● → Enter name → ● → Select icon → ●

## ■ A Mode &amp; B Mode

Showing indicator for calls missed or new mail on idle line	● → Settings → ● → Phone/☎ → Double Number → ● → Show Missed → ● → On → ●
Hiding Internet connection confirmation	● → Settings → ● → Phone/☎ → Double Number → ● → Packet Warning → ● → Off → ● • Available for B Mode.

## ■ Dual Mode

Rejecting calls to either line in Dual Mode	● → Settings → ● → Phone/☎ → Double Number → ● → Reject By Line → ● → Select line → ● → On → ●
Setting main line for Dual Mode	● → Settings → ● → Phone/☎ → Double Number → ● → Send Priority → ● → Select option → ●