

| | |
|-----------------------------------------|-------------|
| Date & Time | 13-2 |
| Display & Illumination | 13-3 |
| Language..... | 13-3 |
| Image & Text..... | 13-3 |
| Display & Backlight..... | 13-3 |
| Sub Display..... | 13-4 |
| Standby Display..... | 13-4 |
| Key Backlight | 13-4 |
| Key Illumination | 13-4 |
| Incoming Transmissions | 13-5 |
| Handset Response | 13-5 |
| Handset Response (Lights)..... | 13-5 |

| | |
|---------------------------------|-------------|
| Sounds | 13-6 |
| System Sounds | 13-6 |
| Additional Sound Settings | 13-6 |
| Connectivity | 13-7 |
| Network | 13-7 |
| IP Service..... | 13-8 |
| Location Information..... | 13-8 |
| Reset | 13-9 |
| Restoring Default Settings..... | 13-9 |

13

Handset Customization



🔧 Date & Time Settings

Date & Time

[Start Here](#) → Settings → In Sound/Display menu, Date & Time

| | |
|--------------------------------------|-----------------------------------------------------------------------------------|
| Setting the date and time | Set Date/Time → Enter the year → Enter the month → Enter the day → Enter the time |
| Correcting Clock manually | Time Correction → Manual → Yes |
| Disabling auto Clock correction | Time Correction → Auto Corr. Setting → Off |
| Setting auto Clock correction timing | Time Correction → Auto Corr. Setting → On → Select item (□/✓) → Yr → 15 |
| Activating Daylight Saving | Daylight Save → On |
| Changing Time Zone | Set Time Zone → Select area |
| Adding custom time zone | Set Time Zone → Enter city name → + or - → Enter time difference |
| Changing time format to 12 hour | Time Format → 12 Hour |
| Changing date format | Date Format → Select option |
| Starting the Calendar week on Monday | Calendar Form. → Mon-Sun |



Y Display & Illumination Settings 1

Language

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ Sound/Display menu

Switching interface between Japanese and English

Language or 言語選択 ➔ ● ➔ **English** or 日本語 ➔ ●

Image & Text

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Display** ➔ ●

Showing preloaded images for incoming calls, etc.

System Graphics ➔ ● ➔ Select item ➔ ● ➔ **Preset (or Pattern 1 to Pattern 3)**
➔ ●

Showing Data Folder images for incoming calls, etc.

System Graphics ➔ ● ➔ Select item ➔ ● ➔ Select folder ➔ ● ➔ Select
image ➔ ● ➔ Specify image area ➔ ●
● Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

System Graphics ➔ ● ➔ Select item ➔ ● ➔ **Customized Screen** ➔ ● ➔ ●
● Not available for **Power On** or **Power Off**.

Changing font of numbers entered in Standby

Dial Number ➔ ● ➔ Select pattern ➔ ●

Showing a message each time handset is powered on

Greeting Msg. ➔ ● ➔ **Edit Message** ➔ ● ➔ Enter message ➔ ● ➔ **Switch
On/Off** ➔ ● ➔ **On** ➔ ●

Display & Backlight

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Display** ➔ ●

Disabling display transition effects

Display Effects ➔ ● ➔ **Off** ➔ ●

Changing Display/key Backlight illumination time

Backlight ➔ ● ➔ **Time Out** ➔ ● ➔ Select time ➔ ●
● For custom illumination time, select **Other**.

Changing Display Brightness

Backlight ➔ ● ➔ **Brightness** ➔ ● ➔ Adjust level ➔ ●

Changing inactivity time after which Display turns off

Display Saving ➔ ● ➔ Select time ➔ ●



Display & Illumination Settings 2

Sub Display

Start Here → Settings → In Sound/Display menu, *Display* → *Sub-Display*

| | |
|------------------------------------------------------------|--------------------------------------------|
| Changing inactivity time after which Sub Display turns off | <i>Duration</i> → Select time |
| Hiding new received messages | <i>Messages</i> → <i>Not Display</i> |
| Changing Clock view | <i>Display Date&Time</i> → Select type |
| Changing Clock font | <i>Clock Type</i> → Select pattern |
| Hiding caller info | <i>Caller Display</i> → <i>Off</i> |

Standby Display

Start Here → Settings → In Sound/Display menu, *Display* → *Standby Display*

| | |
|--------------------------------------------------|-------------------------------------|
| Changing Clock/Calendar | <i>Clock/Calendar</i> → Select type |
| Selecting Mobile Widget display option | <i>Show Widget</i> → Select option |
| Showing Network service provider name in Standby | <i>Operator Name</i> → <i>On</i> |

Key Backlight

Start Here → Settings → Phone/

| | |
|--------------------------------------|-----------------------------------|
| Disabling key Backlight illumination | <i>Set Key Light</i> → <i>Off</i> |
|--------------------------------------|-----------------------------------|

Key Illumination

Start Here → Settings → In Sound/Display menu, *Sounds & Alerts*

| | |
|---------------------------------------------|-----------------------------------------------------------------------------|
| Changing Key Illumination pattern by action | <i>Set Key Illumi</i> → Select action → <i>Key Pattern</i> → Select pattern |
| Disabling Key illumination by action | <i>Set Key Illumi</i> → Select action → <i>Switch On/Off</i> → <i>Off</i> |



Y Incoming Transmission Settings

Handset Response

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Sounds & Alerts** ➔ ●

| | |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Changing ringtone volume | Volume ➔ ● ➔ Select item ➔ ● ➔ Adjust level ➔ ● |
| Answering calls with other keys | Any Key Answer ➔ ● ➔ On ➔ ● <ul style="list-style-type: none"> ● Use 0 (0), 9 (9), * (star), # (hash), 辞書 (dictionary), 電話 (phone), A/B or 設定 (settings) in addition to 下 (down). |
| Muting ringer with other keys | Any Key Answer ➔ ● ➔ Only Mute ➔ ● <ul style="list-style-type: none"> ● Use 0 (0), 9 (9), * (star), # (hash), 辞書 (dictionary), 電話 (phone), A/B, 設定 (settings), 静音 (mute) or 音量 (volume) in addition to マナー (manner). |

Handset Response (Lights)

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Sounds & Alerts** ➔ ●

| | |
|----------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Setting illumination color | Event Light ➔ ● ➔ Select item ➔ ● ➔ Light Color ➔ ● ➔ Select color ➔ ● |
| Selecting illumination option | Event Light ➔ ● ➔ Select item ➔ ● ➔ Switch On/Off ➔ ● ➔ On, Link to Sound or Off ➔ ● |
| Changing Key Illumination patterns | Event Light ➔ ● ➔ Select item ➔ ● ➔ Key Pattern ➔ ● ➔ Select pattern ➔ ● <ul style="list-style-type: none"> ● Regardless of Key Pattern setting, ringtones control illumination when Switch On/Off is set to Link to Sound. |
| Setting illumination color for missed transmissions | Status Light ➔ ● ➔ Select item ➔ ● ➔ Light Color ➔ ● ➔ Select color ➔ ● |
| Enabling/disabling illumination for missed transmissions | Status Light ➔ ● ➔ Select item ➔ ● ➔ Switch On/Off ➔ ● ➔ On or Off ➔ ● |



Sound Settings

System Sounds

[Start Here](#) → Settings → In Sound/Display menu, **Sounds & Alerts**

| | |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enabling Keypad Tones | System Sounds → Keypad Tones → Select tone |
| Changing S! Circle Talk tone | System Sounds → S! Circle Talk → Select tone |
| Changing other System Sounds | System Sounds → Select item → Tone or Sound → Select folder → Select tone/file <ul style="list-style-type: none"> For files with limited usage period, choose Yes and press. |
| Disabling System Sounds | System Sounds → Select item → Tone or Sound → Off <ul style="list-style-type: none"> Not available for S! Circle Talk. For Keypad Tones, omit Tone or Sound selection step. |
| Changing System Sound duration | System Sounds → Select item → Duration → Select/enter time <ul style="list-style-type: none"> Not available for Keypad Tones or S! Circle Talk. |
| Changing System Sound volume | Volume → General Volume → Adjust level |

Additional Sound Settings

[Start Here](#) → Settings → Sound/Display menu















































 


| | |
|-----------------------------------------|----------------------------------------------------------|
| Disabling Speaker when using Headphones | Ringer Output → Earphone |
| Activating Speaker surround | Sounds & Alerts → Surround → On |



Connectivity Settings 1

Network

Start Here  → Settings  → Network 

| | |
|---------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Selecting a Network manually | Select Network  → Manual  → Select Network  |
| Adding preferred Networks | Select Network  → Set Preferred  → Select target location  → Insert  → Select Network  |
| Adding preferred Networks to the end | Select Network  → Set Preferred  → Add to End  → Select Network  |
| Deleting preferred Networks | Select Network  → Set Preferred  → Select Network  → Delete  |
| Adding Networks | Select Network  → Add New NW  → Add  → Enter country code  → Enter Network code  → Enter name  → Select NW Type  → Select type  <ul style="list-style-type: none"> • After selecting Add New NW and pressing , Network list appears if Network has already been added. To add more, press  again and proceed. |
| Editing Networks | Select Network  → Add New NW  → Select Network  → Change  → Edit in the same manner as adding Networks  |
| Deleting Networks | Select Network  → Add New NW  → Select Network  → Delete  |
| Switching Network service between 3G and GSM manually | Select Service  → Manual  → Select service  |
| Refreshing Network connection | Re-search Signal  |
| Retrieving Network Information | Retrieve NW Info  → Yes  |
| Checking Network status | Network Info  |
| Editing connection names for mobile data communication | External Device  → Select name  → Edit  |
| Clearing connection names for mobile data communication | External Device  → Reset  → Enter Handset Code  → Yes  |



🔧 Connectivity Settings 2

IP Service

[Start Here](#) → Settings → Phone/📠 → Locks →

Enabling IP Service

IP Service Setting → On → Enter Handset Code →
 • Enable IP Service to use S! Friend's Status and S! Circle Talk.

Location Information

[Start Here](#) → Settings → Network → Location Info →

Adding/editing Location Information destination URLs

URL Setting → <Empty> (or select URL) → Edit → Enter URL →
 • Default URL is not editable.

Specifying Location Information destination URL

URL Setting → Select URL →

Viewing Location Information destination URL

URL Setting → Select URL → Display →

Deleting Location Information destination URLs

URL Setting → Select URL → Delete → Yes →

Hiding Location Information

Datum On/Off → Off → Enter Handset Code →

Changing Location Information confirmation option

Location Prop. → Select option →



Reset Settings

Restoring Default Settings

[Start Here](#) → Settings → Phone/ → Master Reset →

| | |
|----------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Restoring default handset settings | <p>Reset Settings → Enter Administrator Code → Yes → Yes</p> <ul style="list-style-type: none"> Some default settings may not be restored. |
| Clearing all Phone Book entries, Data Folder files, etc. | <p>Reset All → Enter Administrator Code → Yes → Yes</p> <ul style="list-style-type: none"> Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.) Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications. Handset Code and Administrator Code return to the default settings. |

- A confirmation may appear before entering Administrator Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

