Text Entry

Text Entry	3-2
Entering Text	
Entering Characters	
Pictographs & Symbols	3-4
Smileys	
Templates	3-6
Additional Features	3-6
Conversion Methods (Japanese)	3-7
Predictive Conversion	
Converting Hiragana to Katakana/Alphanumerics	3-9
Narrowing Down Predictive Candidates by Number of Cha	aracters3-9
Editing Text	3-10
Deleting & Replacing	
Copy/Cut/Paste	3-10
User's Dictionary	
Saving User's Dictionary Entries	
Download Dictionary	
Activating Downloaded Dictionaries	

Text Entry

Enter alphanumerics, hiragana, kanji, katakana, symbols and pictographs.

 Three types of character input methods are available: Mode 1 (5-touch), Mode 2 (2-touch), Mode 3 (NIKO-touch)
 In this guide, examples are described in Mode 1 (5-touch).

Mode 2 (2-touch)/Mode 3 (NIKO-touch)


Press two numeric keys to enter a character.

• List of Key Assignments: ⊈P.18-14 to P.18-16

Help

Help describes text entry operations.

> In text entry window, (\mathbf{Y}) [Menu] → Help → Select an item

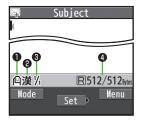

Character Input Methods	Operations
2: Mode 2 (2-touch)	Press and hold
(P: Mode 3 (NIKO-touch)	☑ [Mode]
 No icon appears for Mode 1 (5-touch). 	
② Input Modes*	Operations
abc: Alphanumerics	☑[Mode]
123: Numbers	
漢: Kanji (hiragana)	
ከታ: Katakana	
③ Double-byte/Single-byte*	Operations
1/1: Double-byte	[Menu] →
1/2 : Single-byte	2bytes character or
	1byte character
Remaining/Maximum Bytes in Message	

^{*} Operations in Mode 3 (NIKO-touch): FP.18-16

Entering Text

Entering Characters

Example: Enter 鈴木

1 In alphanumerics mode, ☑ twice to switch to kanji (hiragana) mode



- す: ③ three times
- \vec{g} : $\mathbf{Q}^* \rightarrow \mathbf{3}$ three times $\rightarrow \mathbf{X}$
- き: ② twice
- * When the next character is on the same key, press (a) first to move cursor.
- - To exit List, press 💯.
 - Available suggestion lists:

Predictive Candidates
Conversion Candidates
Context Forecast
abc/123/Kana Candidates (P.3-7)



3 图 to highlight 鈴木 → <a>● [Select]

Other Input Functions

Enter katakana/	[Mode] to cycle input modes →
Ziitoi itataitaiia,	Enter characters
alphanumerics	Zitter didiateters
Enter small kana	Enter a character → to convert to
(つ, ッ, etc.)	small character
	 Alternatively, press a key repeatedly
	to enter an assigned small kana.
Enter upper case	Enter a character → 🕜
characters	 Alternatively, press a key repeatedly to
	enter an assigned upper case character.
Add *or *	Enter a character to add "or " →
	* for * or * twice for *
	 In single-byte katakana mode, "and "
	are entered as a single-byte character.
Insert line break	[Line FD] to insert line breaks in
	text
Insert space at end of text	
Insert space within text	# repeatedly until single-byte space
	appears*, or [Y7] [Menu] → Input Space
	(Double-byte (single-byte) space is
	entered in 2 bytes (1 byte) input mode.)
Toggle characters in	[Rev.]
reverse order	Example: From c, press to toggle as
	follows: $c \rightarrow b \rightarrow a \rightarrow 2$
Move cursor to beginning/	[Menu] → Jump → To beginning
end of sentence	or To end
Undo	(10) [Undo]


^{*} Space cannot be inserted in number mode in this way.

Text Entry

Pictographs & Symbols

- Pictographs do not appear in messages sent to incompatible SoftBank handsets or e-mail addresses.
- Symbol List: 🖆 P.18-17
- **Open Pictograph List** In text entry window, (*)


Open Symbol List In text entry window, press and hold #, or *\frac{*}{} in pictograph list

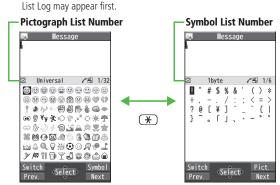

- Functions Available in Pictograph/Symbol List: 🗲 P.3-5
- to highlight a pictograph or symbol \rightarrow \bigcirc [Select]

Pictograph/Symbol List Log

- In Symbol Log, single-byte symbols appear in upper half of window; double-byte symbols in lower half.
- In List Log, pictographs appear in upper half of window; My Pictograms in lower half (only in S! Mail text entry window).

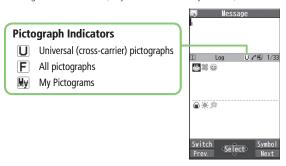

Functions Available in Pictograph/Symbol List

Toggle pictograph lists	In pictograph list,
Toggle symbol lists	In symbol list, [Switch] ■ Toggle lists: (Log →) Single-byte symbols → Double-byte symbols ■ Alternatively, press key corresponding to Symbol List number (1-3) for direct access ³ .
Jump to next page	In pictograph/symbol list, [Next]
Jump to previous page	In pictograph/symbol list, 🗃 [Prev.]
Toggle pictograph/symbol list	In pictograph, ** or ** [Symbol] In symbol list, ** or ** [Pict.]
Toggle full screen/standard screen	
Close list	(9.97/00)

- ¹ In S! Mail text/subject/signature entry window only
- ² In S! Mail text entry window only
- 3 Log (List Number 1) does not appear if any symbols/pictographs have not been entered.

Note

In number mode, open pictograph list: ☑ [Menu] → Pictograms/symbols → Pictograms

Smileys

- 1 In text entry window, **[Menu]** → *Pictograms/symbols* → *Smiley*
- **7** ★ to highlight a smiley → [Select]
 - To show next/previous page: (Next)/((Prev.)

Templates

Insert templates (greetings, URLs, emoticons) or edit preinstalled templates.

Inserting Templates

- 1 In text entry window, press and hold 🛪
 - Not available in number mode.
- 2 Select a category → Select a template

Note

Alternatively, in text entry window, ∑ [Menu] → Templates/Quote
 → Templates to enter a template

Editing Templates

Main Menu ► Tools ► Templates/Users Dic. ► Templates

- 1 Select a category
- 2 Highlight a template → [Edit] → Edit template
- Reset Edited Templates
- > After Step 1, (highlight a template →) [Menu] → Reset this or Reset all (→ For Reset all, enter Phone Password) → YES

Manage Template Folders

- > In Step 1, highlight a category → [v] [Menu] → Edit folder name → Edit folder name
- To reset folder name, ∑7 [Menu] → Reset name → YES

Additional Features

- In text entry window, (\mathbf{Y}) [Menu] \rightarrow Templates/Quote
- Select an item (See below)

Item	Operation/Description
Kuten code	Enter a character code (☐₹P.18-18)
	> Enter a character code (4 digits)
Input date/	Select a style to enter date/time
time	> Select a display style → Enter date/time
Quote phone	Quote Phone Book entry details
book	> Select an entry → Check items → [Finish]
Quote accnt	Quote Account Details
detls	> Enter Phone Password → Check items →
	[☑] [Finish]
Bar code	Activate Bar Code Reader to insert scanned result
reader	(□ P.13-15)

Conversion Methods (Japanese)

Predictive Conversion

Predictive/conversion suggestions appear when entering text.

Before Entering Text*	Predictive Candidates (Pre-text Predict)	Suggests salutations/opening words Example: こんにちは, お疲れさま, etc.	
While Entering Text Predictive Candidates Conversion Candidates		Lists likely conversions and matching conversions. Likely Conversions: わ \rightarrow 私, わたし, etc. Matching Conversions: わ \rightarrow 和, 輪, etc.	
		Suggests only matching conversions Example: わ → 和, 輪, etc.	
	abc/123/Kana Candidates	Lists alphanumerics/katakana assigned to key (19.3-9)	
After a Word is Fixed	Context Forecast	Suggests words likely to follow Example: 私 is fixed → です, の, は, etc.	

^{*} Available when you open Message Text entry window or cursor is at top of Text window. Note that handset Language must be set to 日本語.

- Predictions change with each letter entered.
- Press (☑) [Pred.]/[Conv.] to toggle Predictive Candidates List and Conversion Candidates List.

Predictive Functions While Composing Messages

- Time Season Predict suggests words appropriate for current season and time.
- Set word suggestions for formal or informal words.
- When replying/forwarding, suggestions are based on the original message (⊈ P.17-11).

Note

• Handset learns entered characters and suggests them for future conversions (☐ P.3-8).





- Disable Learning in Secret Mode/Secret Data Only
- Reset Learned Words View Learned Words Hide Predictive Candidates and Context Forecast Lists

 Hide Context Forecast List
- Fix Entered Characters Automatically (1 P.17-10)
- ■Deactivate Pre-text Predict ■Deactivate Season Prediction
- Select a Text Expression (Writing Style) Deactivate Prediction for Message Reply (P.17-11)

- 1 In kanji (hiragana) mode, ①

 †) is entered and Predictive Candidates List appears.

私 is entered and Context Forecast List appears.

- - \mathcal{O} is entered and Context Forecast List appears.
- List appears.
- Conversion Candidates List appears.

[Conv.]



In to move to Conversion
Candidates List → In the highlight

Application of the highlight is a conversion of the highlight is a co



If the Word is Not Listed

Press eme to return to hiragana, and segment hiragana to convert separately.

Example: Segment はるか into はる and か, then convert to 春香

- ① Move cursor to る, then convert はる to 春 → ●
- ② Convert か to 香 → 💿

Using Previously Entered Words

Enter the first one or two hiragana to access previously entered words in the list.

Converting Hiragana to Katakana/ Alphanumerics

Enter katakana and alphanumerics in kanji (hiragana) mode. Date and time can be entered quickly.

Example 1: Enter OK

Step	1	2	3	4
Key	(3 times)	(twice)	🟏 [a1Kana]	
Display	ıΣı	ふに	abc/123/Kana Candidates	ОК

Highlight **OK** and press

Example 2: Enter 10/30, 10:30 or 10月30日

Step	1	2	3
Key	1030	🛂 [a1Kana]	X
			10/30
Diamlass	± n + n	abc/123/Kana	10:30
Display あわさわ	Candidates	or	
			10月30日

Highlight a suggestion and press

Narrowing Down Predictive Candidates by Number of Characters

In kanji (hiragana) mode, narrow down Predictive Candidates by specifying minimum number of characters.

Example: Suggest words with a minimum of seven characters, starting with かさ.

1 Enterかさ→ 📵



2 (five times)

Word suggestions of seven or more characters appear.

- To show word suggestions of only seven characters: ☑ [Change]



Editing Text

Deleting & Replacing

1 Delete Characters within Lines

Place cursor before a character → (2)77/GB A character after cursor is deleted

• Press and hold (to delete all characters after cursor.

Delete Characters from the End of Text

Place cursor at the end of text → (2)7/(3)

A character before cursor is deleted.

- Press and hold me to delete all characters before cursor.
- **2** Enter another character

Copy/Cut/Paste

- 1 In text entry window, [Y] [Menu] \rightarrow Copy or Cut
- Select Text to Copy/Cut
 Place cursor before (or after) text to select →

 [Start] → Place cursor after (or before) text →
 [End]

Select All

 \mathbf{Y} [All] $\rightarrow \mathbf{O}$ [End]

Place cursor at target location → [Y [Menu] → Paste

User's Dictionary

Save frequently used words/phrases (up to 100 entries). Saved words/phrases appear among word suggestions.

Saving User's Dictionary Entries

- In text entry window, (Y) [Menu] → Text entry setting → User's Dictionary
- <New>
- Enter a word → Enter reading
- Edit User's Dictionary Entries
- > After Step 1, highlight a word → [[Edit] → Edit word → Edit reading
- Delete User's Dictionary Entries
- > After Step 1, (highlight a word →) [Yr] [Menu] → Delete → **Delete this** or **Delete all** (→ For **Delete all**, enter Phone Password) → YES

Note

 ◆ Alternatively, Main Menu
 ▶ Tools
 ▶ Templates/Users Dic. ▶ User's Dictionary

Download Dictionary

Download dictionaries from P-egg, a download site for 842P users (see below). Activate downloaded dictionaries to add character conversions to conversion suggestions (Japanese).

P-egg (as of May 2010) Main Menu ▶ Yahoo! ▶ Bookmarks ▶ Panasonicメーカーサイト (P-egg)

Activating Downloaded Dictionaries

Main Menu ► Tools ► Templates/Users Dic.

- Download Dictionary
- Select a dictionary
 - * appears for active dictionary.
 - To cancel: follow the same step
- Change Title
- > In Step 1, highlight a dictionary → [Y] [Menu] → Edit title → Edit
- View Details
- > In Step 1, highlight a dictionary → [Y7] [Menu] → Dictionary info
- Delete Dictionaries
- > In Step 1, (highlight a dictionary →) [Y] [Menu] → Delete this or **Delete all** (→ For **Delete all**, enter Phone Password) → **YES**