

 
# Phone Book

<b>Overview .....</b>	<b>4-2</b>
<b>Saving to Phone Book .....</b>	<b>4-3</b>
Phone Book Entry Items.....	4-3
Create New Entry .....	4-3
Other Ways to Add New Entries .....	4-5
Setting Groups .....	4-5
<b>Searching/Using Phone Book.....</b>	<b>4-6</b>
Making Calls from Phone Book.....	4-6
Using Phone Book .....	4-7
<b>Managing Phone Book .....</b>	<b>4-8</b>
Editing Phone Book Entries.....	4-8
Deleting Phone Book Entries.....	4-8
Copying/Deleting Phone Book Data .....	4-9
Phone Book Memory Status.....	4-9
<b>S! Addressbook Back-up (SAB).....</b>	<b>4-9</b>
Manual Synchronization .....	4-10
Auto Synchronization.....	4-11
Viewing Sync Log .....	4-11
<b>Account Details .....</b>	<b>4-12</b>
Editing Account Details.....	4-12
Account Details Functions.....	4-12
<b>Voice Dial.....</b>	<b>4-13</b>
Adding Entries to Voice Dial.....	4-13
Searching Entries by Voice Dial.....	4-13


## Overview

Save frequently used phone numbers and mail addresses to Phone Book.


**Supplement phone numbers and mail addresses with birthday, street address, an image or notes.**

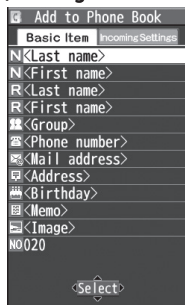

**Set tones/image for each entry.**

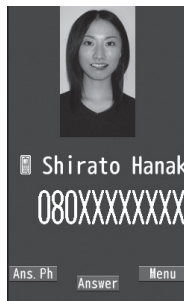 

**Sort entries into Groups.**

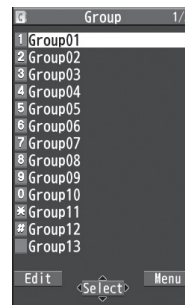 

### Note

#### ● Back-up Important Information

Keep a separate copy of Phone Book entry information. When battery is exhausted or removed for extended periods, entries may be lost. Handset damage may also affect data recovery. SoftBank is not liable for damages from lost/altered entries.

### Tip

● Backing Up to microSD Card (P.10-20)

# Saving to Phone Book

## Phone Book Entry Items

Save up to 1000 entries in handset Phone Book; 50 entries to USIM Card Phone Book.

- Available entry items are as follows.

	Phone Book Entry Items	Handset	USIM Card
Basic Item	Name (Reading)	<input type="radio"/>	<input type="radio"/>
	Group	19	10
	Phone number	4	2
	Mail address	3	1
	Address	<input type="radio"/>	—
	Birthday	<input type="radio"/>	—
	Memo	<input type="radio"/>	—
	Image	100	—
	Memory number	000 - 999	—
	Incoming Settings	Ringtone	<input type="radio"/>
Vibrator			
Notification Light			
Screen			
Msg Ringtone			
Msg Vibrator			
Msg Notif. Light			
Answer message			


: Can be saved      — : Cannot be saved


- Phone Book entries in USIM Card can also be used in another SoftBank handset.

 
## Create New Entry

Save new entries to handset or USIM Card Phone Book.

- When saving to USIM Card Phone Book, set **Save Settings** to **USIM** or **Ask Every Time** beforehand (☞P.17-11).

- Press and hold 
- Enter Last name →  
Enter First name

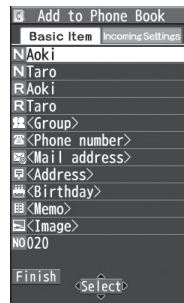

- For handset Phone Book,  to switch Basic item and Incoming Settings tabs.



Handset Phone Book

- Select an item (See below)

Item	Operation/Description
<b>Name (Last/First)</b>	Save last and first names separately. For USIM Card, enter both names together > Enter name
<b>Reading (Last/First)</b>	Automatically entered when last/first name is entered. For USIM Card, both readings are entered together. > To change reading, edit

Item	Operation/Description
Group	Categorize/search entries by group > Select a group ● Change group names or set ringtones for individual groups (☞P.4-5).
Phone number	> Enter phone number (→ For handset, select an icon)
Mail address	> Enter mail address (→ For handset, select an icon) ● Save only phone number if mail address is "phone number@softbank.ne.jp".
Address	> Enter zip code → Enter address
Birthday	> Enter birthday
Memo	> Enter memo
Image	Save a still image to appear for incoming calls > Select an item · <b>Select image</b> → Select a folder → Select a file · <b>Shoot image</b> → Frame subject →  [Record] or  ● Saved image appears for incoming calls only when <b>Phone Book Image</b> (☞P.17-7) is <b>ON</b> . If an image/video file is saved for <b>Screen</b> (☞Right), that setting takes priority.
Memory number	> Enter memory number
Ring tone	> <b>Ring Tones</b> → Select a type → Select a folder → Select a ringtone
Vibrator	> <b>Select vibrator</b> → Select a pattern
Notification Light	> <b>Select illumination</b> → Select a pattern

Item	Operation/Description
Screen*	> <b>SEL picture</b> → Select image type → Select a folder → Select a file ● Saved image appears for incoming calls whether <b>Phone Book Image</b> is <b>ON</b> or <b>OFF</b> . <b>Phone Book Image</b> setting applies only when still image is saved for <b>Image</b> .
Msg Ringtone	> <b>Ring Tones</b> → Select a type → Select a folder → Select a ringtone
Msg Vibrator	> <b>Select vibrator</b> → Select a pattern
Msg Notif. Light	> <b>Select illumination</b> → Select a pattern
Answer message	> <b>Select answer message</b> → Select a message

\* To cancel: Select **RLS picture**

#### 4 When complete, [Finish]

##### Note

- Alternatively, create new entries from **Main Menu ▶ Phone ▶ Create New Entry**

## Other Ways to Add New Entries

Save currently displayed phone numbers, mail addresses or still images to Phone Book.

Example: Saving Numbers from Incoming Call Logs

1  → Highlight a record →  [Menu] → **Add to Phone Book**

2 **New Entry**  
**New** → Enter details (↪ Step 3 on P.4-3)

 
### Add to Existing Entry

**Add** → Select an entry → Enter other details (↪ Step 3 on P.4-3)

- When saving to USIM Card, **Overwrite** appears instead of **Add**.

3 When complete,  [Finish] (→ YES)

### Note

- Press  [Menu] from a function. If **Add to Phone Book** appears, the information is savable to Phone Book. From a message window, select **Add Address** to save entries; from still image list/still image, select **Set display → Phone Book** to save entries.
- When saving new entries in Secret Mode or Secret Data Only, entries are saved to handset regardless of Save Settings.

## Setting Groups

Sort entries by Group. Custom set ringtones/vibrators/notifications per group.

### Main Menu ▶ Phone ▶ Group

-  appears for USIM Card Group.

1 Highlight a group →  [Edit] → Select an item → Set item

- Enter group name for " Group name."
- For other item operations: ↪ P.4-4

2 When complete,  [Finish]

### Check Settings

- > Select a group entry, or  [Menu] → **Check setting**
- Settings cannot be checked in USIM Card Group Phone Book.

### Reset Group Setting

- > Highlight a group →  [Menu] → **Reset group** → YES



### Note





- Custom settings are unavailable for USIM Card Groups.
- Individually set ringtones, vibrators, etc. are prioritized over those set for groups.

# Searching/Using Phone Book

## Making Calls from Phone Book

<Default> A-KA-SA-TA-NA

- 
- Search Phone Book (See below)
  - To change search method:  → Select a search method (See below)

Search Method	Operation/Description
A-KA-SA-TA-NA	Search entries by katakana syllabary. Names saved in Roman characters are saved under the 英 tab.
Reading	> Enter partial reading → 
Group	> Select a group
Memory Number*	Enter memory (entry) number to search for an entry > Enter a memory number
Name	> Enter partial name → 
Phone Number	> Enter partial phone number → 
Mail Address	> Enter partial mail address → 
2-touch Dial*	Show entries with memory (entry) numbers 000 - 009


\* Handset Phone Book only

- Select an entry
- 






- Voice Calls**  
Highlight a phone number → 

- Video Calls**  
Highlight a phone number →  [V. Call]

### Note

- To scroll through entries, enter nothing and press  (not available in **Group** or **2-touch Dial**).
- If no matches are found in **Reading** or **Memory Number** method, entries closest to condition appear.
- Once a method is selected, same method retains.
- Alternatively, search Phone Book from **Main Menu** ▶ **Phone** ▶ **Phone Book**

### Additional Search/Dialing Methods

<b>Open Tab Assigned to Key from Standby</b>	Press and hold (0) - (9) Open search window assigned to key.
<b>Enter Partial Number from Standby or during Call</b>	Enter partial number → 
<b>By Memory Number</b>	 →  → Enter a memory number
<b>By Single-digit Memory Number (2-touch Dial)</b>	Enter last digit ((0) - (9)) of memory number 000 - 009 → Voice Call:  /Video Call:  [V. Call]

## Using Phone Book

### Use Phone Book Entries

>  → Highlight an entry →  [Menu] → Select an item (See below)


Item	Operation/Description
<b>New</b>	Add a new entry (☞From Step 2 on P.4-3)
<b>Sort<sup>1</sup></b>	Change display order > Select an order
<b>Send Ir data<sup>2</sup></b>	(☞P.11-3)
<b>IC transmission<sup>2</sup></b>	(☞P.11-5)
<b>Copy to microSD<sup>2</sup></b>	Copy an entry to microSD Card > <b>YES</b> ● To display copied data: ☞P.10-19
<b>Delete phone book</b>	(☞Step 2 on P.4-8)
<b>Character size</b>	Switch character size to large/standard
<b>Set secret mode/Release secret<sup>2</sup></b>	Set/cancel Secret Mode for selected entry ● Entries saved as secret data appear only when <b>Secret Mode</b> or <b>Secret Data Only</b> is active (☞P.12-10).

<sup>1</sup> Available only when search method (☞P.4-6) is set to **Name**, **Phone Number** or **Mail Address**

<sup>2</sup> Not available in USIM Card Phone Book

### Use Entry Details

>  → Select an entry →  [Menu] → Select an item (See below)

Item	Operation/Description
<b>Notify caller ID</b>	Show/hide caller ID (☞P.2-3)
<b>Prefix numbers</b>	Make a call using a prefix number (☞P.2-3)
<b>Int'l dial assist</b>	Make an international call using Int'l Dial Assist > Select a country/region code → 
<b>Restrictions*</b>	Activate restrictions on specified entry (☞P.12-12)
<b>Edit Phone Book</b>	> Edit entry (☞From Step 3 on P.4-3) → <b>YES</b>
<b>Delete phone book</b>	> <b>Phone number</b> or <b>Delete this</b> → <b>YES</b> ● Item names vary by selected item: <b>Mail address, Address, Birthday, Memo</b> or <b>Image</b>
<b>Add shortcut icon</b>	Create shortcut (☞P.1-20)
<b>Compose S! Mail</b>	Create a message to mail address of selected entry (☞From Step 4 on P.14-4)
<b>Compose SMS</b>	Create an SMS message to phone number of selected entry (☞From Step 4 on P.14-8) ● Message can be sent to SoftBank handsets only.
<b>Send Ir data*</b>	(☞P.11-3)
<b>IC transmission*</b>	(☞P.11-5)
<b>Copy to microSD*</b>	Copy entry to microSD Card > <b>YES</b> ● To display copied data: ☞P.10-19
<b>Copy names</b>	Copy name

Item	Operation/Description
Copy phone numbers	Copy an item <ul style="list-style-type: none"> <li>Item names vary by selected item. <b>Copy mail add., Copy address, Copy birthday or Copy memo</b></li> </ul>
Character size	Switch character size to large/standard
Set secret mode/ Release secret*	Set/cancel Secret Mode for selected entry <ul style="list-style-type: none"> <li>Entries saved as secret data appear only when <b>Secret Mode</b> or <b>Secret Data Only</b> is active (☞P.12-10).</li> </ul>
Copy to USIM/ Copy from USIM	Copy entry to USIM Card > <b>YES</b>



\* Not available in USIM Card Phone Book

#### Note



- Quote entry details to message text (☞P.3-6).



## Managing Phone Book

### Editing Phone Book Entries

-  → Select an entry →  [Edit]
- Edit (☞From Step 3 on P.4-3) → **YES**

### Deleting Phone Book Entries

-  → Highlight an entry →  [Menu] → **Delete phone book**
- Select an item (See below)

Item	Operation/Description
Delete this	> <b>YES</b>
Delete select	> Check entries to delete →  [Finish] → <b>YES</b> <ul style="list-style-type: none"> <li> [Menu] → <b>Select all in tab*</b>, <b>Select all, Release all in tab*</b> or <b>Release all</b> to check/uncheck all entries at a time</li> </ul>
Delete all in tab*	> <b>YES</b>
Delete all	Delete all entries (handset/USIM Card Phone Book) including secret entries > Enter Phone Password → <b>YES</b> → <b>YES</b>

\* Available in **A-KA-SA-TA-NA, Reading, Group** and **Memory Number** search methods (☞P.4-6)




## Copying/Deleting Phone Book Data

Main Menu ► Phone ► Memory Manager

- 1 Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Copy	Copy data between handset and USIM Card Phone Book > <i>Copy to USIM</i> or <i>Copy from USIM</i>
Delete	Delete data in handset or USIM Card Phone Book > <i>Phone</i> or <i>USIM</i>

- 3 **Phone Book** → Check entries →  [Finish] → YES

## Phone Book Memory Status

Main Menu ► Phone ► Memory Status


View handset/USIM Card Phone Book memory status.

## S! Addressbook Back-up (SAB)

Back up Phone Book entries to SAB (network server); synchronize Phone Book and SAB; restore Phone Book after accidental loss/alteration.

- Separate subscription is required for this service.

### Notes

- Fully charge battery beforehand (  appears).
- Transmission fees apply when syncing, backing up or restoring Phone Book.
- Restoring Phone Book cancels these Phone Book settings: Ringtone, Vibrator, Notification Light, Picture, Answer message.
- Subscription to the service activates Auto Sync Settings during network information retrieval to back up edited Phone Book entries. Note that initiating network information retrieval activates Auto Sync Settings even when Auto Sync Settings are **OFF**. When contract is terminated, check if Auto Sync Settings are **OFF** (☎P.4-11).
- **SAB content is deleted upon contract termination.**
- **Information in Phone Book Address field is saved to building name field on SAB.**
- **When number of characters saved on SAB exceeds maximum number of characters savable to Phone Book, excess characters do not appear in Phone Book.**

### Sync/Back Up/Restore

- Be careful of back-up/restoration timing or selecting a synchronization direction.
- When no Phone Book content exists, selecting **Synchronize**, **Sync from Phone** or **Backup to Server** deletes SAB content.
- When no SAB content exists, selecting **Synchronize**, **Sync from Server** or **Restore from Server** deletes all Phone Book entries.

### Capacity Disparities

- When the number of savable items varies between Phone Book and SAB, synchronization reflects lower limit.

### Transfer to New Handsets

- S! Addressbook Back-up-compatible 3G Handsets: Data remains.
- Other 3G Handsets: Service subscription and data remains, but data is not accessible via handset (accessible via PCs).
- V3/V4/V5/V6/V8 Series: Service subscription is terminated and data is deleted.

## Manual Synchronization

Main Menu ► Phone ► S! Addressbook BkUp  
► Start Sync

- 1 **YES** → Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
<b>Synchronize</b>	Synchronize handset Phone Book and S! Addressbook
<b>Sync from Phone</b>	Add Phone Book changes to SAB
<b>Sync from Server</b>	Add SAB changes to Phone Book
<b>Backup to Server</b>	Back up Phone Book to SAB
<b>Restore from Server</b>	Restore Phone Book with SAB backup

- 3 **YES** → **OK**

## Auto Synchronization

Main Menu ► Phone ► S! Addressbook BkUp  
► Auto Sync Settings ► ON/OFF

- 1 Enter Phone Password → **ON**
  - To cancel, select **OFF**.
- 2 Select an item (See below)

Item	Operation/Description
<b>Every week</b>	Synchronize weekly at specified time of the day > Select a day → Set start time → Select a sync type
<b>Every month</b>	Synchronize monthly at specified time of the date > Enter a date → Set start time → Select a sync type
<b>After Editing PB</b>	Synchronize ten minutes after entries are edited > Select a sync type

3 **YES**

■ **View Auto Sync Settings**  
> Main Menu ► Phone ► S! Addressbook BkUp  
► Auto Sync Settings ► Confirm Settings

## Viewing Sync Log

View sync/backup/restore logs.

Main Menu ► Phone ► S! Addressbook BkUp  
► Sync Log

- 1 Select a log


### ■ Delete Sync Log

> In Step 1, (highlight a log →)  [Menu] → **Delete this** or **Delete all**  
(→ For **Delete all**, enter Phone Password) → **YES**

## Account Details

Save phone number, mail address, street address, etc. in Account Details.



### Editing Account Details

- 1  → 
- 2  [Edit]
- 3 Enter Phone Password → Edit →  [Finish]
  - Your subscribing phone number cannot be edited or deleted.

### Account Details Functions

In Account Details, press  [Menu] for following operations.

Item	Operation/Description
Edit*	Edit Account Details (☞ Step 3 above)
Character size	Switch character size to large/standard
Display all data*	View all saved items such as phone numbers and mail addresses
Copy names	Copy name
Copy phone numbers	Copy an item <ul style="list-style-type: none"> <li>● Item names vary by selected item. <i>Copy mail add., Copy address, Copy birthday or Copy notepad</i></li> </ul>

Item	Operation/Description
Send Ir data	Send details via Infrared (☞ P.11-3) <ul style="list-style-type: none"> <li>● Alternatively, while Account Details is open, press  [Ir].</li> </ul>
IC transmission	Send details via IC transmission (☞ P.11-5) <ul style="list-style-type: none"> <li>● Alternatively, while Account Details is open, press  [ICtrans].</li> </ul>
Copy to microSD	Copy details to microSD Card <ul style="list-style-type: none"> <li>&gt; YES               <ul style="list-style-type: none"> <li>● To display copied data: ☞ P.10-19</li> <li>● Account Details is saved as a Phone Book entry.</li> </ul> </li> </ul>
Erase phone number*	> Select an item → YES <ul style="list-style-type: none"> <li>● Delete items saved in Account Details</li> <li>● Item names vary by selected item. <i>Erase mail add., Erase address, Erase birthday, Erase memorandums or Delete image</i></li> </ul>
Reset*	Reset Account Details (handset number remains) <ul style="list-style-type: none"> <li>&gt; YES</li> </ul>

\* Enter Phone Password if required.

#### Note

- Quote Account Details to message text (☞ P.3-6).

## Voice Dial

Make a call by saying a voice dial name.

### Note

- Keep microphone about 10 cm away from your mouth, and pronounce a Voice Dial name clearly. If microphone is too distant, your voice may not be recognized.
- Avoid making sounds unrelated to Voice Dial names (clearing your throat, clicking your tongue, heavy breathing, etc.).
- Say Voice Dial names in quiet places.
- Avoid pressing or brushing keys, or covering microphone with fingers when pronouncing a Voice Dial name.

## Adding Entries to Voice Dial

Main Menu ► Phone ► Settings ► Voice Dial

- 1 **<New>** → Select a Phone Book entry  
Entries with ★ are already saved in Voice Dial list.
  - 2 Enter a Voice Dial name
    - Only katakana entry is available for Voice Dial names.
- Edit Voice Dial Names**
- > In Step 1, highlight a Voice Dial name → [Edit] → Edit name → YES
- Delete Voice Dial Entries**
- > In Step 1, (highlight a Voice Dial name →) [Menu] → *Delete this* or *Delete all* → YES

## Searching Entries by Voice Dial

- 1 Press and hold → Say a Voice Dial name  
Say the name within four seconds after voice recognition tone sounds. Once a Voice Dial name is recognized, result appears.
- 2 [Detail] → to show phone number
- 3 **Voice Calls**  
Highlight phone number →   
**Video Calls**  
Highlight phone number → [V. Call]

### Tip

**Settings** ● Activate Voice Dial Automatically (👉P.17-11)

