

# Managing Files

<b>Data Folder .....</b>	<b>10-2</b>
Data Folder Structure .....	10-2
<b>Opening Files .....</b>	<b>10-4</b>
Viewing & Playing Files .....	10-4
Copy Protected Files .....	10-5
Options .....	10-6
<b>Using/Editing Still Images .....</b>	<b>10-11</b>
Editing Still Images .....	10-11
Creating Animations .....	10-12
Saving Still Images to Phone Book .....	10-12
<b>Playing Videos .....</b>	<b>10-13</b>
Playing Videos/PC Movies .....	10-13
File Playback Functions .....	10-13
<b>Managing Folders/Files .....</b>	<b>10-15</b>
Managing Folders .....	10-15
Using Play List .....	10-16
<b>microSD Card .....</b>	<b>10-17</b>
microSD Card Installation .....	10-17
Format microSD Card .....	10-18
Viewing microSD Card Files .....	10-19
Handset Data Backup .....	10-20
PC File Transfers .....	10-21
microSD Card Functions .....	10-22

# Data Folder

Save, play and manage files downloaded from Internet, etc.

- Save still images/videos captured by Camera, downloaded data or data copied/moved from other SoftBank handsets to microSD Card.

## Data Folder Structure

Folder		Function/Saved Data	File Format <sup>1</sup>	
Pictures <sup>2</sup>	Download Pictures	Connect to download site	JPEG, GIF (.gif including Interlaced GIF), GIF Pictogram Package File (.gpk), SWF (.swf Flash Animation), PNG (.png including Interlaced PNG)	
	Main Folder	Downloaded still images, etc.		
	Camera	Still images captured by Camera, etc.		
	My Pictograms	Download My Pict.		Connect to download site
		お気に入り		Downloaded pictograms, etc.
		顔文字, 装飾, etc.		Preinstalled pictograms
	Mail Art	Mail Art (download)		Connect to download site
Pre-installed	Preinstalled still images			
Original Animation	Display still images continuously			
Ring Songs&Tones <sup>2</sup>	DL Ring Songs&Tones	Connect to download site	SMF, SP-MIDI, AMR, SMAF, MPEG-4 formatted files (.mid, .midi, .amr, .mmf, .3gp, .mp4)	
	Main Folder	Downloaded ring songs/tones, etc.		
	Pre-installed	Preinstalled ring songs/tones		
	Voice Announce	Data recorded by Voice Announce		
	Play List	Play Play List		
S! Appli <sup>2</sup>	Download S! Appli	Connect to download site	—	
Widget <sup>2</sup>	Download Widget	Connect to download site	WGT (.wgt), SWGT (.swgt)	
Music	Main Folder <sup>2</sup>	Download Music	Connect to download site	
		Music Search		
		Initial Folder		Downloaded Chaku-Uta Full®
	WMA <sup>3</sup>	WMA files transferred from PC	MP4, SMC, WMA (.3gp, .mp4, .smc, .wma)	

Folder		Function/Saved Data	File Format <sup>1</sup>
<b>Videos<sup>2</sup></b>	Download Videos	Connect to download site	MP4 (including .mp4, .3gp, SDV), ASF (.asf)
	Main Folder	Downloaded video files, etc.	
	Camera	Video files recorded by Camera	
	Pre-installed	Preinstalled video files	
	Play List	Play Play Lists	
<b>PC Movies</b>	Position Memory	Play video files from saved resume position	WMA (.wma), WMV (.wmv), ASF (.asf)
	microSD <sup>3</sup>	PC movies saved using PC	
	Play History	Playback records of PC movies	
<b>TV</b>	Image	Screenshots (still images) captured by Digital TV	JPEG (.jpg)
	Video <sup>3</sup>	Programs (video files) recorded by Digital TV	TOD (.tod), MOI (.moi), MAI (.mai), PGI (.pgi)
	Position Memory	Play video files from saved resume position	
<b>Lifestyle-Appli</b>	Download	Connect to download site (Osaifu-Keitai®: ☞P.13-9)	—
<b>Books<sup>2</sup></b>	Download Books	Connect to download site	CCF (.ccf), XMDf (.zbf, .zkb, .zbs)
<b>Customized Screen<sup>2</sup></b>	Customized Screen	Connect to download site	CUSR (.xcsf)
<b>Templates</b>	Download Templates	Connect to download site	—
<b>Font</b>	Download Font	Connect to download site	MTF (.mtf)
	Main Folder	Downloaded fonts	
	Pre-installed	Pre-installed fonts	
<b>Other Documents<sup>2</sup></b>	Main Folder	Incompatible files attached to mail <sup>4</sup>	—

<sup>1</sup> Some copy protected files have extensions different from above.

<sup>2</sup> When microSD Card is inserted, press  [microSD] in Folder list to view data saved in microSD Card.

<sup>3</sup> Available only when microSD Card is inserted.

<sup>4</sup> Some attachment files cannot be saved in Other Documents.

# Opening Files

## Viewing & Playing Files

### Main Menu ► Data Folder

#### 1 Select a folder

- In Folder List, press  [Phone/microSD] to toggle handset folder and microSD Card folder.



Example: Pictures Folder

#### 2 Select a folder → Select a file

File opens/plays.

- To toggle list/thumbnail view:  [Change]



Still Image List Window

### When Shortcut to Download Site is Selected

Handset connects to download site on Internet.

### Enlarge Still Images

> Main Menu ► Data Folder ► Pictures ► Select a folder ► Select a file ►  [Menu] ► Display size ► Fit in display

### Operations while Playing Files from Ring Songs&Tones

Stop Playback	 [Stop]
Adjust Volume	 or 
Attach to S! Mail	 [  ]

## Copy Protected Files

Playing/forwarding/saving may be restricted and Content Key may be required for usage.

If Content Key is expired, obtain a new Key to use file.

-  or  (Silver) appears for copy protected files requiring Content Keys.  files are accessible.  files are inaccessible. In Thumbnail view,  appears for expired files ( appears for Books file).
- Confirmation appears asking whether to delete corresponding Content Key when:
  - Deleting a  file or folder containing  files
  - Deleting all or multiple files in a folderIf files are deleted together with Content Keys, other files requiring same Content Keys may become unusable.
- See file info to confirm restrictions such as expiry term or usage limitation (Options:  P.10-6)
- Handset holds up to 1000 Content Keys. Multiple Keys may be required to use a file.
- Interrupted playback (by incoming calls or Alarm) of copy protected WMA files with limited usage in Data Folder is also counted as one usage.

## Using Copy Protected Files

- Files downloaded on handset cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- When set as wallpaper or ringtone, settings may return to defaults if license has expired or a different USIM Card is inserted.
- Limited use files cannot be set as wallpaper or ringtone.

## Obtaining Content Key

If Content Key is expired, a message appears when you try to open the file. To obtain a new Key, select **YES**. Handset connects to Content Key site.

### Note

- Alternatively, obtain Content Key: Highlight a file →  [Menu] → **Take contents key** → **YES**
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- If you try to save more than 1000 Content Keys, a message appears. Delete unnecessary Keys. Otherwise download of a new Key may fail incurring information fees.

### Tip

- Back Up Content Keys ( P.10-23)

## Options

Highlight a file in Data Folder and press  [Menu] for the following operations.

- Some functions may not be available depending on files.

### Pictures

Item	Operation/Description
<b>Edit picture</b>	Edit file (  P.10-11)
<b>Display picture</b>	Open file
<b>Set display*</b>	Set as wallpaper, Phone Book image, Menu Icons, etc. > Select an item ● ★ appears for set item.
<b>Picture info</b>	Show file name, file size, etc.
<b>Attach to S! Mail</b>	Send file via S! Mail (  From Step 2 on P.14-4)
<b>Graphic mail</b>	Add file to Graphic Mail (  P.14-5)
<b>Send Ir data</b>	Send file via Infrared (  P.11-3)
<b>IC transmission</b>	Send file via IC transmission (  P.11-5)
<b>Add shortcut icon</b>	Create shortcut (  P.1-20)
<b>Copy to microSD</b>	Copy file to microSD Card
<b>Move to microSD</b>	Move file to microSD Card
<b>Positioning</b>	Set where to paste file in Standby > Select a position
<b>Edit file name</b>	Edit file name
<b>Move</b>	Move file to another folder

Item	Operation/Description
<b>Slideshow</b>	Show files in the folder continuously. Select display speed > <b>Normal</b> or <b>Slow</b>
<b>Delete this</b>	Delete file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to operate > Check files →  [Menu] → Select an item
<b>Memory Status</b>	Show memory status
<b>Sort</b>	Change display order of files > Select an order
<b>Pictures/ File names</b>	Toggle list/thumbnaill view ● Alternatively,  [Change]
<b>Take contents key</b>	Connect to Content Key site

\* Before setting a file as Video Call related item (except for Incoming/ Outgoing Video Calls), set **Select Images** to **Original** (Change Outgoing Image:  P.17-12).

To set a file as Menu Icon related item, set **Menu Icons** to **Customize** ( P.17-4).

- If an incoming call arrives or handset is turned off while My Pictograms package file (.gpk) is being uncompressed, some pictograms in package file may not open. Retry uncompressing.

### Tip

- Enlarge Still Images ( P.10-4)
- Editing Still Images ( P.10-11)
- Creating Animations ● Saving Still Images to Phone Book ( P.10-12)

## ■ Ring Songs&Tones

Item	Operation/Description
<b>Edit file name</b>	Edit file name
<b>Play melody</b>	Play file
<b>Set as ring tone</b>	<ul style="list-style-type: none"> <li>&gt; Select an item</li> <li>● ★ appears for set item.</li> </ul>
<b>Add shortcut icon</b>	Create shortcut (☞P.1-20)
<b>Attach to S! Mail</b>	Send file via S! Mail (☞From Step 2 on P.14-4)
<b>Send Ir data</b>	Send file via Infrared (☞P.11-3)
<b>IC transmission</b>	Send file via IC transmission (☞P.11-5)
<b>Copy to microSD</b>	Copy file to microSD Card
<b>Song-Tone info</b>	Show title, file name, etc.
<b>Memory Status</b>	Show memory status
<b>Delete</b>	<ul style="list-style-type: none"> <li>&gt; Select a type               <ul style="list-style-type: none"> <li>· <b>Delete this</b> → <b>YES</b></li> <li>· <b>Delete select</b> → Check files → [Finish] → <b>YES</b></li> <li>· <b>Delete all</b> → Enter Phone Password → <b>YES</b></li> </ul> </li> </ul>
<b>Sort</b>	Change display order of files > Select an order
<b>Move</b>	Move file to another folder
<b>Move to microSD</b>	Move file to microSD Card
<b>Take contents key</b>	Connect to Content Key site

## ■ S! Appli/Lifestyle-Appli

Item	Operation/Description
<b>Start</b>	Activate S! Appli or Lifestyle-Appli
<b>Security level</b>	Set security level (☞P.16-4)
<b>S! Appli info</b>	Show application name, application size, etc.
<b>Add shortcut icon</b>	Create shortcut (☞P.1-20)
<b>Move to microSD</b>	Move S! Appli to microSD Card (Lifestyle-Appli cannot be moved)
<b>Delete</b>	Delete application > <b>YES</b>

## ■ Widget

Item	Operation/Description
<b>Paste on Stand-by</b>	(☞P.7-2)
<b>Widget Information</b>	Show file name, file size, etc.
<b>Attach to S! Mail</b>	Send file via S! Mail (☞From Step 2 on P.14-4)
<b>Send Ir data</b>	Send file via Infrared (☞P.11-3)
<b>IC transmission</b>	Send file via IC transmission (☞P.11-5)
<b>Move to microSD</b>	Move file to microSD Card
<b>Delete this</b>	Delete file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to operate > Check files → [Menu] → Select an item

## ■ Music

- See "Functions Available in Chaku-Uta Full®/WMA File List" (☞P.9-9)

## ■ Videos

Item	Operation/Description
<b>Register</b>	Set as ringtones, Standby Display or Start-up display > Select an item
<b>Video info</b>	Show title, file name, etc.
<b>Attach to S! Mail</b>	Send file via S! Mail (☞From Step 2 on P.14-4)
<b>Send Ir data</b>	Send file via Infrared (☞P.11-3)
<b>IC transmission</b>	Send file via IC transmission (☞P.11-5)
<b>Copy to microSD</b>	Copy file to microSD Card
<b>Move to microSD</b>	Move file to microSD Card
<b>Move</b>	Move file to another folder
<b>Add shortcut icon</b>	Create shortcut (☞P.1-20)
<b>Edit file name</b>	Edit file name
<b>Delete this</b>	Delete file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to operate > Check files → ☞[Menu] → Select an item
<b>Memory Status</b>	Show memory status
<b>Sort</b>	Change display order of files > Select an order

Item	Operation/Description
<b>Listing</b>	Toggle list/thumbnail view > <b>Title</b> or <b>Title + Image</b> ● Alternatively, ☞[Change]
<b>Take contents key</b>	Connect to Content Key site
<b>■ PC Movies</b>	
Item	Operation/Description
<b>Contents info</b>	Show title, file name, etc.
<b>Move</b>	Move file to another folder
<b>Copy</b>	Copy file to another folder
<b>Multiple-choice</b>	Select multiple files to operate > Check files → ☞[Menu] → Select an item
<b>Comment view</b>	Show descriptions
<b>Memory Status</b>	Show memory status
<b>Delete this</b>	Delete file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>

## TV (Video)

- See "Pictures" for Image folder.

Item	Operation/Description
Edit title	Edit title
Video info	Show title, channel name, etc.
Add shortcut icon	Create shortcut (P.1-20)
Delete	> Select a type <ul style="list-style-type: none"><li>· <b>Delete this</b> → <b>YES</b></li><li>· <b>Delete selected</b> → Check files → [Finish] → <b>YES</b></li><li>· <b>Delete all</b> → Enter Phone Password → <b>YES</b></li></ul>
Memory Status	Show memory status
Listing	Toggle list/thumbnail view > <b>Title</b> or <b>Title + Image</b>

## Books

Item	Operation/Description
Play	Play file
Connect to Website	Open site link
Book info	Show file name, file size, etc.
Copy to microSD	Copy file to microSD Card
Move to microSD	Move file to microSD Card
Add folder	Add a new folder
Edit file name	Edit file name
Move	Move file to another folder
Take contents key	Connect to Content Key site

Item	Operation/Description
Delete	Delete file > <b>YES</b>

## Customized Screen

Item	Operation/Description
Preview	Preview file
Collective Setting	Set Customized Screen all at once > <b>YES</b>
File info	Show title, file name, etc.
Copy to microSD	Copy file to microSD Card
Move to microSD	Move file to microSD Card
Edit file name	Edit file name
Delete this	Delete file > <b>YES</b>
Delete all	Delete all files > Enter Phone Password → <b>YES</b>
Multiple-choice	Select multiple files to operate > Check files → [Menu] → Select an item
Memory Status	Show memory status
Sort	Change display order of files > Select an order
Listing	Toggle list/thumbnail view > <b>Title</b> or <b>Image</b> <ul style="list-style-type: none"><li>● Alternatively, [Change]</li></ul>
Take contents key	Connect to Content Key site
Connect to Website	Open site link

## ■ Templates

Item	Operation/Description
<b>Compose S! Mail</b>	Create Graphic Mail from template (☞ Steps 2 - 4 on P.14-4, from Step 2 on P.14-5)
<b>Edit title</b>	Edit title
<b>Template info</b>	Show title and file size
<b>Delete this</b>	> <b>YES</b>
<b>Delete selected</b>	> Check files → [✉] [Finish] → <b>YES</b>
<b>Delete All</b>	> Enter Phone Password → <b>YES</b>

## ■ Font

Item	Operation/Description
<b>Set</b>	Apply selected font
<b>File info</b>	Show file name, file size, etc.
<b>Edit title</b>	Edit title
<b>Delete this</b>	Delete file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to operate > Check files → [☑] [Menu] → Select an item
<b>Memory Status</b>	Show memory status
<b>Sort</b>	Change display order of files > Select an order
<b>Listing</b>	Toggle list/thumbnail view > <b>Title</b> or <b>Image</b> ● Alternatively, [☑] [Change]

## ■ Other Documents

Item	Operation/Description
<b>File info</b>	Show file name, file size, etc.
<b>Attach to S! Mail</b>	Send file via S! Mail (☞ From Step 2 on P.14-4)
<b>Copy to microSD</b>	Copy file to microSD Card
<b>Edit file name</b>	Edit file name
<b>Move</b>	Move file to another folder
<b>Delete this</b>	Delete file > <b>YES</b>
<b>Delete all</b>	Delete all files > Enter Phone Password → <b>YES</b>
<b>Multiple-choice</b>	Select multiple files to operate > Check files → [☑] [Menu] → Select an item
<b>Memory Status</b>	Show memory status
<b>Sort</b>	Change display order of files > Select an order

### Note

- Titles of mp4/3gp Ring Songs&Tones files and Videos/Music/Customized Screen files appear in respective lists. Files without titles appear with file names (created when files are saved to handset). Titles cannot be changed; edited file names may not appear in lists.

# Using/Editing Still Images

## Editing Still Images

- Edit features are not available for all file types.

### Main Menu ▶ Data Folder ▶ Pictures

- 1 Select a folder → Select a file → [Menu] → *Edit picture*
- 2 [Menu] → Select an item (See below)

Item	Operation/Description
<b>Marker stamp</b>	<ul style="list-style-type: none"> <li>&gt; Select a stamp →  to move stamp →  [Put]</li> <li>• Following options are available when positioning a stamp:               <ul style="list-style-type: none"> <li>· To rotate or scale up/down:  [Menu] → Select an item</li> <li>· To start over:  [Cancel]</li> </ul> </li> <li>• To add:  [Add] after positioning</li> </ul>
<b>Frame</b>	<ul style="list-style-type: none"> <li>&gt; Select a frame               <ul style="list-style-type: none"> <li>· To rotate 180 degrees:  [Menu] → <i>180° rotation</i></li> <li>· To change frame: </li> <li>· To return to frame list:  [Cancel]</li> </ul> </li> </ul>
<b>Character stamp</b>	<ul style="list-style-type: none"> <li>&gt; Enter text →  to move text →  [Put]</li> <li>• To change content/color/font/size: When positioning stamp,  [Menu] → Select an item → Operate selected item</li> <li>• To start over:  [Cancel]</li> </ul>

Item	Operation/Description
<b>Fit in screen</b>	Change image size to Standby (240 x 427) > <i>YES</i>
<b>Change size</b>	<ul style="list-style-type: none"> <li>&gt; Select a size               <ul style="list-style-type: none"> <li>• To start over:  [Cancel]</li> </ul> </li> </ul>
<b>Trim away</b>	<ul style="list-style-type: none"> <li>&gt; Specify a size →  to specify area →  [Set]</li> <li>• To start over:  [Cancel]</li> </ul>
<b>Retouch</b>	<ul style="list-style-type: none"> <li>&gt; Select an item               <ul style="list-style-type: none"> <li>• To start over:  [Cancel]</li> </ul> </li> </ul>
<b>Rotate</b>	<ul style="list-style-type: none"> <li>&gt; <i>90° to right, 90° to left</i> or <i>180°</i></li> <li>• To start over:  [Cancel]</li> </ul>
<b>Brightness</b>	>  to adjust brightness
<b>Attach to S! Mail*</b>	<ul style="list-style-type: none"> <li>Create S! Mail with edited still image attached</li> <li>&gt;  [Set] → Create S! Mail ( From Step 2 on P.14-4)</li> <li>• Edited file is automatically saved.</li> <li>• Alternatively,  []</li> </ul>
<b>Save*</b>	Overwrite/rename to save edited file

\* Available after other editing operations

- 3 [Set] → [Save]
- 4 *YES* (Overwrite) or *NO* (Save as)

## Creating Animations

### Saving Original Animation

Main Menu ► Data Folder ► Pictures ► Original Animation

- 1 <New> → <1st> - <20th>
- 2 Select a folder → Select a file
  - Repeat Step 2.
- 3  [Finish]

### Functions Available in Original Animation List

In Original Animation list, highlight an Original Animation and press  [Menu] for following operations.

Item	Operation/Description
Edit title	Edit title
Org. animation	Add more files to Original Animation (  Above)
Display picture	Play Original Animation <ul style="list-style-type: none"> <li>● Alternatively, select an Original Animation from list to play.</li> </ul>
Set display	Set Original Animation as Standby display, etc. > Select an item
Picture info	View item set for <i>Set display</i>
Release animation	Cancel a saved Original Animation > <i>YES</i>

## Saving Still Images to Phone Book

- Savable sizes: Standby (240 x 427) or smaller in JPEG, GIF or PNG format (up to 300 Kbytes)
- Save images to up to 100 Phone Book entries.
- Still images cannot be saved to USIM Card Phone Book entries.

Main Menu ► Data Folder ► Pictures

- 1 Select a folder → Select a file →  [Menu] → *Set display* → *Phone Book*
- 2 **New Entry**  
*New* → Enter details ( From Step 2 on P.4-3) →  [Finish]  
**Add to Existing Entry**  
*Add* → Select an entry →  [Select] →  [Finish] → *YES*

# Playing Videos

## Playing Videos/PC Movies

Main Menu ► Data Folder

### 1 Play Videos

**Videos** → Select a folder → Select a file

### Play PC Movies

**PC Movies** → **microSD** → Select a file

- To toggle list/thumbnail view:  [Change]

### Playback Operations

- Some operations are not available depending on files.

Adjust Volume	 or 
Play Previous	 <ul style="list-style-type: none"><li>● Starts from beginning of current file when playback time is over three seconds.</li></ul>
Play Next	
Fast-rewind <sup>1</sup>	Press and hold 
Fast-forward <sup>1</sup>	Press and hold 
Playback Position <sup>2</sup>	 repeatedly
Toggle Playback Speeds	
Mute/Unmute	
Pause/Resume	
Play Frame by Frame <sup>1</sup>	Pause playback →  [Frame] <ul style="list-style-type: none"><li>● Each key press advances frame by frame.</li></ul>

Toggle Views	 <ul style="list-style-type: none"><li>● Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View<sup>2</sup></li></ul>
Toggle Remaster On/Off (↵P.9-8)	
Toggle Sound Effect (Listening) Modes (↵P.9-8)	
Toggle Equalizer Modes (↵P.9-8)	

<sup>1</sup> Videos only

<sup>2</sup> May be unavailable depending on image size.

## File Playback Functions

### Play from a Resume Position

Resume playback (Videos/PC Movies) from a saved position.

> Main Menu ► Data Folder ► Videos or PC Movies

► Position Memory ► Select an item

- Save a resume position: ↵P.10-14
- **Marker to resume** is a resume position automatically saved when a call arrives, alarm goes off, battery runs low, or playback is terminated.

### Play from Play History (PC Movies Only)

> Main Menu ► Data Folder ► PC Movies ► Play History

► Select a record

## ■ Functions Available in Video/PC Movie Playback Window

- Some operations are not available depending on files.
- > While playback is paused,  [Menu] → Select an item (See below)

Item	Operation/Description
<b>Normal play</b> <sup>1</sup>	Play at normal speed
<b>Slow</b> <sup>1</sup>	Play at slow speed
<b>Quick View (1.25x)</b> <sup>1</sup>	Play 1.25 times faster than normal
<b>Quick View(2x)</b> <sup>1</sup>	Play at double speed
<b>Fast</b> <sup>2</sup>	Fast-forward
<b>Rewind</b> <sup>2</sup>	Fast-rewind
<b>Stop</b>	Return to Videos/PC Movies List window
<b>Position to play</b>	Start playback from a specified point >  to highlight a play point →  [Set]
<b>Connect to Website</b> <sup>1</sup>	Open site link > <b>YES</b>
<b>Sound effect</b>	Set <b>Remaster</b> , <b>Listening</b> or <b>Equalizer</b> (  P.9-8)
<b>Contents info</b> <sup>2</sup>	Show title, file name, etc.
<b>Position memory</b>	Save a resume position > Select a resume position number ● To play from a saved position:  P.10-13
<b>Attach to S! Mail</b> <sup>1</sup>	Send file via S! Mail (  From Step 2 on P.14-4)
<b>Register (Ringtones)</b> <sup>1</sup>	Set file as ringtone > <b>Ringtones</b> → Select a type ● ★ appears for item set as ringtone.

Item	Operation/Description
<b>Register (Stand-by Display/Start-up Window)</b> <sup>1</sup>	Set file as Standby Display or Start-up Window > Select an item → <b>YES</b>
<b>Video info</b> <sup>1</sup>	Show title, file name, etc.
<b>Send Ir data</b> <sup>1</sup>	Send file via Infrared (  P.11-3)
<b>IC transmission</b> <sup>1</sup>	Send file via IC transmission (  P.11-5)
<b>Add shortcut icon</b> <sup>1</sup>	Create shortcut (  P.1-20)
<b>Description</b> <sup>2</sup>	Show file information > <b>The words view</b> or <b>Description view</b>
<b>Copy URL</b> <sup>2</sup>	Copy URL
<b>Display size</b>	Select a display size > <b>Actual size</b> or <b>Fit in display</b>
<b>Change to full</b> <sup>1</sup>	Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View <sup>3</sup> ● Alternatively, 

<sup>1</sup> Video files only

<sup>2</sup> PC movie files only

<sup>3</sup> May be unavailable depending on image size.

# Managing Folders/Files

## Managing Folders

The following operations are available in Pictures, Ring Songs&Tones, Music, Videos, Books and Other Documents.

### Main Menu ► Data Folder

- 1 Highlight a folder →  [Menu] → Select an item (See below)

Item	Operation/Description
Add folder	Create a user folder
Edit folder name	Edit user folder name
Delete folder	Delete user folder > Enter Phone Password → YES → YES
Folder security <sup>1</sup>	Hide files in folder unless Phone Password is entered > Enter Phone Password → YES  appears for set folder. ● To cancel: Repeat the step
Delete all image <sup>2</sup>	> Enter Phone Password → YES → YES
Edit Play List <sup>3</sup>	Edit Play List
Release Play List <sup>3</sup>	Cancel edited Play List > YES

Item	Operation/Description
Select storage <sup>4</sup>	Specify folder on microSD Card to save files to > YES ● Books folders cannot be specified.
Memory Status <sup>5</sup>	View memory status/number of saved files

<sup>1</sup> Pictures/Videos folders only

<sup>2</sup> Pictures folder only

<sup>3</sup> Play List folder in Ring Songs&Tones folder only

<sup>4</sup> microSD Card only

<sup>5</sup> Music folder only

## Using Play List

Use Play List to organize Data Folder Ring Songs&Tones/ Videos files.

Select files to create Play List links to each file in its original folder.

### Creating a Ring Songs&Tones Play List

Main Menu ► Data Folder ► Ring Songs&Tones

- 1 Highlight **Play List** →  [Menu] → **Edit Play List**
- 2 Select a number → Select a folder → Select a file
  - Repeat Step 2.
- 3  [Finish]

#### ■ Play Play List

> Main Menu ► Data Folder ► Ring Songs&Tones ► Play List

- Files are played in the saved order.

#### ■ Delete a File

> After Step 1, select a file → **Release this**

#### ■ Delete All Files

> In Step 1, highlight **Play List** →  [Menu] → **Release Play List** → **YES**

#### Note

- mp4/3gp files cannot be added to Play List except in Music Player Play List.

## Creating a Videos Play List

Main Menu ► Data Folder ► Videos ► Play List

- 1 Select a Play List
- 2 Select a number → Select a folder → Select a file
  - Repeat Step 2.
- 3  [Finish]

#### ■ Play a Play List

> Main Menu ► Data Folder ► Videos ► Play List ► Highlight a Play List →  [Play]

- Files are played in the saved order.

#### ■ Delete Files

> After Step 1, (highlight a file →)  [Menu] → **Delete this** or **DEL all from list** → **YES**

#### ■ Change Order

> After Step 1,  [Menu] → **Order to play** → Select a file → Select a target →  [Finish] →  [Finish]

## microSD Card

- 842P is compatible with up to 2 GB commercial microSD Cards and up to 16 GB commercial microSDHC Cards (as of May 2010). For information on microSD Card compatibility, visit the website below (Japanese). Note that microSD Cards not listed on the website may not function properly.
  - From handset  
P-egg (as of May 2010)  
**Main Menu ▶ Yahoo! ▶ Bookmarks**  
**▶ Panasonicメーカーサイト** (P-egg)
  - From PC  
<http://panasonic.jp/mobile/>  
Not all operations are guaranteed by the microSD/microSDHC Cards listed.
- Format new microSD/microSDHC Cards for use with handset (☞P.10-18).

### Note


- SoftBank is not liable for damages from accidental loss/alteration of microSD Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- microSD Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.

## microSD Card Installation


- Turn off handset before inserting/removing microSD Card.

### Inserting

- 1 Open cover. Insert microSD Card until it clicks

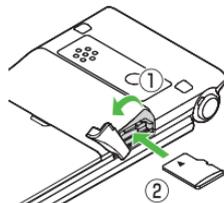

- 2 Close cover

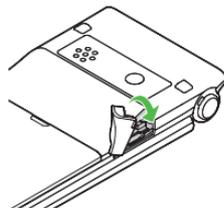


### microSD Card Check

When microSD Card is installed correctly,  appears. If  appears, microSD Card cannot be used. Remove microSD Card from handset, and re-insert it. If  does not disappear, execute Check microSD (☞P.10-22) or format microSD Card (☞P.10-18).

- Other microSD Card Indicators: ☞P.1-8

## Removing

- 1 Push microSD Card in
  - microSD Card pops out with a light push.

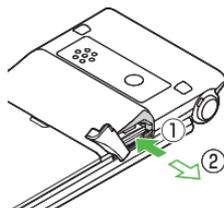

- 2 Remove microSD Card and close cover
  - To close cover: [P.10-17](#)

### Note

- Do not turn off handset or remove battery/microSD Card while  is shown. microSD Card may be damaged or files be lost.
- microSD Card may pop out when inserting/removing it.

## Format microSD Card

- Formatting microSD Card deletes all saved files/data.

### Main Menu ► Tools ► microSD Backup

- 1  [Menu] → *microSD format*
- 2 Enter Phone Password → **YES**

### Note


- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- microSD Cards formatted on other devices may not be used. Format microSD Card on handset before use.
- Handset cannot format incompatible microSD Cards.
- If format fails, turn power off and remove microSD Card from handset. Reinsert microSD Card and format it again.

## Viewing microSD Card Files

View Phone Book entries, Calendar events, Tasks, messages, Notepad and Bookmarks backed up on microSD Card.

Main Menu ► Tools ► microSD Backup

1 Select a category

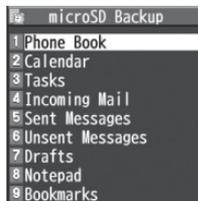

Category List

2 Select a file

Backup date appears as file name.



File List

3 Select an item of data



Data List



Detailed Data

### Note

- If messages on microSD Card do not appear correctly, copy messages to handset (☞P.10-20) and execute **Charset Conversion** (☞P.14-24).

## Handset Data Backup

Back up handset data (Phone Book, Calendar, Tasks, Messages, Notepad, Bookmarks, Content Keys) to microSD Card; restore handset data after accidental loss/alteration.

- Back Up Content Keys: P.10-23

### Backing Up to microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Highlight a category → [Menu] → **Copy to microSD** (→ For **Bookmarks**, select an item)
- 2 Enter Phone Password → **YES**  
All files of selected category are backed up to microSD Card.

#### One File Backup

> Open a file → [Menu] → **Copy to microSD** → **YES**

### Restoring from microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Select a category

- 2 **Restore One Item**  
Select a file → Highlight an item → [Menu] → **Add to phone**

#### Restore One File

Highlight a file → [Menu] → **Add to phone** or **Overwrite to phone** → Enter Phone Password

#### Restore All Files

[Menu] → **Add all to phone** or **Overwr. all to ph.** → Enter Phone Password

- 3 **YES** (→ **YES**)

#### Note

- Note that **Overwrite to phone** or **Overwr. all to ph.** erases all files of same category on handset.
- Files of 10 MB or larger cannot be moved/copied from microSD Card to handset.
- Data backed up in other SoftBank handsets may not be restored in 842P depending on type and size.

#### Tip

- Delete Items from microSD Card ● View microSD Card Memory Capacity ( P.10-22)

## PC File Transfers

### Folder Structure

Files moved or copied from handset to microSD Card are organized as follows:

- Save files in folders by file type.

<b>DCIM</b>		
● Still images captured by Camera and saved to microSD Card		
<b>PRIVATE</b>		
<b>MYFOLDER</b>		
<b>Utility</b>		
Calendar	Calendar.BCK	Calendar Backup files
Contacts	Contacts.BCK	Phone Book Backup files
Rights		Content Key Backup files
Tasks	Tasks.BCK	Tasks Backup files
Memo	Memo.BCK	Notepad Backup files
<b>Mail</b>		
Drafts	Drafts.BCK	Drafts Backup files
Inbox	Inbox.BCK	Incoming Mail Backup files
Outbox	Outbox.BCK	Unsent Messages Backup files
Sent Messages	Sent Messages.BCK	Sent Messages Backup files
<b>My Items</b>		
Book		E-comics, etc.
Bookmarks	Bookmarks.BCK	Bookmarks Backup files
Flash(R)		Flash® files

Games and More	S! Appli
Music	Sound files with .3gp, .mp4, .smc
Other Documents	Other files
Pictograms	My Pictograms
Pictures	Still images moved/copied from handset to Main Folder in microSD Card
Sounds & Ringtones	Sound files of: up to 10 MB with .3gp, .mp4, up to 300 KB with .mid, .midi, .amr
Videos	Videos moved/copied from handset to Main Folder in microSD Card
Widget	Widget contents
WMFile*	PC movie files saved from PC to microSD Card
<b>SD_VIDEO</b>	
<ul style="list-style-type: none"> <li>● Videos recorded by Camera and saved to microSD Card</li> <li>● Programs (videos) recorded by Digital TV</li> </ul>	

- Some copy protected files have extensions different from above.
  - When moving/copying videos from microSD Card to handset, file format or file size may change.
- \* If WMFile does not appear in My Items (MYFOLDER), create a folder titled WMFile to save PC movie files.

## Using Data on microSD Card

With a microSD Card inserted, connect handset with a PC via USB cable (not included) to read/write data from/onto microSD Card.

Following equipment is required:

- Connector Cable: USB cable
- PC: PC with USB port (Universal Serial Bus Specification Rev 1.1/2.0 compliant)
- Compatible Operating Systems: Windows® XP, Windows Vista®, Windows® 7 (Japanese version of each)

**Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode ▶ microSD Mode**

1 Connect handset to PC via USB cable while handset is on

- PC recognizes microSD Card.
-  appears in Standby (handset).

### Note

- Reading/writing data continues even during calls. After calls, check indicators on PC to see if reading/writing is complete.
- File names saved in microSD Card may not properly appear if changed on PC.

## microSD Card Functions

### ■ Restore microSD Card items (Check microSD)

Use Check microSD to repair microSD Card data errors.

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu]**  
 ▶ **Check microSD ▶ YES**

- Do not turn handset power off or remove microSD Card or battery while microSD Card is being checked; may damage handset or microSD Card.
- It may take 30 seconds to a few minutes to complete Check microSD depending on data volume on microSD Card.
- Handset cannot check incompatible or unformatted microSD Cards.
- Handset may delete files and folders that fail to be restored.

### ■ Delete Items from microSD Card

> **Main Menu ▶ Tools ▶ microSD Backup ▶** Select a category  
 ▶ (Highlight a file ▶)  [Menu] ▶ **Delete this** or **Delete all** (▶ For **Delete all**, enter Phone Password) ▶ **YES**

- Content Keys cannot be deleted.

### ■ View microSD Card Memory Capacity

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu]**  
 ▶ **microSD info**

## ■ Back Up Content Keys

Copy Content Keys to microSD Card from handset or to handset from microSD Card.

> **Main Menu** ▶ **Settings** ▶ **Security** ▶ **Content Key**

▶ **Copy to microSD** or **Copy from microSD** ▶ Enter Phone Password

- Content Keys with expiration dates or usage limits cannot be backed up.
- USIM Card inserted when Content Keys were moved to microSD Card must be inserted to move Content Keys from microSD Card.
- Some applications are not compatible with handset. Only Content Keys for compatible applications can be backed up. Also, some keys are moved (not copied) to microSD Card when backed up. Contact SoftBank Mobile Customer Center, General Information for more information (☎P.18-33).
- Backing up Content Keys overwrites previously saved Content Key backup.

# 10

## Managing Files