

Handset Security

Changing Phone Password	12-2
Security Functions	12-2
USIM PINs	12-2
Keyguard	12-4
Privacy Key Lock	12-4
Personal Data Lock	12-5
Secure Remote Lock	12-7
Key Pad Dial Lock	12-8
Side-keys Guard	12-9
Additional Lock Functions.....	12-9
Restricting Calls/Messages.....	12-9
Hiding Call Logs and Sent/Received Address List.....	12-9
Secret Mode/Secret Data Only.....	12-10
Setting Secret Mail	12-11
Mail Security	12-11
Call Restrictions.....	12-12
Delaying Ringtone	12-12
Rejecting Unknown Callers	12-13
Rejecting Calls without Caller ID	12-13
Reset.....	12-13
Reset Settings	12-13
All Reset	12-14

Changing Phone Password

<Default> 9999

Change Phone Password as required.

- For Phone Password details: ☞ P.1-25

Main Menu ► Settings ► Security ► Change Phone Password

- 1 Enter current 4 to 8-digit Phone Password
- 2 Enter new 4 to 8-digit Phone Password → **YES**

Security Functions

USIM PINs

- For more information about PINs: ☞ P.1-3

Note

- Emergency numbers (110, 119, 118) are not dialable in PIN/PIN2, PUK/PUK2 entry window.

PIN Authentication

Activate to require PIN entry each time handset is turned on.

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **PIN Authentication**
- 2 **ON** or **OFF**
- 3 Enter PIN

Changing PIN/PIN2

- Set **PIN Authentication** to **ON** before changing PIN (☞P.12-2).

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **Change PIN** or **Change PIN2**
- 2 Enter current PIN/PIN2
- 3 Enter new PIN/PIN2
- 4 Reenter new PIN/PIN2

PIN Lock & Cancellation (PUK/PUK2)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering PIN Unlocking Key (PUK/PUK2).

- For information about PUK/PUK2, contact SoftBank Mobile Customer Center, General Information (☞P.18-33).

- 1 In PIN lock mode, enter PUK/PUK2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2


Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled (turning off power counts as one incorrect entry). Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Mobile Customer Center, General Information (☞P.18-33).

Keyguard

<Default> Deactivated

Lock handset keys to prevent accidental operation.


Note, incoming calls can be answered by pressing .

- While set,  appears in Standby.

1 In Standby, press and hold 

- To cancel Keyguard, repeat operation.

While Keyguard is Active

- Emergency numbers (110, 119, 118) are dialable. Entered numbers do not appear on Display. Once numbers are dialed, Keyguard is canceled.
- Press  to disable Calendar event tone/Alarm, or place an incoming call on hold.
- Cancel Keyguard during a call or while incoming call is placed on hold.

Note

- Turning off power cannot cancel Keyguard.

Privacy Key Lock

<Default> OFF

Set Privacy Key Lock to require Phone Password for using handset (Password not required for turning handset on/off, answering calls and engaged call operations).

- While locked,  appears in Standby.

Main Menu ► Settings ► Security ► Privacy Key Lock

1 Enter Phone Password

- To cancel Privacy Key Lock, enter Phone Password in Standby. If Phone Password is incorrectly entered five times, handset turns off.

While Privacy Key Lock is Active

- Emergency numbers (110, 119, 118) are dialable.
- Only phone numbers appear on Display for incoming calls.
- Message ringtones and Alarm tones are disabled.
- Calendar event notification and Alarm are disabled.
- S! Quick News and some indicators on Display do not appear. They appear after Privacy Key Lock is canceled.

Note

- Turning off power does not cancel Privacy Key Lock.

Personal Data Lock

Set Personal Data Lock to prevent others from reading or tampering with your personal information in Phone Book or Data Folder. Activate to require Phone Password for accessing personal data.

Locked Functions/Data

- Messaging
- S! Appli
- Phone Book search/saving/setting
- Memory Manager/Memory Status (Phone Book)
- Account Details
- Restrictions (Phone Book)
- Notepad
- Calendar
- Tasks
- Shortcuts
- Event Indicators
- Camera/Video Camera
- Lifestyle-Appli
- microSD Backup
- Answer Phone
- Voice Recorder
- Customized Screen
- Voice Announce
- Dictionary
- Software Update
- Yahoo! Keitai viewing/setting
- PC Site Browser viewing/setting
- Bookmarks/Saved Pages
- BookSurfing®
- e-Book Viewer
- Mobile Widget
- S! Quick News
- S! Info Ch./Weather
- Content Key obtaining/backup
- Voice Dial
- Data Folder*
- Music Player
- Digital TV
- Bar Code Reader
- Receive via Infrared
- IC Data transmission
- Alarm
- Reset Settings
- All Reset

* Font setting is available.


Activating/Canceling Personal Data Lock

<Default> Deactivated

- While locked,  appears in Standby.

Main Menu ► Settings ► Security ► Personal Data Lock

1 Enter Phone Password → **Activate/Deactivate**

- To cancel Personal Data Lock, repeat operation.
- To set confirmation (Personal Data Lock OFF window) to appear when handset is opened:  P.12-6, P.12-7

Canceling Personal Data Lock Temporarily

When Phone Password is entered,  disappears and disabled functions become temporarily available.

- Once handset returns to Standby while no functions are active, Personal Data Lock is active again.
- Some functions remain unavailable. Deactivate Personal Data Lock to use the following:
 - Receiving IC data
 - Reject unknown

Note

- While Personal Data Lock is set, some indicators do not appear in Standby. They appear after lock is canceled.
- Turning off power does not cancel Personal Data Lock.

Customizing Personal Data Lock

Enable/disable Alarm, incoming message notification, etc. while Personal Data Lock is active.

Main Menu ► Settings ► Security ► Personal Data Lock

- 1 Enter Phone Password → **Customize** →
Select an item (See below)

Item	Operation/Description
Alarm Tone	Enable/disable Alarms (Calendar, TV timer, or other alerts) or TV Timer Recording. > Select an item → Accept (Enable) or Not Accept (Disable)
Incoming Call Act	Show/hide Event Indicator (incoming messages) or Phone Book entry information (incoming calls). > Select an item <ul style="list-style-type: none"> · Incoming Message → Accept (Show indicator) or Not Accept (Hide indicator) · Phone Book Available → Accept (Show Phone Book Entry information) or Not Accept (Hide information)
Display/Tone	Enable/disable Display settings, ringtones or indicators. > Select an item <ul style="list-style-type: none"> · Internal Display → Accept (Enable Display Settings) or Not Accept (Disable) · Ring Tones → Accept (Enable Sound Settings) or Not Accept (Disable) · S! Quick News → Accept (Show information) or Not Accept (Hide information) · S! Info Ch./Weather → Accept (Show indicators) or Not Accept (Hide indicators) · Widget Contents → Accept (Show widgets) or Not Accept (Hide widgets)

Activating Personal Data Lock when Closing Handset

<Default> OFF

Set Timer Lock at Close to automatically activate Personal Data Lock when specified time has elapsed after handset is closed.

- When set,  appears in Standby.

Main Menu ► Settings ► Security ► Timer Lock at Close

- 1 Enter Phone Password
- 2 **Personal Data Lock** → Select a time
 - When **OFF** is selected, setting is canceled.
- 3 **YES**
 - Personal Data Lock OFF window appears each time handset is opened. Note, Personal Data Lock must be activated.

Showing Personal Data Lock OFF Window when Opening Handset

<Default> OFF

Main Menu ► Settings ► Security ► Lock OFF at Open

1 Enter Phone Password

2 *Personal Data Lock* → ON

Note

- When Timer Lock at Close and Lock OFF at Open are both active, canceling Personal Data Lock when opening handset temporarily cancels lock. However, lock activates again when specified time elapses after closing handset.

Secure Remote Lock

If handset is lost or stolen, remotely lock handset from a PC or mobile. If Secure Remote Lock is active, all operations are unavailable except to turn handset on.

- For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) or My SoftBank.

Accessing My SoftBank from Handset (Japanese)

For service details, visit SOFTBANK MOBILE Corp. Website.

Main Menu ► Yahoo! ► Menu List ► My SoftBank
► English

Follow onscreen instructions.

Note

- Emergency numbers (110, 119, 118) are dialable even while Secure Remote Lock is set.

Showing Messages during Secure Remote Lock

<Default> OFF

Set Display message to appear when Secure Remote Lock is active.

- Use preset message or create a message.

Main Menu ► Settings ► Security ► Lock Message

1 Enter Phone Password

2 **Display Setting** → ON

Save a Lock Message

> After Step 1, **Message** → Enter a message

Key Pad Dial Lock

<Default> Deactivated

Allow dialing only from Phone Book entries and lock dialing with keypad. Unauthorized use of handset can be prevented.

- While locked,  appears in Standby.

Unavailable Operations

- Dialing with keypad
- Phone Book (saving, editing, deleting, copying from microSD Card, and sending/receiving via Infrared and IC transmission)
- Sending S! Mail/SMS by manually entering addresses

Available Operations

- Dialing from Phone Book or Voice Dial
- Dialing from Redial, Outgoing Call Logs, Incoming Call Logs, Sent address, or Received address (only phone numbers/mail addresses saved in Phone Book)

Main Menu ► Settings ► Security ► Key Pad Dial Lock

1 Enter Phone Password

- To cancel Key Pad Dial Lock, repeat operation.

Note

- Emergency numbers (110, 119, 118) are dialable even while Key Pad Dial Lock is set.

Side-keys Guard

<Default> OFF

Set Side-keys Guard to disable side key operations while handset is closed.


 
- While set,  appears in Standby.

Main Menu ► Settings ► Phone Settings ► Side-keys Guard

1 ON

- To enable side key operations while handset is closed: **OFF**

Note

- When **Menu Icons** is set to **Basic** or **Customize**, press  in Standby
→ Press and hold  to toggle **ON** and **OFF**.

Additional Lock Functions

IC Card Lock

Deactivate Osaifu-Keitai® functions (☞P.13-12).

Remote Lock

Deactivate Osaifu-Keitai® functions remotely (☞P.13-12).

Restricting Calls/Messages

Hiding Call Logs and Sent/Received Address List

<Default> ON

Main Menu ► Settings ► Incoming Settings ► Call Logs

- 1 Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Incoming	Show/hide Incoming Call Logs/Received address list
Outgoing	Show/hide Redial/Outgoing Call Logs/Sent address list

3 OFF

Note

- While Incoming Call Logs is **OFF**, Answer Phone (Voice Calls) does not play. Selecting **Missed calls** Event Indicator does not show Incoming Call Logs.

Secret Mode/Secret Data Only

<Default> Deactivated

Phone Book entries and Calendar events saved as secret data appear only when Secret Mode/Secret Data Only is active.

- Set Phone Book entries or Calendar events as secret data (Phone Book: P.4-7, P.4-8; Calendar: P.13-5)

Main Menu ► Settings ► Security

- 1 Select an item (See below)

Item	Operation/Description
Secret Mode	View all data including secret data <ul style="list-style-type: none"> ● While set, appears in Standby.
Secret Data Only	View only secret data <ul style="list-style-type: none"> ● While set, flashes in Standby.

- 2 Enter Phone Password
For Secret Data Only, number of saved secret data appears.

Cancel Secret Mode/Secret Data Only

- > In Standby, or follow Step 1 above
- disappears.

Cancel Secret Mode/Secret Setting

- > In Phone Book/Calendar event window, [Menu] → *Release secret*

Note

- Select whether to save data edited/saved in Secret Mode as secret data. Data saved/edited in Secret Data Only are saved as secret data.
- Turn off handset to cancel Secret Mode/Secret Data Only.

Tip


- Settings ● Disable Learning in Secret Mode/Secret Data Only (P.17-10)

Setting Secret Mail


<Default> ON

Hide messages to/from secret Phone Book entries.

- Even if Secret Mail Display is set to **OFF**, secret messages appear when Secret Mode/Secret Data Only is active.


- 1  → **Settings**
- 2 **Universal Settings** → **Secret Mail Display**
- 3 Enter Phone Password
- 4 **OFF**



Note

- When both Spam Filter and Secret Mail Display are set, messages from Phone Book entries saved as secret data are sorted into Spam Folder (Safe List:  P.14-18).
- Alternatively, **Main Menu** ► **Messaging** ► **Settings** ► **Universal Settings** ► **Secret Mail Display**

Mail Security

Set handset to require Phone Password for opening mail boxes or operating Server Mail.

-  appears for set mail boxes or Server Mail.

- 1  → **Settings**
- 2 **Universal Settings** → **Mail Security**
- 3 Enter Phone Password → Check items →  [Finish]

■ **Set/Cancel Mail Security by Folder (Incoming Mail or Sent/Unsent)**



- >  → **Incoming Mail** or **Sent/Unsent** → Highlight a folder →  [Menu] → **Mail Security** → Enter Phone Password
-  appears for set folders.


Note

- Alternatively, **Main Menu** ► **Messaging** ► **Settings** ► **Universal Settings** ► **Mail Security**

Call Restrictions

Reject/accept/forward calls from specified phone numbers, or restrict calling unspecified phone numbers.

- 1  → Search Phone Book
- 2 Select an entry →  [Menu] → **Restrictions**
- 3 Enter Phone Password
- 4 Select an item (See below)


Item	Operation/Description
Restrict Dialing	Allow calls only to specified numbers
Call Rejection	Reject specified numbers
Call Acceptance	Accept from specified numbers only
Call Forwarding	Automatically forward specified numbers <ul style="list-style-type: none"> ● Set destination numbers (Call Forwarding:  P.2-17)

- To cancel, repeat operation.


View/Cancel Phone Book Restrictions

- > **Main Menu** ► **Phone** ► **Restrictions** ► Enter Phone Password
 - Select an item* ► Select a Phone Book entry ► Select a number
 - **YES**

* ★ appears for set item.

- Highlight an item →  [Menu] → **Release Settings** → **YES** to cancel restriction on all specified numbers.

Note

- **Missed calls** Event Indicator appears in Standby for calls from rejected numbers.
- **Call Rejection** and **Call Acceptance** are disabled while Personal Data Lock is active ( P.12-5).

Delaying Ringtone

<Default> OFF

Delay ringtone/vibration for Voice/Video Calls from unknown numbers.

- Main Menu** ► **Settings** ► **Incoming Settings**
 - **Ring Time Settings** ► **Ring Starting Time**

- 1 **ON** → Enter start time

- **Hide Missed Call Records (Disconnected during Ringtone Delay)**
 - > **Main Menu** ► **Settings** ► **Incoming Settings**
 - **Ring Time Settings** ► **Missed Calls Display** ► **Not Display**

Rejecting Unknown Callers

<Default> Accept

Main Menu ► Settings ► Security ► Reject Unknown

- 1 Enter Phone Password → **Reject**

Rejecting Calls without Caller ID

<Default> Accept

Reject calls without Caller ID or from pay phones.

Main Menu ► Settings ► Security ► Call Setting w/o ID

- 1 Enter Phone Password
- 2 Select an item → **Reject**

Reset

Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu ► Settings ► Security ► Reset Settings

- 1 Enter Phone Password → **YES**

Note

- Some default settings may not be restored.

All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries, etc.

Main Menu ► Settings ► Security ► All Reset

1 Enter Phone Password → **YES** → **YES**

Handset automatically turns off and restarts.

Note

- Fully charge battery (🔋) beforehand.
- Phone Password is reset to default.
- USIM Card/microSD Card files are not affected.
- Data transmission settings (set via PC) are not affected.
- Non-restorable items when deleted by All Reset:
 - Customized settings, Call Logs, downloaded S! Appli, etc.