

Support

Customer Service

Call these numbers toll free from landlines.

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	☎ 0088-240-157
	Customer Assistance	☎ 0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	☎ 0088-241-157
	Customer Assistance	☎ 0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	☎ 0088-242-157
	Customer Assistance	☎ 0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	☎ 0088-250-157
	Customer Assistance	☎ 0088-250-113

More Information

Handset User Support
Via Yahoo! Keitai Main Menu:
From above the search field,
select **メニューリスト** →
English → **User Support**

 
Online English Manual
See SOFTBANK MOBILE Corp.
Website (<http://www.softbank.jp>).
May be unavailable at purchase.
Call Customer Service or try later.

Emergency Numbers

- Police 110
- Fire & Ambulance 119
- Maritime Safety Agency.. 118

TINSEA164AFZZ
08K 3.4 YM HI ©

SoftBank 923SH First Step Guide

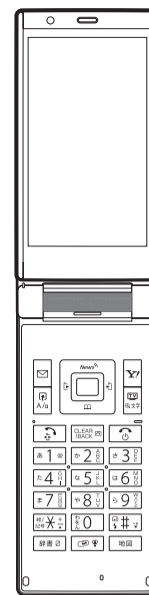

Emergency Numbers

Customer Service

More Information

Use English Interface

Place International Calls

Customize Handset Address

And more...

Safety Precautions

- Use specified items (battery, Charger, etc.) only.
Non-specified equipment use may cause malfunction, or battery to leak, overheat, burst or ignite, leading to fire, burn injuries or electric shock.
- Do not short-circuit power/charging terminals.
May cause fire, electric shock or malfunction; battery may leak, overheat, burst or ignite. Keep conductive material (wire, metal jewelry, pencil lead, etc.) away from Charger or External Device Port terminals.
- Do not open, modify or disassemble handset and related hardware.
May cause malfunction, or battery may leak, overheat, burst or ignite. Fire, injury or electric shock may also result. Contact SoftBank Customer Center, Customer Assistance for repairs.
- Do not expose handset or accessories to liquids.
May cause malfunction, overheating, fire or electric shock. Avoid exposure to water, pet urine, etc.

- Do not expose handset/accessories to extreme heat/direct sunlight (e.g., inside vehicles, etc.).
May cause malfunction/warping; battery may leak, overheat, burst or ignite. Handset or battery may become hot to the touch, leading to burn injuries.
- Do not dispose of battery in fire.
May leak, overheat, burst or ignite.
- Do not apply strong shocks or excessive force.
Do not drop/throw handset/accessories. May cause damage or malfunction. Battery may leak, overheat, burst or ignite, resulting in fire, shock or injury. Stop using battery if damaged or warped. Do not sit on or place heavy objects on handset/accessories (e.g., in back pants pockets or inside handbags, packs, etc.).
- Keep handset, battery or Charger away from humidity, dust or extreme temperatures.
Malfunction may result.
- If battery fluid gets in eyes, do not rub; rinse with water and consult a doctor immediately.
Eyes may be severely damaged.

 
- Do not force battery into handset.
Battery may leak, overheat, burst or ignite; make sure the direction and install properly.
- Do not place handset or accessories in ovens, microwave ovens or other cooking appliances.
Battery or other parts may leak, burst, overheat or ignite; may cause malfunction, accident or injury.
- Keep handset off and Charger disconnected near gas stations or places with fire/explosion risk. Handset use near petrochemicals or other flammables may cause fire/explosion; turn handset off before using Osaifu-Keitai® at gas stations (cancel IC Card Lock beforehand).
- Do not use Mobile Light near people's faces.
May temporarily affect sight leading to accidents.
- Never use handset (including TV) while driving.
Accidents may result. Park beforehand. Phone use while driving is prohibited by the Road Traffic Law.

- If an abnormality occurs:
If there is abnormal odor, excessive heat, discoloration or distortion, unplug Charger, turn off handset and remove battery immediately; may cause overheating, bursting, fire or battery leakage.
 - If battery does not charge properly, stop trying.
Battery may leak, overheat, burst or ignite.
 - At signs of a battery leak, avoid fire sources.
Battery may catch fire or burst.
- For more information, see Online English Manual.


Before Using Handset

Accessories

- Battery (SHBBV1)

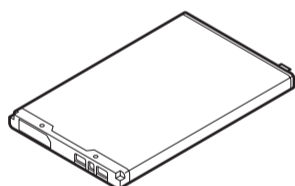

- Utility Software (Japanese)*

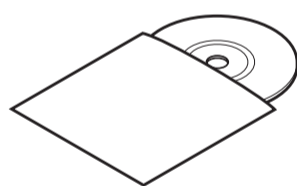 


* Complimentary sample.

USIM Card Installation

- 1 Slide in USIM Card with IC chip facing down
- 2 Insert battery (right)

 - First power off handset and remove battery.
- Do not force USIM Card into/out of handset.
- USIM Card must be inserted to use handset.

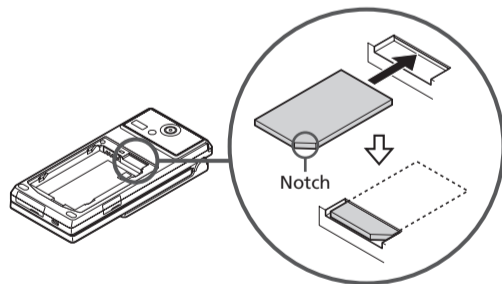




Manner Mode

- Minding Mobile Manners
Please use handset responsibly. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using handset. Adjust handset use according to your surroundings.

- Activating/Canceling Manner Mode
 - [Manner Mode Icon] (Long)

Battery Installation

   - 1 Remove cover
- 2 Insert battery
- 3 Close cover

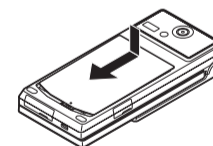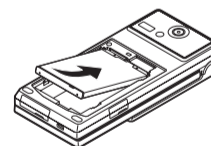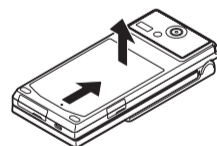

• Press and slide as shown.

USIM PINs

 
- PIN1
4-digit code; activate PIN Entry to restrict usage.
 - PIN2
Required to clear Call Costs and to set Max Cost.
- PIN1 and PIN2, **9999** by default, are changeable.

- PIN Lock & Cancellation (PUK Code*)
Entering incorrect PIN1 or PIN2 three consecutive times locks USIM Card, disabling handset. Enter PUK Code to unlock. For details, contact SoftBank Customer Center, General Information.
* USIM Personal Unblocking Key (PUK Code) unblocks a USIM Card blocked after the wrong PIN has been entered three consecutive times. Each USIM Card has a unique PUK Code. Do not disclose it to unauthorized persons.

Charging

Use specified AC Charger ZTDAA1 (sold separately) only.

- 1 Open Port Cover to connect AC Charger
- 2 Plug AC Charger into AC outlet
 - Small Light illuminates red while charging.
 - Small Light goes out when battery is full.
- 3 After charging, unplug AC Charger, then disconnect handset

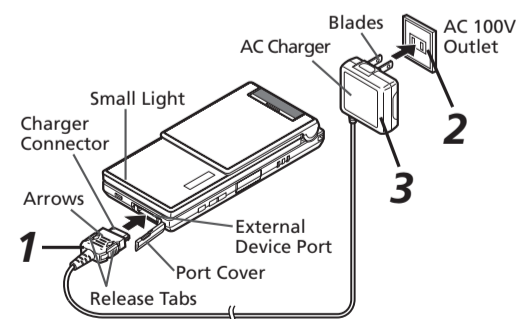

Security Codes

- Handset Code
9999 by default; use or change some functions.
- Center Access Code
4-digit code selected at contract; access Optional Services via landlines or change contract details.
- Network Password
4-digit code selected at contract; restrict incoming/outgoing calls (Call Barring).

- Message appears for incorrect code entries; retry.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed. For details, contact SoftBank Customer Center, General Information.

Specifications

SoftBank 923SH

Weight	Approximately 135 g
Continuous Talk Time	Approximately 250 minutes (3G) Approximately 240 minutes (GSM)
Continuous Standby Time (closed position)	Approximately 350 hours (3G) Approximately 320 hours (GSM)
Charging Time (power off)	AC Charger: Approximately 140 minutes In-Car Charger: Approximately 140 minutes


Dimensions (W x H x D)	Approximately 50 x 113 x 18.6 mm (closed position, without protruding parts)
Maximum Output	0.25 W (3G) 2.0 W (GSM)

• Values calculated with battery installed.

Getting Started

Display Indicators & Key Assignments

	Signal strength
	Packet transmission available (3G)
	Packet transmission available (GSM)
	Unread mail
	Memory Card in use
	Manner mode active
	Battery strength
	New Voicemail
	Alarm set

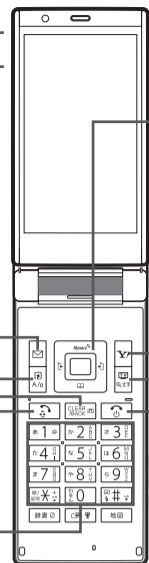 

Multi Selector

Select menu items, move cursor, or scroll pages, etc. Multi Selector operations are indicated in this FSG as shown below:

- : Press the center
- : Press the left side
- : Press the right side
- : Press the bottom

Center Key operates as TOUCH CRUISER; slide finger to move cursor.

	Open Messaging menu or execute Softkey functions
	Open Shortcuts menu. In text entry windows, toggle upper/lower case
	Delete entries, escape/return to previous window
	Initiate/answer calls
	Enter numbers/characters

	Open Yahoo! Keitai Main Menu or execute Softkey functions
	Activate TV or change character entry mode
	Turn handset power on/off

Menu List

Messaging	TV	Hour Minder	Memory Status	Settings	Backup
Received Msg.	Digital TV	Pedometer	Media Player	Phone Settings	Call/Video Call
Create Message	TV Player	Compass	Music	Mode Settings	Call Time & Cost
Retrieve New Msg.	TV-Image Folder	S! GPS Navi	Videos	Display	Answer Phone
Drafts	TV Link	Doc/Rec. Tools	Streaming	Customize	Voicemail/Divert
Templates	TV Listing	Dictionary	Settings	Sounds & Alerts	Video Call
Sent Messages	Reservation List	Search	MTP Mode	Date & Time	Show My Number
Unsent Messages	Settings	Document Viewer	Communication	Set Key Light	Missed Calls
Chat Folder	Camera	Notepad	S! Town	言語選択 (Language)	Int'l Calling
Server Mail Box	Entertainment	Scratch Pad	S! Loop	User Dictionary	Disp. Time/Call
Create New SMS	S! Quick News	Voice Recorder	S! Friend's Status	Display Rotation	Call Barring
Settings	S! Information Channel/Weather	Barcode/Scan	S! Circle Talk	TOUCH CRUISER	Minute Minder
Memory Status	BookSurfing	Phone Help	Near chat	Motion Control	Decoration Call
Yahoo! Keitai	e-Book Viewer	Data Folder	Phone	Ringer Output	Set Talk Mode
Yahoo! Keitai	Tools	Pictures	Phone Book	Earpiece Volume	Auto Answer
Bookmarks	PIM/LifestyleTools	DCIM	Add New Entry	Change Menu	Call Waiting
Saved Pages	Calendar	Ring Songs•Tones	Information	Double Number Settings	Network Settings
Enter URL	Alarms	S! Appli	Call Log	Locks	Select Network
History	Wakeup TV	Music	Play Messages	Software Update	Select Service
PC Site Browser	Tasks	Videos	Call Voicemail	Master Reset	Offline Mode
Browser Settings	Calculator	Lifestyle-Appli	Category Control	Connectivity	Retrieve NW Info
S! Appli	Expenses Memo	Books	My Details	Bluetooth	Network Info
S! Appli Library	OsaiFu-Keitai	Customized Screen	Speed Dial/Mail	Infrared	External Device
OsaiFu-Keitai	Clocks/Gauges	Status Templates	Mail Groups	IC Transmission	
Demand History	Stopwatch	Decoration Call	S! Addressbook Backup	USB Mode	
Settings	Countdown Timer	Flash@	Ph.Book Settings	USB Charge	
Information	World Clock	Other Documents	Manage Entries	Memory Card	

Handset Functions

Basic Operations

Handset Power On/Off

Power On

(Long)

If Japanese appears first time 923SH powers on, press three times, choose **はい** and press . In Standby, press , choose **はい** and press . In Main Menu, change interface to English (below).

Power Off

(Long)

English Interface

Network Settings

Retrieve Network Information to use Network-related services; the first time you press , or , a prompt appears.

, or

My Phone Number

Setting Clock

Double Number

Follow these steps to enable Double Number service (prior application required).

•For details, contact SoftBank Customer Center, General Information.

Calling

Voice Call

Enter number

Redialing

Video Call

Enter number (Long)

International Call

International Call Service may require prior application; get information or apply online: http://mb.softbank.jp/mb/en/global_service/923SH is Global Roaming eligible.

Enter number

A country

Answering a Call

When a call arrives,

Answer Phone

(Long)

•To cancel, (Long)

Playing Messages

(Long)

Text Entry

Switching Entry Modes

In text entry windows, A mode

	Kanji (hiragana)
	Double-byte katakana
	Single-byte katakana
	Double-byte alphanumerics
	Single-byte alphanumerics
	Single-byte number
	Character Code

Example: Entering no

In text entry windows,

Messaging

SMS/S! Mail

SMS

Exchange up to 160 alphanumeric with SoftBank handsets.

S! Mail

Exchange up to 30,000 characters with e-mail compatible SoftBank handsets or other devices; attach media files, etc.

Customizing Address

Change alphanumeric before @ of the default handset mail address. Customizing handset mail address helps reduce spam.

Sending Messages

or

Receiving Messages

Information window opens for new mail.

Phone Book

Phone Book Entry Items

Phone Number

Enter up to five numbers on handset (32 digits each).

Mail Address

Enter up to five addresses on handset (128 single-byte alphanumeric each).

Saving to Phone Book

Editing Entries

Dialing via Phone Book

A name

A phone number

Voicemail

Activating

Playing Messages

Follow the voice guidance

Mobile Camera

Capturing Still Images

Recording Video

Yahoo! Keitai

Accessing Yahoo! Keitai

Using PC Site Browser

Media Player

Playing Music

Adding Playlists

Using Playlists

Managing Files

Opening Files

Format Memory Card

Software Update

Precaution

Before updating software, end all active functions/applications.

Updating Software