

Handset Security

Changing Phone Password	11-2
Security Functions	11-2
USIM PINs	11-2
Keyguard	11-3
Privacy Key Lock	11-4
Personal Data Lock	11-4
Timer Lock at Close	11-5
Secure Remote Lock	11-6
Key Pad Dial Lock	11-7
Side-keys Guard	11-7
Additional Lock Functions	11-7
Restricting Calls/Messages	11-8
Hiding Call Logs and Sent/Received Address List	11-8
Secret Mode/Secret Data Only	11-8
Call Restrictions	11-9
Delaying Ringtone	11-9
Rejecting Unknown Callers	11-10
Rejecting Calls without Caller ID	11-10
Reset	11-10
Reset Settings	11-10
All Reset	11-11

Changing Phone Password

<Default> 9999

Change Phone Password as required.

- For Phone Password details: P.1-26

Main Menu ► Settings ► Security ► Change Phone Password

- 1 Enter current 4-8-digit Phone Password
- 2 Enter new 4-8-digit Phone Password → **YES**

Security Functions

USIM PINs

- For more information about PINs: P.1-3

PIN Authentication

Activate to require PIN entry each time 930P is turned on.

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **PIN Authentication**

2 **ON**

- To deactivate PIN Authentication: **OFF**

3 Enter PIN

Note

- Emergency numbers (110, 119, 118) are not dialable in PIN/PIN2, PUK/PUK2 entry window.

Changing PIN

<Default> 9999

Change PIN or PIN2.

- Set **PIN Authentication** to **ON** before changing PIN (Left).

Main Menu ► Settings ► Security ► PIN Authentication

- 1 Enter Phone Password → **Change PIN** or **Change PIN2**
- 2 Enter current PIN/PIN2
- 3 Enter new PIN/PIN2
- 4 Reenter new PIN/PIN2

PIN Lock & Cancellation (PUK)

PIN Lock or PIN2 Lock is activated if PIN or PIN2 is incorrectly entered three times. Cancel PIN Lock or PIN2 Lock by entering PIN Unblocking Key (PUK/PUK2).

- For information about PUK/PUK2, contact SoftBank Customer Center, General Information (☎P.19-32).
- Emergency numbers (110, 119, 118) are dialable even in PUK/PUK2 entry window.


- 1 In PIN lock mode, enter PUK/PUK2
- 2 Enter new PIN/PIN2
- 3 Reenter new PIN/PIN2


Note

- If PUK/PUK2 is incorrectly entered ten times, USIM Card is locked and handset is disabled. (Even turning off power is counted as one incorrect entry.) Write down PUK/PUK2.
- For procedures required to unlock USIM Card, contact SoftBank Customer Center, General Information (☎P.19-32).

Keyguard

Lock handset keys to prevent accidental operation except when turning power on/off or answering incoming calls.

- 1 In Standby, press and hold 

When Keyguard is set,  appears.

- To cancel Keyguard, repeat operation.

While Keyguard is Active

- Emergency numbers (110, 119, 118) are dialable even when Keyguard is active. Entered numbers do not appear on Display. Once numbers are dialed, Keyguard is canceled.
- Calendar event tone or Alarm can be disabled.
- Keyguard can be canceled even during a call.

Note

- Turning off power cannot cancel Keyguard.


Privacy Key Lock

<Default> OFF

Set Privacy Key Lock to require Phone Password for using 930P except for turning handset on/off and answering calls.

Main Menu ► Settings ► Security ► Privacy Key Lock

1 Enter Phone Password

When Privacy Key Lock is set,  appears in Standby.

- To cancel Privacy Key Lock, enter Phone Password in Standby. If Phone Password is incorrectly entered five times, 930P turns off.

While Privacy Key Lock is Active

- Emergency numbers (110, 119, 118) are dialable even when Privacy Key Lock is active.
- Only phone numbers appear on Display for incoming calls.
- Calls cannot be received by Bluetooth® headsets or handsfree devices.
- Message ringtones or Alarm tones are disabled.
- Calendar event tone or Alarm is disabled.
- S! Quick News and some indicators on Internal Display do not appear. They appear after Privacy Key Lock is canceled.

Note

- Turning off power cannot cancel Privacy Key Lock.

Personal Data Lock

<Default> Released

Set Personal Data Lock to prevent others from reading or tampering with your personal information in Phone Book or Data Folder. Activate to require Phone Password for accessing personal data.

Locked Functions/Data


- Messaging
- S! Appli
- Phone Book search/saving/setting
- Memory Manager/ Memory Status (Phone Book)
- Account Details
- Restrictions (Phone Book)
- Notepad
- Calendar
- Tasks
- Shortcuts
- Event Indicators
- Camera/Video Camera
- Lifestyle Appli
- microSD Backup
- Answer Phone
- Voice Recorder
- Customized Screen
- Voice Announce
- Software Update
- Yahoo! Keitai viewing/setting
- PC Site Browser viewing/setting
- Bookmarks/ Saved Pages
- S! Town
- S! Loop
- BookSurfing®
- e-Book Viewer
- S! Quick News
- Content Key obtaining/backup
- Voice Dial
- S! GPS Navi
- Data Folder
- Music Player
- Digital TV
- Bar Code Reader
- Receive via Infrared
- IC Data transmission
- Alarm
- Reset Settings
- All Reset

1 Enter Phone Password

While Personal Data Lock is set,  appears in Standby.

- To cancel Personal Data Lock, repeat operation. If Timer Lock at Close is set, password entry is requested when 930P is opened.

Canceling Personal Data Lock Temporarily

When Phone Password is entered,  disappears and disabled functions become temporarily available.

- When handset returns to Standby while no menu functions are active, Personal Data Lock is set again.
- Following functions cannot be temporarily canceled:
 - Receiving IC data · Reject unknown

While Personal Data Lock is Active

- Only phone numbers appear on Display for incoming calls.
- Message ringtones or Alarm tones are disabled.
- Calendar event tone or Alarm is disabled.
- S! Quick News and some indicators on Internal Display do not appear. They appear after Personal Data Lock is canceled.

Timer Lock at Close

<Default> Released

Set Timer Lock at Close to automatically activate Personal Data Lock when specified time has elapsed after 930P is closed.

1 Enter Phone Password → *Personal Data Lock* → Select a time

When specified time elapses,  appears.

- When **OFF** is selected for elapsed time, setting is canceled.

Note

- When Timer Lock at Close is canceled after opening 930P, lock is temporarily deactivated. However, lock activates again when specified time elapses after closing 930P.

Secure Remote Lock

If handset is lost or stolen, remotely lock handset from a PC or mobile. If Secure Remote Lock is active, all operations are unavailable except to turn handset on.

- For service details and user agreement/registration, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>) or My SoftBank.

Accessing My SoftBank from handset (Japanese)

For service details, visit SOFTBANK MOBILE Corp. Website.

Main Menu ► Yahoo! Keitai ► Yahoo! Keitai
► メニューリスト ► My SoftBank

- Follow onscreen instructions.

Note

- Emergency numbers (110, 119, 118) are dialable even while Secure Remote Lock is set.

Showing Messages during Secure Remote Lock

<Default> OFF

Set Display message to appear when Secure Remote Lock is active.

- Use preset message or create a message.

Main Menu ► Settings ► Security ► Lock Message

- 1 Enter Phone Password
- 2 *Display Setting → ON*

Saving Lock Messages

After Step 1, *Message* → Enter a message

Key Pad Dial Lock

<Default> Released

Allow dialing only from Phone Book entries and lock dialing with keypad. Unauthorized use of 930P can be prevented.

Unavailable Operations


- Dialing with keypad
- Phone Book (saving, editing, deleting, copying from microSD Card, and sending/receiving via Infrared, IC transmission and Bluetooth®)
- Sending SMS to unknown numbers
- Sending S! Mail

Available Operations

- Dialing from Phone Book or Voice Dial
- Dialing from Redial, Outgoing Call Logs, Incoming Call Logs, Sent address, or Received address (only phone numbers saved in Phone Book)

Main Menu ► Settings ► Security ► Key Pad Dial Lock

1 Enter Phone Password

While Key Pad Dial Lock is set,  appears in Standby.

- To cancel Key Pad Dial Lock, repeat operation.

Note

- Emergency numbers (110, 119, 118) are dialable even while Key Pad Dial Lock is set.

Side-keys Guard

<Default> OFF

Set Side-keys Guard to disable side key operations while 930P is closed.

Main Menu ► Settings ► Phone Settings ► Side-keys Guard

1 ON

While Side-keys Guard is set,  appears in Standby.

- To set Side-keys Guard to **OFF**, repeat operation.

Note

- When **Menu Icons** is set to **Pattern 5** or **Customize**, press  in Standby → Press and hold  to toggle **ON/OFF**.

Additional Lock Functions

IC Card Lock

- Deactivate Osaifu-Keitai® functions. (P.16-5)

Remote Lock

- Deactivate Osaifu-Keitai® functions remotely. (P.16-5)

Restricting Calls/Messages

Hiding Call Logs and Sent/Received Address List

<Default> ON

Main Menu ► Settings ► Incoming Settings ► Call Logs

- 1 Enter Phone Password
- 2 Select an item (See below)

Item	Operation/Description
Incoming	Show/hide Incoming Call Logs/Received address list
Outgoing	Show/hide Redial/Outgoing Call Logs/Sent address list

3 OFF

Note

- While Incoming Call Logs is OFF, Answer Phone (Voice Calls) does not play. Selecting Missed Call indicator does not show Missed calls list.

Secret Mode/Secret Data Only

<Default> Released

Phone Book entries and calendar events saved as secret data appear only when 930P is in Secret Mode/Secret Data Only.

- Set Phone Book or Calendar events as secret data (Phone Book P.4-7, 4-8 / Calendar events P.12-5)

Main Menu ► Settings ► Security Settings

- 1 Select an item (See below)

Item	Operation/Description
Secret Mode	View all data including secret data
Secret Data Only	View only secret data

- 2 Enter Phone Password

For Secret Data Only, number of saved secret data appears. When Secret Mode/Secret Data Only is set, appears (For Secret Data Only, indicator flashes.).

- To cancel, repeat operation or in Standby.

Canceling Secret Setting


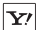
In Phone Book/Calendar event window, [Menu] → *Release secret*


Note

- Select whether to save data edited/saved in Secret Mode as secret data. Data saved/edited in Secret Data Only are saved as secret data.

Call Restrictions

Reject/accept/forward calls from specified phone numbers, or restrict calling unspecified phone numbers.

- 1  → Search Phone Book
- 2 Select an entry →  [Menu] → **Restrictions**
- 3 Enter Phone Password
- 4 Select an item (See below)

Item	Operation/Description
Restrict Dialing	Allow calls only to set numbers
Call Rejection	Reject specified numbers
Call Acceptance	Accept from specified numbers only
Call Forwarding	Automatically forward specified numbers after ringtone sounds for about one second <ul style="list-style-type: none">● Set destination numbers (Call Forwarding:  P.2-17)

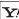
- To cancel, repeat operation.

Viewing/Canceling Phone Book Restrictions

Main Menu ► **Phone Book** ► **Restrictions** ► Enter Phone Password

- Select an item* ► Select a Phone Book entry ► Select a number
► **YES**

* "★" appears for set item.

- Select an item,  [Menu] → **Release Settings** → **YES** to cancel restriction on all specified numbers.

Note

- Missed call indicator appears in Standby for calls from rejected numbers.

Delaying Ringtone

<Default> OFF

Delay ringtone/vibration for Voice/Video Calls from unknown numbers.

Main Menu ► **Settings** ► **Incoming Settings**
► **Ring Time Settings** ► **Ring Starting Time**

- 1 **ON** → Enter start time

Hiding Missed Call Records (Disconnected during Ringtone Delay)

Main Menu ► **Settings** ► **Incoming Settings**
► **Ring Time Settings** ► **Missed Calls Display** ► **Not Display**

Rejecting Unknown Callers

<Default> Accept

Main Menu ► Settings ► Security ► Reject Unknown

- 1 Enter Phone Password → **Reject**

Rejecting Calls without Caller ID

Reject calls without Caller ID or from pay phones.

Main Menu ► Settings ► Security ► Call Setting w/o ID

- 1 Enter Phone Password
- 2 Select an item → **Reject**

Reset

Reset Settings

Cancel custom settings and return handset functions to their default settings.

Main Menu ► Settings ► Security ► Reset Settings

- 1 Enter Phone Password → **YES**

Note

- Some default settings may not be restored.
- Reset Settings cancels Navi Appli settings in S! GPS Navi. Set a Navi Appli to activate from **Select Navi Appli** (☞P.18-19).

All Reset

Cancel custom settings and return handset functions to their default settings; clear all Phone Book/Data Folder entries etc.

Main Menu ► Settings ► Security ► All Reset

- 1 Enter Phone Password → **YES** → **YES**
930P automatically turns off and restarts.

Note

- Fully charge battery (🔋) beforehand.
- Phone Password is reset to default.
- USIM Card/microSD Card files are not affected.
- Data transmission settings (set via PC) are not affected.
- Non-restorable items when deleted by All Reset:
 - Customized settings, Call Logs, downloaded S! Appli, etc.
 - User-downloaded S! Town data

