

Settings


Sound & Vibration	18-2
Ringtones.....	18-2
Charge Sound/Key Tone	18-2
Display	18-3
Display Settings.....	18-3
Main Menu	18-4
Clock	18-4
Back Light.....	18-5
External Display.....	18-5
Font.....	18-6
Manner Mode	18-6
Incoming Settings	18-7
Date & Time	18-8
Call Settings	18-8
Call Time & Call Cost.....	18-8
Making & Receiving Calls	18-8
Notification Light	18-9
Text Entry	18-10
Phone Book	18-10
Voice Dial	18-10
Video Call	18-11
Function Menus.....	18-11
Engaged Video Call Settings	18-11

Horizontal Open Position	18-12
Horizontal Open Menu/Wallpaper	18-12
Standby Clock	18-12
Digital TV	18-13
S! Quick News (Japanese)	18-14
Display Settings.....	18-14
Auto Update/Deleting Information	18-14
Bluetooth®	18-15
Messaging	18-16
Universal Settings.....	18-16
S! Mail Settings.....	18-16
SMS Settings	18-16
Internet	18-17
Browser Display Settings.....	18-17
Memory Manager & Reset	18-17
Security Settings.....	18-18
Reset.....	18-18
S! Appli	18-19
Osaifu-Keitai®	18-19
S! GPS Navi Settings	18-19
Default Settings	18-20

Settings Sound & Vibration

Ringtones

From ► Main Menu ► Settings

Setting/Operation	Default
Change Ringtone > <i>Sound Settings</i> → <i>Ring Tones</i> → Select an item → <i>Select Ring Tone</i> → Select a type → Select a folder → Select a tone	Phone/Video Call: Pattern 1 Message: Pattern 2* ²
Change Ringer Volume > <i>Sound Settings</i> → <i>Ringer Volume</i> → Select a type →  to adjust volume	Level 4
Disable 3D Sound Effect (Ringtone/Melody) > <i>Sound Settings</i> → <i>Stereo/3D Sound</i> → <i>OFF</i>	ON
Set Ringtone Sound Output for Earphone*¹ > <i>Sound Settings</i> → <i>Earphone</i> → <i>Earphone</i>	Earphone + Speaker
Set Message Ringtone Duration > <i>Sound Settings</i> → <i>Message Ring Tones</i> → <i>ON</i> or <i>OFF</i> (→ For <i>ON</i> , enter ring time)	ON (Ring time: 5 sec)
Set Vibration Alert > <i>Incoming Settings</i> → <i>Vibrator</i> → Select an item → Select a vibration pattern	OFF

*1 When earphone is connected and Sound Settings is set to *Earphone*, ringtone sounds through earphone and speaker for incoming calls/messages or alarms after about 20 seconds. Ringtone sounds only from earphone for other events.

*2 For handset color PinkGold/Turquoise,
Phone/Video Call: HEIGH HO//SNOW WHITE AND THE SEVEN DWARFS/INST,
Message: Tone6

Pre-installed Ringtones

Title	Composer
HEIGH HO//SNOW WHITE AND THE SEVEN DWARFS/INST	CHURCHILL FRANK E
WALKURENRITT/DIE WALKURE	WAGNER RICHARD WILHELM
PARADE OF THE WOODEN SOLDIERS	JESSEL LEON
OUVERTURE/GUILLAUME TELL	ROSSINI GIOACCHINO ANTONIO
DANCE OF THE KNIGHTS OP 64 NO 13	PROKOFEV SERGEJ S
WALTZ/COPPELIA BALLET SUITE	DELIBES LEO CLEMENT PHILIBERT
TRITSCH TRATSCH POLKA OP 214	STRAUSS JUN JOHANN
PETER AND THE WOLF OP 67	PROKOFEV SERGEJ S

Names of composers given above conform to JASRAC Website. Parts of titles may not appear due to Display size.

Charge Sound/Key Tone

From ► Main Menu ► Settings

Setting/Operation	Default
Set Key Tone > <i>Sound Settings</i> → <i>Key Tone</i> → <i>ON</i> or <i>OFF</i>	OFF
Charging Start/End Tone Off > <i>Phone Settings</i> → <i>Battery</i> → <i>Charge Sound</i> → <i>OFF</i>	ON

Settings Display

Display Settings

- Horizontal Open Menu/Wallpaper (Horizontal Open Position) (☞P.18-12)

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
■ Change Wallpaper > <i>Internal Display</i> → <i>Stand-by Display</i> → Select an item → Select a folder → Select an image	(☞P.18-20)
■ Add Calendar to Wallpaper > <i>Internal Display</i> → <i>Stand-by Display</i> → <i>Calendar</i> → Select a view format → <i>BG Image ON</i> or <i>BG Image OFF</i> (→ For <i>BG Image ON</i> , select a folder → select an image)	—
■ Change Outgoing Call/Message Image > <i>Internal Display</i> → Select an outgoing type → Select a folder → Select an image	(☞P.18-20)
■ Change Incoming Call/Message Image > <i>Internal Display</i> → Select an incoming type → <i>Select Calling Disp.</i> *1 → Select an image type → Select a folder → Select an image	(☞P.18-20)
■ Change Battery/Antenna Indicator > <i>Internal Display</i> → <i>Battery Icon</i> or <i>Antenna Icon</i> → Select a pattern	(☞P.18-20)
■ Change Start-up Window > <i>Internal Display</i> → <i>Start-up</i> → <i>OFF</i> , <i>Message</i> , <i>Pictures</i> or <i>Videos</i> *2	—

■ Change Display Color Scheme > <i>Color</i> → Select a color	(☞P.18-20)
■ Set Interface Language > <i>言語設定</i> → <i>日本語</i> or <i>English</i>	日本語
■ Show New Call/Message when Handset Opens > <i>Open for New</i> → <i>ON</i>	OFF

- *1 ● Setting applies to messages retrieved manually (***Incoming Options*** (☞P.18-16) set to ***Manual Retrieval***) or when Server Mail is retrieved (Retrieve New window cannot be changed).
- *2 ● For ***Pictures*** or ***Videos***: Select a folder → Select an image
 ● For ***Message***: Enter text

Main Menu

From **Main Menu** ► **Settings** ► **Display Settings**
 ► **Menu Icons**

Setting/Operation	Default
Change Main Menu Theme > Select a pattern	(☞P.18-20)
Change Main Menu Icons > <i>Customize</i> → Select a menu → Select a folder → Select an image	—
Change Main Menu Background > <i>Customize</i> → <i>Background Image</i> → Select a folder → Select an image	—

Clock

- Standby Clock (Horizontal Open Position) (☞P.18-12)

From **Main Menu** ► **Settings** ► **Display Settings**
 ► **Internal Display** ► **Clock**

Setting/Operation	Default
Change Standby Clock Pattern^{*1} > <i>Stand-by Clock</i> → [Pattern] → Select a pattern (☞P.18-20) → [Set]	(☞P.18-20)
Change Standby Clock Position^{*1*2} > <i>Stand-by Clock</i> → [Position] → Select a pattern → [Set]	(☞P.18-20)
Change Standby Clock Size^{*1} > <i>Stand-by Clock</i> → [Size] → <i>Large</i> or <i>Small</i> → [Set]	(☞P.18-20)
Change Standby Clock at Upper Right (lower right in Landscape View) > <i>Icon Clock</i> → Select a pattern	(☞P.18-20)

*1 Highlight *Stand-by Clock* and press [Play] to view Standby Clock.

*2 Even if clock position is set to *Pattern 2 - Pattern 12*, clock appears in *Pattern 1* when:

- Calendar, World Clock or Operator Name is set to appear in Standby
- Time zone is set to other than GMT+9
- Privacy Key Lock is active

Back Light

From **Main Menu** ► **Settings** ► **Display Settings**

Setting/Operation	Default
Turn Back Light On/Off; Set Power Saver Mode > <i>Back Light Time</i> → <i>Lighting</i> → <i>ON</i> or <i>OFF</i> → Select <i>ON</i> or <i>OFF</i> in Power Saver Mode (→ For <i>ON</i> , Enter Light time)	ON+Saver
Illuminate Back Light while Charging > <i>Back Light Time</i> → <i>Charging</i> → <i>Constant Light</i>	Standard*1
Limit Back Light to Display Only > <i>Back Light Time</i> → <i>Area</i> → <i>LCD</i>	LCD + Keys
Adjust Brightness > <i>Back Light Time</i> → <i>Brightness</i> → Select a brightness level	Auto*2
Set Back Light to Turn On Quickly > <i>Back Light Time</i> → <i>Soft Light</i> → <i>OFF</i>	ON
Disable Auto Image Compensation > <i>LCD AI</i> → <i>OFF</i>	ON

*1 When set to **Standard**, Back Light illuminates with the same setting as **Lighting** setting.

*2 When set to **Auto**, Back Light is automatically adjusted according to ambient light.

External Display

From **Main Menu** ► **Settings** ► **Display Settings**
► **External Display**

Setting/Operation	Default
Turn Off External Display > <i>OFF</i>	ON
Change Clock Display > <i>ON</i> → <i>Clock</i> → Select a clock pattern	(☞P.18-20)
Change Display Direction > <i>ON</i> → <i>Orientation</i> → Select a pattern	Pattern 2
Adjust Brightness > <i>ON</i> → <i>Brightness</i> → Select a brightness level	Level 3
Set Caller ID Off > <i>ON</i> → <i>Incoming Calls</i> → <i>OFF</i>	ON
Disable Text while Communicating > <i>ON</i> → <i>Disp. Connection</i> → <i>OFF</i>	ON

Font

From ► Main Menu ► Settings ► Display Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Change Font Size by Function > <i>Font Size</i> → Select an item → Select a size 	Standard
<ul style="list-style-type: none"> ■ Set Menu Font Sizes Collectively > <i>Font Size</i> → <i>Collective Setting</i> → <i>Large</i> or <i>Small</i>* 	Standard
<ul style="list-style-type: none"> ■ Change Font Style > <i>Font</i> → <i>Font 2</i> 	Font 1
<ul style="list-style-type: none"> ■ Change Font Style (Incoming/Outgoing Call Window) > <i>Disp. Call/Recv #</i> → <i>Pattern 2</i> 	Pattern 1

* When set to **Small**, font size for Phone Book, Incoming/Outgoing Call Logs and text entry is set to **Standard**.

Settings Manner Mode

From ► Main Menu ► Settings ► Incoming Settings ► Manner Mode Type

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set Manner Mode Type > <i>Manner Mode</i>, <i>Super Silent</i> or <i>User Mode</i> (→ For <i>User Mode</i>, set individual items → ☑ [Finish]) 	Manner Mode

Default Settings by Mode

Manner Mode	Super Silent	Driving Mode	User Mode
Answer Phone			
Value set for Answer Phone	Value set for Answer Phone	ON	OFF
Vibrator			
ON	ON	OFF	ON
In. Calls			
Silent	Silent	Silent	Silent
Msg Ring T.			
Silent	Silent	Silent	Silent
Alarm			
Silent	Silent	Silent	Silent
Rec. Check Tone			
ON	OFF	ON	ON
Key Tone			
OFF	OFF	*	OFF
Mic Sensitiv.			
Up	Up	Up	Up
LVA Tone (Low battery alarm)			
OFF	OFF	OFF	OFF

* Based on Key Tone setting (☞P.18-2)

Settings Incoming Settings

From **Main Menu** ▶ **Settings** ▶ **Incoming Settings**

Setting/Operation	Default
Change Answer Setting (↔Right) > <i>Answer Setting</i> → <i>Quick Silent</i> or <i>OFF</i>	Any Key Answer
Answer Calls by Opening Handset > <i>Open-to-Ans. Call</i> → <i>Phone</i> or <i>Video Call</i> → <i>Answer</i>	Keep Ringing
Hide Caller Image Saved in Phone Book > <i>Phone Book Image</i> → <i>OFF</i>	ON
Set <input type="checkbox"/> Response (↔Right) for Missed Call/New Message Notification > <i>Info Notice Setting</i> → <i>ON</i> or <i>OFF</i>	ON
Activate Auto Answer with Earphone > <i>Auto Answer</i> → <i>ON</i> → Enter ring time	OFF
Set Call Waiting Response > <i>In-call Management</i> → <i>Call Forwarding</i> or <i>Call Rejection</i>	Answer

Answer Setting Key Operations

Any Key Answer	To answer a call, press any of the following keys: Voice Call: , , - , , , , , , , Video Call: , ,
Quick Silent	To cancel ringtone/vibration, press any of the following keys: Voice Call: - , , , , , , , Video Call: - , , , , , , ,
OFF	To answer a call, press any of the following keys: Voice Call: , Video Call: , ,

- When [Voice Mail] is assigned to indicated at the bottom of Display, press to start voice or video recording.

Info Notice Setting Response


ON	No Missed Calls/No Received Messages: Triple-beep sounds Missed Calls/Received Messages: Double-beep sounds twice
ボイス (Voice)*	No Missed Calls/No Received Messages: Triple-beep sounds Missed Calls: Double-beep sounds; voice message announces that you have a missed call Received Messages: Double-beep sounds; voice message announces that you have a new message

- When Vibrator is set for Incoming Settings, vibration activates with beeps. In Manner Mode, only vibration activates.
- Set **Side-keys Guard** to **OFF** beforehand. (↔P.11-7)

* Japanese only

Settings Date & Time

From ► Main Menu ► Settings ► Date & Time

Setting/Operation	Default
<p>■ Change Date and Time</p> <p>> <i>Date & Time</i> → Enter year, date, time and time zone</p>	–
<p>■ Display World Clock</p> <p>> <i>World Clock</i> → ON →  to select an area</p>	OFF
<p>■ Activate Daylight Savings Time</p> <p>> <i>Daylight Savings</i> → ON</p>	OFF
<p>■ Deactivate Alarm while Operating Other Functions</p> <p>> <i>Alarm Tone</i> → <i>Operation Preferred</i></p>	Alarm Preferred
<p>■ Deactivate Automatic Time Correction via Yahoo! Keitai</p> <p>> <i>Time Correction</i> → OFF</p>	ON

Settings Call Settings

Call Time & Call Cost

From ► Main Menu ► Settings ► Call Settings


Setting/Operation	Default
<p>■ Display Call Time/Cost*¹</p> <p>> <i>Call Time/Cost</i></p>	–
<p>■ Reset Total Call Charge/Time</p> <p>> <i>Reset</i> → Enter Phone Password → <i>Reset Total Duration</i> or <i>Reset Total Cost</i> → YES (→ For <i>Reset Total Cost</i>, enter PIN2)</p>	–
<p>■ Set Charge Limit*²</p> <p>> <i>Set Max Cost Limit</i> → ON → Enter charge limit → Enter PIN2</p>	OFF

*1 May not be available depending on subscription status. In that case, Set Max Cost Limit is not available.

*2 When set to **ON**, emergency numbers (110, 119, 118) are not dialable if charge limit is reached.

Making & Receiving Calls

From ► Main Menu ► Settings

Setting/Operation	Default
<p>■ Change Earpiece Volume</p> <p>> <i>Call Settings</i> → <i>Volume</i> →  to adjust volume</p>	Level 4

<p>■ Set Handset Response when Closed during Call > <i>Call Settings</i> → <i>Closing Clamshell</i> → <i>No Tone</i> or <i>Hold Call</i>*</p>	End the Call
<p>■ Set Hold Tone > <i>Call Settings</i> → <i>Hold Tones</i> → <i>On-hold Tone</i> or <i>Holding Tone</i> → Select a tone</p>	On-hold Tone: On-hold Tone 1 Holding Tone: JESU JOY OF MAN's
<p>■ Turn Off Noise Reduction > <i>Call Settings</i> → <i>Noise Reduction</i> → <i>OFF</i></p>	ON
<p>■ Sound Alarm before Connection is Disconnected > <i>Call Settings</i> → <i>Quality Alarm</i> → <i>OFF</i> or <i>Low Tone</i></p>	High Tone
<p>■ Sound Alarm until Line is Reconnected > <i>Call Settings</i> → <i>Reconnect Signal</i> → <i>OFF</i> or <i>Low Tone</i></p>	High Tone
<p>■ Call Service Numbers (Service not available at present) > <i>Call Settings</i> → <i>Service Numbers</i> → Select a service number → </p>	—
<p>■ Specify Phone Book Entry to Call with Earphone > <i>Phone Settings</i> → <i>Headset Switch to Call</i> → <i>Voice Call</i> → Search Phone Book → Select an entry</p>	OFF

* When Hold Call is selected: **Speaker ON** (Hold tone sounds from speaker)/**Speaker OFF** (Hold tone does not sound from speaker)

Settings Notification Light

From ► Main Menu ► Settings ► Notification Light

Setting/Operation	Default
<p>■ Set Notification Light by Incoming Type (Voice/Video Calls or Messages) > <i>Incoming</i> → <i>Select Color</i> → Select a type → to select a color</p>	(P.18-20)
<p>■ Change Notification Light Color Name for Incoming Call/Message > <i>Incoming</i> → <i>Color</i> → <i>Edit Color Name</i> → Select a color → Select a color name</p>	—
<p>■ Adjust Notification Light Color Tone for Incoming Call/Message > <i>Incoming</i> → <i>Color</i> → <i>Adjust Color Tone</i> → Select a color → Adjust color tone</p>	—
<p>■ Set Notification Light for Other Functions > Select a function → <i>ON</i> or <i>OFF</i>, or to select a color</p>	—
<p>■ View Notification Light Status* > <i>Confirm Status</i></p>	—

* View Notification Light settings for incoming calls/messages, engaged calls or upper Side Key commands.

Settings Text Entry

From ► **Main Menu ► Settings ► Phone Settings ► Text Entry Method**

Setting/Operation	Default
<p>■ Set Input Mode</p> <p>> Input Mode → Check input mode(s) to use → <input type="checkbox"/> [Finish] → Select a input mode to prioritize</p>	Input mode: All Prioritized mode: Mode 1 (5-touch)
<p>■ Hide Predictive Candidates/Context Forecast List</p> <p>> Predict → OFF</p>	ON
<p>■ Set Learning Feature Off for Secret Mode/ Secret Data Only</p> <p>> Learn in Secret Mode → Enter Phone Password → OFF</p>	ON
<p>■ Delete All Learned Words</p> <p>> Reset Learned Words → Enter Phone Password → YES</p>	–

Settings Phone Book

From ► **Main Menu ► Phone Book ► Settings**

Setting/Operation	Default
<p>■ Change Save Location for New Entry</p> <p>> Save Settings → <i>USIM</i> or <i>Ask Every Time</i></p>	Phone
<p>■ Change Phone Book Search Method</p> <p>> Search Method → Select a method</p>	A-KA-SA-TA-NA
<p>■ Change Font Size</p> <p>> Font Size → <i>Phone Book</i> or <i>Call Log</i> → <i>Large</i></p>	Standard
<p>■ Forbid Forwarding Phone Book Entry Images</p> <p>> Forwarding Image → OFF</p>	ON*

* If **ON** is selected, images can be forwarded via Infrared, IC transmission or Bluetooth®.

Settings Voice Dial

From ► **Main Menu ► Settings ► Phone Settings ► Voice Settings**

Setting/Operation	Default
<p>■ Activate Voice Dial Automatically</p> <p>> Auto Voice Dial → ON</p>	OFF
<p>■ Activate Voice Dial via Earphone or Bluetooth® Device</p> <p>> Voice Earphone Dial → ON</p>	OFF

Settings Video Call

Function Menus

From ► Main Menu ► Settings ► Video Call

Setting/Operation	Default
■ Change Incoming Image Quality > <i>Incoming Video Qlty</i> → <i>Quality Prioritized</i> or <i>Motion Prioritized</i>	Standard
■ Change Outgoing Image > <i>Select Images</i> → Select a category → Highlight <i>Original</i> , and press [Menu] → <i>Change setting</i> → Select a folder → Select a file → [Play] to view image	Pre-installed
■ Switch Earpiece On > <i>Loud Speaker</i> → OFF	ON
■ Switch to Voice Call when Video Call Fails > <i>Voice Call Auto Redial</i> → ON	OFF
■ Monitor Room Remotely > <i>Remote Monitoring</i> (P.2-8)	—

Engaged Video Call Settings

From ► During a Video Call, [Menu] ► V.Call settings

Setting/Operation	Default
■ Change Incoming Image Quality > <i>Visual preference</i> → <i>Quality Prioritized</i> or <i>Motion Prioritized</i>	Normal
■ Change Brightness > <i>Brightness</i> → Select a brightness level	0
■ Adjust Color Tone to Lighting Conditions > <i>White balance</i> → Select an environment	Automatic
■ Change Color Tone > <i>Color mode set</i> → Select a color tone	Normal
■ Enhance Image Quality in Low Light Conditions > <i>Night mode</i> → ON	OFF
■ Set Focus* > <i>Focus</i> → Select a focus type	Landscape

* Outside Camera only

Settings Horizontal Open Position

Horizontal Open Menu/Wallpaper

From ► Main Menu ► Settings

Setting/Operation	Default
<p>■ Set Which Operation to Start when Switching to Horizontal Open Position</p> <p>> Phone Settings → Horizontal View → TV, Camera or OFF</p>	Horizontal Open Menu
<p>■ Change Menu Theme in Horizontal Open Position</p> <p>> Display Settings → Hor. Open Menu → Select a pattern</p>	(☞P.18-20)
<p>■ Change Wallpaper in Standby</p> <p>> Display Settings → Internal Display → Stand-by Display Wide → Select a folder → Select an image</p>	(☞P.18-20)
<p>■ Add Calendar to Wallpaper in Standby</p> <p>> Display Settings → Internal Display → Stand-by Display Wide → Calendar → BG Image ON or BG Image OFF (→ For BG Image ON, select a folder → Select an image)</p>	—

Standby Clock

From ► Main Menu ► Settings ► Display Settings
 ► Internal Display ► Clock ► Stand-by Clock Wide

Setting/Operation	Default
<p>■ Change Standby Clock Display*¹</p> <p>> [Pattern] → Select a pattern → [Select]</p>	(☞P.18-20)
<p>■ Change Standby Clock Position*^{1*2}</p> <p>> [Position] → Select a pattern → [Select]</p>	(☞P.18-20)
<p>■ Change Standby Clock Size*¹</p> <p>> [Size] → Large or Small → [Select]</p>	Large

*1 Highlight **Stand-by Clock Wide**, and press [Play] to view clock.

*2 Even if clock position is set to **Pattern 2 - Pattern 7**, clock appears in **Pattern 1** when:

- Calendar, World Clock or Operator Name is set to appear in Standby
- Time zone is set to other than GMT+9
- Privacy Key Lock is active

Settings Digital TV

From **Main Menu** ► **TV** ► **User Settings**

Setting/Operation	Default
Hide Caption > <i>Caption</i> → <i>OFF</i>	ON
End Recording when Battery Runs Low > <i>Rec. When Low Battery</i> → <i>Stop Recording</i>	Continue Recording
Forbid Enhancing Frame Rate Automatically > <i>Mobile W-Speed</i> → <i>OFF</i>	ON
Change Image Quality > <i>Image Quality</i> → Select an item	Dynamic
Deactivate Auto Volume > <i>Sound</i> → <i>Sound Effect</i> → <i>Auto Volume</i> → <i>OFF</i>	ON
Remaster Sounds from Earphone or Bluetooth® Device > <i>Sound</i> → <i>Sound Effect</i> → <i>Remaster</i> *1 → <i>ON</i>	OFF
Add Listening Effect > <i>Sound</i> → <i>Sound Effect</i> → <i>Listening</i> *1 → Select an item	OFF
Change Quality of Sound from Earphone or Bluetooth® Device > <i>Sound</i> → <i>Sound Effect</i> → <i>Equalizer</i> *1 → Select an item	Normal
Turn Off Speaker by Closing 930P while Watching TV > <i>Sound</i> → <i>TV Sound While Closed</i> → <i>OFF</i>	ON
Set Power Saving Mode *2 > <i>ECO Mode</i> → <i>YES</i>	Released

Set Back Light Duration while Watching TV > <i>Display Light</i> → <i>Lighting Duration</i> → Enter duration (min.)	Constant Light
Hide Images on Data Broadcast Sites > <i>Data Broadcasting</i> → <i>Images</i> → <i>OFF</i>	ON
Turn Off Sounds from Data Broadcast/Sites > <i>Data Broadcasting</i> → <i>Sound Effect</i> → <i>OFF</i>	ON
Show Confirmation on Data Broadcast > <i>Data Broadcasting</i> → <i>Reset Settings</i> → <i>YES</i>	–
Hide Guide in Landscape View > <i>Icons</i> → <i>OFF</i>	ON
Check TV Settings > <i>Check TV Settings</i>	–
Reset Channel List > <i>Reset Channel Setting</i> → Enter Phone Password → <i>YES</i>	–
Delete Information of Affiliated Stations > <i>Reset Storage Area</i> → [X] [Menu] → <i>Delete this</i> or <i>Delete all</i> (→ For <i>Delete all</i> , enter Phone Password) → <i>YES</i>	–
Reset TV Settings > <i>Reset TV Settings</i> → Enter Phone Password → <i>YES</i>	–

*1 Remaster/Listening/Equalizer Settings: P.5-8

*2 To cancel ECO Mode, perform same operation. When ECO Mode is set, following settings automatically activate and cannot be changed. When canceled, original settings return.

Mobile W-Speed: OFF

Image Quality: Normal

Remaster: OFF

Listening: OFF

Equalizer: Normal

Settings S! Quick News (Japanese)

Display Settings

From ► **Main Menu** ► Settings ► Display Settings
 ► Internal Display ► S! Quick News Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Show Only Unread Items in Standby > <i>Unread/Read Setting</i> → <i>Unread</i> 	Unread + Read
<ul style="list-style-type: none"> ■ Change Marquee Speed > <i>Marquee Speed</i> → Select a speed 	Normal
<ul style="list-style-type: none"> ■ Hide S! Quick News > <i>Display Always</i> → <i>OFF</i> 	ON (Show)
<ul style="list-style-type: none"> ■ Block Image Data > <i>Image Display</i> → <i>OFF</i> 	ON (Show)

Auto Update/Deleting Information

From ► **Main Menu** ► Entertainment ► S! Quick News
 ► Settings

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Automatically Update Quick News in S! Quick News List^{*1*2} > <i>Auto Refresh</i> → <i>S! Quick News</i> → Set update frequency 	OFF
<ul style="list-style-type: none"> ■ Automatically Update General News (Once a day)^{*1*2} > <i>Auto Refresh</i> → <i>General</i> → <i>ON</i> 	OFF
<ul style="list-style-type: none"> ■ Automatically Update S! Loop Contents (Every four hours)^{*1*2} > <i>Auto Refresh</i> → <i>S! Loop</i> → <i>ON</i> 	OFF
<ul style="list-style-type: none"> ■ Set Auto Update Off^{*1*2} > <i>Auto Refresh</i> → <i>Special</i> → <i>OFF</i> 	ON (Automatically update every 4 hours) ^{*1*2}
<ul style="list-style-type: none"> ■ Delete S! Quick News Information > <i>Del S! Quick News List</i> → <i>YES</i> → Enter Phone Password 	—

*1 If calls are in progress at update time, auto update does not occur until next update.

*2 Video Calls are rejected during auto update.


Settings Bluetooth®

From ► **Main Menu ► Tools ► Bluetooth**
► **My Devices Settings**

Setting/Operation	Default
■ Set Authentication/Encryption to Send Phone Book Entries > <i>Set Authentications → ON → ON</i>	OFF/OFF
■ Enter Password when Sending All Phone Book Entries > <i>Session Number Setting → ON</i>	OFF
■ Set Duration to Search for Bluetooth® Devices > <i>Time-out to Search → Enter duration (sec.)</i>	5 sec
■ Stop Ringtone Output to Headset/Handsfree Device > <i>Forward Ring Tone → OFF</i>	ON
■ Continue Calls on Handset when Bluetooth® is Disconnected from Headset/Handsfree Device > <i>Disconnection Settings → Continue on the Phone</i>	End the Call
■ Always Make Calls from 930P even when Headset Device is Connected > <i>Dial from Headset → Deactivate</i>	Activate
■ Always Use Handsfree Device to Make/Receive Calls > <i>Handsfree Setting → Handsfree Mode</i>	Private Mode*1
■ View Bluetooth® Properties > <i>Device Properties</i> *2	—


*1 In **Private Mode**, device that makes/answers call takes priority.

*2 Device name, address, class and supported services appear.

To change device name:  [Edit]

Settings **Messaging****Universal Settings**

From ► **Main Menu** ► Messaging ► Settings
 ► Universal Settings

Setting/Operation	Default
<ul style="list-style-type: none"> Change Font Size* > <i>Font Size</i> → <i>Small</i> or <i>Large</i> 	Normal
<ul style="list-style-type: none"> Set Scroll Unit in Text Entry/Preview Window > <i>Scroll Unit</i> → <i>Half Screen</i> or <i>Whole Screen</i> 	Single Line
<ul style="list-style-type: none"> Confirm Message Delivery (Available when messaging to SoftBank handset numbers) > <i>Delivery Report</i> → <i>ON</i> 	OFF (Not confirm)
<ul style="list-style-type: none"> Change Anti-Spam Measures Setting > <i>Anti-Spam Measures</i> → <i>Report Spam</i> → Edit recipient address → <i>YES</i> 	stop@meiwaku. softbankmobile. co.jp
<ul style="list-style-type: none"> Reset Anti-Spam Measures Setting > <i>Anti-Spam Measures</i> → <i>Report Spam</i> →  [Menu] → <i>Reset Address</i> → <i>YES</i> 	–
<ul style="list-style-type: none"> Set Auto Delete Off (For Drafts or Sent/Unsent Messages) > <i>Auto Sent Msg Del</i> → <i>OFF</i> 	ON
<ul style="list-style-type: none"> Set Auto Delete Off (For Incoming Mail) > <i>Auto Received Msg Del</i> → <i>OFF</i> 	ON

* Character size in SMS or S! Mail subject field does not change. Check preview to see actual size.

S! Mail Settings

From ► **Main Menu** ► Messaging ► Settings
 ► S! Mail Settings ► Incoming Options

Setting/Operation	Default
<ul style="list-style-type: none"> Set S! Mail Download Condition (within Japan) > <i>Home Auto Setting</i> → <i>Download by Numbers</i> or <i>Manual Retrieval</i> 	Auto Download All
<ul style="list-style-type: none"> Retrieve S! Mail Manually while Abroad > <i>Roaming Auto Setting</i> → <i>Manual Retrieval</i> 	Auto Download
<ul style="list-style-type: none"> Play Attached Music Files Automatically* > <i>Auto Sound Play</i> → <i>ON</i> 	OFF (Not play back)

* When multiple sound files are attached, the first file plays.

SMS Settings

From ► **Main Menu** ► Messaging ► Settings
 ► SMS Settings

Setting/Operation	Default
<ul style="list-style-type: none"> Change SMS Center Number* > <i>Message Center</i> → Enter SMS Center number 	–
<ul style="list-style-type: none"> Set Input Character to English > <i>SMS input character</i> → <i>English (160char.)</i> 	Japanese (70char.)

* Changing Message Center number may disable SMS.

Settings Internet

Browser Display Settings

Yahoo! Keitai

From ► [Main Menu](#) ► [Yahoo! Keitai](#) ► [Set Yahoo! Keitai](#)

PC Site Browser

From ► [Main Menu](#) ► [Yahoo! Keitai](#) ► [PC Site Browser](#)
► [Set PC Site Browser](#)

Setting/Operation	Default
■ Font Size > <i>Font Size</i> → <i>Large</i> or <i>Small</i>	Normal
■ Scroll Unit > <i>Scroll Unit</i> → <i>Whole Screen</i> or <i>Half Screen</i>	Single Line
■ Images Off > <i>Downloads</i> → <i>Display Image</i> → <i>OFF</i>	On
■ Sound Off > <i>Downloads</i> → <i>Play Sounds</i> → <i>OFF</i>	On
■ Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai* > <i>Warning Messages</i> → <i>PC Site Browser</i> (when activating) or <i>Yahoo! Keitai</i> (when switching) → <i>OFF</i>	On

* PC Site Browser only

Memory Manager & Reset

Yahoo! Keitai

From ► [Main Menu](#) ► [Yahoo! Keitai](#) ► [Set Yahoo! Keitai](#)

PC Site Browser

From ► [Main Menu](#) ► [Yahoo! Keitai](#) ► [PC Site Browser](#)
► [Set PC Site Browser](#)

Setting/Operation	Default
■ Clear Cache > <i>Memory Manager</i> → <i>Clear Cache</i> → <i>YES</i>	–
■ Delete Cookies > <i>Memory Manager</i> → <i>Delete Cookies</i> → <i>YES</i>	–
■ Delete User ID or Password Entered when Authentication is Required > <i>Memory Manager</i> → <i>Delete Certificates</i> → <i>YES</i>	–
■ Set Data Storage Location to microSD Card* > <i>Save Settings</i> → <i>microSD</i>	Phone

* Yahoo! Keitai Browser only

Security Settings

Yahoo! Keitai

From ► **Main Menu** ► **Yahoo! Keitai** ► **Set Yahoo! Keitai**
► **Security**

PC Site Browser

From ► **Main Menu** ► **Yahoo! Keitai** ► **PC Site Browser**
► **Set PC Site Browser** ► **Security**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Set Auto Send Off for Manufacturer's Number (for Authentication) > <i>Manufacture Number</i> → <i>OFF</i> (Not send) 	ON (Send)
<ul style="list-style-type: none"> ■ Set Not to Send Referer Information > <i>Send Referer</i> → <i>OFF</i> 	ON (Send)
<ul style="list-style-type: none"> ■ Select whether or Not to Allow Cookies to Be Stored on 930P > <i>Cookies</i> → <i>OFF</i> or <i>Ask Every Time</i> 	ON (Save)
<ul style="list-style-type: none"> ■ Select whether or Not to Run Scripts in Yahoo! Keitai*¹ > <i>Script</i> → <i>ON</i>, <i>OFF</i> or <i>Ask Every Time</i> 	Ask before Connect
<ul style="list-style-type: none"> ■ Select whether or Not to Run Scripts in PC Site Browser*² > <i>Script</i> → <i>Ask before Connect</i>, <i>OFF</i> or <i>Ask Every Time</i> 	ON (Run)
<ul style="list-style-type: none"> ■ View Electronic Certificates Issued by Certificate Authorities > <i>Root Certificates</i> → Select an item 	—

■ Select whether or Not to Retain Authentication Information

> *Certificate Retention* → *Always Keep* or *Not Keep*

Keep While Browsing

*1 Yahoo! Keitai Browser only

*2 PC Site Browser only

Reset

Yahoo! Keitai

From ► **Main Menu** ► **Yahoo! Keitai** ► **Reset**

PC Site Browser

From ► **Main Menu** ► **Yahoo! Keitai** ► **PC Site Browser**
► **Reset**

Setting/Operation	Default
<ul style="list-style-type: none"> ■ Reset Browser Settings > <i>Restore Defaults</i> → <i>YES</i> → Enter Phone Password 	—
<ul style="list-style-type: none"> ■ Initialize Browser > <i>Initialized Browser</i> → <i>YES</i> → Enter Phone Password 	—

Settings S! Appli

From ► Main Menu ► S! Appli ► S! Appli Settings

Setting/Operation	Default
<p>■ Volume</p> <p>> <i>Volume</i> → to adjust volume</p>	Level 4
<p>■ Backlight On/Off</p> <p>> <i>Display Backlight</i> → <i>Always ON</i> or <i>Always OFF</i></p>	Follow General Setting
<p>■ Deactivate Vibration</p> <p>> <i>Vibration</i> → <i>OFF</i></p>	ON
<p>■ Sync microSD Card with S! Appli Library*</p> <p>> <i>Synchronize microSD</i></p>	–

* Update S! Appli Library on microSD Card after using microSD Card in another handset or PC.

Settings Osaifu-Keitai®

From ► Main Menu ► Osaifu-Keitai ► IC Card Settings

Setting/Operation	Default
<p>■ View IC Card Status</p> <p>> <i>IC Card Status</i></p>	–
<p>■ Disable Handset Response to Commands from Reader/Writer</p> <p>> <i>Interface Settings</i> → Enter Phone Password → Select an item → <i>OFF</i></p>	All ON

Settings S! GPS Navi Settings

From ► Main Menu ► Tools ► S! GPS Navi ► NAVI Settings

Setting/Operation	Default
<p>■ Save Current Map URL</p> <p>> <i>Map URL Settings</i> → Highlight <Not Recorded>, and press [Edit] → <i>URL Name</i> → Enter a name → <i>Map URL</i> → Enter a URL ("http://" or https://) → [Finish]</p>	–
<p>■ Select Map URL</p> <p>> <i>Map URL Settings</i> → Select a name</p>	–
<p>■ Edit/Delete Map URL*</p> <p>> <i>Map URL Settings</i> → Highlight a name, and press [Menu] → <i>Edit</i> or <i>Delete</i></p>	–
<p>■ Select Navi Appli to Activate</p> <p>> <i>Select Navi Appli</i> → Select a Navi Appli</p>	–
<p>■ Activate Positioning Lock</p> <p>> <i>Positioning Lock</i> → Enter Phone Password → <i>ON</i></p>	OFF
<p>■ Hide Confirmation when Sending Location Information</p> <p>> <i>Send Location Info</i> → Enter Phone Password → <i>Send without Check</i> (Send location information without showing confirmation)</p>	Send with Check (Show confirmation every time)
<p>■ Set Positioning Ringtone/Vibrator/Ringtone Duration</p> <p>> <i>Recv Location Request</i> → <i>Ringtone</i>, <i>Vibration Alert</i> or <i>Ringtone Duration</i> → Set individual item</p>	Ringtone: Pattern 2 Vibrator Alert: Pattern 1 Ringtone Duration: 5 seconds

* Pre-installed NAVITIME cannot be edited or deleted.

Default Settings

Default settings vary by handset color as below.

- For operations, refer to respective setting sections.

Setting		Black	Silver	PinkGold	Turquoise	Red	
Notification Light (☞P.18-9)	Incoming	Voice Call	A-Signal	B-Signal	C-Signal	D-Signal	A-Signal
		Video Call	A-Signal	B-Signal	C-Signal	D-Signal	A-Signal
		Message	A-Rhythm	B-Rhythm	C-Rhythm	D-Rhythm	A-Rhythm
	Side Key (Upper Side Key)		A-Flash	B-Flash	C-Flash	D-Flash	A-Flash
Display Settings (☞P.18-3 to 6)	Stand-by Display		Buildings	Photo Screen*	Silhouette of Tree	Moon over Lake	Container Ship
	Stand-by Display Wide (☞P.18-12)		Downtown at Night	Tropical Fish	London	Tropical Fish	Downtown at Night
	Stand-by Clock	Position	Pattern 1	Icon Clock	Pattern 1	Pattern 10	Pattern 4
		Size	Large	Small	Large	Small	Small
		Pattern	Pattern 1	Pattern 6	Pattern 2	Pattern 2	Pattern 6
	Stand-by Clock Wide (☞P.18-12)	Position	Pattern 3	Pattern 3	Pattern 7	Pattern 3	Pattern 3
		Pattern	Pattern 4	Pattern 6	Pattern 5	Pattern 6	Pattern 4
	Icon Clock		Pattern 1	Pattern 6	Pattern 2	Pattern 2	Pattern 6
	Outgoing Image (Call/Message)		Pattern 1	Pattern 2	Pattern 3	Pattern 2	Pattern 1
	Incoming Image (Call/Message)		Pattern 1	Pattern 2	Pattern 3	Pattern 2	Pattern 1
	External Display (Clock)		Pattern 1	Pattern 3	Pattern 2	Pattern 2	Pattern 3
	Menu Icons		Pattern 1	Pattern 2	Pattern 3	Pattern 2	Pattern 1
	Horizontal Open Menu (☞P.18-12)		Pattern 1	Pattern 2	Pattern 2	Pattern 2	Pattern 1
Color Scheme		Black	Silver	Gold	Blue	Red	

* Unavailable when Calendar appears in Standby