

Appendix

Function List	19-2
Troubleshooting.....	19-9
Warning Signs	19-11
Software Update	19-11
Updating Software Manually.....	19-11
Updating Software Automatically	19-12
Quick Open Menu	19-13
Key Assignments (5-touch Mode)	19-14
Key Assignments (2-touch Mode)	19-15
Key Assignments (NIKO-touch Mode)	19-16
Symbol List	19-17
Character Code List	19-18
Memory List.....	19-23
Specifications	19-24
Index.....	19-25
Warranty & Service.....	19-31
Warranty	19-31
After-Sales Service	19-31
Customer Service.....	19-32

Function List

From Main Menu, press key corresponding to a menu number for direct access. (→P.1-21)

Example: To select **S! Mail Settings** in Messaging menu:

1 first column **9** second column **3** third column

1 (Messaging) → **9** (Settings) → **3** (S! Mail Settings)

- To select ①:  → **1**; To select ②:  → **2**
- When Menu Icons are set to Pattern 5 or Customize, first column of function number is not available. Select a menu from Main Menu; then select a function number (second column in table).

Messaging		
	Menu Number/Function Name	Page
1	Messaging	—
1	Incoming Mail	—
1	Received	13-10
2	ユーザーフォルダ 1	13-3
3	ユーザーフォルダ 2	13-3
4	ユーザーフォルダ 3	13-3
5	Spam Folder	13-16
2	Create New	13-4
3	Retrieve New	13-14
4	Drafts	13-15
5	Templates	—
1	Download Templates	13-10
6	Sent/Unsent Messages	13-15
7	Server Mail	—
1	Retrieve Mail List	13-14
2	Retrieve All	13-14
3	Delete All	13-14

1	7	4	Server Mail Memory	13-14
	8		Create New SMS	13-7
	9		Settings	—
	1		Custom Mail Address	13-3
	2		Universal Settings	18-16
	3		S! Mail Settings	18-16
	4		SMS Settings	18-16
	0		Memory Status	13-13

Yahoo! Keitai		
	Menu Number/Function Name	Page
2	Yahoo! Keitai	—
1	Yahoo! Keitai	—
2	Bookmarks	—
1	Panasonicメーカーサイト	14-8
3	Saved Pages	14-8
4	Enter URL	—
1	Direct Entry	14-4
2	URL History List	14-4
5	History	14-4
6	PC Site Browser	—
1	Homepage	14-5
2	Bookmarks	14-8
3	Saved Pages	14-8
4	Enter URL	14-5
5	History	14-5
6	Yahoo! Keitai	14-5
7	Set PC Site Browser	18-17
8	Reset	18-18

2	7	Set Yahoo! Keitai	—
	1	Font Size	18-17
	2	Scroll Unit	18-17
	3	Downloads	18-17
	4	Memory Manager	18-17
	5	Security	18-18
	6	Save Settings	18-17
	8	Reset	—
	1	Restore Defaults	18-18
	2	Initialized Browser	18-18

 S! Appli			
Menu Number/Function Name		Page	
3	S! Appli	—	
1	S! Appli List	—	
1	Download S! Appli	15-2	
2	Osaifu-Keitai	—	
1	Lifestyle-Appli	16-3	
2	IC Card Settings	16-5	
3	S! Appli Settings	—	
1	Volume	18-19	
2	Display Backlight	18-19	
3	Vibration	18-19	
4	Synchronize microSD	18-19	
4	S! Appli History	15-3	
5	Information	15-2	

 Osaifu-Keitai		
Menu Number/Function Name		Page
4	Osaifu-Keitai	—
1	Lifestyle-Appli	16-3
2	IC Card Settings	16-5

 Camera		
Menu Number/Function Name		Page
5	Camera	—
1	Camera	6-5
2	Video Camera	6-6
3	Pictures	6-10
4	Videos	6-10

 Entertainment		
Menu Number/Function Name		Page
6	Entertainment	—
1	S! Quick News	—
1	S! Quick News List	7-3
2	S! Loop List	7-3
3	Settings	18-14
2	BookSurfing	7-4
3	e-Book Viewer	7-4
4	S! Town	—
1	Download S! Town	7-5
5	S! Loop	7-5

Tools		
	Menu Number/Function Name	Page
7	Tools	—
1	Alarms	12-7
2	Calendar	12-2
3	Calculator	12-8
4	Notepad	12-9
5	Tasks	12-6
6	Sound Recorders	—
1	Voice Call Data	2-16
2	Video Call Data	2-16
3	Answer Phone Setting	2-15
4	Voice Recorder	12-10
5	Voice Announce	12-10
7	Bar Code Reader	—
1	Scan Barcodes	12-11
2	Saved Data List	12-12
8	S! GPS Navi	—
1	Current Location	17-2
2	Navi Appli	17-3
3	Location Navi	17-3
4	Location Logs	17-3
5	NAVI Settings	18-19
9	Bluetooth	—
1	Search&Paired Device	10-7
2	Bluetooth OFF/Bluetooth ON	10-8
3	Accept Registered	10-9
4	Dialup Rgstry Standby	10-10
5	Receive via Bluetooth	10-9
6	My Devices Settings	18-15

7	0	Receive via Infrared	—
	1	Receive	10-3
	2	Receive All	10-4
	①	microSD Backup	—
	1	Phone Book	9-18
	2	Calendar	9-18
	3	Tasks	9-18
	4	Incoming Mail	9-18
	5	Sent Messages	9-18
	6	Unsent Messages	9-18
	7	Drafts	9-18
	8	Memo Pad	9-18
	9	Bookmarks	9-18
	②	Templates/Users Dic.	—
	1	Templates	3-5
	2	User's Dictionary	3-10

 Data Folder		
Menu Number/Function Name		
Page		
8	Data Folder	—
1	Pictures	—
1	Download Pictures	9-4
2	Main Folder	9-2
3	Camera	9-2
4	My Pictograms	13-6
5	Mail Art	9-2
6	Pre-installed	9-2
7	Original Animation	9-13

8	2	Ring Songs&Tones	—
	1	DL Ring Songs&Tones	9-4
	2	Main Folder	9-2
	3	Pre-installed	9-2
	4	Voice Announce	9-2
	5	Play List	9-2
	3	S! Appli	—
	1	Download S! Appli	15-2
	4	Music	—
	1	Main Folder	8-7
	2	WMA	8-7
	5	Videos	—
	1	Download Videos	9-4
	2	Main Folder	9-3
	3	Camera	9-3
	4	Pre-installed	9-3
	5	Play List	9-3
	6	Position Memory	9-6
	6	PC Movies	—
	1	microSD	9-3
	2	Position Memory	9-6
	3	Play History	9-3
	7	TV	—
	1	Image	5-13
2	Video	5-12	
3	Position Memory	9-3	
8	Lifestyle-Appli	—	
1	Download	16-3	
9	Books	—	
1	Download Books	9-4	

8	0	Customized Screen	—
	1	Customized Screen	1-22
	2	Familiar Usability	1-22
	①	Templates	—
	1	Download Templates	13-10
	②	Other Documents	—
	1	Main Folder	9-3


Music Player

Menu Number/Function Name		Page
9	Music Player	—
1	Player	—
	1 All Tracks	8-6
	2 Artist	8-6
	3 Album	8-6
	4 Genre	8-6
	5 Play List	8-6
2	Data Manager	—
1	Main Folder	8-7
	2 WMA	8-7

 TV		
	Menu Number/Function Name	Page
✱	TV	—
1	Watch TV	5-5
2	Program List	5-7
3	Timer Watching	5-13
4	Timer Recording	5-13
5	Recording Result	5-14
6	TV Link	5-10
7	Channel List	5-4
8	Channel Setting	—
	1 Select Area	5-4
	2 Automatic	5-4
9	User Settings	—
	1 Caption	18-13
	2 Rec. When Low Battery	18-13
	3 Mobile W-Speed	18-13
	4 Image Quality	18-13
	5 Sound	18-13
	6 ECO Mode	18-13
	7 Display Light	18-13
	8 Data Broadcasting	18-13
	9 Icons	18-13
	0 Check TV Settings	18-13
✱	Reset Channel Setting	18-13
#	Reset Storage Area	18-13
	Reset TV Settings*	18-13

* **Reset TV Settings** cannot be selected by third column number.

 Phone Book		
	Menu Number/Function Name	Page
	Phone Book	—
1	Phone Book	4-2
2	Create New Entry	4-3
3	Call Log	—
	1 Outgoing Call Logs	2-13
	2 Incoming Call Logs	2-13
4	Group	4-6
5	Account Details	1-28, 4-13
6	S! Addressbook BkUp	—
	1 Start Sync	4-11
	2 Auto Sync Settings	4-12
	3 Sync Log	4-12
7	Memory Manager	4-9
8	Restrictions	11-9
9	Settings	—
	1 Save Settings	18-10
	2 Search Method	18-10
	3 Font Size	18-10
	4 Voice Dial	4-14
	5 Mail Group	13-18
	6 Forwarding Image	18-10
0	Memory Status	4-10

● Number in first column is not available for Phone Book.

 Settings		
Menu Number/Function Name		Page
#	Settings	—
1	Sound Settings	—
1	Ring Tones	18-2
2	Ringer Volume	18-2
3	Key Tone	18-2
4	Stereo/3D Sound	18-2
5	Earphone	18-2
6	Massage Ring Tones	18-2
2	Display Settings	—
1	Internal Display	18-3
2	External Display	18-5
3	Font Size	18-6
4	Font	18-6
5	Menu Icons	18-4
6	Hor. Open Menu	18-12
7	Back Light Time	18-5
8	View Blind	1-28
9	Color	18-3
0	Private Menu	1-24
*	言語設定	18-3
#	Open For New	18-3
①	LCD AI	18-5
②	Disp. Call/Recv #	18-6
③	Describe Icons	1-10
3	Customized Screen	—
1	Customized Screen	1-22
2	Familiar Usability	1-22
3	Release Settings	1-23

#	4	Incoming Settings	—
		1 Vibrator	18-2
		2 Manner Mode Type	18-6
		3 Answer Setting	18-7
		4 Open-to-Ans. Call	18-7
		5 Call Logs	11-8
		6 Phone Book Image	18-7
		7 Ring Time Settings	11-9
		8 Info Notice Setting	18-7
		9 Auto Answer	18-7
	0 In-call Management	18-7	
	5	Phone Settings	—
		1 Horizontal View	18-12
		2 Side-keys Guard	11-7
		3 Text Entry Method	18-10
		4 Battery	18-2
		5 Pause Dial	2-3
		6 Headset Switch to Call	18-9
		7 Voice Settings	18-10
		8 Software Update	19-11
6	Date & Time	—	
	1 Date & Time	18-8	
	2 World Clock	18-8	
	3 Daylight Savings	18-8	
	4 Alarm Tone	18-8	
	5 Time Correction	18-8	

#	7	Security	–
	1	Privacy Key Lock	11-4
	2	Personal Data Lock	11-4
	3	IC Card Lock	16-5
	4	Secret Mode	11-8
	5	Secret Data Only	11-8
	6	Key Pad Dial Lock	11-7
	7	Reject Unknown	11-10
	8	Call Setting w/o ID	11-10
	9	All Reset	11-11
	0	Reset Settings	11-10
	✱	PIN Authentication	11-2
	#	Change Phone Password	11-2
	①	Timer Lock at Close	11-5
	②	Content Key	9-6
	③	Lock Message	11-6
	8	Call Settings	–
	1	Call Time/Cost	18-8
	2	Reset	18-8
	3	Set Max Cost Limit	18-8
	4	Voice Mail/Call Fwding	2-17, 2-18
	5	Call Waiting	2-20
	6	Call Barring	2-20
	7	Missed Call Notifi.	2-19
	8	Prefix	2-3
	9	Volume	18-8
	0	Shikkari Talk	2-5
	✱	Closing Clamshell	18-9
	#	Hold Tones	18-9
	①	Noise Reduction	18-9

#	8	② Quality Alarm	18-9
		③ Reconnect Signal	18-9
		④ Emission OFF Mode	1-18
		⑤ Show My Number	2-21
		⑥ Service Numbers	18-9
	9	Video Call	–
		1 Incoming Video Qlty	18-11
		2 Select Images	18-11
		3 Loud Speaker	18-11
		4 Voice Call Auto Redial	18-11
		5 Remote Monitoring	2-8
	0	International Call	–
		1 Int'l Dial Assist	2-10
		2 Select Operator	2-11
		3 PLMN Setting	2-11
		4 Operator Name	2-11
		5 Select Network	2-11
	①	Connectivity	–
		1 USB Mode	10-11
		2 Retrieve NW Info	1-16
	②	Notification Light	–
		1 Incoming	4-4, 18-9
		2 Online	18-9
		3 Missed Call/Unread	18-9
		4 Clamshell Close	18-9
		5 Music	18-9
		6 Bluetooth	18-9
		7 IC Card	18-9
		8 Side Key	18-9
		9 Confirm Status	18-9

Troubleshooting

930P does not turn on

- Was  pressed for more than one second?
- Is battery level sufficient?
- Is battery inserted properly? (P.1-14)

Handset functions do not work after turning power on

- Does PIN Entry window appear?
PIN Authentication is **ON**. Enter PIN (P.11-2).

USIM not inserted After power-off Insert USIM or Inserted USIM is unavailable to this mobile phone Please insert valid one appears when 930P is turned on or operations attempted

- Is USIM Card inserted correctly? (P.1-3)
- Unusable USIM Card may be inserted (P.1-2).
- USIM Card IC chip may be dirty.
Wipe with a clean cloth, then insert USIM Card correctly.

Keypad does not respond

- Does  or  appear in Standby?
Keyguard (P.11-3) or Privacy Key Lock is active (P.11-4). Cancel it.

Side Keys do not work while handset is closed

- Does  appear?
Side-keys Guard (P.11-7) is **ON**.
Set to **OFF**.

Calls or Video Calls cannot be connected or message and Internet connections are not available

- Does    appear?
Is 930P out-of-range or in a location where signal is weak?
Move to a location where signal is strong.
- Are you using handset overseas?
You must set international settings, such as selecting operator, to use handset abroad (P.2-11).
- Does  appear?
Personal Data Lock is set (P.11-4). Deactivate Personal Data Lock.

Calls or Video Calls cannot be connected

- Is area code entered?
- Is restricting outgoing calls in Call Barring? (P.2-20)
- Does  appear in Standby? Total cost has reached upper limit. Set Max Cost Limit to **OFF** or execute **Reset** (P.18-8).

Calls cannot be connected or busy signal sounds after dialing

- Did you enter area code?
- Is restricting outgoing calls in Call Barring? (P.2-20)

Call is interrupted or disconnected

- Does  appear? Is 930P out-of-range or in a location where signal is weak?
Move to a location where signal is strong.

"Cannot start any more functions" appears when a menu is opened.

- Maximum number of functions are active at the same time. Cancel current function and try again (P.1-27).

Calls cannot be made via a Phone Book entry

- Entry may be saved as Secret.
Set Secret Mode or Secret Data Only **ON** (P.11-8).
- Does  appear?
Personal Data Lock is set (P.11-4). Deactivate Personal Data Lock.

Digital TV does not work

- Is 930P out of terrestrial Digital TV broadcasting service area or in a location where airwaves are weak?
Move to a location where airwaves are strong (P.5-3).

Customized Screen setting cannot be canceled

- Enter "6368##" in Standby → **Release Settings**
Customized Screen cannot be canceled in Standby while Simple menu is active. Deactivate Simple menu in Standby.

Osaifu-Keitai® does not work

- Does  appear?
Deactivate IC Card Lock (P.16-5).

Cannot charge battery

- Is AC Charger (sold separately) firmly connected to 930P or Desktop Holder (not included)? (P.1-15)
- Is AC Charger securely plugged into an outlet?
- Is battery installed in 930P correctly? (P.1-14)
- Is 930P correctly mounted in Desktop Holder?
- Make sure 930P, battery, Desktop Holder and AC Charging terminals are clean.
- Battery may not charge beyond +5°C and +35°C.
- Battery may need to be replaced.

930P/accessories feel warm

- AC Charger/Desktop Holder may warm during charging.
930P may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if 930P is held against skin for long periods.

Battery Operating Time is greatly reduced

- Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Charging Time & Operating Time Estimates" (P.1-12) and "Battery Time" (P.1-13).

Note

- If you did not find the remedy to your problem here, please contact SoftBank Customer Center (P.19-32).

Warning Signs

Problem	Causes and Remedies
 appears	Handset is out-of-range. Move to a location where signal is strong.
 appears	Side-keys Guard is ON . (→P.11-7) To activate Side Keys while handset is closed, set Side-keys Guard OFF .
 or  appears	Keyguard (→P.11-3) or Privacy Key Lock (→P.11-4) is active. Cancel it to use handset. Answer calls even if Keyguard or Privacy Key Lock is active.
Low battery message appears and battery alarm tone sounds	Battery is low. Charge (→P.1-15) or replace battery (→P.1-14).

Software Update

Check for 930P software updates and download as required.
Choose to begin update or schedule update.

- Connection fees do not apply to updates (including checking for updates, downloading and rewriting).
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Do not remove battery during the update. Update will fail.
- Other functions are not available during Software Update.
- The update may take some time.

Updating Software Manually

Main Menu ► Settings ► Phone Settings
► Software Update ► Software Update

1 [YES] → Follow onscreen instructions

After download is complete, 930P automatically turns off and restarts before Software Update begins.
After Software Update is complete, 930P automatically turns off and restarts before information appears for successful update.
(This process takes approximately 60 seconds.)

Software Update
Software has been successfully updated.

Updating Software Automatically

Main Menu ► Settings ► Phone Settings
► Software Update ► Regular Updates

1 YES → Follow onscreen instructions

- Select **YES** to activate Internet. Follow onscreen instructions to perform Regular Updates. For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).


Update Results

When Event Indicator appears, **Update** →



- When **Update** indicator does not appear,


Main Menu ► Settings
► Phone Settings
► Software Update
► Update Results

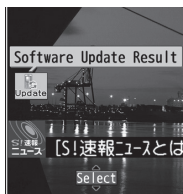

Scheduled Update

Follow onscreen instructions for setup. Confirmation appears at scheduled update time. Press  or wait ten seconds for update to start.

 - Software Update will not start while 930P is in use. Continuing handset usage for ten minutes or more cancels Scheduled Update.



Note

- Software Update failure may disable 930P. Contact SoftBank Customer Center, Customer Assistance (☎P.19-32).
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup, as appropriate, of any important information and data (note that some files cannot be copied).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

Quick Open Menu

When **Menu Icons** is set to **Pattern 5** or **Customize** (P.18-4), press menu numbers in Main Menu to open the following functions.

Example: To open Notepad:

In Standby,  →  

Menu	#
Alarm	44
Calendar	45
Calculator	85
Notepad	42
Tasks	95
Sound Recorders	55
Receive via Infrared	79
Templates/Users Dictionary	38
Pictures folder	46
Ring Songs&Tones folder	16
Phone Book Settings	26
Ring Tones	13
Ringer Volume	50
Key Tone	30
Stereo/3D Sound	64
Earphone/Speaker Settings	51
Message Ring Tones	68
Internal Display	56

Menu	#
External Display	93
Font Settings	66
Menu Icons	57
Back Light Time	70
Color Theme	86
Private Menu Settings	52
Language	15
Describe Icons	36
Vibrator	54
Manner Mode Type	20
Answer Setting	58
Ring Time Settings	90
Info Notice Setting	65
Auto Answer	94
Text Entry Method	35
Date & Time	31
Secret Mode	40
Secret Data Only	41
Call Setting w/o ID	10
Reset Settings	23
Change Phone Password	29
Call Time/Cost	61
Reset Total Duration/Cost	60
Closing Clamshell	18

Menu	#
Noise Reduction	76
Quality Alarm	75
Reconnect Signal	77
Show My Number	17
Notification Light	89

Key Assignments (5-touch Mode)

Display		漢	カナ	abc	123
Key					
1		あいうえおあいうえお	アイウエオアイウエオ1	. / @ - :  *1  *2 _ 1	1
2		かきくけこ	カキクケコ2	a b c A B C 2	2
3		さしすせそ	サシスセン3	d e f D E F 3	3
4		たちつてとっ	タチツテトツ4	g h i G H I 4	4
5		なにぬねの	ナニヌネノ5	j k l J K L 5	5
6		はひふへほ	ハヒフヘホ6	m n o M N O 6	6
7		まみむめも	マミムメモ7	p q r s P Q R S 7	7
8		やゆよやゆよ	ヤユヨヤユヨ8	t u v T U V 8	8
9		らりるれろ	ラリルレロ9	w x y z W X Y Z 9	9
0		わをんわー	ワヲン  *2—0	0	0
*	 *3	 *3	Pictograms		*
	[Press and hold] Templates				
#*4	、。？！・ □ (Space)	、。？！・ □ (Space)	、。？！' - & () ¥ □ (Space)	#	
	[Press and hold] Symbols*4				

*1 Appears when entering single-byte character.

*2 Appears when entering double-byte character.

*3 Added to highlighted character. Press  to display pictograms after determining character.

*4 In number mode, symbol list may not be displayed.

- While entering character, press  to toggle characters at cursor in reverse order.
- After entering hiragana, katakana or alphanumerics, press  to toggle upper/lower case.
- In number mode, press and hold  to enter "+" (not available in S! Mail text field).
- In alphanumerics mode, characters entered after an upper-case character appear in order of: upper case → lower case.

Key Assignments (2-touch Mode)

Kanji/Hiragana Mode

<Upper Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	A	B	C	D	E
	2	か	き	く	け	こ	F	G	H	I	J
	3	さ	し	す	せ	そ	K	L	M	N	O
	4	た	ち	つ	て	と	P	Q	R	S	T
	5	な	に	ぬ	ね	の	U	V	W	X	Y
	6	は	ひ	ふ	へ	ほ	Z	?	!	-	/
	7	ま	み	む	め	も	¥	&			
	8	や	(	ゆ	)	よ	*	#			
	9	ら	り	る	れ	ろ	1	2	3	4	5
	0	わ	を	ん	°	°	6	7	8	9	0

<Lower Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			つ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	や		ゆ		よ					
	9										
	0	わ				、	。				

Katakana Mode

<Upper Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	A	B	C	D	E
	2	カ	キ	ク	ケ	コ	F	G	H	I	J
	3	サ	シ	ス	セ	ソ	K	L	M	N	O
	4	タ	チ	ツ	テ	ト	P	Q	R	S	T
	5	ナ	ニ	ヌ	ネ	ノ	U	V	W	X	Y
	6	ハ	ヒ	フ	ヘ	ホ	Z	?	!	-	/
	7	マ	ミ	ム	メ	モ	¥	&			
	8	ヤ	(	ユ	)	ヨ	*	#			
	9	ラ	リ	ル	レ	ロ	1	2	3	4	5
	0	ワ	ヲ	ン	°	°	6	7	8	9	0

<Lower Case Mode>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	a	b	c	d	e
	2						f	g	h	i	j
	3						k	l	m	n	o
	4			ツ			p	q	r	s	t
	5						u	v	w	x	y
	6						z				
	7										
	8	ヤ		ユ		ヨ					
	9										
	0	ワ ^{*1}									

Alphanumerics Mode

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	"	\$	%	'	+	a	b	c	d	e
	2	.	.	:	:	<	f	g	h	i	j
	3	=	>	@	[	]	k	l	m	n	o
	4	^	_	* ^{*1} ^ ^{*2}	{		p	q	r	s	t
	5	}	~ ^{*1} ~ ^{*2}				u	v	w	x	y
	6						z	?	!	-	/
	7						¥	&			
	8		(		)		*	#			
	9						1	2	3	4	5
	0						6	7	8	9	0

■ Toggle upper/lower case

*1 Appears when entering double-byte character.

*2 Appears when entering single-byte character.

Note

- A space is entered by pressing key corresponding to a blank where no character is assigned.
- In Kanji/Hiragana or Katakana Mode, "" or "" is entered by pressing [✳] after entering characters. Press [✳] once for "", twice for "".
- In number mode, press and hold [0] to enter "+" (not available in S! Mail text field).

Key Assignments (NIKO-touch Mode)

Kanji/Hiragana Mode

<Upper Case>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お	.	-	@	_	1
	2	か	き	く	け	こ		a	b	c	2
	3	さ	し	す	せ	そ		d	e	f	3
	4	た	ち	つ	て	と	っ	g	h	i	4
	5	な	に	ぬ	ね	の		j	k	l	5
	6	は	ひ	ふ	へ	ほ		m	n	o	6
	7	ま	み	む	め	も		p	q	r	7
	8	や	ゆ	よ	ゃ	ゅ	ょ	t	u	v	8
	9	ら	り	る	れ	ろ		w	x	y	9
	0	わ	を	ん	.	。	-	.	!	?	0

<Lower Case>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	あ	い	う	え	お					
	2	か			け			A	B	C	
	3							D	E	F	
	4			っ		っ		G	H	I	
	5							J	K	L	
	6							M	N	O	
	7						P	Q	R	S	
	8	ゃ	ゅ	ょ	ゃ	ゅ	ょ	T	U	V	
	9							W	X	Y	Z
	0	わ									

Katakana Mode

<Upper Case>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ	.	-	@	_	1
	2	カ	キ	ク	ケ	コ		a	b	c	2
	3	サ	シ	ス	セ	ソ		d	e	f	3
	4	タ	チ	ツ	テ	ト	ッ	g	h	i	4
	5	ナ	ニ	ヌ	ネ	ノ		j	k	l	5
	6	ハ	ヒ	フ	ヘ	ホ		m	n	o	6
	7	マ	ミ	ム	メ	モ		p	q	r	7
	8	ヤ	ユ	ヨ	ャ	ュ	ョ	t	u	v	8
	9	ラ	リ	ル	レ	ロ		w	x	y	9
	0	ワ	ヲ	ン	.	。	-	.	!	?	0

<Lower Case>

		Second digit									
		1	2	3	4	5	6	7	8	9	0
First digit	1	ア	イ	ウ	エ	オ					
	2							A	B	C	
	3							D	E	F	
	4			ッ		ッ		G	H	I	
	5							J	K	L	
	6							M	N	O	
	7						P	Q	R	S	
	8	ャ	ュ	ョ	ャ	ュ	ョ	T	U	V	
	9							W	X	Y	Z
	0										

Note

- To switch to lower case: Enter a character → 
- A space is entered by pressing key corresponding to a blank where no character is assigned.
- Press  once for " ", twice for " ". In Kanji/Hiragana Mode, enter characters before pressing .
- In number mode, press and hold  to enter "+" (not available in S! Mail text field).

[illegible][illegible]

First Three Digits										Last Digit										First Three Digits										Last Digit										First Three Digits										Last Digit																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																				
0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																											
232	233	234	235	236	237	238	239	240	241	242	243	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	261	262	263	264	265	266	267	268	269	270	271	272	273	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300	301	302	303	304	305	306	307	308	309	310	310	311	312	313	314	315	315	316	317	318	319	320	320	321	322	323	324	325	326	327	328	329	330	331	332	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	346	347	348	349	350	351	352	353	354	354	355	356	357	358	359	360	361	362	363	363	364	365	366	366	367	368	369	370	371	372	373	373	374	375	376	377	378	379	380	381	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400	401	402	403	404	405	406	407	408	409	410	410	411	412	413	414	415	415	416	417	418	419	420	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500	501	502	503	504	505	506	507	508	509	510	510	511	512	513	514	515	515	516	517	518	519	520	520	521	522	523	524	525	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600	601	602	603	604	605	606	607	608	609	610	610	611	612	613	614	615	615	616	617	618	619	620	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700	701	702	703	704	705	706	707	708	709	710	710	711	712	713	714	715	715	716	717	718	719	720	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800	801	802	803	804	805	806	807	808	809	810	810	811	812	813	814	815	815	816	817	818	819	820	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900	901	902	903	904	905	906	907	908	909	910	910	911	912	913	914	915	915	916	917	918	919	920	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000	1001	1002	1003	1004	1005	1006	1007	1008	1009	1010	1010	1011	1012	1013	1014	1015	1015	1016	1017	1018	1019	1020	1020	1021	1022	1023	1024	1025	1026	1027	1028	1029	1030	1031	1032	1033	1034	1035	1036	1037	1038	1039	1040	1041	1042	1043	1044	1045	1046	1047	1048	1049	1050	1051	1052	1053	1054	1055	1056	1057	1058	1059	1060	1061	1062	1063	1064	1065	1066	1067	1068	1069	1070	1071	1072	1073	1074	1075	1076	1077	1078	1079	1080	1081	1082	1083	1084	1085	1086	1087	1088	1089	1090	1091	1092	1093	1094	1095	1096	1097	1098	1099	1100	1101	1102	1103	1104	1105	1106	1107	1108	1109	1110	1110	1111	1112	1113	1114	1115	1115	1116	1117	1118	1119	1120	1120	1121	1122	1123	1124	1125	1126	1127	1128	1129	1130	1131	1132	1133	1134	1135	1136	1137	1138	1139	1140	1141	1142	1143	1144	1145	1146	1147	1148	1149	1150	1151	1152	1153	1154	1155	1156	1157	1158	1159	1160	1161	1162	1163	1164	1165	1166	1167	1168	1169	1170	1171	1172	1173	1174	1175	1176	1177	1178	1179	1180	1181	1182	1183	1184	1185	1186	1187	1188	1189	1190	1191	1192	1193	1194	1195	1196	1197	1198	1199	1200	1201	1202	1203	1204	1205	1206	1207	1208	1209	1210	1211	1212	1213	1214	1215	1215	1216	1217	1218	1219	1220	1220	1221	1222	1223	1224	1225	1226	1227	1228	1229	1230	1231	1232	1233	1234	1235	1236	1237	1238	1239	1240	1241	1242	1243	1244	1245	1246	1247	1248	1249	1250	1251	1252	1253	1254	1255	1256	1257	1258	1259	1260	1261	1262	1263	1264	1265	1266	1267	1268	1269	1270	1271	1272	1273	1274	1275	1276	1277	1278	1279	1280	1281	1282	1283	1284	1285	1286	1287	1288	1289	1290	1291	1292	1293	1294	1295	1296	1297	1298	1299	1300	1301	1302	1303	1304	1305	1306	1307	1308	1309	1310	1310	1311	1312	1313	1314	1315	1315	1316	1317	1318	1319	1320	1320	1321	1322	1323	1324	1325	1326	1327	1328	1329	1330	1331	1332	1333	1334	1335	1336	1337	1338	1339	1340	1341	1342	1343	1344	1345	1346	1347	1348	1349	1350	1351	1352	1353	1354	1355	1356	1357	1358	1359	1360	1361	1362	1363	1364	1365	1366	1367	1368	1369	1370	1371	1372	1373	1374	1375	1376	1377	1378	1379	1380	1381	1382	1383	1384	1385	1386	1387	1388	1389	1390	1391	1392	1393	1394	1395	1396	1397	1398	1399	1400	1401	1402	1403	1404	1405	1406	1407	1408	1409	1410	1411	1412	1413	1414	1415	1415	1416	1417	1418	1419	1420	1420	1421	1422	1423	1424	1425	1426	1427	1428	1429	1430	1431	1432	1433	1434	1435	1436	1437	1438	1439	1440	1441	1442	1443	1444	1445	1446	1447	1448	1449	1450	1451	1452	1453	1454	1455	1456	1457	1458	1459	1460	1461	1462	1463	1464	1465	1466	1467	1468	1469	1470	1471	1472	1473	1474	1475	1476	1477	1478	1479	1480	1481	1482	1483	1484	1485	1486	1487	1488	1489	1490	1491	1492	1493	1494	1495	1496	1497	1498	1499	1500	1501	1502	1503	1504	1505	1506

First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit									First Three Digits	Last Digit												
Digits	0	1	2	3	4	5	6	7	8	9	Digits	0	1	2	3	4	5	6	7	8	9	Digits	0	1	2	3	4	5	6	7	8	9	Digits	0	1	2	3	4	5	6	7	8	9
382	懂	撞	洞	童	銅	峠	111	112	113	114	115	382	齡	曆	歷	列	烈	裂	廉	恋	憐	442	夢	無	牟	予	霧	鷓	鷓	婿	娘	442	齡	曆	歷	列	烈	裂	廉	恋	憐		
383	獨	匿	得	洗	鴉	毒	112	113	114	115	383	連	煉	蓮	練	聯	聯	裂	廉	恋	443	【	命	明	盟	迷	鳴	姪	443	【	勞	書	廊	魯	魯	裂	廉	恋					
384	獨	匿	得	洗	鴉	毒	113	114	115	384	【	連	煉	蓮	練	聯	聯	裂	廉	恋	444	名	免	綿	綿	迷	鳴	姪	444	【	勞	書	廊	魯	魯	裂	廉	恋					
385	獨	匿	得	洗	鴉	毒	114	115	385	386	387	388	388	389	390	390	390	391	392	392	393	393	393	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410		
386	獨	匿	得	洗	鴉	毒	115	386	387	388	388	389	390	390	390	391	392	392	393	393	393	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410				
387	獨	匿	得	洗	鴉	毒	115	387	388	388	389	390	390	390	391	392	392	393	393	393	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410					
388	獨	匿	得	洗	鴉	毒	115	388	389	390	390	390	391	392	392	393	393	393	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410							
389	獨	匿	得	洗	鴉	毒	115	389	390	390	390	391	392	392	393	393	393	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410								
390	獨	匿	得	洗	鴉	毒	115	390	391	392	392	393	393	393	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410											
391	獨	匿	得	洗	鴉	毒	115	391	392	392	393	393	393	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410												
392	獨	匿	得	洗	鴉	毒	115	392	393	393	393	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410														
393	獨	匿	得	洗	鴉	毒	115	393	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410																	
394	獨	匿	得	洗	鴉	毒	115	394	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410																		
395	獨	匿	得	洗	鴉	毒	115	395	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410																			
396	獨	匿	得	洗	鴉	毒	115	396	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410																				
397	獨	匿	得	洗	鴉	毒	115	397	398	399	400	401	402	403	404	405	405	406	407	408	409	410																					
398	獨	匿	得	洗	鴉	毒	115	398	399	400	401	402	403	404	405	405	406	407	408	409	410																						
399	獨	匿	得	洗	鴉	毒	115	399	400	401	402	403	404	405	405	406	407	408	409	410																							
400	獨	匿	得	洗	鴉	毒	115	400	401	402	403	404	405	405	406	407	408	409	410																								
401	獨	匿	得	洗	鴉	毒	115	401	402	403	404	405	405	406	407	408	409	410																									
402	獨	匿	得	洗	鴉	毒	115	402	403	404	405	405	406	407	408	409	410																										
403	獨	匿	得	洗	鴉	毒	115	403	404	405	405	406	407	408	409	410																											
404	獨	匿	得	洗	鴉	毒	115	404	405	405	406	407	408	409	410																												
405	獨	匿	得	洗	鴉	毒	115	405	406	407	408	409	410																														
406	獨	匿	得	洗	鴉	毒	115	406	407	408	409	410																															
407	獨	匿	得	洗	鴉	毒	115	407	408	409	410																																
408	獨	匿	得	洗	鴉	毒	115	408	409	410																																	
409	獨	匿	得	洗	鴉	毒	115	409	410																																		
410	獨	匿	得	洗	鴉	毒	115	410																																			

[illegible]

Appendix

Memory List

Data Folder	Up to 3500 items (Up to 300 MB) (One S! Appli corresponds up to 6 MB.)
--------------------	---

- Shared with S! Appli List

Calendar Events	Up to 1000 items
------------------------	------------------

Phone Book	Up to 1000 items
-------------------	------------------

Messaging (SMS and S! Mail combined)	Incoming Mail	Up to 1000 items
	Sent/ Unsent Messages	Up to 500 items
	Drafts	Up to 10 items

Yahoo! Keitai	Saved Pages	[Yahoo! Keitai] Up to 20 items/750KB [PC Site Browser] Up to 20 items/1150KB
	Bookmarks	[Yahoo! Keitai] Up to 100 items [PC Site Browser] Up to 100 items
	URL History	[Yahoo! Keitai] URL Entry: Up to 20 items URL Access: Up to 100 items* [PC Site Browser] URL Entry: Up to 20 items URL Access: Up to 100 items*
	Cache	[Yahoo! Keitai] 750KB [PC Site Browser] 1150KB

* The number of savable items varies depending on URL length.

Specifications

930P

Weight (including battery)		124 g*
Dimensions (closed)		50 x 109 x 17.5 mm*
Standby Time (closed)	3G	650 hours*
	GSM	390 hours*
Talk Time	3G	220 minutes*
	Video Call	130 minutes*
	GSM	240 minutes*
TV Reception Time	Normal Mode (When Mobile W-Speed is ON)	4.5 hours*
	ECO Mode	6.8 hours*
Charging Time	AC Charger	130 minutes*
	In-Car Charger	130 minutes*
Maximum Output	3G	0.25 W
	GSM	2.0 W

* Approximate value

- Values above were calculated with battery installed.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when a S! Appli is active.

Battery

Voltage	3.7 V
Battery Type	Lithium-ion
Capacity	800 mAh
Dimensions	45 x 4.5 x 37 mm*

* Approximate value

- Specifications subject to change without notice.

Index

Numerics

3G 2-11

A

AC Charger	1-15
Access History	
PC Site Browser	14-5
Yahoo! Keitai	14-4
Account Details	1-28, 4-13
Action mode	6-8
Address (Adding/editing/deleting)	13-8
After-Sales Service	19-31
Alarms	12-7
All Reset	11-11
Alternative Image	2-12
Answer Phone	2-15
Answering Calls	
Video Calls	2-8
Voice Calls	2-5
Attachments	
Adding	13-8
Deleting	13-8
Opening/saving	13-13
Auto Answer	18-7
Auto Focus Lock	6-10
Auto Save (Camera)	6-8
Auto timer	6-6
Auto-sort	13-15
AV Output	10-13

B

Back Light	
Display	18-5
S! Appli.	18-19
Video Calls	2-13
Backup	
microSD Card	9-18
S! Address Back-up	4-10
Bar Code Reader	12-11
Basic Operations	
Handset	x
Internet	14-6
Battery	1-12
Battery Level	1-10, 1-11, 1-13
Bluetooth®	10-6
Bluetooth® Passkey	10-8
Bookmarks	14-8
Books folder	9-3
BookSurfing®	7-4
Brightness	
Camera	6-3
Display	18-5
Video Calls	18-11
Video Camera	6-4
Browser (Initializing)	18-18

C

Cache Memory.....	14-2
Calculator	12-8
Calendar	12-2
Display.....	12-4
Calendar Events.....	12-2
Call Barring.....	2-20
Call Cost	18-8
Call Forwarding	2-17
Call Log.....	2-14
Call Operations.....	2-12
Call Rejection	
Calls without Caller ID	11-10
Unknown Callers	11-10
Call Settings	18-8
Call Time	18-8
Call Waiting	2-20
Caller ID.....	2-3, 2-21
Camera [Section Contents].....	6-1
Center Access Code	1-26
Channel Setting	5-4
Character Code (Kuten Code)	
Character Code List.....	19-18
Input Options	3-5
Charge Limit	18-8
Charging Time	1-12
Check microSD.....	9-20
Clock Display.....	18-4, 18-12
Closing Clamshell	18-9
Color Scheme.....	18-3
Content Key	9-5

Context Forecast	3-6
Continuous Shooting.....	6-5
Conversion Candidates.....	3-6
Conversion Methods.....	3-6
Cookies	
Deleting.....	18-17
Settings	18-18
Copy Protected Files.....	9-4
Country/Region Code	2-10
Customer Service.....	19-32
Customized Screen	1-22

D

Data Folder	9-2
Date & Time Settings.....	18-8
Deleting	
Calendar events	12-5
Messages.....	13-20
Phone Book	4-9
S! Appli.....	15-4
Delivery Report	13-9
Digital TV [Section Contents]	5-1
Digital TV Settings.....	18-13
Display Indicators.....	1-9
Display Settings.....	18-3

Download

Customized Screen	1-22
Familiar Usability.....	1-22
From web pages.....	14-11
Lifestyle-Appli	15-2
Music	8-2
S! Appli.....	15-2
Templates	13-10
Drafts.....	13-15
Driving Mode.....	1-18, 18-6

E

e-Book Viewer	7-4
Earpiece Volume	
Video Calls	2-7
Voice Calls	2-5
Emergency Calls (110, 119, 118)	2-4
Emergency Positioning Request	2-4
Emission OFF Mode	1-18
Event Indicators.....	1-18
External Display.....	1-11

F

Familiar Usability	1-22
Flash® files	9-19
Flash(R) folder	9-19
Focus Setting	6-9
Folder/files	9-14
Font Size	
Call Log	2-15
Internet	18-17
Messages	18-16
Phone Book	4-7
Font Size (Collective Setting)	18-6
Function List	19-2

G

Global Roaming Service	2-10
Graphic Mail	13-5
Group Settings	4-6
GSM	2-11

H

Handset	
Menus	1-20
Parts & Functions	1-4
Power On/Off	1-16
Handset Security [Section Contents]	11-1
Help (Text Entry)	3-2
Hikaridrops	1-5
Hold	
Video Calls	2-12
Voice Calls	2-12
HTML messages	13-5

I

IC Card Lock	16-5
IC Transmission	10-4
IDD Prefix	2-9
Image quality	
Still images	6-3
Videos	6-4
Image size	
Still Images	6-3
Videos	6-4
Incoming Call Logs	2-13
Incoming Options (S! Mail)	18-16
Information (S! Appli)	15-2
Infrared	10-2
Input Character Settings (SMS)	18-16
Inside Camera	6-2
Internal Display	1-9, 18-3

International Call

From abroad	2-10
From Japan	2-9
International Setting	2-10
Internet [Section Contents]	14-1

K**Key Assignments**

Mode 1 (5-touch)	19-14
Mode 2 (2-touch)	19-15
Mode 3 (NIKO-touch)	19-16
Key Pad Dial Lock	11-7
Key Tone	18-2
Keyguard	11-3
Kuten Code (Character Code)	19-18

L

Language	18-3
License Information (S! Appli)	15-2
Lock Message	11-6

M	
Mail Group.....	13-18
Main Menu	1-20
Making Calls	
International Calls.....	2-9, 2-10
Video Calls	2-7
Voice Calls	2-2
Manner Mode	1-17, 2-12, 18-6
Manufacture Number	18-18
Memory List.....	19-23
Memory Manager (Internet).....	18-17
Menu Icons	18-4
Menu Numbers	1-21
Messaging [Section Contents].....	13-1
microSD Card.....	9-15
Backup.....	9-18
Formatting.....	9-17
Synchronizing	18-19
Missed Call Notification	2-19
Mobile W-Speed	5-2
MULTI Key	1-5, 1-13, 1-27
Multi Selector	ix
Music folder.....	9-2
Music Player [Section Contents].....	8-1
My Pictograms.....	9-2, 13-6

N	
Network Information	1-16
Network S! Appli	15-2

New Messages	
Receiving.....	13-14
Viewing	13-10
Night mode	
Camera	6-3
Video Calls	18-11
Video Camera	6-4
Normal Mode (Simple Menu)	1-24
Notepad.....	12-9
Notification Light Settings	18-9

O	
One-push Open Button	1-6
Open For New.....	18-3
Open-to-Ans. Call.....	18-7
Operator Names	2-11
Optional Services	2-17
Original Animation	9-13
Osaifu-Keitai® [Section Contents].....	16-1
Other Documents folder.....	9-3
Outgoing Call Logs	2-13
Outside Camera	6-2

P	
Passwords	1-26
Passwords (Changing)	
Center Access Code	1-26
Phone Password	11-2
Security Code	2-21

PC Site Browser	14-2
Access.....	14-5
Display Settings	18-17
Memory Manager & Settings	18-17
Security Settings	18-18
Personal Data Lock.....	11-4
Phone Book [Section Contents].....	4-1
Phone Password	1-26
Changing	11-2
Photo mode	
Still images.....	6-3
Videos.....	6-4
Pictographs.....	3-4
Pictures (Still Images)	
Capturing	6-5
Editing	9-12
Pictures folder	9-2
PIN/PIN2	
Changing	11-2
PIN Authentication	11-2
PIN Lock & Cancellation (PUK)	11-3
Play Background.....	8-7
Play List	8-10
Play mode setting.....	8-6
Predictive Candidates.....	3-6
Preview Window	
Camera	6-3
Video Camera	6-4
Privacy Key Lock	11-4
Private Menu	1-23
PUK/PUK2	1-3, 11-3

Q	S	
QR Code.....	S! Addressbook Back-up.....	Security Functions 11-2
Quality	S! Appli [Section Contents]	Security level..... 15-4, 15-5
Still images.....	S! GPS Navi [Section Contents].....	Security Settings (Internet)..... 18-18
Videos.....	S! Loop	Server Mail 13-14
Quick Open Menu	S! Mail	Settings [Section Contents]..... 18-1
	Creating/sending.....	Shikkari Talk
	Mail Notice.....	Shortcuts
	Settings	Shutter sound
	Universal Settings	Side-keys Guard
	S! Quick News	Signal Strength..... 1-9, 1-11
	Settings	Simple Menu..... 1-24
	S! Town	SMC files..... 8-2
	Save	SMS..... 13-2
	Alarms	Creating/sending
	Calendar	Settings
	Notepad	Universal Settings
	Phone Book	Snooze
	S! Quick News	SoftBank Utility Software
	Shortcut Icons	Softkeys.....ix
	Still Images.....	Software Update
	User's Dictionary	Sort (Messages)..... 13-20
	Videos.....	Spam Filter
	Saved Pages.....	Speaker ON/OFF
	Script.....	SSL..... 14-3
	Scroll Unit.....	Still Images (Picture)
	SD Audio.....	Capturing
	Secret Data Only.....	Editing
	Secret Mode	Streaming..... 14-12
	Secure Remote Lock	Symbols
	Security Code	Symbol List..... 19-17

T	
Tasks	12-6
Templates (Graphic Mail).....	13-5
Text Entry [Section Contents]	3-1
Time Correction	18-8
Timer Lock at Close	11-5
TLS	14-3
Trimming (Editing Still Images)	9-12

U	
URL History	
PC Site Browser.....	14-5
Yahoo! Keitai.....	14-4
USB	10-11
User Mode	18-6
User's Dictionary	3-10
USIM Card.....	1-2
USIM Card Phone Book	4-3
USIM PINs	1-3

V	
Vibrator	
Incoming alert	18-2
S! Appli.....	18-19
Videos (Recording)	6-6
Videos folder	9-3
View Blind	1-28
Voice Announce	12-10
Voice Dial.....	4-14
Voice Mail.....	2-18
Voice Recorder.....	12-10
Volume	
Ringtone	18-2
S! Appli.....	18-19
Video Calls	2-7
Voice Calls	2-5

W	
Wallpaper	9-7, 18-3
Warning Messages (PC Site Browser) ...	18-17
Warranty.....	19-31
White balance	
Still Images.....	6-3, 6-8
Videos.....	6-4, 6-8
WMA Files.....	8-4
World Clock	18-8

Y	
Yahoo! Keitai	14-2
Access.....	14-3
Display Settings	18-17
Memory Manager & Settings	18-17
Security Settings	18-18

Z	
Zoom.....	6-6

Warranty & Service

Warranty

Warranty is provided when you purchase a 930P.

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

SoftBank is not liable for any damage resulting from use of this product.

After-Sales Service

See "Troubleshooting" (🔍P.19-9) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Customer Center, Customer Assistance (📞P.19-32) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.

Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.

SoftBank Customer Centers

From a SoftBank handset, dial toll free at
**157 for General Information or
113 for Customer Assistance**

SoftBank Global Call Center

From outside Japan, dial **+81-3-5351-3491**
(Please take care to dial the correct number. International
charges will apply to this call.)

Call these numbers toll free from landlines.

Subscription Area	Service Center	Toll Free Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information	0088-240-157
	Customer Assistance	0088-240-113
Aichi, Gifu, Mie, Shizuoka	General Information	0088-241-157
	Customer Assistance	0088-241-113
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information	0088-242-157
	Customer Assistance	0088-242-113
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information	0088-250-157
	Customer Assistance	0088-250-113