

Managing Files

Data Folder	10-2
Data Folder Structure.....	10-2
Opening Files.....	10-4
Viewing & Playing Files.....	10-4
Copy Protected Files.....	10-5
Options.....	10-6
Using/Editing Still Images	10-11
Editing Still Images.....	10-11
Creating Animations.....	10-12
Saving Still Images to Phone Book.....	10-13
Playing Videos	10-13
Playing Videos/PC Movies	10-13
Playing Videos Recorded on HDD Recorder.....	10-14
File Playback Functions.....	10-15
Managing Folders/Files	10-16
Managing Folders.....	10-16
Using Play List.....	10-17
microSD Card.....	10-18
microSD Card Installation	10-19
Format microSD Card	10-20
Viewing microSD Card Files	10-20
Handset Data Backup.....	10-21
PC File Transfers	10-22
microSD Card Functions.....	10-23
Picture Album	10-24
Viewing Still Images	10-24
Slideshow	10-27
Editing Still Images	10-28

Data Folder

Save, play and manage files downloaded from Internet, etc.

- Save still images/videos captured by Camera, downloaded data or data copied/moved from SoftBank handset to microSD Card.

Data Folder Structure

Folder		Function/Saved Data	File Format ¹
Pictures²	Download Pictures	Connect to download site	JPEG, GIF (.gif including Interlaced GIF), GIF Pictogram Package File (.gpk), SWF (.swf Flash Animation), PNG (.png including Interlaced PNG)
	Picture Album	Activate Picture Album	
	Main Folder	Downloaded still images, etc.	
	Camera	Still images captured by Camera, etc.	
	My Pictograms	Download My Pict.	
		お気に入り	
		顔文字, 装飾, etc.	
	Mail Art	Mail Art (download)	
	Pre-installed	Preinstalled still images	
	Handwriting	Handwt Photo/Memo	
		Template	
		Handwriting Diary	
	Original Animation	Display still images continuously	
Ring Songs&Tones²	DL Ring Songs&Tones	Connect to download site	SMF, SP-MIDI, AMR, SMAF and MPEG-4 formatted files (.mid, .midi, .amr, .mmf, .3gp, .mp4)
	Main Folder	Downloaded ring songs/tones, etc.	
	Pre-installed	Preinstalled ring songs/tones	
	Voice Announce	Data recorded by Voice Announce	
	Play List	Play back Play List	
S! Appli²	Download S! Appli	Connect to download site	—
Widget²	Download Widget	Connect to download site	WGT (.wgt), SWGT (.swgt)
Music	Main Folder ²	Download Music	MP4, SMC, WMA (.3gp, .mp4, .smc, .wma)
		Initial Folder	
	WMA ³	WMA Files transferred from PC	

Folder		Function/Saved Data	File Format ¹
Videos²	Download Videos	Connect to download site	MP4 (including .mp4, .3gp, SDV), ASF (.asf)
	Main Folder	Downloaded video files, etc.	
	Camera	Video files recorded by Camera	
	Pre-installed	Preinstalled video files	
	BD/DVD Recorder ³	Videos transferred from HDD Recorder	
	Play List	Play back Play List	
PC Movies	Position Memory	Play back video files from saved resume position	WMA (.wma), WMV (.wmv), ASF (.asf)
	microSD ³	PC movie files saved from PCs	
	Position Memory	Play PC movie files from a saved resume position	
TV	Play History	Select a file from playback history	JPEG (.jpg) TOD (.tod), MOI (.moi), MAI (.mai), PGI (.pgi)
	Image	Still images recorded by Digital TV	
	Video ³	Programs recorded on handset	
Lifestyle-Appli	Position Memory	Play back video files from saved resume position	—
	Download	Connect to download site (Osaifu-Keitai®: P.13-9)	
Books²	Download Books	Connect to download site	CCF (.ccf), XMDf (.zbf, .zbp, .zbs), BMO (.bmo)
	Download	Connect to download site	
Customized Screen²	Customized Screen	Connect to download site	CUSR (.xcfs)
Templates	Download Templates	Connect to download site	—
Font	Download Font	Connect to download site	MTF (.mtf)
	Main Folder	Downloaded fonts	
	Pre-installed	Pre-installed fonts	
Other Documents²	Main Folder	Incompatible files attached to mail ⁴	—

¹ Some copy protected files have extensions different from above.

² When microSD Card is installed, press [microSD] in folder list to view data saved in microSD Card.

³ Available only when microSD Card is inserted.

⁴ Some attachment files cannot be saved in Other Documents.

Opening Files

Viewing & Playing Files

Main Menu ► Data Folder

- 1 Select a folder
 - In folder list, press [Phone]/[microSD] to toggle handset folder and microSD Card folder.



Pictures Folder

- 2 Select a folder → Select a file
File appears/plays.
 - To toggle list/thumbnail view:
 [Change]



Still Image List Window

When Shortcut to a Download Site is Selected

Handset connects to a download site on Internet.

Enlarge Still Images

> Main Menu ► Data Folder ► Pictures ► Select a folder ► Select a file ► [Menu] ► Display size ► Fit in display









Operations while Playing Files from Ring Songs&Tones

Stop	[Stop]
Volume	
Attach to messages	[]

Copy Protected Files

Playing/forwarding/saving may be restricted and Content Key may be required for usage.

If Content Key is expired, obtain a new Key to use file.

-  or  (Silver) appears for copy protected files requiring Content Keys.  files are accessible.  files are inaccessible. In Thumbnail view,  appears for expired files ( appears for Books file).
- When deleting  files, or selecting all/multiple files in a folder to delete, confirmation appears asking whether to delete corresponding Content Key. Other files requiring same Content Key may become unusable.
- See File Properties to confirm restrictions such as expiry term or usage limitation (Options:  P.10-6)
- 942P holds up to 1000 Content Keys. Multiple Keys may be required to use a file.
- Interrupted playback (by incoming calls or Alarm) of copy protected WMA files with limited usage in Data Folder is also counted as one usage.


Using Copy Protected Files

- Files downloaded on handset cannot be used on PCs.
- Network setting may be required for usage.
- File usage may require insertion of USIM Card in use at time of download.
- When set as wallpaper or ringtone, settings may return to defaults if license has expired or different USIM Card is inserted.
- Limited use files cannot be set as wallpaper or ringtone.

Obtaining Content Key

If Content Key is expired, a message appears when the file is opened. To obtain a new Key, select **YES**. Handset connects to Content Key site.

Note

- Alternatively, obtain Content Key as follows: Highlight a file →  [Menu] → **Take contents key** → **YES**
- Depending on contents, some Content Keys may not be obtained from websites even when warning for expired contents appears.
- When 1000 Content Keys have been saved, a message appears. Delete old Keys; otherwise downloads may fail (Transmission fees apply).

Tip


 





- Back Up Content Key ( P.10-24)



Options


Highlight a file in Data Folder →  [Menu] for the following operations.

- Some functions may not be available depending on files.

Pictures





Item	Operation/Description
Edit picture	Edit files ( P.10-11)
Display picture	Open files
Set display*	Set as wallpaper, Phone Book image, Menu Icons, etc. > Select an item ● ★ appears for item.
Picture info	Show file name, file size, etc.
Attach to message	Attach files to S! Mail/PC Mail ( From Step 2 on P.14-4)
Graphic mail	Add selected files to Graphic Mail ( P.14-10)
Post blog	Post file on a blog ( P.8-7)
Send Ir data	Send files via Infrared ( P.11-3)
IC transmission	Send files via IC transmission ( P.11-5)
Add shortcut icon	Create shortcuts ( P.1-21)
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Positioning	Set where to paste files in Standby > Select a position

Item	Operation/Description
Edit file name	Edit file names
Move	Move files to other folders
Slideshow	Show files in a folder continuously. Select display speed > Normal or Slow
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use →  [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Pictures/ File names	Toggle list views ● Alternatively,  [Change] to toggle
Take contents key	Connect to site for Content Key

* Before setting a file as Video Call related item (except for Incoming/Outgoing Video Calls), set Select Images ( P.18-12) to **Original**.

- If incoming calls arrive or handset is turned off while My Pictograms package file (.gpk) is being uncompressed, some pictograms in package file may not open. Retry uncompressing.

 Tip

- Enlarge Still Images ( P.10-4)
- Editing Still Images ( P.10-11)
- Creating Animations ( P.10-12)
- Saving Still Images to Phone Book ( P.10-13)

Ring Songs&Tones

Item	Operation/Description
Edit file name	Edit file names
Play melody	Play back files
Set as ring tone	<ul style="list-style-type: none"> > Select a ringtone ● ★ appears for item.
Add shortcut icon	Create shortcuts (👉 P.1-21)
Attach to message	Attach files to S! Mail/PC Mail (👉 From Step 2 on P.14-4)
Send Ir data	Send files via Infrared (👉 P.11-3)
IC transmission	Send files via IC transmission (👉 P.11-5)
Copy to microSD	Copy files to microSD Card
Song-Tone info	Show titles, file names, etc.
Memory Status	Show memory information
Delete	<ul style="list-style-type: none"> > Select an item <ul style="list-style-type: none"> · Delete this → YES · Delete select → Check files to delete → [Finish] → YES · Delete all → Enter Phone Password → YES
Sort	Change display order of files > Select an order
Move	Move files to other folders
Move to microSD	Move files to microSD Card
Take contents key	Connect to site for Content Key

S! Appli/Lifestyle-Appli

Item	Operation/Description
Start	Activate S! Appli or Lifestyle-Appli
Security level	Set security level (👉 P.16-4)
S! Appli info	Show file names, file sizes, etc.
Add shortcut icon	Create shortcuts (👉 P.1-21)
Move to microSD	Move files to microSD Card (Lifestyle-Appli cannot be moved)
Delete	Delete a file > YES

Widget

- See "Functions Available in Widget List" (👉 P.7-4)

Music

- See "Functions Available in Chaku-Uta Full®/WMA File List" (👉 P.9-9)

Videos

Item	Operation/Description
Register	Set as ringtones, Standby Display or Start-up display > Select an item
Video info	Show titles, file names, etc.
Attach to message	Attach files to S! Mail/PC Mail (📎 From Step 2 on P.14-4)
Post blog	Post file on a blog (📎 P.8-7)
Send Ir data	Send files via Infrared (📎 P.11-3)
IC transmission	Send files via IC transmission (📎 P.11-5)
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Move	Move files to other folders
Add shortcut icon	Create shortcuts (📎 P.1-21)
Edit file name	Edit file names
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use → [X] [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order

Item	Operation/Description
Listing	Change list view > Title or Title + Image ● To toggle views: [📷] [Change]
Take contents key	Connect to site for Content Key

PC Movies

Item	Operation/Description
Contents info	Show titles, file names, etc.
Move	Move files to other folders
Copy	Copy files to other folders
Multiple-choice	Select multiple files to use > Check files to use → [X] [Menu] → Select an item
Comment view	Show descriptions
Memory Status	Show memory information
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES

TV



- See Pictures folder for still images.

Item	Operation/Description
Edit title	Edit titles
Video info	Show titles, channel names, etc.
Add shortcut icon	Create shortcuts (📌 P.1-21)
Delete	<ul style="list-style-type: none"> > Select an item <ul style="list-style-type: none"> · Delete this → YES · Delete selected → Check files to delete → [Finish] → YES · Delete all → Enter Phone Password → YES
Memory Status	Show memory information
Listing	Change list view > Title or Title + Image ● To toggle views: [Change]


Books

Item	Operation/Description
Play	Play back files
Connect to Website	Open site link
Book info	Show file names, file sizes, etc.
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Add folder	Add folders
Edit file name	Edit file names
Move	Move files to other folders
Take contents key	Connect to site for Content Key
Delete	Delete files > YES



Customized Screen

Item	Operation/Description
Preview	Preview files
Collective Setting	Set Customized Screen all at once > YES
File info	Show titles, file names, etc.
Copy to microSD	Copy files to microSD Card
Move to microSD	Move files to microSD Card
Edit file name	Edit file names
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use →  [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view > Title or Image ● To toggle views:  [Change]
Take contents key	Connect to site for Content Key
Connect to Website	Open site link


Templates

Item	Operation/Description
Compose S! Mail	Load selected template to create Graphic Mail (✉ Step 2 to 4 on P. 14-4, from Step 2 on P.14-6)
Edit title	Edit titles
Template info	Show title and file size
Delete this	> YES
Delete selected	> Check files to delete →  [Finish] → YES
Delete All	> Enter Phone Password → YES

Font

Item	Operation/Description
Set	Apply selected font
File info	Show file names, file sizes, etc.
Edit title	Edit titles
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use →  [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order
Listing	Change list view > Title or Image ● To toggle views:  [Change]

 Other Documents

Item	Operation/Description
File info	Show file names, file sizes, etc.
Attach to message	Attach files to S! Mail/PC Mail (✉ From Step 2 on P.14-4)
Copy to microSD	Copy files to microSD Card
Edit file name	Edit file names
Move	Move files to other folders
Delete this	Delete a file > YES
Delete all	Delete all files > Enter Phone Password → YES
Multiple-choice	Select multiple files to use > Check files to use →  [Menu] → Select an item
Memory Status	Show memory information
Sort	Change display order of files > Select an order

Note



- Titles of mp4/3gp Ring Songs&Tones files and Videos/Music/Customized Screen files appear in respective lists. Files without titles appear with file names (created when files are saved to handset). Titles cannot be changed; edited file names may not appear in lists.













Using/Editing Still Images

Editing Still Images

- Edit features are not available for all file types.

Main Menu ► Data Folder ► Pictures

- Select a folder → Select a file →  [Menu] → **Edit picture**
-  [Menu] → Select an item (See below)

Item	Operation/Description
Marker stamp	> Select a stamp →  to move stamp →  [Put] <ul style="list-style-type: none"> Following options are available when positioning a stamp: <ul style="list-style-type: none"> To rotate or scale up/down:  [Menu] → Select an item To start over:  [Cancel] To add:  [Add]
Frame	> Select a frame <ul style="list-style-type: none"> To rotate 180 degrees:  [Menu] → 180° rotation To change frame:  To return to frame list:  [Cancel]
Character stamp	> Enter text →  to move text →  [Put] <ul style="list-style-type: none"> To change content/color/font/size: When positioning stamp,  [Menu] → Select an item → Operate selected item To start over:  [Cancel] after positioning

Item	Operation/Description
Fit in screen	Change image size to Stand-by(480x854) > YES
Change size	> Select a size ● To start over: [Cancel]
Trim away	> Specify a size → to specify area → [Set] ● To start over: [Cancel]
Retouch	> Select an item ● To start over: [Cancel]
Rotate	> 90° to right, 90° to left or 180° ● To start over: [Cancel]
Brightness	> to adjust brightness
Attach to message ^{1 2}	Attach edited file to S! Mail/PC Mail > [Set] → Compose message (👉 From Step 2 on P.14-4) ● Alternatively, [] to attach image to a message
Post blog ^{1 2}	Post on a blog > [Set] → Post on a blog (👉 P.8-7)
Save ¹	Overwrite/rename to save edited files

¹ Available after other editing operations.

² File is automatically saved.

3 [Set] → [Save]

4 **YES** (Overwrite) or **NO** (Save as)

Creating Animations

Saving Original Animation

Main Menu ▶ Data Folder ▶ Pictures ▶ Original Animation

1 <New> → <1st> to <20th>

2 Select a folder → Select a file
● Repeat Step 2.

3 [Finish]

Functions Available in Original Animation List

In Original Animation list, press [Menu] for following operations.

Item	Operation/Description
Edit title	Edit titles
Org. animation	Add more files to an Original Animation (👉 Above)
Display picture	Play back an Original Animation ● Alternatively, select an Original Animation from list to play back.
Set display	Set an Original Animation as Standby display, etc. > Select an item
Picture info	View item set for Set display
Release animation	Cancel a saved Original Animation > YES

Saving Still Images to Phone Book

- Savable sizes:
 - Stand-by(480x854) or smaller in JPEG or GIF format (up to 300 KB)
 - VGA(640x480) or smaller in PNG format
- Save images to up to 100 Phone Book entries.
- Still images cannot be saved to USIM Card Phone Book entries.

Main Menu ► Data Folder ► Pictures

- 1 Select a folder → Select a file → [Menu] → **Set display** → **Phone Book**
- 2 **New Entry**
New → Enter details (→ From Step 2 on P.4-3) → [Finish]
Add to Existing Entry
Add → Select entry → [Select] → [Finish] → **YES**

Playing Videos

Playing Videos/PC Movies

Main Menu ► Data Folder

- 1 **Play Videos**
Videos → Select a folder → Select a file
Play PC Movies
PC Movies → **microSD** → Select a file
 - To toggle file list views: [Change]

■ Playback Operations

- Some operations are not available depending on files.
- Operation descriptions are based on Normal Position.

Adjust Volume	
Play Previous	<ul style="list-style-type: none"> ● When three seconds into the chapter, playback returns to beginning of current chapter.
Play Next	
Fast-rewind ¹	Press and hold
Fast-forward ¹	Press and hold
Playback Position ²	repeatedly
Change Speed	[/ /]
Mute/Resume	[/]
Pause/Resume	[/]

Play Frame by Frame¹	While pausing, [Frame] ● Play back frame by frame.
Toggle Views	 ● Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View ²
Toggle Remaster On/Off (P.9-8)	
Toggle Sound Effect (Listening) Modes (P.9-8)	
Toggle Equalizer Modes (P.9-8)	

¹ Videos only

² May be unavailable depending on image size.

Playing Videos Recorded on HDD Recorder

Transfer programs recorded on HDD recorder to microSD Card via USB cable (not included) for playback on handset.

- Set USB Mode (P.11-17) to **microSD Mode** before connecting handset to HDD recorder.
- For details about transferring videos, see HDD recorder manuals.
- Use Earphone Microphone for stereo sound. Use a Bluetooth® device for wireless audio output (P.11-10).

Main Menu ► **Data Folder** ► **Videos** ► **BD/DVD Recorder**

- 1 Select a file

Functions Available in Video Window

- Some functions may be unavailable depending on the file type.
- Operation descriptions are based on Portrait View.

Adjust Volume	
Play Previous Chapter	 ● When three seconds into the chapter, playback returns to beginning of current chapter.
Play Next Chapter	
Skip (Forward)	While playing/pausing, press and hold ● Skip about 30 seconds forward.
Skip (Rewind)	While playing/pausing, press and hold ● Skip about 10 seconds backward.
Fast-rewind	 ● To play back: [] ● Play back at normal speed during 10x fast-forward. Play back at 10x speed during 30x fast-forward.
Fast-forward	 ● To play back: [] ● Play back at normal speed during 10x fast-rewind. Play back at 10x speed during 30x fast-rewind.
Playback Position	repeatedly
Mute/Resume	[] / []
Pause/Resume	[/]
Toggle Views	 ● Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View

Toggle Remaster On/Off (P.9-8)	9
Toggle Sound Effect (Listening) Modes (P.9-8)	8
Toggle Equalizer Modes (P.9-8)	7

File Playback Functions

Play Back from a Resume Position

Resume playback (videos/PC Movies) from a saved position.

> **Main Menu** ► **Data Folder** ► **Videos** or **PC Movies**

► **Position Memory** ► Select an item

- Save a resume position: ⏮ Right
- **Marker to resume** is a resume position automatically saved when a call arrives, alarm goes off, battery runs low, or playback is terminated.

Play Back from Play History (PC Movies Only)

> **Main Menu** ► **Data folder** ► **PC Movies** ► **Play History**

► Select a record

Functions Available in Video/PC Movie Playback Window

- Some operations are not available depending on files.

> While playback is paused, [X] [Menu] → Select an item (See below)

Item	Operation/Description
Normal play ¹	Play at normal speed
Slow ¹	Play at slow speed
Quick View (1.25x) ¹	Play 1.25 times faster than normal
Quick View(2x) ¹	Play at double speed
Fast ²	Forward
Rewind ²	Rewind
Stop	Return to Videos/PC Movies List window
Position to play	Start playback from specified point > [] to highlight a play point → [] [Set]
Connect to Website ¹	Open site link > YES
Sound effect	Remaster, Listening or Equalizer (P.9-8)
Contents info ²	Show title, file name, etc.
Position memory	Save resume position > Select a resume position ● To play back from a saved position: ⏮ Left
Mail/blog ¹	Attach file to a message to send or post on a blog > Select an item · Attach to message (P.14-4) · Post blog (P.8-7)

Item	Operation/Description
Register (Ringtones)¹	Set as ringtone > Ringtones → Select a type ● ★ appears for item set as ringtone.
Register (Stand-by Display/ Start-up Window)¹	Save a file as Standby Display or Start-up Window > Select an item → YES
Video info¹	Show title, file name, etc.
Send Ir data¹	Send file via Infrared (📶 P.11-3)
IC transmission¹	Send file via IC transmission (📶 P.11-5)
Add shortcut icon¹	Create a shortcut (📌 P.1-21)
Description²	Show file information > The words view or Description view
Copy URL²	Copy URL
Display size	Select a display size > Actual size or Fit in display
Change to full¹	Toggle: Portrait View → Landscape View (fit to Display size) → Full-size Landscape View ³ ● To toggle views: 🖼️

¹ Video files only² PC movie files only³ May be unavailable depending on image size.

Managing Folders/Files

Managing Folders

The following operations are available in Pictures, Ring Songs&Tones, Music, Videos, Books and Other Documents.

Main Menu ► Data Folder

- 1 Select a folder → 📁 [Menu] → Select an item
(See below)

Item	Operation/Description
Add folder	Create user folders
Edit folder name	Edit user folder names
Delete folder	Delete a user folder > Enter Phone Password → YES → YES
Folder security¹	Hide files in folder unless Phone Password is entered > Enter Phone Password → YES 🔒 appears for folder. ● To cancel: Repeat the step
Delete all image²	> Enter Phone Password → YES → YES
Edit Play List³	Edit Play Lists
Release Play List³	Cancel edited Play Lists > YES

Item	Operation/Description
Select storage ⁴	Specify folders on microSD Card to save files to > YES <ul style="list-style-type: none"> ● Folders cannot be specified when saving Books files.
Memory Status ⁵	View memory capacity/number of saved files

¹ Pictures/Videos folders only

² Pictures folder only

³ Play List folder in Ring Songs&Tones folder only

⁴ microSD Card only

⁵ Music folder only

Using Play List

Use **Play List** to organize Data Folder Ring Songs&Tones/Videos files.

Select Ring Songs&Tones, Music or Videos folder files to create Play List links to each file in its original folder.

Creating Ring Songs&Tones Play Lists

Main Menu ► Data Folder ► Ring Songs&Tones

1 Highlight **Play List** →  [Menu] → **Edit Play List**

2 Select a number → Select a folder → Select a file
 ● Repeat Step 2.

3  [Finish]

■ Play Back Play List


> **Main Menu ► Data Folder ► Ring Songs&Tones ► Play List**

● Files are played back in the saved order.

■ Delete a File

> After Step 1, select a file → **Release this**

■ Delete All Files

> In Step 1,  [Menu] → **Release Play List** → **YES**

Note

- mp4/3gp files cannot be added to Play List except in Music Player Play List.

Creating Video Play Lists

Main Menu ▶ Data Folder ▶ Videos ▶ Play List

- 1 Select a Play List
- 2 Select a number → Select a folder → Select a file
 - Repeat Step 2.

3 [Finish]

■ Play Back Play Lists

> **Main Menu ▶ Data Folder ▶ Videos ▶ Play List ▶** Highlight a Play List → [Play]

- Files are played back in the saved order.

■ Delete Files

> After Step 1, (highlight a file →) [Menu] → *Delete this* or *DEL all from list* → YES

■ Change Order

> After Step 1, [Menu] → *Order to play* → Select a file → Select a target → [Finish] → [Finish]



microSD Card

- 942P is compatible with up to 2 GB commercial microSD Cards and up to 16 GB commercial microSDHC Cards (as of June 2010).
For information on memory card compatibility, visit the website below (Japanese). Note that microSD Cards not listed on the website may not function properly.
 - From Yahoo! Keitai
P-egg (as of June 2010)
Main Menu ▶ Yahoo! ▶ Bookmarks
▶ **Panasonic メーカーサイト** (P-egg)
 - From PC
<http://panasonic.jp/mobile/>
Not all operations are guaranteed by the microSD/microSDHC Cards listed.
- Format new microSD/microSDHC Cards for use with handset (P.10-20).

Note

 
- SoftBank is not liable for damages from accidental loss/alteration of microSD Card information. Keep a copy of Phone Book entries, etc. in a separate place.
- microSD Card has no write protect feature; there is a risk of accidental erasure/overwriting of files.
- Accessing data may take time when data size is large.

microSD Card Installation






- Turn off handset before inserting/removing microSD Card. (Remove Battery Cover:  P.xxiv/Battery Installation:  P.1-13)

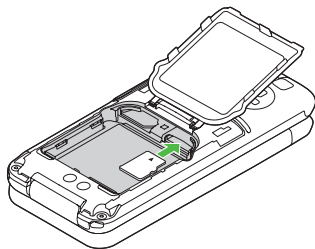Inserting

- 1 Insert microSD Card until it clicks



 
microSD Card Check

When microSD Card is installed correctly,  appears. If  appears, microSD Card cannot be used. Remove microSD Card from handset, and re-insert it. If  does not disappear, execute Check microSD ( P.10-23) or format microSD Card ( P.10-20).


- Display Indicator:  P.1-10

Removing

- 1 Push microSD Card in
 - microSD Card pops out with a light push.

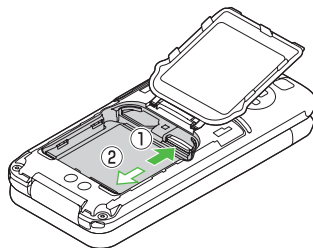


Note

- Do not turn off handset or remove battery/microSD Card when  appears. microSD Card may be damaged or files lost.
- microSD Card may pop out when inserting/removing it.

Format microSD Card

- Formatting microSD Card deletes all saved files/data.

Main Menu ► Tools ► microSD Backup

1  [Menu] → *microSD format*

2 Enter Phone Password → **YES**

Note

 
- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- microSD Cards formatted on other devices may not be used. Format microSD Card on 942P before use.
- Handset cannot format incompatible microSD Cards.
- If format fails, turn power off and remove microSD Card from handset. Reinsert microSD Card and format it again.

Viewing microSD Card Files

View Phone Book entries, Calendar events, Tasks, mail messages, Notepads and Bookmarks backed up on microSD Card.

Main Menu ► Tools ► microSD Backup


1 Select a category

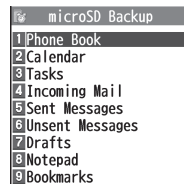

Category List

2 Select a file

 Backup date appears as file name.



File List

3 Select a data

 



Data List



Detailed Data

Note

- If messages on microSD Card do not appear correctly, copy messages to handset ( P.10-21) and execute Charset Conversion ( P.14-24).


Handset Data Backup

Back up handset data (Phone Book, Calendar, Tasks, Messages, Notepad, Bookmarks, Content Keys) to microSD Card; restore handset data after accidental loss/alteration.


- Back up Content Key: ☞ P.10-24

Backing up to microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Highlight a category →  [Menu] → **Copy to microSD** (→ For **Bookmarks**, select an item)
- 2 Enter Phone Password → **YES**
All files of selected category are backed up to microSD Card.

One File Backup


➤ Open a file →  [Menu] → **Copy to microSD** → **YES**

Restoring from microSD Card

Main Menu ► Tools ► microSD Backup

- 1 Select a category


2 Restore One Item

Select a file → Highlight an item →  [Menu] → **Add to phone**

Restore One File

Highlight a file →  [Menu] → **Add to phone** or **Overwrite to phone** → Enter Phone Password

Restore All Files

 [Menu] → **Add all to phone** or **Overwr. all to ph.** → Enter Phone Password

3 YES

Note

- Note that **Overwrite to phone** or **Overwr. all to ph.** erases all files of same category on handset.
- Video files of 100 MB or larger cannot be moved from microSD Card to handset.
- Files of 10 MB or larger except for Videos/Books files (.bmo) cannot be moved/copied from microSD Card to handset.
- Data backed up in other SoftBank handsets may not be restored in 942P depending on type and size.

Tip

- Delete Items from microSD Card ● View microSD Card Memory Capacity (☞ P.10-23)

PC File Transfers

Folder Structure

Files moved or copied from handset to microSD Card are organized as follows:

- Save files in folders by file type.

DCIM		
● Still images saved to microSD Card		
PRIVATE		
MYFOLDER		
Utility		
Calendar	Calendar.BCK	Calendar Backup files
Contacts	Contacts.BCK	Phone Book Backup files
Rights		Content Key Backup files
Tasks	Tasks.BCK	Tasks Backup files
Memo	Memo.BCK	Notepad Backup files
Mail		
Drafts	Drafts.BCK	Drafts Backup files
Inbox	Inbox.BCK	Incoming Mail Backup files
Outbox	Outbox.BCK	Unsent Messages Backup files
Sent Messages	Sent Messages.BCK	Sent Messages Backup files
My Items		
Book		E-comics, etc.
Bookmarks	Bookmarks.BCK	Bookmarks Backup files
Flash(R)		Flash® files

Games and More	S! Appli
Music	Sound files with .3gp, .mp4, .smc
Other Documents	Other files
Pictograms	My Pictograms
Pictures	Still images moved/copied from handset to Main Folder in microSD Card
Sounds & Ringtones	Sound files of: up to 10 MB with .3gp, .mp4, up to 300 KB with .mid, .midi, .amr
Videos	Videos moved/copied from handset to Main Folder in microSD Card
Widget	Widget contents
WMFile*	PC movie files saved from PC to microSD Card
SD VIDEO	
<ul style="list-style-type: none"> ● Videos saved to microSD Card ● Videos recorded from Digital TV or transferred from HDD recorder. 	

- Some copy protected files have extensions different from above.
- When moving/copying videos from microSD Card to handset, file format or file size may change.

* If WMFile does not appear in My Items (MYFOLDER), create and save a folder titled WMFile.

Using Data on microSD Card


With a microSD Card inserted, connect handset with a PC via USB cable (not included) to read/write data from/onto microSD Card.

Following equipment is required:

- Connector Cable: USB cable
- PC: PC with USB port (Universal Serial Bus Specification Rev 1.1/2.0 compliant)
- Compatible Operating Systems: Windows® XP, Windows Vista®, Windows® 7 (Japanese version in each)

Main Menu ▶ Settings ▶ Connectivity ▶ USB Mode ▶ microSD Mode

1 Connect handset to PC via USB cable while handset is on

- PC recognizes microSD Card.
-  appears in Standby (handset).

Note

- Even if incoming call arrives, reading/writing data continues during calls. After calls, check indicators on PC to see if reading/writing is complete.
- File names saved in microSD Card may not properly appear if changed on PC.

microSD Card Functions

■ Restore microSD Card items (Check microSD)

Use Check microSD to repair microSD Card data errors.

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu] ▶ Check microSD ▶ YES**

- Do not turn handset power off or remove microSD Card or battery while formatting; may damage handset or microSD Card.
- It may take 30 seconds or longer to complete Check microSD depending on data volume on microSD Card.
- Handset cannot check incompatible or unformatted microSD Cards.
- Handset may delete files and folders that fail to be restored.

■ Delete Items from microSD Card

> **Main Menu ▶ Tools ▶ microSD Backup ▶ Select a category ▶ (Highlight a file ▶)  [Menu] ▶ Delete this or Delete all (▶ For **Delete all**, enter Phone Password) ▶ YES**

- Content Key cannot be deleted.

■ View microSD Card Memory Capacity

> **Main Menu ▶ Tools ▶ microSD Backup ▶  [Menu] ▶ microSD info**

■ Back Up Content Key

Copy Content Keys to microSD Card from handset or to handset from microSD Card.

> **Main Menu** ► **Settings** ► **Security** ► **Content Key**

► **Copy to microSD** or **Copy from microSD** ► Enter Phone Password

- Content Keys with expiration dates or usage limits cannot be backed up.
- USIM Card inserted when Content Keys were moved to microSD Card must be inserted to move Content Keys from microSD Card.
- Some applications are not compatible with handset. Only Content Keys for compatible applications are backed up. Also, note that some keys are moved to microSD Card when backed up. Contact SoftBank Mobile Customer Center, General Information for more information (☞ P.19-33).
- Backing up Content Keys overwrites previously saved Content Key backup.

Picture Album

View still images in Pictures folder (Data Folder) using Picture Album. Slideshow is also available.

- Only JPEG files are supported by Picture Album.
- Operation descriptions are based on Viewer Position.

Viewing Still Images

1 [Grid] tab → **Data Folder** or **Camera** → **Pict. Album**

 
Folder list appears.

2 Tap a folder

File list appears.

3 Tap a file

File image appears.

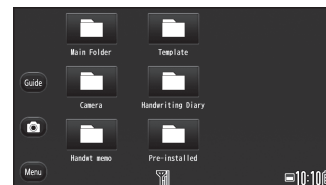


Folder List

Note


- In Normal Position, activate Picture Album from **Main Menu** ► **Data Folder** ► **Pictures** ► **Picture Album** or **Main Menu** ► **Camera** ► **Picture Album**
- When an SI Appli is paused, Picture Album cannot be activated.
- Copy protected files are not viewable.
- Connect handset to a TV (☞ P.11-18) and view images using Picture Album.

Picture Album Functions

 Tap icons to access functions. Follow onscreen instructions.

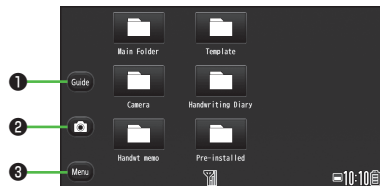

Folder List

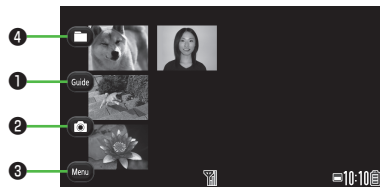 

File List

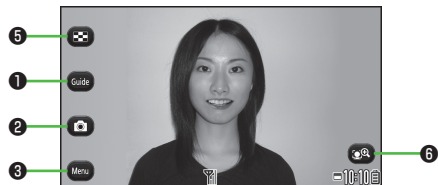





Image Window

	Item	Description
1	Guide	View operating instructions
2	Activate Camera-Touch ¹	Activate Camera in Digicam mode
3	Menu	View function menu
4	Folder List	View folder list
5	File List	View file list
6	Face Zoom ²	Zoom in on faces <ul style="list-style-type: none">When more than one face is detected, tap icon to zoom in on another face.

 
¹ Available only when Picture Album is activated by  in Digicam mode.



 ² Available only when faces are detected

Note

- Each tap in Image window toggles indicators on/off. (In Normal Position, press  [Icon].)
- Face Zoom may not be available depending on still image. Faces detected by Beauty plus ( P.10-29) may not correspond with those detected by Face zoom.

■ From Folder/File List Window


In folder/file list, tap  for following operations. Follow onscreen instructions.


 
 


Item	Operation/Description
Slideshow	Start slideshow ( P.10-27)
Kisekae¹	Change theme for folder list
Categorize²	Categorize still images ( Right)

¹ Folder list only

² File list only

■ From Image Window

In Image Window, tap  for following functions. Follow onscreen instructions.

Item	Operation/Description
Slideshow	Start slideshow ( P.10-27)
Zoom	Enlarge to 200% ( P.10-27)
Rotate	Each press rotates image 90° clockwise
ATCHtoMail	Send file via S! Mail ( From Step 2 on P.14-4)
Post blog	Post file to a blog ( P.8-7)
Effect	Set slideshow effects
Delete	Delete file
Edit picture	Edit still images ( P.10-28)
Set display	Set as wallpaper

Note

- Some files may not appear right side up when posted to a blog.

■ Categorize Still Images

Still images captured in Digicam mode are categorized according to file properties.

> In file list, tap  → **Categorize** → Select an item (See below)

Item	Operation/Description
Date	Sort still images into folders by date <ul style="list-style-type: none"> ● When more than 12 images captured on the same day exist, files are sorted by time.
Scene	Show still images categorized by specified content > Select a category
Color	Show still images categorized by specified color > Select a color
AutoShutter	Show still images categorized by specified Auto shutter setting > Select an item

- To undo: 

Note

- File properties on still images cannot be changed and still images with no file properties cannot be categorized.
- It may take some time for process depending on number of files. Some still images may not be categorized.
- When editing a categorized still image, confirmation appears asking whether to delete category information. Edited still images cannot be categorized.
- Files may not be categorized by properties.

Scroll Page/Screen

- Slide left/right to scroll files in file list.
- Slide left/right to scroll images in Image window.



Zoom

> In Image window, **Menu** → **Zoom** → Adjust Slide Lever



- To cancel: **CLR**

Note

- In Normal Position, press **[Zoom]** → **#** / ***** to zoom in/out Image window. To undo, press **[Return]**.

Slideshow

View files in succession.

- 1 **Grid** tab → **Data Folder** or **Camera** → **Pict. Album**
- 2 **View All Images**
Menu → **Slideshow**

View Selected Folder

Select a folder → **Menu** → **Slideshow**
Slideshow starts.

Slideshow Operations

Tap **Display** during slideshow to pause and open menu. Follow onscreen instructions.



Change Slideshow Settings

Tap **Settings** while Slideshow is paused to access the following. Follow onscreen instructions.

Item	Operation/Description
Time	Set slide display time
Effect	Set transition effects
Face zoom	Zoom in on faces
Random	Shuffle files
Repeat	Repeat slideshow

Note

- Face zoom may not be available depending on still image. Faces detected by Beauty plus (P.10-29) may not correspond with those detected by Face zoom.

Editing Still Images

- 1 tab → **Data Folder** or **Camera** → **Pict. Album**
- 2 Select a folder → Select a file
- 3 → **Edit picture** → Select an item (See below)

Item	Operation/Description
S-resolution	<p>> Select an item</p> <ul style="list-style-type: none"> • Actual size: Enhance image quality without affecting file size. Select from between QCIF(144x176) and 3M(1536x2048). Tap to compare to original image. • Stand-by: Enlarge images without affecting image quality and aspect ratio. Select from between QCIF(144x176) and less than VGA(480x640). Selected image can be enlarged up to Stand-by(480x854) size. • Print: Enlarge images without affecting file size, image quality and aspect ratio. Select from between VGA(480x640) and less than 2M(1200x1600). Selected image can be enlarged up to 1200x1920 pixels.

Item	Operation/Description
Shade correct.	Compensate for dark images from QCIF(144x176) to 13M(3120x4160). Images larger than 3M(1536x2048) are reduced to 3M(1536x2048) or less.
Beauty plus	<p>Detects up to five faces for photo correction. Available for images up to 13M(3120x4160), but images larger than Stand-by(480x854) are reduced to Stand-by(480x854) or less.</p> <p>> Select face</p> <ul style="list-style-type: none"> When more than one face is detected: Next Face → Select another face To compare to original image: Compare / Return
Handwt memo	Add pictures/text/decoration (P.3-11). Available for images up to 13M(3120x4160), but images larger than Stand-by(480x854) are reduced to Stand-by(480x854) or less.

4 **Save** → **OK**

- To exit without saving: **Cancel**

Note

- If you rotate image in Picture Album, the image returns to original orientation for editing. However, if image is larger in rotated view, image does not return to original orientation and the edited image is saved as is.

