

<b>Getting Started .....</b>	<b>15-2</b>
<b>Using Yahoo! Keitai .....</b>	<b>15-4</b>
Opening Yahoo! Keitai Menu .....	15-4
Web Search .....	15-4
Entering URL .....	15-4
Using Access Histories .....	15-5
Exiting Mobile Internet .....	15-5
<b>Browsing PC Sites .....</b>	<b>15-5</b>
Opening Menu .....	15-5
Web Search .....	15-6
Entering URL .....	15-6
Using Access Histories .....	15-6
Exiting Internet .....	15-6
<b>Basic Operations .....</b>	<b>15-7</b>
Using Cursor .....	15-7
Text Entry & Item Selection .....	15-8
<b>Using Information .....</b>	<b>15-9</b>
Bookmarks & Saved Pages .....	15-9
Managing Bookmarks & Saved Pages .....	15-10
Bookmarks/Saved Pages Functions .....	15-11
Downloading Image/Sound Files .....	15-12
Using Number, Address or URL .....	15-12
Streaming .....	15-13
<b>Option Menu Items .....</b>	<b>15-14</b>

## Getting Started

Access Yahoo! Keitai Mobile Internet and PC sites.

"Yahoo! Keitai" is both a SoftBank Mobile Internet service and the SoftBank Mobile Internet portal.

View PC Internet websites via PC Site Browser and Direct Browser.

### Internet

#### Yahoo! Keitai

- View Mobile Internet Websites (☞ P.15-4)
- Download image/sound files, etc. (☞ P.15-12)
- Movies/Music Streaming (☞ P.15-13)
- Register S! Quick News (☞ P.8-5)

#### PC Site Browser/Direct Browser

- View PC Sites (☞ P.15-5)
- Download still images (☞ P.15-12)

- Separate subscription is required for Network access.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

### Connecting Via Wi-Fi

Once connection setup is complete, handset automatically connects to that Wi-Fi network when within range.

- Wi-Fi: ☞ P.11-11
- Switch to 3G from Wi-Fi: ☞ P.15-14

#### Note

- Video Calls cannot be received while connecting to the Network.

## Cache Memory

Retrieved information is temporarily saved in Cache Memory.

When full, oldest is deleted first.

- Previously viewed pages may load from Cache Memory. To view the latest, update information (☞ P.15-14).
- Cached items with expiry dates are deleted upon expiry.
- Information remains even after handset is disconnected from the Network or handset power is turned off.

### Tip

#### Settings

- Clear Cache ● Delete Cookies (☞ P.18-23)
- Initialize Browser (☞ P.18-24)

## SSL/TLS

SSL (Secure Sockets Layer) and TLS (Transport Layer Security) are encryption protocols for secure Internet transmissions of important/sensitive information such as credit card numbers.

Server certificates are saved on handset (☞ P.18-24).

### Notes

When a security notice appears, subscribers must decide for themselves whether or not to open the page. SOFTBANK MOBILE Corp., VeriSign Japan K.K., Cybertrust Japan Co., Ltd., Entrust Japan Co.,Ltd., GlobalSign K.K., RSA Security Inc. and SECOM Trust Systems Co., Ltd. cannot be held liable for any damages associated with the use of SSL and TLS.

### Tip

#### Settings

- Security Settings (☞ P.18-24)

# Using Yahoo! Keitai

## Opening Yahoo! Keitai Menu

Select Yahoo! Keitai Menu items to access websites.

Main Menu ► Yahoo!

1 Open Top Menu  
*Yahoo! Keitai*

Open Menu List  
*Menu List*

2 Select a menu item

- Repeat Step 2 as required.
- Basic Operations: P.15-7

### Note

- Shortcut: In Standby,
- Alternatively, press or in Yahoo! Keitai/PC Site Browser/Direct Browser top menu to switch browser menus.

## Web Search

Enter text directly to search.

Main Menu ► Yahoo! ► Web Search

1 Enter text → [OK]

## Entering URL

Enter URLs (addresses beginning with "http://" or "https://") directly to access websites, or open previously viewed pages using URL histories.

- Up to 20 URL histories are stored.

Main Menu ► Yahoo! ► Enter URL

1 Enter URL Directly  
*Direct Entry* → Enter URL

Use URL History

*URL History List* →

Select a URL



URL History List  
Window

■ Delete URL Histories

> In Step 1, *URL History List* → (Highlight a URL →) [Menu] →  
*Delete* or *Delete All* → YES

## Using Access Histories

Open previously viewed pages using access histories.

- Up to 100 access histories are stored. (The number of savable histories varies depending on data amount.)

Main Menu ▶ Yahoo! ▶ History

1 Select a history



History Window

### Delete Access Histories

> In Step 1, (highlight a history →) [Menu] → *Delete* or *Delete All* → *YES* (→ For *Delete All*, enter Phone Password)

### Show Access History URLs

> In Step 1, highlight a history → [Menu] → *Display URL*

## Exiting Mobile Internet

1 → *YES*

#### Note

- Closing handset does not affect active browser.

## Browsing PC Sites

View PC websites using PC Site Browser or Direct Browser.

- When PC Site Browser is active, appears.
- Some pages may not be viewable.
- Viewing PC websites via PC Site Browser may incur high charges.

## Opening Menu

Main Menu ▶ Yahoo! ▶ PC Site Browser or Direct Browser

1 *Homepage*

For PC Site Browser, confirmation appears. Select *NO*.

- To show confirmation each time: *YES*

2 Select a menu item

Repeat Step 2 as required.

#### Note

- Alternatively, press or in Yahoo! Keitai/PC Site Browser/Direct Browser top menu to switch to browser menu.

#### Tip

- Settings** ● Show/Hide Warning Messages when Activating PC Site Browser or Switching to Yahoo! Keitai ( P.18-23)

## Web Search

Enter text directly to search.

Main Menu ► Yahoo! ► PC Site Browser or Direct Browser  
► Web Search

1 Enter text

## Entering URL

Follow same operation accessed from Yahoo! Keitai.

Main Menu ► Yahoo! ► PC Site Browser or Direct Browser  
► Enter URL

- Follow Step 1 of same operation accessed from Yahoo! Keitai (☞ P.15-4).

## Using Access Histories

Follow same operation accessed from Yahoo! Keitai.

Main Menu ► Yahoo! ► PC Site Browser or Direct Browser  
► History

- Follow Step 1 of same operation accessed from Yahoo! Keitai (☞ P.15-5).

## Exiting Internet

1  → YES












### Note

- Closing handset does not affect active browser.

# Basic Operations

## Using Cursor

- Operation descriptions are based on Portrait View.

<b>Move Cursor</b>	Use cursor to select underlined menu items.  to move right  to move left  to move to previous line  to move to next line
<b>Scroll Pages</b>	Scroll bar appears on right side or at bottom of Display when page content continues beyond view.  scroll up/down  scroll left/right  scroll page up by a screenful  scroll page down by a screenful ● To scroll continuously, press and hold above keys.
<b>Move to previous page/ next page</b>	Previously viewed pages are temporarily saved in Cache Memory (  P.15-3).  <b>[Back]</b> : Return to previous page  <b>[Menu]</b> → <b>Forward</b> : View next page ● Some web pages may not appear after performing the steps above.

## When Authentication is Required

Some pages require user authentication for access.

If required, enter user ID or password.

### Tip

### Settings

 


- Font Size
- Scroll Unit
- Images On/Off
- Sound On/Off
- Delete User ID or Password Entered when Authentication is Required ( P.18-23)

## Text Entry & Item Selection

Enter text or select items to send information.

Example:

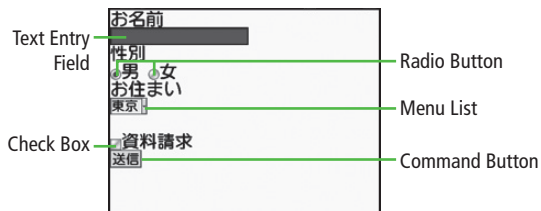

- Actual web pages may differ in appearance.

<b>Text Entry Field</b>	Highlight field → <input type="text"/> → Enter text → <input type="text"/>
<b>Menu List</b>	Highlight field → <input type="text"/> Menu list appears. Highlight an item → <input type="text"/> Selected items are highlighted.
<b>Radio Button</b>	Highlight <input type="radio"/> → <input checked="" type="radio"/> When selected, <input checked="" type="radio"/> appears.
<b>Check Box</b>	Highlight <input type="checkbox"/> → <input checked="" type="checkbox"/> When selected, <input checked="" type="checkbox"/> appears. Press <input checked="" type="checkbox"/> again to cancel selection.
<b>Command Button</b>	Highlight the button → <input type="button"/> Corresponding command is executed.



# Using Information

## Bookmarks & Saved Pages

Bookmark websites or save page content to Saved Pages.

- Some copy protected materials cannot be saved.

Bookmarks	Save links to websites. Handset connects to the Network to open the link.
Saved Pages	Save page content. Handset opens saved pages without connecting to the Network.

## Saving Web Pages

1 Open a web page → [Menu] → **Bookmarks** or **Saved Pages** → **Add**

2 Select title → Edit title

3 **OK** → **OK**

### Save URLs to Bookmarks

 
- > **Main Menu** ▶ **Yahoo!** (▶ **PC Site Browser** or **Direct Browser**)
  - ▶ **Bookmarks** ▶ [Menu] ▶ **Create New** ▶ **Bookmarks**
  - ▶ Enter a title or URL ▶ **OK**

## Viewing Bookmarks & Saved Pages


**Main Menu** ▶ **Yahoo!** (▶ **PC Site Browser** or **Direct Browser**)

1 **Bookmarks** or **Saved Pages** → Select an item

Example: Yahoo! Keitai

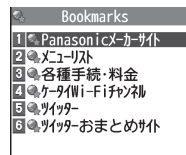

Bookmarks List Window

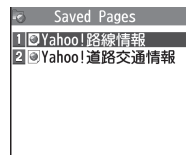 

Saved Pages List Window

### Open Bookmarks/Saved Pages in Web Page

> Open a web page → [Menu] → **Bookmarks** or **Saved Pages** → **View List**

#### Note

- Create folders in Bookmarks/Saved Pages List to organize Bookmarks/Saved Pages (☞ P.15-10).

#### Tip

- Send Bookmarks via Infrared (☞ P.11-3)
- Send Bookmarks via IC Transmission (☞ P.11-5)

## Managing Bookmarks & Saved Pages

Follow the steps below to open Bookmarks or Saved Pages list:

**Main Menu** ► **Yahoo!** (► **PC Site Browser** or **Direct Browser**) ► **Bookmarks** or **Saved Pages**

### Note

- When a different USIM Card is inserted, Saved Pages do not appear or title name cannot be changed.

## Creating New Bookmarks/Saved Pages Folders

- Folders cannot be created within existing folders.

- 1 Bookmarks**  
[Y?] [Menu] → *Create New* → *Folders*
- Saved Pages**  
[Y?] [Menu] → *New Folder*
- 2** Enter title → *OK*


## Moving Bookmarks/Saved Pages to Folder



 




- 1** Highlight a bookmark/saved page → [Y?] [Menu] → *Move to* → *Move*
  - 2** Select a folder → *OK*
    - To return to Bookmarks/Saved Pages list: *Back* or [PUSH]
- Move Bookmarks/Saved Pages back to List**  
> After Step 1 above, *Root folder* → *OK*

## Rearranging Bookmarks/Saved Pages

- Available only when Display Order (☞ P. 15-11) is set to *Saved/Used Order*.
- 1** In Bookmarks/Saved Pages list window, [Y?] [Menu] → *Move to* → *Sort*
  - 2** Select new order → *OK*

## Bookmarks/Saved Pages Functions

In Bookmarks/Saved Pages list window, press  [Menu] for following operations.

Item	Operation/Description
Go to Page	Open link; view saved web pages
Add shortcut icon <sup>1 3</sup>	Paste bookmarks to Standby > <b>YES</b>
Create New <sup>1</sup>	Create new Bookmarks folders (  P.15-10); save URLs to bookmarks (  P.15-9)
New Folder <sup>2</sup>	Create new Saved Pages folders (  P.15-10)
Edit	Edit folder titles or bookmark URLs
Move to	(  P.15-10)
Delete	> <b>YES</b>
Delete selected	> Check bookmarks/saved pages/folders →  [Finish] → <b>YES</b>
Delete All	<b>YES</b> → Enter Phone Password
Display URL	View URLs
Display Order	Rearrange bookmarks/saved pages/folders > Select a condition
Send URL <sup>1 3</sup>	Quote bookmark URLs in messages > <b>Message</b> or <b>SMS</b> → Create message (S! Mail:  From Step 2 on P.14-4/SMS:  From Step 2 on P.14-8)

**Send to ExtnlDvcs<sup>1 3</sup>** Send bookmarks via Infrared/IC transmission ( P.11-3, P.11-5)

<sup>1</sup> Bookmarks only

<sup>2</sup> Saves Pages only

<sup>3</sup> Yahoo! Keitai/PC Site Browser only

## Downloading Image/Sound Files

Save images, sounds, etc. to Data Folder or microSD Card.

- For PC Site Browser, only still images can be saved.
- For Direct Browser, image/sound files cannot be saved.

1 Open a web page →  [Menu] → **Select File**

2 Select a file

File details appear.

3 **Save** → **YES**

Available menu items vary by saved content.

- Save location is determined by Save Settings (☞ P.18-23).  
However, save location may change depending on situations. Check confirmation when download is complete.

### Note

- Do not remove/install microSD Card while saving files to it.
- Do not turn handset power off while downloading or saving files.  
Files may be damaged.
- Some copy protected files may not be saved.
- Videos selected from web pages play while being downloaded.

## Using Number, Address or URL

Use linked numbers, addresses or URLs to make calls, send messages, access websites, or save directly to Phone Book.

- For Direct Browser, phone numbers/mail addresses cannot be used.

1 Open a web page containing phone numbers, mail addresses or URLs

2 **Phone Number**

Select a phone number → Select an item (See below)

Item	Operation/Description
<b>Voice call</b>	Make a Voice Call
<b>Video call</b>	Make a Video Call
<b>Select image</b>	Select outgoing image
<b>Add to Phone Book</b>	Save a number to Phone Book (☞ From Step 2 on P.4-5)

**E-mail Address**

Select an address → Select an item (See below)

Item	Operation/Description
<b>Compose message</b>	Create messages (☞ From Step 4 on P.14-5)
<b>Compose SMS</b>	Create SMS (☞ From Step 4 on P.14-8)
<b>Add to Phone Book</b>	Save mail address to Phone Book (☞ From Step 2 on P.4-5)

**URL**

Select URL

Handset connects to the Network.

## Streaming

- Streaming is available from compatible Yahoo! Keitai sites only.
- Streamed media are not savable.










### Main Menu ▶ Yahoo! ▶ Yahoo! Keitai

1 Open a web page → Select a file

Streaming starts.

2  or  to exit

### Engaged Streaming Operations

Mute/Release Mute	 [  /  ]
Pause/Resume*	 [  /  ]
Volume	
Set Playback Position*	 to start playback from specified point
Toggle Views	 <ul style="list-style-type: none"><li>● Toggle: Portrait View → Landscape View (Fit to Display size) → Full-size Landscape View</li></ul>

\* Unavailable during live streaming

### Note


- Streaming requires a continuous Network connection. Network remains connected even during a pause (Transmission fees apply).
- Paused streams may stop after one minute of inactivity.
- Pausing playback while streaming via Wi-Fi (handset closed) may end streaming after 10 seconds.
- Using Bluetooth® device for wireless audio output may deactivate Wi-Fi function.
- When roaming abroad, streaming may be unavailable or not be performed properly.

### Incoming Voice Calls while Streaming


 
Incoming call pauses an active stream.

- Video Calls cannot be received while streaming.

## Option Menu Items

In Yahoo! Keitai, press  [Menu] for these options:

- Some functions may be unavailable depending on web pages.

Item	Operation/Description
<b>Forward</b>	Go to next page (  P.15-7)
<b>Bookmarks</b>	View Bookmarks list, add bookmarks, or paste bookmarks to Standby <sup>1</sup>
<b>Saved Pages</b>	View Saved Pages list or save page content to Saved Pages
<b>Text Copy</b>	Copy page text
<b>Reload Page</b>	Refresh page information
<b>Enter URL</b>	Enter URL directly or use URL History to access pages
<b>Select File</b> <sup>1</sup>	View, play or save file to Data Folder (Downloading Image/Sound Files:  From Step 2 on P.15-12)
<b>Handy Functions</b>	<p><b>Switch PC Browser</b><sup>2</sup>/<b>Switch Browser</b><sup>3</sup>: Toggle Yahoo! Keitai/PC Site Browser</p> <p><b>CHG wide scr. mode/RLS wide scr. mode</b>: Toggle wide screen mode on/off according to handset</p> <p><b>Connect to Wi-Fi/Connect to 3G</b><sup>1</sup>: Toggle Wi-Fi/3G connection</p> <p><b>Web Search</b>: Search text in Internet</p> <p><b>Look up in dict.</b><sup>1</sup>: Look up specified text in dictionary</p> <p><b>Search In Page</b>: Search text within page</p> <p><b>Jump in this page</b>: Jump to top/end of page</p> <p><b>Send URL</b><sup>1</sup>: Send URL via mail</p> <p><b>History</b>: Open previously viewed pages</p> <p><b>Expand/Shrink</b><sup>4</sup>: Zoom page in/out</p> <p><b>Set Display Range</b><sup>4</sup>: Specify displayed area of page</p> <p><b>Flash(R) Menu</b>: Playback/pause Flash® files</p> <p><b>Properties</b>: View page details or server certificates for secure pages</p>

Item	Operation/Description
<b>Yahoo! Keitai<sup>2</sup>/ Home Page</b> <sup>4</sup>	View top menu
<b>Settings</b>	<p><b>Font Size</b>: Change font size</p> <p><b>Encoding</b>: Change encoding type</p> <p><b>Pointer</b>: Set Pointer<sup>4</sup></p>
<b>Switch screen</b> <sup>4</sup>	Toggle between Small Screen and PC Screen
<b>Exit Browser</b>	Exit Browser

<sup>1</sup> Yahoo! Keitai/PC Site Browser only

<sup>2</sup> Yahoo! Keitai only

<sup>3</sup> PC Site Browser only

<sup>4</sup> PC Site Browser/Direct Browser only