

# Appendix

|                                     |       |
|-------------------------------------|-------|
| Function List .....                 | 19-2  |
| Troubleshooting.....                | 19-10 |
| Warning Signs .....                 | 19-12 |
| Software Update .....               | 19-12 |
| Quick Open Menu .....               | 19-14 |
| Key Assignments (5-touch Mode)..... | 19-15 |
| Key Assignments (2-touch Mode)..... | 19-16 |
| Symbol List .....                   | 19-17 |
| Character Code List .....           | 19-18 |
| Weather Indicator List .....        | 19-23 |
| Memory List.....                    | 19-24 |
| Specifications .....                | 19-25 |
| Index.....                          | 19-26 |
| Warranty & Service .....            | 19-32 |
| Warranty .....                      | 19-32 |
| After-Sales Service .....           | 19-32 |
| Customer Service.....               | 19-33 |

## Function List

From Main Menu, press key corresponding to a menu number for direct access (☞ P.1-19).

Example: To select **S! Mail Settings** in Messaging menu:

**1** first column **0** second column **3** third column

**① (Messaging)** → **② (Settings)** → **③ (S! Mail Settings)**

- To select ①: → ①; To select ②: → ②
- When Menu Icons are set to Basic or Customize, first column of function number is not available. Select a menu from Main Menu; then select a function number (second column in table).

| Messaging                 |                             |         |
|---------------------------|-----------------------------|---------|
| Menu Number/Function Name |                             | Page    |
| <b>1</b>                  | Messaging                   | —       |
| <b>1</b>                  | Incoming Mail               | —       |
| <b>1</b>                  | <b>1</b> Received           | P.14-3  |
| <b>2</b>                  | <b>2</b> ユーザーフォルダ 1         | P.14-3  |
| <b>3</b>                  | <b>3</b> ユーザーフォルダ 2         | P.14-3  |
| <b>4</b>                  | <b>4</b> ユーザーフォルダ 3         | P.14-3  |
| <b>5</b>                  | <b>5</b> Spam Folder        | P.14-3  |
| <b>2</b>                  | Create New                  | P.14-4  |
| <b>3</b>                  | Retrieve New                | P.14-16 |
| <b>4</b>                  | Drafts                      | P.14-17 |
| <b>5</b>                  | Templates                   | —       |
| <b>1</b>                  | <b>1</b> Download Templates | P.14-11 |
| <b>6</b>                  | Sent/Unsent                 | —       |
| <b>1</b>                  | <b>1</b> Sent/Unsent        | P.14-3  |
| <b>2</b>                  | <b>2</b> ユーザーフォルダ 1         | P.14-3  |
| <b>3</b>                  | <b>3</b> ユーザーフォルダ 2         | P.14-3  |

|          |                    |                     |                  |
|----------|--------------------|---------------------|------------------|
| <b>1</b> | <b>6</b>           | <b>4</b> ユーザーフォルダ 3 | P.14-3           |
| <b>7</b> | Server Mail        |                     | —                |
| <b>1</b> | <b>1</b>           | Retrieve Mail List  | P.14-15          |
| <b>2</b> | <b>2</b>           | Retrieve All        | P.14-15          |
| <b>3</b> | <b>3</b>           | Delete All          | P.14-16          |
| <b>4</b> | <b>4</b>           | Server Mail Memory  | P.14-16          |
| <b>8</b> | Create New PC Mail |                     | P.14-26          |
| <b>9</b> | Create New SMS     |                     | P.14-8           |
| <b>0</b> | Settings           |                     | —                |
| <b>1</b> | <b>1</b>           | Custom Mail Address | P.14-4           |
| <b>2</b> | <b>2</b>           | Universal Settings  | P.18-11, P.18-20 |
| <b>3</b> | <b>3</b>           | S! Mail Settings    | P.18-21          |
| <b>4</b> | <b>4</b>           | PC Mail Settings    | P.18-22          |
| <b>5</b> | <b>5</b>           | SMS Settings        | P.18-22          |
| <b>①</b> | Memory Status      |                     | P.14-3           |

| Yahoo! (Yahoo! Keitai)    |          |                  |
|---------------------------|----------|------------------|
| Menu Number/Function Name |          | Page             |
| <b>2</b>                  | Yahoo!   |                  |
| <b>1</b>                  | <b>1</b> | Yahoo! Keitai    |
| <b>2</b>                  | <b>2</b> | Menu List        |
| <b>3</b>                  | <b>3</b> | Bookmarks        |
| <b>4</b>                  | <b>4</b> | Saved Pages      |
| <b>5</b>                  | <b>5</b> | Web Search       |
| <b>6</b>                  | <b>6</b> | Enter URL        |
| <b>1</b>                  | <b>1</b> | Direct Entry     |
| <b>2</b>                  | <b>2</b> | URL History List |
| <b>7</b>                  | History  |                  |

|   |   |                       |         |
|---|---|-----------------------|---------|
| 2 | 8 | PC Site Browser       | —       |
|   |   | 1 Homepage            | P.15-5  |
|   |   | 2 Bookmarks           | P.15-9  |
|   |   | 3 Saved Pages         | P.15-9  |
|   |   | 4 Web Search          | P.15-6  |
|   |   | 5 Enter URL           | P.15-6  |
|   |   | 6 History             | P.15-6  |
|   |   | 7 Yahoo! Keitai       | P.15-4  |
|   |   | 8 Direct Browser      | P.15-5  |
|   |   | 9 Set PC Site Browser | P.18-23 |
|   |   | 0 Reset               | P.18-24 |
|   | 9 | Direct Browser        | P.15-5  |
|   |   | 1 Homepage            | P.15-5  |
|   |   | 2 Bookmarks           | P.15-9  |
|   |   | 3 Saved Pages         | P.15-9  |
|   |   | 4 Web Search          | P.15-6  |
|   |   | 5 Enter URL           | P.15-6  |
|   |   | 6 History             | P.15-6  |
|   |   | 7 Yahoo! Keitai       | P.15-4  |
|   |   | 8 PC Site Browser     | P.15-5  |
|   |   | 9 Set Direct Browser  | P.18-23 |
|   |   | 0 Reset               | P.18-24 |
|   | 0 | Set Yahoo! Keitai     | —       |
|   |   | 1 Font Size           | P.18-23 |
|   |   | 2 Scroll Unit         | P.18-23 |
|   |   | 3 Downloads           | P.18-23 |
|   |   | 4 Memory Manager      | P.18-23 |
|   |   | 5 Security            | P.18-24 |
|   |   | 6 Save Settings       | P.18-23 |

|   |   |                       |         |
|---|---|-----------------------|---------|
| 2 | ① | Reset                 | —       |
|   |   | 1 Restore Defaults    | P.18-24 |
|   |   | 2 Initialized Browser | P.18-24 |

|                                                                                   |                                  |                       |                 |
|-----------------------------------------------------------------------------------|----------------------------------|-----------------------|-----------------|
|  | <b>S! Appli</b>                  |                       |                 |
|                                                                                   | <b>Menu Number/Function Name</b> |                       | <b>Page</b>     |
|                                                                                   | 3                                | S! Appli              | —               |
|                                                                                   |                                  | 1 S! Appli List       | —               |
|                                                                                   | 1                                | 1 Download S! Appli   | P.16-2          |
|                                                                                   |                                  | 2 Osaifu-Keitai       | —               |
|                                                                                   |                                  | 1 Lifestyle-Appli     | P.13-10, P.16-2 |
|                                                                                   | 2                                | 2 IC Card Settings    | P.13-12         |
|                                                                                   |                                  | 3 S! Appli Settings   | —               |
|                                                                                   | 3                                | 1 Volume              | P.18-25         |
|                                                                                   |                                  | 2 Display Backlight   | P.18-25         |
|                                                                                   |                                  | 3 Vibration           | P.18-25         |
|                                                                                   |                                  | 4 Synchronize microSD | P.18-25         |
|                                                                                   | 4                                | S! Appli History      | P.16-3          |
|                                                                                   | 5                                | Information           | P.16-2          |

## News/Entertainment

|   | Menu Number/Function Name | Page    |
|---|---------------------------|---------|
| 4 | News/Entertainment        | —       |
| 1 | S! Info Ch./Weather       | —       |
| 1 | What's New?               | P.8-2   |
| 2 | History                   | P.8-3   |
| 3 | Register/Cancel           | P.8-2   |
| 4 | Get Latest Contents       | P.8-2   |
| 5 | Weather Indicator         | P.8-3   |
| 2 | S! Quick News             | —       |
| 1 | S! Quick News List        | P.8-5   |
| 2 | Settings                  | P.18-18 |
| 3 | Free Contents             | P.8-6   |
| 4 | S! Contents Store         | P.8-6   |
| 5 | Post Blog                 | P.8-7   |

|  <b>Camera</b> |                           |                 |
|-------------------------------------------------------------------------------------------------|---------------------------|-----------------|
|                                                                                                 | Menu Number/Function Name | Page            |
| 5                                                                                               | Camera                    | —               |
|                                                                                                 | 1 Digicam Mode            | P.6-7           |
|                                                                                                 | 2 Photo Mode              | P.6-8           |
|                                                                                                 | 3 Video Camera            | P.6-8           |
|                                                                                                 | 4 Picture Album           | P.6-16, P.10-24 |
|                                                                                                 | 5 Videos                  | P.6-16          |

|  <b>Videos/Music</b> |                           |        |
|-------------------------------------------------------------------------------------------------------|---------------------------|--------|
|                                                                                                       | Menu Number/Function Name | Page   |
| 6                                                                                                     | Videos/Music              | P.1-27 |

|  Tools |                        |                  |
|---------------------------------------------------------------------------------------|------------------------|------------------|
| Menu Number/Function Name                                                             |                        | Page             |
| 7                                                                                     | Tools                  | —                |
|                                                                                       | 1 Alarms               | P.13-7           |
|                                                                                       | 2 Calendar             | P.13-2           |
|                                                                                       | 3 Calculator           | P.13-8           |
|                                                                                       | 4 Notepad              | P.13-8           |
|                                                                                       | 5 Tasks                | P.13-5           |
|                                                                                       | 6 Osaifu-Keitai        | —                |
|                                                                                       | 1 Lifestyle-Appli      | P.13-10          |
|                                                                                       | 2 IC Card Settings     | P.13-12, P.18-25 |
|                                                                                       | 7 Dictionary           | P.13-13          |
|                                                                                       | 8 Sound Recorders      | —                |
|                                                                                       | 1 Voice Call Data      | P.2-16           |
|                                                                                       | 2 Video Call Data      | P.2-16           |
|                                                                                       | 3 Answer Phone Setting | P.2-15           |
|                                                                                       | 4 Voice Recorder       | P.13-14          |
|                                                                                       | 5 Voice Announce       | P.13-14          |
|                                                                                       | 9 Bar Code Reader      | —                |
|                                                                                       | 1 Scan Barcodes        | P.13-15          |
|                                                                                       | 2 Saved Data List      | P.13-16          |
|                                                                                       | 0 S! GPS Navi          | —                |
|                                                                                       | 1 Navi Appli           | P.17-3           |
|                                                                                       | 2 Current Location     | P.17-2           |
|                                                                                       | 3 Location Navi        | P.17-3           |
| 4 Location Logs                                                                       | P.17-3                 |                  |
| 5 NAVI Settings                                                                       | P.18-26                |                  |

|   |       |                            |         |
|---|-------|----------------------------|---------|
| 7 | ①     | Bluetooth                  | —       |
|   | 1     | Search&Paired Device       | P.11-7  |
|   | 2     | Bluetooth OFF/Bluetooth ON | P.11-8  |
|   | 3     | Accept Registered          | P.11-9  |
|   | 4     | Dialup Rgstry Standby      | P.11-10 |
|   | 5     | Receive via Bluetooth      | P.11-9  |
|   | 6     | My Devices Settings        | P.18-19 |
|   | ②     | Wi-Fi                      | —       |
|   | 1     | ON/OFF                     | P.11-12 |
|   | 2     | Access Point Search        | P.11-13 |
|   | 3     | Profile Lists/Settings     | P.11-13 |
|   | 4     | Wi-Fi/3G Switch Conf.      | P.11-16 |
|   | 5     | Connection Status          | P.11-15 |
|   | 6     | MAC Address                | P.11-16 |
|   | 7     | Phone Password Lock        | P.11-16 |
|   | ③     | Receive via Infrared       | —       |
|   | 1     | Receive                    | P.11-3  |
|   | 2     | Receive All                | P.11-4  |
|   | ④     | Music Player               | —       |
|   | 1     | All Tracks                 | P.9-6   |
|   | 2     | Play List                  | P.9-6   |
|   | 3     | Artist                     | P.9-6   |
|   | 4     | Album                      | P.9-6   |
| 5 | Genre | P.9-6                      |         |

|   |   |                      |         |
|---|---|----------------------|---------|
| 7 | ⑤ | microSD Backup       | —       |
|   | 1 | Phone Book           | P.10-20 |
|   | 2 | Calendar             | P.10-20 |
|   | 3 | Tasks                | P.10-20 |
|   | 4 | Incoming Mail        | P.10-20 |
|   | 5 | Sent Messages        | P.10-20 |
|   | 6 | Unsent Messages      | P.10-20 |
|   | 7 | Drafts               | P.10-20 |
|   | 8 | Notepad              | P.10-20 |
|   | 9 | Bookmarks            | P.10-20 |
|   | ⑥ | Templates/Users Dic. | —       |
|   | 1 | Templates            | P.3-5   |
|   | 2 | User's Dictionary    | P.3-9   |
|   | 3 | Download Dictionary  | P.3-10  |
|   | ⑦ | Pedometer            | P.13-17 |

|  <b>Data Folder</b> |                     |         |
|------------------------------------------------------------------------------------------------------|---------------------|---------|
| Menu Number/Function Name                                                                            |                     | Page    |
| 8                                                                                                    | Data Folder         | —       |
|                                                                                                      | 1 Pictures          | —       |
|                                                                                                      | 1 Download Pictures | P.10-2  |
|                                                                                                      | 2 Picture Album     | P.10-24 |
|                                                                                                      | 3 Main Folder       | P.10-2  |
|                                                                                                      | 4 Camera            | P.10-2  |
|                                                                                                      | 5 My Pictograms     | P.10-2  |
|                                                                                                      | 6 Mail Art          | P.10-2  |
|                                                                                                      | 7 Pre-installed     | P.10-2  |
|                                                                                                      | 8 Handwriting       | P.10-2  |
| 9 Original Animation                                                                                 | P.10-12             |         |

|   |   |                     |         |
|---|---|---------------------|---------|
| 8 | 2 | Ring Songs&Tones    | —       |
|   | 1 | DL Ring Songs&Tones | P.10-2  |
|   | 2 | Main Folder         | P.10-2  |
|   | 3 | Pre-installed       | P.10-2  |
|   | 4 | Voice Announce      | P.10-2  |
|   | 5 | Play List           | P.10-17 |
|   | 3 | S! Appli            | —       |
|   | 1 | Download S! Appli   | P.16-2  |
|   | 4 | Widget              | —       |
|   | 1 | Download Widget     | P.7-2   |
|   | 5 | Music               | —       |
|   | 1 | Main Folder         | P.9-7   |
|   | 2 | WMA                 | P.9-7   |
|   | 6 | Videos              | —       |
|   | 1 | Download Videos     | P.10-3  |
|   | 2 | Main Folder         | P.10-3  |
|   | 3 | Camera              | P.10-3  |
|   | 4 | Pre-installed       | P.10-3  |
|   | 5 | BD/DVD Recorder     | P.10-14 |
|   | 6 | Play List           | P.10-18 |
|   | 7 | Position Memory     | P.10-15 |
|   | 7 | PC Movies           | —       |
|   | 1 | microSD             | P.10-13 |
|   | 2 | Position Memory     | P.10-15 |
|   | 3 | Play History        | P.10-15 |
|   | 8 | TV                  | —       |
|   | 1 | Image               | P.5-13  |
|   | 2 | Video               | P.5-12  |
|   | 3 | Position Memory     | P.10-3  |
|   | 9 | Lifestyle-Appli     | —       |
|   | 1 | Download            | P.13-10 |

|   |   |                    |         |
|---|---|--------------------|---------|
| 8 | 0 | Books              | —       |
|   | 1 | Download Books     | P.10-3  |
|   | ① | Customized Screen  | —       |
|   | 1 | Customized Screen  | P.1-22  |
|   | ② | Templates          | —       |
|   | 1 | Download Templates | P.14-11 |
|   | ③ | Font               | —       |
|   | 1 | Download Font      | P.1-23  |
|   | 2 | Main Folder        | P.10-3  |
|   | 3 | Pre-installed      | P.10-3  |
|   | ④ | Other Documents    | —       |
|   | 1 | Main Folder        | P.10-3  |

|  <b>Widget (Mobile Widget)</b> |        |                      |
|-----------------------------------------------------------------------------------------------------------------|--------|----------------------|
| Menu Number/Function Name                                                                                       |        | Page                 |
| 9                                                                                                               | Widget | —                    |
|                                                                                                                 | 1      | Widget Store         |
|                                                                                                                 | 2      | Widget Contents      |
|                                                                                                                 | 1      | Download Widget      |
|                                                                                                                 | 3      | Settings             |
|                                                                                                                 | 1      | Delete Content       |
|                                                                                                                 | 2      | Auto Refresh         |
|                                                                                                                 | 3      | Auto Roaming         |
|                                                                                                                 | 4      | Roaming Notification |
|                                                                                                                 | 5      | Cookies              |
|                                                                                                                 | 6      | Delete Cookies       |
|                                                                                                                 | 7      | Pointer Speed        |

| TV                        |                         |         |
|---------------------------|-------------------------|---------|
| Menu Number/Function Name |                         | Page    |
| ✱                         | TV                      | —       |
| 1                         | Watch TV                | P.5-5   |
| 2                         | Program List            | P.5-7   |
| 3                         | Timer Watching          | P.5-13  |
| 4                         | Timer Recording         | P.5-13  |
| 5                         | Recording Result        | P.5-14  |
| 6                         | TV Link                 | P.5-10  |
| 7                         | Channel List            | P.5-4   |
| 8                         | Channel Setting         | —       |
|                           | 1 Select Area           | P.5-4   |
|                           | 2 Automatic             | P.5-4   |
| 9                         | User Settings           | —       |
|                           | 1 Display/Operation     | P.18-13 |
|                           | 2 Video                 | P.18-13 |
|                           | 3 Display Light         | P.18-13 |
|                           | 4 Sound Effect          | P.18-13 |
|                           | 5 Recording             | P.18-14 |
|                           | 6 Data Broadcasting     | P.18-14 |
|                           | 7 ECO Mode              | P.18-14 |
|                           | 8 Reset Channel Setting | P.18-14 |
|                           | 9 Reset Storage Area    | P.18-14 |
|                           | 0 Reset TV Settings     | P.18-14 |
|                           | ✱ Check TV Settings     | P.18-14 |

| Phone                     |                      |                |
|---------------------------|----------------------|----------------|
| Menu Number/Function Name |                      | Page           |
|                           | Phone                | —              |
| 1                         | Phone Book           | P.4-2          |
| 2                         | Create New Entry     | P.4-3          |
| 3                         | Call Log             | —              |
|                           | 1 Outgoing Call Logs | P.2-13         |
|                           | 2 Incoming Call Logs | P.2-13         |
| 4                         | Account Details      | P.1-30, P.4-12 |
| 5                         | S! Addressbook BkUp  | —              |
|                           | 1 Start Sync         | P.4-11         |
|                           | 2 Details            | P.4-11         |
| 6                         | Group                | P.4-6          |
| 7                         | Memory Manager       | P.4-9          |
| 8                         | Restrictions         | P.12-12        |
| 9                         | Settings             | —              |
|                           | 1 Save Settings      | P.18-12        |
|                           | 2 Search Method      | P.18-12        |
|                           | 3 Font Size          | P.18-12        |
|                           | 4 Voice Dial         | P.4-13         |
|                           | 5 Mail Group         | P.14-20        |
|                           | 6 Forwarding Image   | P.18-12        |
| 0                         | Memory Status        | P.4-9          |

● Number in first column is not available for Phone.

|  Settings |                           |        |
|-------------------------------------------------------------------------------------------|---------------------------|--------|
| #                                                                                         | Menu Number/Function Name | Page   |
| #                                                                                         | Settings                  | —      |
| 1                                                                                         | Sound Settings            | —      |
| 1                                                                                         | 1 Ring Tones              | P.18-2 |
| 2                                                                                         | 2 Machi-Uta               | P.18-2 |
| 3                                                                                         | 3 Ringer Volume           | P.18-2 |
| 4                                                                                         | 4 Key Tone                | P.18-3 |
| 5                                                                                         | 5 Stereo/3D Sound         | P.18-2 |
| 6                                                                                         | 6 Earphone                | P.18-2 |
| 7                                                                                         | 7 Message Ring Tones      | P.18-2 |
| 2                                                                                         | Display Settings          | —      |
| 1                                                                                         | 1 Internal Display        | P.18-3 |
| 2                                                                                         | 2 Font Size               | P.18-6 |
| 3                                                                                         | 3 Font                    | P.1-23 |
| 4                                                                                         | 4 Menu Icons              | P.18-4 |
| 5                                                                                         | 5 Back Light Time         | P.18-5 |
| 6                                                                                         | 6 View Blind              | P.1-30 |
| 7                                                                                         | 7 Color                   | P.18-4 |
| 8                                                                                         | 8 Private Menu            | P.1-24 |
| 9                                                                                         | 9 言語設定                    | P.18-4 |
| 0                                                                                         | 0 Open for New            | P.18-4 |
| *                                                                                         | * LCD AI                  | P.18-5 |
| #                                                                                         | # Disp. Call/Recv #       | P.18-6 |
| ①                                                                                         | ① Describe Icons          | P.1-11 |
| 3                                                                                         | Customized Screen         | —      |
| 1                                                                                         | 1 Customized Screen       | P.1-23 |
| 2                                                                                         | 2 Release Settings        | P.1-23 |

|   |                          |          |
|---|--------------------------|----------|
| # | 4 Incoming Settings      | —        |
| 1 | 1 Vibrator               | P.18-2   |
| 2 | 2 Manner Mode Type       | P.18-7   |
| 3 | 3 Answer Setting         | P.18-8   |
| 4 | 4 Open-to-Ans. Call      | P.18-8   |
| 5 | 5 Call Logs              | P.12-9   |
| 6 | 6 Phone Book Image       | P.18-8   |
| 7 | 7 Ring Time Settings     | P.12-12  |
| 8 | 8 Info Notice Setting    | P.18-8   |
| 9 | 9 Auto Answer            | P.18-8   |
| 0 | 0 In-call Management     | P.18-8   |
| 5 | Phone Settings           | —        |
| 1 | 1 Work with Style        | P.18-7   |
| 2 | 2 Motion Control Setting | P.18-6   |
| 3 | 3 Touch Panel Adjustment | P.1-32   |
| 4 | 4 Side-keys Guard        | P.12-9   |
| 5 | 5 Text Entry Method      | P.18-11  |
| 6 | 6 Battery                | P.18-3   |
| 7 | 7 Pause Dial             | P.2-3    |
| 8 | 8 Headset Switch to Call | P.18-10  |
| 9 | 9 Voice Settings         | P.18-12  |
| 0 | 0 Confirm Settings       | P.18-28  |
| * | * Videos/Music Updates   | P.1-27   |
| # | # Software Update        | P.19-12  |
| ① | ① GPL License etc.       | P.xxviii |
| 6 | Date & Time              | —        |
| 1 | 1 Date & Time            | P.18-9   |
| 2 | 2 World Clock            | P.18-9   |
| 3 | 3 Daylight Savings       | P.18-9   |
| 4 | 4 Alarm Tone             | P.18-9   |
| 5 | 5 Time Correction        | P.18-9   |



|   |   |                        |                |
|---|---|------------------------|----------------|
| # | 7 | Security               | —              |
|   | 1 | Privacy Key Lock       | P.12-4         |
|   | 2 | Personal Data Lock     | P.12-5         |
|   | 3 | IC Card Lock           | P.13-12        |
|   | 4 | Secret Mode            | P.12-10        |
|   | 5 | Secret Data Only       | P.12-10        |
|   | 6 | Key Pad Dial Lock      | P.12-8         |
|   | 7 | Reject Unknown         | P.12-13        |
|   | 8 | Call Setting w/o ID    | P.12-13        |
|   | 9 | All Reset              | P.12-14        |
|   | 0 | Reset Settings         | P.12-13        |
|   | * | PIN Authentication     | P.12-2         |
|   | # | Change Phone Password  | P.12-2         |
|   | ① | Timer Lock at Close    | P.12-6         |
|   | ② | Lock OFF at Open       | P.12-7         |
|   | ③ | Content Key            | P.10-24        |
|   | ④ | Lock Message           | P.12-8         |
|   | 8 | Call Settings          | —              |
|   | 1 | Call Time/Cost         | P.18-9         |
|   | 2 | Reset                  | P.18-9         |
|   | 3 | Set Max Cost Limit     | P.18-9         |
|   | 4 | Voice Mail/Call Fwding | P.2-17, P.2-18 |
|   | 5 | Call Waiting           | P.2-20         |
|   | 6 | Call Barring           | P.2-20         |
|   | 7 | Missed Call Notifi.    | P.2-19         |
|   | 8 | Prefix                 | P.2-3          |
|   | 9 | Volume                 | P.18-9         |
|   | 0 | Shikkari Talk          | P.2-5          |
|   | * | Closing Clamshell      | P.18-10        |
|   | # | Hold Tones             | P.18-10        |
|   | ① | Noise Reduction        | P.18-10        |

|   |   |                          |                |
|---|---|--------------------------|----------------|
| # | 8 | ② Quality Alarm          | P.18-10        |
|   |   | ③ Reconnect Signal       | P.18-10        |
|   |   | ④ Offline Mode           | P.1-17         |
|   |   | ⑤ Show My Number         | P.2-21         |
|   |   | ⑥ Service Numbers        | P.18-10        |
|   | 9 | Video Call               | —              |
|   |   | 1 Incoming Video Qlty    | P.18-12        |
|   |   | 2 Select Images          | P.18-12        |
|   |   | 3 Loud Speaker           | P.18-12        |
|   |   | 4 Voice Call Auto Redial | P.18-12        |
|   |   | 5 Switch Images          | P.18-12        |
|   | 0 | International Call       | —              |
|   |   | 1 Int'l Dial Assist      | P.2-10         |
|   |   | 2 Select Operator        | P.2-10         |
|   |   | 3 PLMN Setting           | P.2-11         |
|   |   | 4 Operator Name          | P.2-11         |
|   |   | 5 Select Network         | P.2-10         |
|   | ① | Connectivity             | —              |
|   |   | 1 USB Mode               | P.11-17        |
|   |   | 2 Retrieve NW Info       | P.1-16         |
|   | ② | Notification Light       | —              |
|   |   | 1 Incoming               | P.4-4, P.18-10 |
|   |   | 2 Online                 | P.18-10        |
|   |   | 3 Missed Call/Unread     | P.18-10        |
|   |   | 4 Clamshell Close        | P.18-10        |
|   |   | 5 Music                  | P.18-10        |
|   |   | 6 Bluetooth              | P.18-10        |
|   |   | 7 IC Card                | P.18-10        |
|   |   | 8 Confirm Status         | P.18-10        |

# Troubleshooting

## Handset does not turn on

- Was  pressed for more than one second?
- Is battery level sufficient?
- Is battery inserted properly? (☞ P.1-13)

## Handset functions do not work after turning power on

- Does PIN Entry window appear?  
PIN Authentication (☞ P.12-2) is **ON**. Enter PIN.

## USIM not inserted After power-off Insert USIM or Inserted USIM is unavailable to this mobile phone Please insert valid one appears when handset is turned on or operations attempted

- Is USIM Card inserted correctly? (☞ P.1-5)
- Is SoftBank specified USIM Card inserted? (☞ P.1-4)  
Unusable USIM Card may be inserted.
- USIM Card IC chip may be dirty.  
Wipe with a clean cloth, then insert USIM Card correctly.

## Keypad does not respond

- Does  appear in Standby?  
Keyguard (☞ P.12-4) is active. Cancel it.
- Does  appear?  
Privacy Key Lock is active (☞ P.12-4). Cancel it.

## Display is blurred

- Adjust display brightness (☞ P.18-5).
- Is View Blind active?  
Cancel View Blind (☞ P.1-30).

## Side Key does not work while handset is closed

- Does  appear?  
Side-keys Guard (☞ P.12-9) is **ON**.  
Set to **OFF**.

## Outgoing calls or Video Calls will not connect or message and Internet connections are unavailable

- Does **OUT**  appear?  
Is handset out-of-range or in a location where signal is weak?  
Move to a location where signal is strong.
- Does  appear?  
Cancel Offline Mode (☞ P.1-17).
- Are you using handset overseas?  
Set international settings (e.g. Select Operator) to use abroad (☞ P.2-10).
- Does  appear?  
Personal Data Lock is set (☞ P.12-5). Deactivate Personal Data Lock.

## Outgoing calls or Video Calls will not connect

- Is area code entered?
- Is restricting outgoing calls in Call Barring? (☞ P.2-20)
- Does  appear in Standby?  
Total cost has reached upper limit. Set Max Cost Limit to **OFF** or execute **Reset** (☞ P.18-9).

## Outgoing calls will not connect or busy signal sounds

- Did you enter area code?
- Is restricting outgoing calls in Call Barring? (☞ P.2-20)

## Call is interrupted or disconnected

- Does **OUT** appear? Is handset out-of-range or in a location where signal is weak?  
Move to a location where signal is strong.

**Cannot start any more functions appears when a menu is opened.**

- Maximum number of functions are active at the same time. Cancel current function and try again (☞ P.1-29).

**Calls cannot be made via a Phone Book entry**

- Entry may be saved as Secret.  
Set Secret Mode or Secret Data Only **ON** (☞ P.12-10).
- Does  appear?  
Personal Data Lock is set (☞ P.12-5). Deactivate Personal Data Lock.

**Digital TV does not work**

- Is handset out of terrestrial Digital TV broadcasting service area or in a location where airwaves are weak?  
Move to a location where airwaves are strong (☞ P.5-3).

**Osaifu-Keitai® does not work**

- Does  appear?  
Deactivate IC Card Lock (☞ P.13-12).

**Wi-Fi connection unavailable**

- Does  or  appear?  
Turn on Wi-Fi function (☞ P.11-12).  
Is handset in a location where signal is weak?  
Move to a location where signal is strong.

**Display clock is reset**

- Replacing battery does not reset Display clock; however, if battery is removed for long periods, the clock may be reset. Set Date & Time (☞ P.18-9) or Retrieve NW Info (☞ P.1-16) again.

**Cannot charge battery**

- Is AC Charger (sold separately) firmly connected to handset or Desktop Holder? (☞ P.1-14)
- Is AC Charger securely plugged into an outlet?
- Is battery installed in handset correctly? (☞ P.1-13)
- Is handset correctly mounted in Desktop Holder?
- Make sure handset, battery, Desktop Holder and AC Charging terminals are clean.
- Battery may not charge beyond +5°C and +35°C.
- Battery may need to be replaced.

**Handset/accessories feel warm**

- AC Charger/Desktop Holder may warm during charging.  
Handset may warm during long use. This is normal if you can hold it comfortably. Low temperature burns may occur if handset is held against skin for long periods.

**Battery Operating Time is greatly reduced**

- Battery Operating Time may be reduced by environmental factors such as temperature, charging conditions or signal strength, as well as by operations or settings. See "Specifications" (☞ P.19-25) and "Battery Time" (☞ P.1-12).

## Warning Signs

| Problem                                                                                        | Causes and Remedies                                                                                                            |
|------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| OUT appears                                                                                    | Handset is out-of-range.<br>Move to a location where signal is strong.                                                         |
|  SIDE appears | Side-keys Guard (☞ P.12-9) is <b>ON</b> .<br>To activate Side Key while handset is closed, set Side-keys Guard to <b>OFF</b> . |
|  appears      | Keyguard is active (☞ P.12-4).<br>Cancel Keyguard to use keys. Answer calls even if Keyguard is active.                        |
|  appears      | Privacy Key Lock is active (☞ P.12-4).<br>Cancel it to use handset. Answer calls even if Privacy Key Lock is active.           |
| Low battery message appears and battery alarm tone sounds                                      | Battery is low.<br>Charge (☞ P.1-14) or replace battery (☞ P.1-13).                                                            |

## Software Update

Check for 942P software updates and download as required.

- Transmission fees do not apply to updates (including checking for updates, downloading and rewriting).
- Software Update may take approximately 30 minutes.
- Fully charge battery beforehand. Even if  appears, low battery message may appear. In this case, charge battery until Notification Light/Charging Indicator goes out.
- Select a place where signal is strong and stable.
- Other functions are unavailable during update.
- Software Update does not affect Phone Book entries, files saved in Data Folder or other content, but it is recommended that you create a backup of any important information and data (note that some files cannot be copied).  
SoftBank is not liable for damages resulting from loss of data, information, etc.
- Do not remove battery during the update. Update will fail.
- Software Update failure may disable handset. Contact SoftBank Mobile Customer Center, Customer Assistance (☞ P.19-33).

**Main Menu ► Settings ► Phone Settings  
► Software Update ► Software Update**


**1**  **[YES]** → Follow onscreen instructions

After download is complete, handset automatically restarts and update begins.

When update is complete, **Software has been successfully updated.** appears.

Handset restarts then Information appears.

Entire process takes approximately 60 seconds.

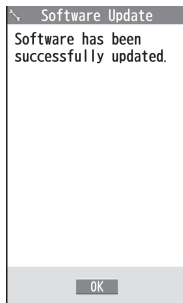

**Update Results**

When Information window appears,

**Software Updt. Result** → 


- When Information does not appear,

**Main Menu ► Settings**

**► Phone Settings**

**► Software Update**

**► Update Results**

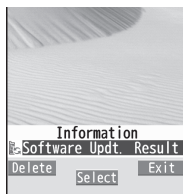

**Scheduled Update**

Confirmation appears at scheduled update time. Press  or wait ten seconds for update to start.

**Note**

- If handset does not power on after Software Update, remove then re-insert battery and try again. If handset still does not power on, contact SoftBank Mobile Customer Center, Customer Assistance ( P.19-33).
- SoftBank is not liable for damages resulting from loss of data, information, etc.
- Alarm tone does not sound during update.
- For more information, visit SOFTBANK MOBILE Corp. Website (<http://www.softbank.jp>).

## Quick Open Menu

When Menu Icons is set to **Basic** or **Customize** (P.18-4), press menu numbers in Main Menu to open the following functions.

### Example: To open Notepad:

In Standby,  →  

| Menu                       | #  |
|----------------------------|----|
| Alarm                      | 44 |
| Calendar                   | 45 |
| Calculator                 | 85 |
| Notepad                    | 42 |
| Tasks                      | 95 |
| Sound Recorders            | 55 |
| Receive via Infrared       | 79 |
| Templates/Users Dictionary | 38 |
| Pictures folder            | 46 |
| Ring Songs&Tones folder    | 16 |
| Phone Book Settings        | 26 |
| Ring Tones                 | 13 |
| Ringer Volume              | 50 |
| Key Tone                   | 30 |
| Stereo/3D Sound            | 64 |
| Earphone/Speaker Settings  | 51 |
| Message Ring Tones         | 68 |
| Internal Display           | 56 |

| Menu                      | #  |
|---------------------------|----|
| Font Settings             | 66 |
| Menu Icons                | 57 |
| Back Light Time           | 70 |
| Color Theme               | 86 |
| Private Menu Settings     | 52 |
| Language                  | 15 |
| Describe Icons            | 36 |
| Vibrator                  | 54 |
| Manner Mode Type          | 20 |
| Answer Setting            | 58 |
| Ring Time Settings        | 90 |
| Info Notice Setting       | 65 |
| Auto Answer               | 94 |
| Text Entry Method         | 35 |
| Date & Time               | 31 |
| Secret Mode               | 40 |
| Secret Data Only          | 41 |
| Call Setting w/o ID       | 10 |
| Reset Settings            | 23 |
| Change Phone Password     | 29 |
| Call Time/Cost            | 61 |
| Reset Total Duration/Cost | 60 |
| Closing Clamshell         | 18 |
| Noise Reduction           | 76 |

| Menu               | #  |
|--------------------|----|
| Quality Alarm      | 75 |
| Reconnect Signal   | 77 |
| Show My Number     | 17 |
| Notification Light | 89 |

## Key Assignments (5-touch Mode)

| Key \ Display | 漢                                                                                                                                                  | カナ                              | abc                                                                                                                                                                                            | 123                                  |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------|
| (1)           | あいうえおあいうえお                                                                                                                                         | アイウエオアイウエオ <sup>1</sup>         | . / @ - :   <sup>2</sup> _ 1 | 1                                    |
| (2)           | かきくけこ                                                                                                                                              | カキクケコ <sup>2</sup>              | a b c A B C 2                                                                                                                                                                                  | 2                                    |
| (3)           | さしすせそ                                                                                                                                              | サシスセソ <sup>3</sup>              | d e f D E F 3                                                                                                                                                                                  | 3                                    |
| (4)           | たちつてとっ                                                                                                                                             | タチツテトツ <sup>4</sup>             | g h i G H I 4                                                                                                                                                                                  | 4                                    |
| (5)           | なにぬねの                                                                                                                                              | ナニヌネノ <sup>5</sup>              | j k l J K L 5                                                                                                                                                                                  | 5                                    |
| (6)           | はひふへほ                                                                                                                                              | ハヒフヘホ <sup>6</sup>              | m n o M N O 6                                                                                                                                                                                  | 6                                    |
| (7)           | まみむめも                                                                                                                                              | マミムメモ <sup>7</sup>              | p q r s P Q R S 7                                                                                                                                                                              | 7                                    |
| (8)           | やゆよゃゅょ                                                                                                                                             | ヤユヨャュョ <sup>8</sup>             | t u v T U V 8                                                                                                                                                                                  | 8                                    |
| (9)           | らりるれろ                                                                                                                                              | ラリルレロ <sup>9</sup>              | w x y z W X Y Z 9                                                                                                                                                                              | 9                                    |
| (0)           | わをんわー                                                                                                                                              | ワラン <sup>2</sup> ー <sup>0</sup> | 0                                                                                                                                                                                              | 0<br>[Press and hold] + <sup>4</sup> |
| (*)           |  <sup>3</sup> /<br>Pictograph/Symbol/Smiley/URL list <sup>5</sup> |                                 | Pictograph/Symbol/Smiley/<br>URL list <sup>5</sup>                                                                                                                                             | *                                    |
|               | [Press and hold] Templates                                                                                                                         |                                 |                                                                                                                                                                                                |                                      |
| (#)           | 、。？！・ (Single-byte Space)                                                                                                                          |                                 | ，．？！’ - & ( ) ￥<br>(Single-byte Space)                                                                                                                                                         | #                                    |

<sup>1</sup> Appears when entering single-byte character.

<sup>4</sup> Not Available in S! Mail text entry window.

<sup>2</sup> Appears when entering double-byte character.

<sup>5</sup> Press  or  to toggle tabs while Pictograph/Symbol/Smiley/URL list is open.

<sup>3</sup> Added to highlighted character.

● In alphanumerics mode, last entered case appears first.

● To toggle input modes:  [Mode] → Select a input character

● To toggle upper/lower case characters:  after entering hiragana, katakana or alphanumerics

● To insert line feeds:  [Line FD]

# Key Assignments (2-touch Mode)

## Kanji (Hiragana) Mode

<Upper Case Mode>

|             |   | Second digit |   |   |   |   |   |   |   |   |   |
|-------------|---|--------------|---|---|---|---|---|---|---|---|---|
|             |   | 1            | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
| First digit | 1 | あ            | い | う | え | お | A | B | C | D | E |
|             | 2 | か            | き | く | け | こ | F | G | H | I | J |
|             | 3 | さ            | し | す | せ | そ | K | L | M | N | O |
|             | 4 | た            | ち | つ | て | と | P | Q | R | S | T |
|             | 5 | な            | に | ぬ | ね | の | U | V | W | X | Y |
|             | 6 | は            | ひ | ふ | へ | ほ | Z | ? | ! | - | / |
|             | 7 | ま            | み | む | め | も | ¥ | & |   |   |   |
|             | 8 | や            | ( | ゆ | ) | よ | * | # |   |   |   |
|             | 9 | ら            | り | る | れ | ろ | 1 | 2 | 3 | 4 | 5 |
|             | 0 | わ            | を | ん | ゝ | ゞ | 6 | 7 | 8 | 9 | 0 |

<Lower Case Mode>

|             |   | Second digit |   |   |   |   |   |   |   |   |   |
|-------------|---|--------------|---|---|---|---|---|---|---|---|---|
|             |   | 1            | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
| First digit | 1 | あ            | い | う | え | お | a | b | c | d | e |
|             | 2 |              |   |   |   |   | f | g | h | i | j |
|             | 3 |              |   |   |   |   | k | l | m | n | o |
|             | 4 |              |   | つ |   |   | p | q | r | s | t |
|             | 5 |              |   |   |   |   | u | v | w | x | y |
|             | 6 |              |   |   |   |   | z |   |   |   |   |
|             | 7 |              |   |   |   |   |   |   |   |   |   |
|             | 8 | や            |   | ゆ |   | よ |   |   |   |   |   |
|             | 9 |              |   |   |   |   |   |   |   |   |   |
|             | 0 | わ            |   |   | ゝ | ゞ |   |   |   |   |   |

## Katakana Mode

<Upper Case Mode>

|             |   | Second digit |   |   |   |   |   |   |   |   |   |
|-------------|---|--------------|---|---|---|---|---|---|---|---|---|
|             |   | 1            | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
| First digit | 1 | ア            | イ | ウ | エ | オ | A | B | C | D | E |
|             | 2 | カ            | キ | ク | ケ | コ | F | G | H | I | J |
|             | 3 | サ            | シ | ス | セ | ソ | K | L | M | N | O |
|             | 4 | タ            | チ | ツ | テ | ト | P | Q | R | S | T |
|             | 5 | ナ            | ニ | ヌ | ネ | ノ | U | V | W | X | Y |
|             | 6 | ハ            | ヒ | フ | ヘ | ホ | Z | ? | ! | - | / |
|             | 7 | マ            | ミ | ム | メ | モ | ¥ | & |   |   |   |
|             | 8 | ヤ            | ( | ユ | ) | ヨ | * | # |   |   |   |
|             | 9 | ラ            | リ | ル | レ | ロ | 1 | 2 | 3 | 4 | 5 |
|             | 0 | ワ            | ヲ | ン | ゝ | ゞ | 6 | 7 | 8 | 9 | 0 |

<Lower Case Mode>

|             |   | Second digit   |   |   |   |   |   |   |   |   |   |
|-------------|---|----------------|---|---|---|---|---|---|---|---|---|
|             |   | 1              | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
| First digit | 1 | ア              | イ | ウ | エ | オ | a | b | c | d | e |
|             | 2 |                |   |   |   |   | f | g | h | i | j |
|             | 3 |                |   |   |   |   | k | l | m | n | o |
|             | 4 |                |   | ツ |   |   | p | q | r | s | t |
|             | 5 |                |   |   |   |   | u | v | w | x | y |
|             | 6 |                |   |   |   |   | z |   |   |   |   |
|             | 7 |                |   |   |   |   |   |   |   |   |   |
|             | 8 | ヤ              |   | ユ |   | ヨ |   |   |   |   |   |
|             | 9 |                |   |   |   |   |   |   |   |   |   |
|             | 0 | ワ <sup>1</sup> |   |   |   |   |   |   |   |   |   |

## Alphanumerics Mode

|             |   | Second digit |                               |                               |   |   |   |   |   |   |   |
|-------------|---|--------------|-------------------------------|-------------------------------|---|---|---|---|---|---|---|
|             |   | 1            | 2                             | 3                             | 4 | 5 | 6 | 7 | 8 | 9 | 0 |
| First digit | 1 | "            | \$                            | %                             | ' | + | a | b | c | d | e |
|             | 2 | .            | .                             | :                             | : | < | f | g | h | i | j |
|             | 3 | =            | >                             | @                             | [ | ] | k | l | m | n | o |
|             | 4 | ^            | _                             | ' <sup>1</sup> ' <sup>2</sup> | { |   | p | q | r | s | t |
|             | 5 | }            | ~ <sup>1</sup> ~ <sup>2</sup> |                               |   |   | u | v | w | x | y |
|             | 6 |              |                               |                               |   |   | z | ? | ! | - | / |
|             | 7 |              |                               |                               |   |   | ¥ | & |   |   |   |
|             | 8 |              | (                             |                               | ) |   | * | # |   |   |   |
|             | 9 |              |                               |                               |   |   | 1 | 2 | 3 | 4 | 5 |
|             | 0 |              |                               |                               |   |   | 6 | 7 | 8 | 9 | 0 |

■ Toggle upper/lower case

<sup>1</sup> Appears when entering double-byte character.

<sup>2</sup> Appears when entering single-byte character.

### Note

- A space is entered by pressing key corresponding to a blank where no character is assigned.
- Enter "" or "" by pressing (✖) after entering characters. Press (✖) once for "", twice for "".
- For number mode, see "Key Assignments (5-touch Mode)" (P.19-15).



# Symbol List

## Double-byte Symbol List

|         |     |     |     |     |     |     |     |     |    |
|---------|-----|-----|-----|-----|-----|-----|-----|-----|----|
| (Space) | 、   | 。   | ，   | ．   | ・   | ：   | ；   | ？   | ！  |
| ”       | ”   | ’   | 、   | ”   | ^   | —   | —   | 、   | 、  |
| ＞       | ゞ   | 〃   | 全   | 々   | メ   | ○   | —   | —   | —  |
| ／       | ＼   | ～   | 〃   | 〃   | …   | …   | ’   | ’   | ”  |
| ”       | ( ) | [ ] | [ ] | { } | { } | { } | { } | { } | ＜  |
| ＞       | 《 》 | 「 」 | 『 』 | 【 】 | 【 】 | 【 】 | 【 】 | 【 】 | +  |
| —       | ±   | ×   | ÷   | =   | ≠   | <   | >   | ≤   | ≥  |
| ∞       | ∴   | ♂   | ♀   | °   | ’   | ”   | ℃   | ¥   | \$ |
| ¢       | £   | %   | #   | &   | *   | @   | §   | ☆   | ★  |
| ○       | ●   | ◎   | ◇   | ◆   | □   | ■   | △   | ▲   | ▽  |
| ▼       | ※   | 〒   | →   | ←   | ↑   | ↓   | ≡   | ≡   | ≡  |
| ⊆       | ⊇   | ⊂   | ⊃   | ⊄   | ⊅   | ⊆   | ⊇   | ⊈   | ⊉  |
| ⇔       | ∀   | ∃   | ∠   | ⊥   | ∩   | ∪   | ∩   | ∪   | ⇒  |
| ≪       | ≫   | √   | ∞   | ∞   | ∴   | ∴   | ∴   | ∴   | ∴  |
| ≪       | ≫   | √   | ∞   | ∞   | ∴   | ∴   | ∴   | ∴   | ∴  |
| #       | ♭   | ♪   | †   | ‡   | ¶   | ○   | わ   | ゐ   | ゑ  |
| フ       | 井   | 工   | ヴ   | カ   | ケ   | A   | B   | Γ   | Δ  |
| E       | Z   | H   | Θ   | I   | K   | Λ   | M   | N   | ≡  |
| O       | Π   | P   | Σ   | T   | Υ   | Φ   | X   | Ψ   | Ω  |

|    |    |    |    |     |    |   |    |     |      |
|----|----|----|----|-----|----|---|----|-----|------|
| α  | β  | γ  | δ  | ε   | ζ  | η | θ  | ι   | κ    |
| λ  | μ  | ν  | ξ  | ο   | π  | ρ | σ  | τ   | υ    |
| φ  | χ  | ψ  | ω  | A   | Б  | В | Г  | Д   | Е    |
| Ё  | Ж  | З  | И  | Й   | К  | Л | М  | Н   | О    |
| П  | Р  | С  | Т  | У   | Ф  | Х | Ц  | Ч   | Ш    |
| Щ  | Ъ  | Ы  | Ь  | Э   | Ю  | Я | а  | б   | в    |
| г  | д  | е  | ё  | ж   | з  | и | й  | к   | л    |
| м  | н  | о  | п  | р   | с  | т | у  | ф   | х    |
| ц  | ч  | ш  | щ  | ъ   | ы  | ь | э  | ю   | я    |
| —  |    | ┐  | ┐  | ┐   | ┐  | ┐ | ┐  | ┐   | ┐    |
| ┐  | ┐  | ┐  | ┐  | ┐   | ┐  | ┐ | ┐  | ┐   | ┐    |
| ┐  | ┐  | ┐  | ┐  | ┐   | ┐  | ┐ | ┐  | ┐   | ┐    |
| ┐  | ┐  | ┐  | ┐  | ┐   | ┐  | ┐ | ┐  | ┐   | ┐    |
| ⑨  | ⑩  | ⑪  | ⑫  | ⑬   | ⑭  | ⑮ | ⑯  | ⑰   | ⑱    |
| ⑲  | ⑳  | I  | II | III | IV | V | VI | VII | VIII |
| IX | X  | ミ  | キ  | ク   | ケ  | コ | ク  | ケ   | コ    |
| ドル | フツ | カ  | ドル | セン  | ギ  | ギ | ギ  | ギ   | ギ    |
| km | mg | kg | cc | m   | 平  | 成 | 、  | 、   | 、    |

|     |   |    |   |   |   |     |     |     |   |
|-----|---|----|---|---|---|-----|-----|-----|---|
| Tel | ⓧ | ⓧ  | ⓧ | ⓧ | ⓧ | (株) | (有) | (代) | 明 |
| 大   | 正 | 昭和 | ≡ | ≡ | ∫ | ∫   | Σ   | √   | ⊥ |
| ⊥   | ⊥ | ∴  | ∩ | ∩ | ∩ | ∩   | ∩   | ∩   | ∩ |

## Single-byte Symbol List

|         |   |   |   |    |   |   |   |     |   |
|---------|---|---|---|----|---|---|---|-----|---|
| (Space) | ! | " | # | \$ | % | & | ' | ( ) |   |
| *       | + | , | - | .  | / | : | ; | <   | = |
| >       | ? | @ | [ | ¥  | ] | ^ | _ | '   | { |
|         | } | ~ | . | 。  | 。 | 。 | 。 | 。   | 。 |

[illegible]

| First Three Digits |     |     |     |     |     |     |     |     |     | Last Digit |     |     |     |     |     |     |     |     |     |
|--------------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 0                  | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 0          | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   |
| 050                | 051 | 052 | 053 | 054 | 055 | 056 | 057 | 058 |     | 059        | 060 | 061 | 062 | 063 | 064 | 065 | 066 | 067 | 068 |
| オ                  | ア   | イ   | エ   | ウ   | エ   | ウ   | エ   | オ   |     | カ          | キ   | ク   | ケ   | コ   | カ   | キ   | ク   | ケ   | コ   |
| 070                | 071 | 072 | 073 | 074 | 075 | 076 | 077 | 078 |     | 079        | 080 | 081 | 082 | 083 | 084 | 085 | 086 | 087 | 088 |
| イ                  | エ   | ウ   | エ   | ウ   | エ   | ウ   | エ   | オ   |     | カ          | キ   | ク   | ケ   | コ   | カ   | キ   | ク   | ケ   | コ   |
| 090                | 091 | 092 | 093 | 094 | 095 | 096 | 097 | 098 | 099 | 100        | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108 | 109 |
| イ                  | エ   | ウ   | エ   | ウ   | エ   | ウ   | エ   | オ   |     | カ          | キ   | ク   | ケ   | コ   | カ   | キ   | ク   | ケ   | コ   |



## Appendix







# Weather Indicator List

- Indicators and categories are subject to change without prior notice.

| Weather                                                                           |                       |
|-----------------------------------------------------------------------------------|-----------------------|
|  | Clear (day)           |
|  | Clear (night)         |
|  | Cloudy                |
|  | Rain                  |
|  | Snow                  |
|  | Thunderstorm          |
|  | Precipitation 0%-100% |
|  | Later                 |
|  | Occasionally          |

| Pollen Level                                                                      |           |
|-----------------------------------------------------------------------------------|-----------|
|  | Low       |
|  | Moderate  |
|  | High      |
|  | Very High |

| Cherry Blossom                                                                    |                  |
|-----------------------------------------------------------------------------------|------------------|
|  | Blossoms Opening |
|  | Near Full Bloom  |
|  | Peak Bloom       |
|  | Past Peak        |

| Fall Foliage                                                                      |                |
|-----------------------------------------------------------------------------------|----------------|
|  | No Color       |
|  | Moderate Color |
|  | Peak Color     |
|  | Past Peak      |

| UV Level                                                                          |           |
|-----------------------------------------------------------------------------------|-----------|
|  | Low       |
|  | Moderate  |
|  | High      |
|  | Very High |

| Typhoon                                                                           |             |
|-----------------------------------------------------------------------------------|-------------|
|  | Formed      |
|  | Approaching |
|  | Severe      |

| Other Information                                                                   |               |
|-------------------------------------------------------------------------------------|---------------|
|  | Heavy Rain    |
|  | Strong Winds  |
|  | Notifications |

## Memory List

|                    |                                                                 |
|--------------------|-----------------------------------------------------------------|
| <b>Data Folder</b> | Up to 3500 items/up to 300 MB<br>(Including pre-installed data) |
|--------------------|-----------------------------------------------------------------|

- Shared with S! Appli List  
(One S! Appli corresponds up to 6 MB.)

|                        |                  |
|------------------------|------------------|
| <b>Calendar Events</b> | Up to 1000 items |
|------------------------|------------------|

|                   |                  |
|-------------------|------------------|
| <b>Phone Book</b> | Up to 1000 items |
|-------------------|------------------|

|                  |                      |                  |
|------------------|----------------------|------------------|
| <b>Messaging</b> | <b>Incoming Mail</b> | Up to 3000 items |
|                  | <b>Sent/Unsent</b>   | Up to 1000 items |

- Combined total of SMS, S! Mail and PC Mail

|                 |                        |                    |                                                           |
|-----------------|------------------------|--------------------|-----------------------------------------------------------|
| <b>Internet</b> | <b>Yahoo! Keitai</b>   | <b>Saved Pages</b> | Up to 20 items/750 KB                                     |
|                 |                        | <b>Bookmarks</b>   | Up to 100 items                                           |
|                 |                        | <b>URL History</b> | URL Entry: Up to 20 items<br>URL Access: Up to 100 items* |
|                 |                        | <b>Cache</b>       | 750 KB                                                    |
|                 | <b>PC Site Browser</b> | <b>Saved Pages</b> | Up to 20 items/1150 KB                                    |
|                 |                        | <b>Bookmarks</b>   | Up to 100 items                                           |
|                 |                        | <b>URL History</b> | URL Entry: Up to 20 items<br>URL Access: Up to 100 items* |
|                 |                        | <b>Cache</b>       | 1150 KB                                                   |
|                 | <b>Direct Browser</b>  | <b>Saved Pages</b> | Up to 20 items/1150 KB                                    |
|                 |                        | <b>Bookmarks</b>   | Up to 100 items                                           |
|                 |                        | <b>URL History</b> | URL Entry: Up to 20 items<br>URL Access: Up to 100 items* |
|                 |                        | <b>Cache</b>       | 1150 KB                                                   |

\* The number of savable items varies depending on URL length.



# Specifications

## 942P

|                                   |                       |                                                        |
|-----------------------------------|-----------------------|--------------------------------------------------------|
| <b>Weight (including battery)</b> |                       | 150 g*                                                 |
| <b>Dimensions (closed)</b>        |                       | 51 x 114 x 19 (thinnest part) / 21 (thickest part) mm* |
| <b>Standby Time</b>               | <b>3G</b>             | 600 hours*                                             |
|                                   | <b>GSM</b>            | 350 hours*                                             |
| <b>Talk Time</b>                  | <b>3G</b>             | 220 minutes*                                           |
|                                   | <b>Video Call</b>     | 140 minutes*                                           |
|                                   | <b>GSM</b>            | 230 minutes*                                           |
| <b>TV Reception Time</b>          | <b>Normal Mode</b>    | 3.4 hours*                                             |
|                                   | <b>ECO Mode</b>       | 4.7 hours*                                             |
| <b>Charging Time</b>              | <b>AC Charger</b>     | 130 minutes*                                           |
|                                   | <b>In-Car Charger</b> | 130 minutes*                                           |
| <b>Maximum Output</b>             | <b>3G</b>             | 0.25 W                                                 |
|                                   | <b>GSM</b>            | 2.0 W                                                  |

\* Approximate value

- Values above were calculated with battery installed.
- Charging time is an average measured within temperatures of 5°C to 35°C.
- Talk Time is an average measured with a new, fully charged battery, with stable signals.
- Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals.
- TV-Reception Time is an average measured using Earphone Microphone, with stable signals.

- Talk Time and Standby Time may vary by environment (battery status, temperature, etc.).
- Talk Time and Standby Time may decrease when an S! Appli is active.

## Battery

|                     |                   |
|---------------------|-------------------|
| <b>Voltage</b>      | 3.7 V             |
| <b>Battery Type</b> | Lithium-ion       |
| <b>Capacity</b>     | 800 mAh           |
| <b>Dimensions</b>   | 37 x 5.4 x 37 mm* |

\* Approximate value

## Desktop Holder

|                               |                   |
|-------------------------------|-------------------|
| <b>Input Voltage/Current</b>  | DC 5.4 V/700 mA   |
| <b>Output Voltage/Current</b> | DC 5.4 V/700 mA   |
| <b>Charging Temperature</b>   | 5°C to 35°C       |
| <b>Dimensions</b>             | 66 x 24 x 128 mm* |

\* Approximate value

- Specifications subject to change without notice.

# Index

## Numerics

3G ..... 2-10

## A

### Access History

PC Site Browser/Direct Browser ..... 15-6

Yahoo! Keitai ..... 15-5

Account Details ..... 1-30, 4-12

Address (Adding/editing/deleting) ..... 14-9

AF Tracking ..... 6-10

After-Sales Service ..... 19-32

Alarms ..... 13-6

All Reset ..... 12-14

Alternative Image ..... 2-6

Answer Phone ..... 2-15

### Answering Calls

Video Calls ..... 2-8

Voice Calls ..... 2-5

### Attachments

Adding ..... 14-9

Deleting ..... 14-9

Opening/saving ..... 14-14

Auto Answer ..... 18-8

Auto Focus Lock ..... 6-9

Auto review ..... 6-7, 18-16

Auto Save (Camera) ..... 18-16, 18-17

Auto timer ..... 6-5, 6-12

Auto-sort (Messages) ..... 14-17

AutoArt ..... 14-7

AutoShutter ..... 6-5, 6-13

AV Output ..... 11-18

## B

Background Music ..... 9-7

### Backlight

Display ..... 18-5

S! Appli ..... 18-25

Video Calls ..... 2-12

### Backup

microSD Card ..... 10-21

S! Address Back-up (SAB) ..... 4-10

Bar Code Reader ..... 13-15

### Basic Operations

Handset ..... x

Internet ..... 15-7

Battery ..... 1-12

Battery Level ..... 1-11, 1-13

BD/DVD Recorder ..... 10-14

Blogging ..... 8-7

Bluetooth® ..... 11-6

Bluetooth® Passkey ..... 11-8

Bookmarks ..... 15-9

Books folder ..... 10-3

### Brightness

Backlight ..... 18-5

Camera ..... 6-5

Video Calls ..... 18-13

Browser (Initializing) ..... 18-24

## C

Cache Memory ..... 15-3

Calculator ..... 13-8

Calendar ..... 13-2

Calendar Events ..... 13-2

Call Barring ..... 2-20

Call Cost ..... 18-9

Call Forwarding ..... 2-17

Call Log ..... 2-13

Show/Hide ..... 12-9

Call Operations ..... 2-11

Call Rejection ..... 12-12, 12-13

Call Restrictions ..... 12-12

Call Settings ..... 18-9

Call Time ..... 18-9

Call Waiting ..... 2-20

Caller ID ..... 2-3, 2-21

Camera [Section Contents] ..... 6-1

Center Access Code ..... 1-28

Channel Setting ..... 5-4

### Character Code (Kuten Code)

Character Code List ..... 19-18

Input Options ..... 3-5

Charge Limit ..... 18-9

Charging ..... 1-14

Clock Display ..... 18-5

Closing Clamshell ..... 18-10

Color Scheme ..... 18-4

Confirming Settings ..... 18-28

Content Key ..... 10-5

Continuous Shooting ..... 6-12

|                           |              |
|---------------------------|--------------|
| Control Key.....          | 1-32         |
| Conversion Methods.....   | 3-6          |
| Cookies Setting/Deleting  |              |
| Internet .....            | 18-23, 18-24 |
| Mobile Widget.....        | 18-18        |
| Copy Protected Files..... | 10-5         |
| Country/Region Code ..... | 2-10         |
| Customer Service.....     | 19-33        |
| Customize Menu.....       | 1-34         |
| Customized Screen .....   | 1-22         |

## D

|                                     |       |
|-------------------------------------|-------|
| Data Folder.....                    | 10-2  |
| Date & Time Settings.....           | 18-9  |
| Deleting                            |       |
| Calendar events .....               | 13-5  |
| Messages.....                       | 14-22 |
| Phone Book .....                    | 4-9   |
| S! Appli.....                       | 16-4  |
| Delivery Report .....               | 14-11 |
| Dictionary .....                    | 13-13 |
| Digital TV [Section Contents] ..... | 5-1   |
| Digital TV Settings.....            | 18-13 |
| Direct Browser.....                 | 15-5  |
| Display .....                       | 1-10  |
| Display Indicators.....             | 1-10  |
| Display Lock .....                  | 1-33  |
| Display Settings.....               | 18-3  |

## Download

|                          |            |
|--------------------------|------------|
| Customized Screen .....  | 1-22       |
| Fonts.....               | 1-23       |
| From web pages .....     | 15-12      |
| Lifestyle-Appli .....    | 13-10      |
| Music .....              | 9-3        |
| S! Appli.....            | 16-2       |
| S! Contents Store .....  | 8-6        |
| Templates .....          | 14-11      |
| Widgets .....            | 7-2        |
| Download Dictionary..... | 3-10       |
| Drafts.....              | 14-17      |
| Driving Mode.....        | 1-17, 18-7 |

## E

|                                       |     |
|---------------------------------------|-----|
| Earpiece Volume                       |     |
| Video Calls.....                      | 2-7 |
| Voice Calls .....                     | 2-5 |
| Emergency Calls (110, 119, 118) ..... | 2-4 |
| Emergency Positioning Request .....   | 2-4 |

## F

|                         |           |
|-------------------------|-----------|
| Face Detection.....     | 6-15      |
| Focus Setting.....      | 6-5, 6-15 |
| Folder/files.....       | 10-16     |
| Font Settings .....     | 1-23      |
| Font Size               |           |
| Call Logs .....         | 18-6      |
| Collective Setting..... | 18-6      |
| Internet .....          | 18-6      |
| Messaging.....          | 18-6      |
| Phone Book .....        | 18-6      |
| Text entry .....        | 18-6      |
| Function List .....     | 19-2      |

## G

|                                   |      |
|-----------------------------------|------|
| Global Roaming Service .....      | 2-9  |
| Graphic Mail .....                | 14-6 |
| Group Settings (Phone Book) ..... | 4-6  |
| GSM .....                         | 2-10 |

| H                                       |            |
|-----------------------------------------|------------|
| Handset                                 |            |
| Menus.....                              | 1-18       |
| Parts & Functions .....                 | 1-6        |
| Power On/Off.....                       | 1-15       |
| Handset Security [Section Contents].... | 12-1       |
| Handwriting Diary .....                 | 3-13       |
| Handwriting Photo/Memo .....            | 3-11       |
| Hide Call Logs/Address List .....       | 12-9       |
| Hold                                    |            |
| Video Calls.....                        | 2-12       |
| Voice Calls .....                       | 2-11       |
| HTML messages .....                     | 14-6       |
| I                                       |            |
| iA .....                                | 6-5, 6-14  |
| IC Card Lock.....                       | 13-12      |
| IC Transmission .....                   | 11-4       |
| IDD Prefix .....                        | 2-9        |
| Incoming Call Logs .....                | 2-13       |
| Information window.....                 | 1-20       |
| Infrared.....                           | 11-2       |
| Intelligent Auto .....                  | 6-5, 6-14  |
| International Call                      |            |
| From abroad .....                       | 2-9        |
| From Japan .....                        | 2-9        |
| International Setting .....             | 2-10       |
| Internet [Section Contents] .....       | 15-1       |
| ISO setting.....                        | 6-5, 18-16 |

| K                                 |       |
|-----------------------------------|-------|
| Key Assignments                   |       |
| 2-touch .....                     | 19-16 |
| 5-touch .....                     | 19-15 |
| Key Pad Dial Lock .....           | 12-8  |
| Key Tone .....                    | 18-3  |
| Keyguard .....                    | 12-4  |
| Kuten Code (Character Code) ..... | 19-18 |
| L                                 |       |
| Language .....                    | 18-4  |
| Lifestyle-Appli .....             | 13-10 |
| Lock Message .....                | 12-8  |
| Lock OFF at Open .....            | 12-7  |

| M                              |                        |
|--------------------------------|------------------------|
| Mail Group.....                | 14-20                  |
| Mail Security.....             | 12-11                  |
| Main Menu                      |                        |
| Normal Position.....           | 1-18                   |
| Viewer Position .....          | 1-34                   |
| Making Calls                   |                        |
| International Calls.....       | 2-9                    |
| Video Calls.....               | 2-7                    |
| Voice Calls .....              | 2-2                    |
| Manner Mode.....               | 1-16, 2-11, 2-12, 18-7 |
| Manufacture Number .....       | 18-24                  |
| Memory List.....               | 19-24                  |
| Memory Manager (Internet)..... | 18-23                  |
| Menu Icons .....               | 18-4                   |

|                                      |       |
|--------------------------------------|-------|
| Menu Numbers .....                   | 1-19  |
| Messaging [Section Contents].....    | 14-1  |
| microSD Card.....                    | 10-18 |
| Backup.....                          | 10-21 |
| Check.....                           | 10-23 |
| Formatting.....                      | 10-20 |
| Synchronizing .....                  | 18-25 |
| Missed Call Notification .....       | 2-19  |
| Mobile Widget .....                  | 7-2   |
| Mobile W-Speed .....                 | 5-2   |
| Motion Control .....                 | 1-3   |
| Music folder.....                    | 10-2  |
| Music Player [Section Contents]..... | 9-1   |
| MyOriginal.....                      | 6-14  |

| N                                 |       |
|-----------------------------------|-------|
| Network Information .....         | 1-16  |
| New Messages                      |       |
| Receiving.....                    | 14-16 |
| Viewing .....                     | 14-12 |
| Night mode                        |       |
| Camera .....                      | 6-5   |
| Video Calls.....                  | 18-13 |
| Normal Position .....             | 1-2   |
| Notepad.....                      | 13-8  |
| Notification Light Settings ..... | 18-10 |

**O**

|                              |       |
|------------------------------|-------|
| Offline Mode .....           | 1-17  |
| Open For New.....            | 18-4  |
| Open-to-Ans. Call.....       | 18-8  |
| Operator Names .....         | 2-11  |
| Optional Services .....      | 2-17  |
| Original Animation .....     | 10-12 |
| Osaifu Keitai® .....         | 13-9  |
| Other Documents folder ..... | 10-3  |
| Outgoing Call Logs .....     | 2-13  |

**P**

|                                    |             |
|------------------------------------|-------------|
| Passwords .....                    | 1-28        |
| Passwords (Changing)               |             |
| Center Access Code .....           | 1-28        |
| Phone Password .....               | 12-2        |
| Security Code .....                | 2-21        |
| PC Mail .....                      | 14-2, 14-25 |
| Account Setup .....                | 14-26       |
| Creating/Sending.....              | 14-26       |
| Settings .....                     | 18-22       |
| PC Movies .....                    | 10-13       |
| PC Site Browser .....              | 15-5        |
| Pedometer .....                    | 13-17       |
| Personal Data Lock .....           | 12-5        |
| Phone Book [Section Contents]..... | 4-1         |
| Phone Password .....               | 1-28        |
| Changing .....                     | 12-2        |
| Photo light setting .....          | 6-5, 6-11   |
| Photo mode .....                   | 6-5, 6-14   |
| Pictographs.....                   | 3-4         |

|                                     |           |
|-------------------------------------|-----------|
| Picture Album .....                 | 10-24     |
| Pictures (Still Images)             |           |
| Capturing .....                     | 6-7       |
| Editing .....                       | 10-11     |
| Pictures folder .....               | 10-2      |
| PIN/PIN2 .....                      | 1-5       |
| Changing .....                      | 12-3      |
| PIN Authentication .....            | 12-2      |
| PIN Lock & Cancellation (PUK) ..... | 12-3      |
| Play List .....                     | 9-10      |
| Play mode setting.....              | 9-6       |
| Privacy Key Lock .....              | 12-4      |
| Private Menu .....                  | 1-24      |
| PUK/PUK2 .....                      | 1-5, 12-3 |

**Q**

|                       |       |
|-----------------------|-------|
| QR Code.....          | 13-15 |
| Quick Open Menu ..... | 19-14 |

**R**

|                                          |            |
|------------------------------------------|------------|
| Recipients (Adding/editing/deleting) ... | 14-9       |
| Referer Information.....                 | 18-24      |
| Remote Lock .....                        | 13-12      |
| Reset                                    |            |
| All Reset .....                          | 12-14      |
| Browser Settings .....                   | 18-24      |
| Settings .....                           | 12-13      |
| Total Call Charge/Time .....             | 18-9       |
| TV Settings .....                        | 18-14      |
| Ring Songs&Tones folder .....            | 10-2       |
| Ring Time (Answer Phone).....            | 2-16       |
| Ring Time Settings.....                  | 12-12      |
| Ringer Volume .....                      | 18-2       |
| Ringtone .....                           | 10-7, 18-2 |
| Ringtone Duration (Message).....         | 18-2       |
| Roaming Dial Assistant.....              | 2-10       |
| Root Certificates .....                  | 18-24      |

|                                      |              |  |
|--------------------------------------|--------------|--|
| <b>S</b>                             |              |  |
| S! Addressbook Back-up (SAB).....    | 4-10         |  |
| S! Appli [Section Contents] .....    | 16-1         |  |
| S! Contents Store .....              | 8-6          |  |
| S! GPS Navi [Section Contents] ..... | 17-1         |  |
| S! Information Channel .....         | 8-2          |  |
| S! Mail .....                        | 14-2         |  |
| Creating/sending .....               | 14-4         |  |
| Mail Notice .....                    | 14-13        |  |
| Settings .....                       | 18-21        |  |
| Universal Settings .....             | 18-20        |  |
| S! Quick News .....                  | 8-5          |  |
| Settings .....                       | 18-18        |  |
| Save                                 |              |  |
| Alarms .....                         | 13-7         |  |
| Calendar Events .....                | 13-2         |  |
| Notepad .....                        | 13-8         |  |
| Phone Book .....                     | 4-3          |  |
| S! Information Channel .....         | 8-2          |  |
| S! Quick News .....                  | 8-5          |  |
| Shortcuts .....                      | 1-21         |  |
| User's Dictionary .....              | 3-9          |  |
| Save location                        |              |  |
| Camera .....                         | 6-5          |  |
| Phone Book .....                     | 18-12        |  |
| Saved Pages .....                    | 15-9         |  |
| Scroll Unit .....                    | 18-23        |  |
| SD Audio .....                       | 9-2          |  |
| Secret Data Only .....               | 12-10        |  |
| Secret Mail Setting .....            | 12-11        |  |
| Secret Mode .....                    | 12-10        |  |
| Secure Remote Lock .....             | 12-7         |  |
| Security                             |              |  |
| Data Folder .....                    | 10-16        |  |
| Internet .....                       | 18-24        |  |
| S! Appli .....                       | 16-4         |  |
| Security Code .....                  | 1-28         |  |
| Security Functions .....             | 12-2         |  |
| Server Mail .....                    | 14-15        |  |
| Settings [Section Contents] .....    | 18-1         |  |
| Shikkari Talk .....                  | 2-5          |  |
| Shortcuts .....                      | 1-21         |  |
| Shortcuts Menu .....                 | 1-34         |  |
| Shutter sound .....                  | 18-16, 18-17 |  |
| Side-keys Guard .....                | 12-9         |  |
| Signal Strength .....                | 1-10         |  |
| Simple Menu .....                    | 1-25         |  |
| Slide Lever .....                    | 1-32         |  |
| Slideshow .....                      | 10-27        |  |
| Smileys .....                        | 3-4          |  |
| SMS .....                            | 14-2         |  |
| Creating/sending .....               | 14-8         |  |
| Settings .....                       | 18-22        |  |
| Universal Settings .....             | 18-20        |  |
| Snooze .....                         | 13-7         |  |
| SoftBank Utility Software .....      | 11-16        |  |
| Softkeys .....                       | ix           |  |
| Software Update .....                | 19-12        |  |
| Spam Filter .....                    | 14-18        |  |
| Speaker ON/OFF .....                 | 2-11, 2-12   |  |
| SSL .....                            | 15-3         |  |
| Standby                              |              |  |
| Normal Position .....                | 1-15         |  |
| Viewer Position .....                | 1-34         |  |
| Status Indicators .....              | 1-10         |  |
| Still Images (Picture)               |              |  |
| Capturing .....                      | 6-7          |  |
| Editing .....                        | 10-11        |  |
| Streaming .....                      | 15-13        |  |
| Symbol List .....                    | 19-17        |  |
| <b>T</b>                             |              |  |
| Tasks .....                          | 13-5         |  |
| Templates (Graphic Mail) .....       | 14-6         |  |
| Text Entry/Handwriting               |              |  |
| [Section Contents] .....             | 3-1          |  |
| Time Correction .....                | 18-9         |  |
| Timer Lock at Close .....            | 12-6         |  |
| TLS .....                            | 15-3         |  |
| Touch Menus .....                    | 1-34         |  |
| Touch Panel .....                    | 1-31         |  |
| Text Entry .....                     | 3-10         |  |
| Touch Panel Adjustment .....         | 1-32         |  |
| Touch Panel Operation Guide .....    | 1-32         |  |
| TouchAF/AE .....                     | 6-9          |  |

**U**

|                                      |       |
|--------------------------------------|-------|
| URL (Entering)                       |       |
| PC Site Browser/Direct Browser ..... | 15-6  |
| Text entry .....                     | 3-4   |
| Yahoo! Keitai .....                  | 15-4  |
| USB .....                            | 11-17 |
| User Mode (Manner Mode) .....        | 18-7  |
| User's Dictionary .....              | 3-9   |
| USIM Card .....                      | 1-4   |
| USIM Card Phone Book .....           | 4-3   |
| USIM PINs .....                      | 1-5   |

**V**

|                          |           |
|--------------------------|-----------|
| Vibrator                 |           |
| Incoming alert .....     | 18-2      |
| S! Appli .....           | 18-25     |
| Video Call .....         | 2-6       |
| Videos (Recording) ..... | 6-8       |
| Videos folder .....      | 10-3      |
| Videos/Music Menu .....  | 1-27      |
| View Blind .....         | 1-30      |
| Viewer Position .....    | 1-2, 1-31 |
| Voice Announce .....     | 13-14     |
| Voice Dial .....         | 4-13      |
| Voice Mail .....         | 2-18      |
| Voice Recorder .....     | 13-14     |
| Volume                   |           |
| Ringtone .....           | 18-2      |
| S! Appli .....           | 18-25     |
| Video Calls .....        | 2-7       |
| Voice Calls .....        | 2-5       |

**W**

|                         |       |
|-------------------------|-------|
| Wallpaper               |       |
| Normal Position .....   | 18-3  |
| Viewer Position .....   | 18-7  |
| Warranty .....          | 19-32 |
| Weather Indicator ..... | 8-3   |
| White balance           |       |
| Still Images .....      | 18-15 |
| Video Calls .....       | 18-13 |
| Videos .....            | 18-17 |
| Widgets .....           | 7-2   |
| Wi-Fi .....             | 11-11 |
| WMA Files .....         | 9-2   |
| Work with Style .....   | 18-7  |
| World Clock .....       | 18-9  |

**Y**

|                     |      |
|---------------------|------|
| Yahoo! Keitai ..... | 15-4 |
|---------------------|------|

# Warranty & Service

## Warranty

**Warranty is provided when you purchase a 942P.**

- Check name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

**SoftBank is not liable for any damage resulting from use of this product.**

## After-Sales Service

See "Troubleshooting" (🔍 P.19-10) before contacting SoftBank for service or repairs. If you cannot find solutions or solve problems, contact SoftBank Mobile Customer Center, Customer Assistance (🔍 P.19-33) in your subscription area and provide a detailed description of the problem.

- Repairs within warranty are performed under terms and conditions described.
- Out of warranty, any repairs are performed upon request at subscriber's expense.



## Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.

Check phone number before you dial.

### SoftBank Mobile Customer Center

From a SoftBank handset, dial toll free at  
**157** for General Information or  
**113** for Customer Assistance

### SoftBank Mobile Global Call Center

From outside Japan, dial **+81-3-5351-3491**  
(Please take care to dial the correct number.  
International charges will apply to this call.)

Call these numbers toll free from landlines.

| Subscription Area                                                                                                                                                                   | Service Center      | Toll Free Number |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|------------------|
| Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi,<br>Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama,<br>Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama,<br>Ishikawa, Fukui | General Information | 0088-240-157     |
|                                                                                                                                                                                     | Customer Assistance | 0088-240-113     |
| Aichi, Gifu, Mie, Shizuoka                                                                                                                                                          | General Information | 0088-241-157     |
|                                                                                                                                                                                     | Customer Assistance | 0088-241-113     |
| Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama                                                                                                                                          | General Information | 0088-242-157     |
|                                                                                                                                                                                     | Customer Assistance | 0088-242-113     |
| Hiroshima, Okayama, Yamaguchi, Tottori, Shimane,<br>Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki,<br>Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa                       | General Information | 0088-250-157     |
|                                                                                                                                                                                     | Customer Assistance | 0088-250-113     |

## Memo