


Handset Parts	1-2
Parts & Functions	1-2
Charging Battery	1-4
Power On/Off	1-6
Handset Power On/Off	1-6

Display & Indicators	1-7
Display	1-7
Indicators	1-9

1

Getting Started

Parts & Functions

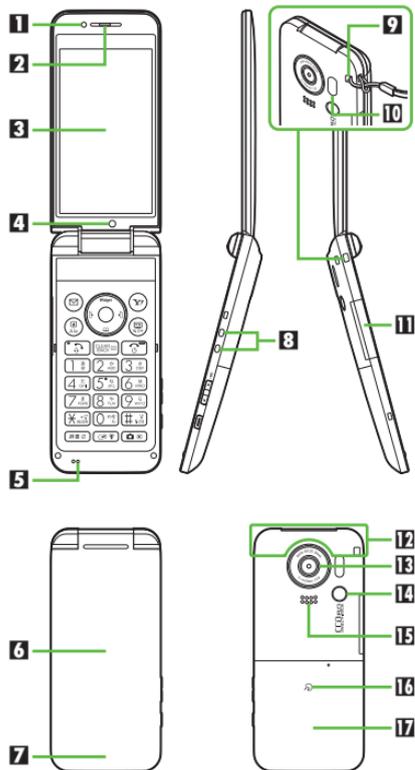

- 1** Light Sensor
- 2** Earpiece
- 3** Display
- 4** Internal Camera
- 5** Microphone
- 6** Illumi Display
- 7** Small Light
- 8** Charging Terminals
- 9** Strap Eyelet
- 10** Infrared Port
- 11** External Device Port (with Port Cover)
- 12** Internal Antenna Location
- 13** External Camera (lens cover)
- 14** Mobile Light
- 15** Speaker
- 16** Logo
- 17** Battery Cover

- Do not touch or place stickers, etc. over Light Sensor or Internal Antenna area.
- Replace Port Cover after Port use.
- Avoid metallic straps; Antenna sensitivity may be affected.

Handset Positions

Handset Closed



Keep handset closed when not in use.


Handset Open



Open handset to place or answer calls, enter text, etc.

Handset Keys

- Keys are indicated in this guide as shown.
- Change functions with **^** via Set Key Shortcut as needed.

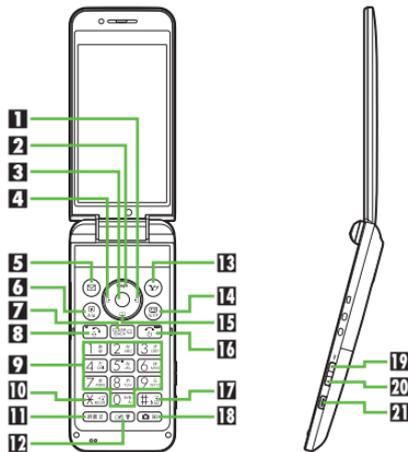

- 1 Multi Selector (right)** Open Received Calls. Long Press to activate/cancel Infrared[®].
- 2 Multi Selector (up)** Open Mobile Widget window. Long Press to open PC Site Browser menu[^].
- 3 Center Key** Open Main Menu. Long Press to activate/cancel Keypad Lock.

- 4 Multi Selector (left)** Open Dialed Numbers. Long Press to activate/cancel Bluetooth[®].
- 5 Mail Key** Open Messaging menu. Long Press to open S! Mail Composition window[^].
- 6 Shortcuts & A/a Key** Open Shortcuts menu. Long Press to show active indicators (Status Icon List).
- 7 Clear/Back Key** Play Answer Phone messages. Long Press to activate/cancel Answer Phone.
- 8 Start Key** Open All Calls. Long Press to open Double Number Mode menu.
- 9 Keypad** Enter numbers to place calls or access functions (Quick Operations). Long Press to open Phone Book.
- 10 * Key** Enter *, +, P, ? and -. Long Press to open S! Friend's Status member list.
- 11 Dictionary Key** Open Dictionary. Long Press to activate/cancel VeilView.
- 12 Multi Job & Manner Key** Select handset mode. Long Press to activate/cancel Manner mode.
- 13 Yahoo! Keitai Key** Open Yahoo! Keitai portal. Long Press to activate Familink Remote[^].
- 14 TV & Text Key** Activate TV. Long Press to open Change Menu window.

- 15 Multi Selector (down)** Open Phone Book. Long Press to open Exchange Profile menu[^].
- 16 Power On/Off Key** Toggle Standby display. Long Press to power handset off.
- 17 # Key** Enter #. Long Press to activate/cancel Manner mode.
- 18 Camera Key** Activate mobile camera. Long Press to activate Review.

Side Keys

- 19 Volume Up Key** Long Press to illuminate Mobile Light.
- 20 Volume Down Key** **Open:** Show/Hide Softkeys.
- 21 Shutter Key** **Open:** Long Press to activate mobile camera. **Closed:** Toggle Illumi Display view.

Multi Selector & Side Keys

- In this guide, Multi Selector and Side Key operations are indicated as follows:

Press or	
Press or	
Press , , or	
Press or	

1 Charging Battery

Battery must be inserted in handset to charge it.


Charging Battery Outside Japan

- SoftBank Mobile is not liable for problems resulting from charging battery abroad.


AC Charger

Use specified AC Charger **ZTDAA1** (sold separately) only.

- In this guide, ZTDAA1 is referred to as "AC Charger."
- Handset and AC Charger may warm while charging.

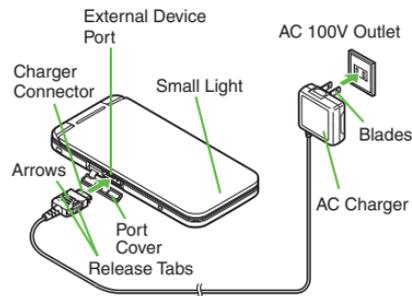


1 Open Port Cover as shown

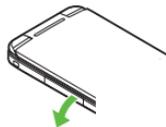

2 Insert Charger Connector

- With arrows up, insert connector until it clicks.

 3 Extend blades and plug AC Charger into AC outlet



- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

4 Unplug AC Charger



- Pull AC Charger straight out.

5 Disconnect handset

- Squeeze Charger Connector release tabs and pull straight out to remove.

6 Fold back blades and replace Port Cover

When Small Light Flashes

- Battery is unchargeable; may be defective or simply at the end of its life; replace it.
- Important AC Charger Usage Note**
- Fold back blades after charging. Do not pull, bend or twist the cord.

USB Charge

Connect handset (with power on) to PC via USB Cable to charge battery.


- Download and install USB Cable driver beforehand.
- Handset must be on to charge battery.
- Battery may not charge if handset is connected through a USB hub.

Disabling USB Charge

- Tools → Connectivity → USB Charge → Disable

In-Car Charger

In-Car Charger may be purchased separately.

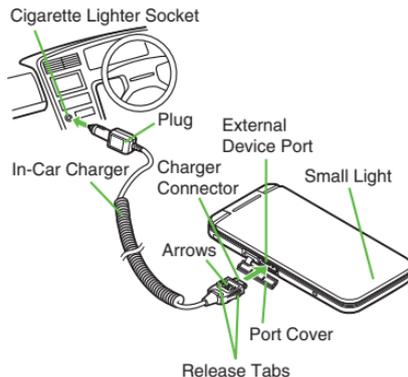

1 Open Port Cover

2 Insert Charger Connector

- With arrows up, insert connector until it clicks.

3 Plug Charger into cigarette lighter socket

4 Start car engine

- Small Light illuminates red while charging.
- Small Light goes out when battery is full.

5 Unplug Charger

6 Disconnect handset

- Squeeze Charger Connector release tabs and pull straight out to remove.

7 Replace Port Cover

Important In-Car Charger Usage Notes

- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Do not use In-Car Charger with Desktop Holder.
- Avoid charging battery inside extremely hot vehicles.

Handset Power On/Off

Power On

Follow these steps when powering on 942SH for the first time:

1 (Long)

- After Power On Graphic, follow the steps below.

→ → → → → → → **設定**
 → → **Language** → → **English**
 → (Long) → (Long) → Change Menu window opens

2 Select option →

Guide descriptions are based on Standard Menu.



- My Details setup starts.

3 Enter last name → Enter first name →

- Change Menu display option confirmation appears.

4 Yes or No →



Standby

- Choose **No** to enter Standby immediately after powering on.

When USIM Card is Not Installed

- Insert USIM Card** appears; insert the card to use handset.

Retrieving Network Information

Handset initiates Network Information retrieval when , , or is pressed for the first time.



Follow these steps to retrieve Network Information to use Network-related services and TV; retrieval automatically sets Clock:

1 Yes →

2

Power Off

1 (Long)

- After Power Off Graphic, handset shuts down.

Display

Standby



Hereafter, most screenshots omit Mobile Widgets and other icons.

Indicator Descriptions

Check active indicators and their descriptions. (Status Icon List)


1 (Long)



- Active indicators are enlarged; description for selected indicator appears.
- Use to select indicators to view their descriptions.
- Press to open menu/window (e.g., Battery Meter window from battery strength indicator). May be unavailable for some indicators.

Information

Information window opens at the bottom for Missed Calls, new mail, etc.

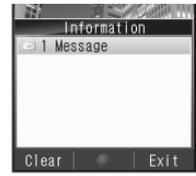

Information Window

Information label (e.g., **Message**, etc.) and count appear in Information window. Select an item and press to open it.

Opening Information List Manually
 ➔ **Phone** ➔ ➔ **Information** ➔

Clearing Information List
 ➔ **Phone** ➔ ➔ **Information** ➔ ➔ ➔ **Yes** ➔

Softkeys

Functions/operations assigned to ,  and  appear at the bottom of Display.



Display Saving

Display goes dark after Display Saving time elapses. Press any key (except ) during a call) to activate it.

Backlight

- Backlight turns off after Time Out time elapses. Press  -  to illuminate it (key press may affect active function).
- Display goes dark during a call. (Backlight does not turn off first.)

Illumi Display

View date, time, signal strength, etc. with handset closed.

Activating

- 1 With handset closed, **
- Press  to toggle view.

Indicators

Display Indicators

In Dual Mode, line type appears bottom right of some indicators.

Basic Status

1		Within 3G range
1		Within GSM range
2		International roaming in progress
2		Signal strength ¹
3		Battery strength ²

¹The more bars the better.

²Battery strength % (appears when Display activates, etc.) is an approximation.

Function Status

1		Active S! Application*
		Paused S! Application*
		Music playback in progress
		TV recording in progress (handset)
		TV recording in progress (Memory Card)
2		Memory Card inserted
		Accessing Memory Card
		Reading Memory Card
3		Formatting Memory Card
		TV Timer/TV Recording Timer set
		Compass Indicator
4		Music playback in progress (via Bluetooth®)
5		Multiple functions (Multi Job) active


*Appears gold for some S! Applications (Real 3D Games, etc.).

Notifications

1		Unread mail
		Unread Delivery Report
2		Answer Phone active & message recorded
		Answer Phone canceled & message recorded
3		New Voicemail
4		Missed Call or new mail on idle line
5		S! Appli/Mobile Widget Notification
6		Contents Key received
7		Unread S! Information Channel info
		Software Update result
8		Unread S! Quick News info
		Unread S! Friend's Status notification or unanswered registration request

Warnings

1		Mail memory low
2		Message delivery failure
3		Memory Card unusable/misinserted

 
Transmissions


1	SSL browsing in progress ¹
2	Packet transmission available
	Receiving mail
3	Sending mail
	S! Friend's Status online
4	Positioning in progress ²
	Software Update in progress
5	RSS-compatible site
6	Weather Indicator

7	USB Cable connected
	USB transmission in progress
	Infrared transmission in progress
	Infrared file transfer in progress
	Bluetooth® transmission ready
	Bluetooth® transmission in progress (appears for multiple connections)
	Bluetooth® talk in progress
	IC Transmission in progress
	S! Addressbook Back-up transmission in progress
	PC Site Browser in use
8	Infrared transmission ready

¹Hidden while Mobile Widget is in use.

²Flashes while positioning.

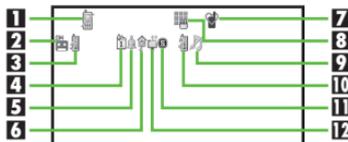Settings


1	Offline Mode active
2	Answer Phone active
3	Call Forwarding or Voicemail active (forwarding condition: Always) [*]
4	Schedule/Task (Alarm set)
	Schedule/Task (Alarm unset)

5	Alarm set
6	Hour Minder active
7	Manner mode active
	Drive mode active
	Original mode active
8	VeilView active
	Keypad Lock active
9	IC Card Lock active
	Ringtone (Silent)
10	Ringtone (Increasing Volume)
	Vibration active
11	Auto Answer or Remote Monitor active
	Show Secret Data active
12	Function Lock (Once) active
	Wakeup TV set

^{*}Indicator does not appear when Call Forwarding is set to Video Calls only, with Voicemail unset.