S! Appli	.10-2
Using S! Applications	. 10-2
Mobile Widget	.10-3
Customizing Standby Display	
(Japanese)	. 10-3

Additional Functions	10-	-
Troubleshooting1	0-1	1

S! Applications & Widgets

 


10

Try out the preloaded S! Applications or download and use 942SH-compatible S! Applications, including games. Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.

Remote Control (Familink Remote)

 Use 77ะปริปริปร for AQUOS
 S! Application (Japanese) to control a TV, VCR, etc. via infrared.







S! Appli Library



Network S! Applications

 A message appears indicating that Internet connection is required. Follow onscreen instructions.

Incoming Calls

 Incoming calls automatically pause S! Application.

Opening S! Appli Notification History In ②, Notification History ▶ ●

Exiting S! Applications







Pausing S! Applications In ②. Suspend ▶ ●

Resuming S! Applications

● Resume → ●

- Select Cancel to open Main Menu and keep the S! Application paused.
 (Additional function activation may be disabled depending on the S! Application.)
- Select *End* to exit the S! Application.

- Downloading S! Applications Adjusting S! Application sound volume Canceling surround effect Setting handset responses to incoming transmissions Setting S! Application to activate in Standby Setting Permissions Opening properties Moving S! Applications to Memory Card
 - Changing S! Application settings Deleting S! Applications Restoring default S! Application settings Restoring default S! Application settings
 - Synchronizing Memory Card S! Applications with 942SH ■Opening Java™ license information (P.10-6 10-7)



Customizing Standby Display (Japanese)

 
Paste various widgets (applications) to Standby to access/activate information/functions immediately from Standby.



-Widgets

S! Quick News & S! Friend's Status Widget

Obtaining Widgets





Mobile Widget Menu



• Follow onscreen instructions.

Installing Widgets

 Some widgets may need to be installed manually; follow these steps:

[Mobile Widget Menu] Widget

Contents

Select widget

Note:

Select widget

Note:
Select widget

Select widget

Select widget

Select widget

Select widget

Activating Single Widgets

● ◆ ●

Deleting Widgets

 
- In Mobile Widget menu, Widget Contents → ●
- Select widget ▶ 図

 S/速報ニュース/S/ともだち状況 cannot be deleted.
- Delete → Yes → ●

Deleting All Widgets

In ②, S!速報ニュース/S!ともだち状況 ⇒
⑤ → Delete All → ⑥ → Enter
Handset Code → ⑥ → Yes → ⑥

If there is a widget saved in Standby, a confirmation appears; follow onscreen prompt.





Saving Widgets to Standby







- Select widget **→** Corresponding icon appears.
- Specify target location

Using Pointer

- After 1. Long Press (v) to activate pointer navigation; select widgets, etc.
- To cancel pointer navigation. Long Press (v).

Using Widgets





• Widget activates; follow onscreen instructions.

Using Sheets

Paste widgets and Standby Shortcuts on each sheet; toggle sheets to use them.

Toggling Sheets







- To toggle further, press (y) or (@).
- Sheet name appears at the top, then disappears.
- Save widgets as needed; corresponding icons appear on the current sheet.

Using Locked Sheets

() ⇒ Select 🖹 ⇒ () ⇒ Enter

Handset Code **→ ●**



- Saving Widgets on Other Sheets
- In Mobile Widget menu, Widget Contents → ●
- Select widget ▶ 🖾
- 📵 Set as StbyShortcut 🕈 💿



Select sheet → ●



Specify target location → ●

Removing Widgets from Standby







- Remove **→** ●
- 4 Yes → •

Using S! Quick News & S! Friend's Status Widget

942SH is preloaded with S/速報ニュース/S!とも だち状況(S! Quick News & S! Friend's Status widget) that shows S! Quick News and S! Friend's Status information in Standby.



- View Settings
- Setting View Pattern
- (1) ♦ ♦ Select S! Quick News & S! Friend's Status widget ▶
- Settings → Pattern
 Setting → ●
- Select item $\blacktriangleright \bigcirc (\boxed{/}/\boxed{)}$
- Switching View
- ① ◆ ❖ Select S! Quick News & S! Friend's Status widget ◆ ⑤
- Operation → Switch Pattern →
 - Repeat the above steps to switch the view.

S! Applications

● > S! Appli > ● > S! Appli Library > ●

	Start Here ● ⇒ S! Appli ⇒ ● ⇒ See below
Setting S! Application to activate in Standby	Activating Screensaver Settings Screensaver Switch On/Off On On On On On On On On On O
	Setting Screensaver S! Appli Library ● ● Select application ● (②) ► As Screensaver ● ● • As Screensaver appears for compatible S! Applications. • Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.
	Changing Screensaver Activation Time Settings Screensaver Activation Time Enter time Activation Time Screensaver Enter time Screensaver Activation Time Activation Time
	Disabling Automatic Screensaver Restart Settings Screensaver Stop Auto Start On On On On On On On On On
	Start Here ● ♦ S! Appli ♦ ● \$! Appli Library ♦ ● \$ Select application \$ ◎ \$ Permission \$ ● \$ See below
Setting Permissions	Customizing Permissions for S! Appli Operations Select item
	Resetting Permission Settings Reset Settings
Opening properties	● S! Appli → ● S! Appli Library → ● Select application → □ → Details → ●

Moving S! Applications to Memory Card	● S! Appli ● S! Appli Library ● ● Select application ● (
Changing S! Application settings	Start Here
	Activating Notification Setting Notification Setting
	Setting Backlight Status Backlight ● ● Switch On/Off ● ● ◆ Select option ● ● • Selecting Normal Settings applies Display Backlight settings.
	Disabling Backlight Flashing Backlight
	Disabling Vibration Vibration
Deleting S! Applications	● S! Appli ● S! Appli Library ● Select application ● Delete ● Fig. 1 Handset Code may be required. Cancel Screensaver to delete Screensaver S! Application.

Restoring default S! Application settings	● S! Appli ● Settings ● Set to Default ● Enter Handset Code ● Ves ●
Restoring default S! Appli Library	S! Appli S: Settings Memory All Clear Test Settings Enter Handset Code Test Settings Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.) Memory All Clear deletes all downloaded SI Applications and Lifestyle-Applications; Near Chat access restriction will be canceled.
Synchronizing Memory Card S! Applications with 942SH	● \$\infty S! Appli \(\Phi \) \(\Phi \) Settings \(\Phi \) \(\Phi \) Synchronization \(\Phi \) \(\Phi \) Yes \(\Phi \)
Opening Java [™] license information	S! Appli Information Information Info



Mobile Widget

Managing	
	Widget Widget Widget Contents
Opening properties	Select widget ⇒ ⊗ ⇒ Details ⇒ ●
	● Select widget other than S!速報ニュース/S!ともだち状況.

■ Widget History

Opening widget notification history	⇒ See below
	Showing All Text Select record ⇒ ⊠ ⇒ View full text ⇒ ●
	Deleting a Record Select record ⇒ ⊗ → Delete → ● → Yes → ●
	Deleting All Records Select record

■ Settings

_ cettings	
Canceling automatic updates	● Widget → ● Settings → ● Auto Refresh → ● Off → ●
Receiving updates automatically while outside Japan	● Widget → ● Settings → ● AutoConnect Abroad → ● On → ●
Hiding confirmation outside Japan	● ★ Widget ★ ● ★ Settings ★ ● ★ Set Use Abroad ★ ● ★ Off ★ ●

Disabling widget notifications	● ★ Widget ★ ● ★ Settings ★ ● ★ Notification Setting ★ ● ◆ Off ★ ●
Disabling cookies	● Widget → ● Settings → ● → Cookies → ● Disabled → ●
Deleting cookies	● ★ Widget ★ ● ★ Settings ★ ● ★ Delete Cookies ★ ● ★ Yes ★ ●


Operations in Standby	
Selecting widget display option	 Select option Schow Widget Select option Choose Off to disable widget display even when (5) is pressed; re-enable via Show Widget in Standby Display menu.
Logging in to Yahoo! JAPAN	 S → S Yahoo!JAPAN log in → ● Follow onscreen instructions. To log out, select Yahoo!JAPAN log out in the above steps.
Moving widgets	(☼) ♦ ﴿ Select widget ♦ ⑤ ♦ Operation ♦ ♦ Change Layout ♦ ⑥ ♦ Specify target location ♦ ⑥
Moving widgets to front/back	 ♦ Select widget ♦ 🖾 ♦ Operation ♦ ♦ To Front or To Back ♦ ●
Updating view	(b) ♦ Select widget ♦ (c) ♦ Operation ♦ (d) ♦ Update View ♦ (e)



	Start Here (3) ⇒ S ⇒ Operate from List ⇒ ● ⇒ Remove ⇒ ● ⇒ See below
	All Widgets
Removing widgets	Remove All ⇒ ● Select sheet ⇒ ♥ → Yes
at once	→ •
	Selected Widgets
	Select & Remove ⇒ ● Select widget ⇒ ●
	(☑) → Complete selection → ② → Yes → ●
Slowing pointer	(5) ⇒ (2) ⇒ Settings ⇒ (0) ⇒ Cursor Speed ⇒
speed	● ⇒ Slow ⇒ ●

Sheets

Editing sheet	Start Here () → () → Settings → () → Sheet Settings → () → Change Sheet Name → () → See below
names	Renaming Select sheet ● ● Enter name ●
	Resetting All Sheet Names
	Start Here (*) → (*) → Settings → (*) → Sheet Settings → (*) → Set Sheet Lock → (*) → Enter Handset Code → (*) → See below
Locking sheets	Activating Lock Select sheet → ● On → ●
	Changing Method for Temporary Access Unlock Method → ● → No Password → ● • Press ⑤, then select and press • to unlock sheet temporarily.

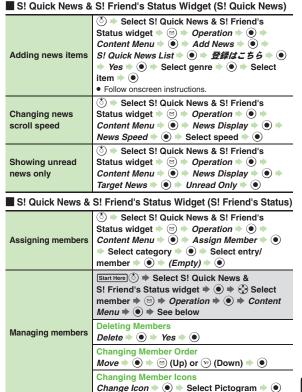



S! Applications



Cannot move S! Applications to **Memory Card**

• Memory Card memory may be low.



S! Applications do not pause for incoming transmissions despite Calls & Alarms settings

• Regardless of setting, a notice appears for Screensaver S! Applications.