

# 16

## Handset Customization

<b>Date &amp; Time .....</b>	<b>16-2</b>
<b>Display &amp; Illumination .....</b>	<b>16-3</b>
Language.....	16-3
Image & Text.....	16-3
Display & Backlight.....	16-3
Standby Display.....	16-4
Key Backlight .....	16-4
Key Illumination .....	16-4
<b>Incoming Transmissions .....</b>	<b>16-5</b>
Handset Response .....	16-5
Handset Response (Lights) .....	16-5
<b>Sounds .....</b>	<b>16-6</b>
System Sounds .....	16-6
Additional Sound Settings .....	16-6
<b>Connectivity .....</b>	<b>16-7</b>
Network .....	16-7
IP Service .....	16-7
<b>Reset.....</b>	<b>16-8</b>
Restoring Default Settings.....	16-8





# Date & Time Settings

## Date & Time

Start Here

Settings ➔ In Sound/Display menu, Date & Time ➔

Setting the date and time	<i>Set Date/Time ➔ Enter the year ➔ Enter the month ➔ Enter the day ➔ Enter the time ➔</i>
Correcting Clock manually	<i>Time Correction ➔ Manual ➔ Yes ➔ Yes ➔</i>
Disabling auto Clock correction	<i>Time Correction ➔ Auto Corr. Setting ➔ Off ➔</i>
Setting auto Clock correction timing	<i>Time Correction ➔ Auto Corr. Setting ➔ On ➔ Select item ➔ (□/✓) ➔</i>
Activating Daylight Saving	<i>Daylight Saving ➔ On ➔</i>
Changing Time Zone	<i>Set Time Zone ➔ Select area ➔</i>
Adding custom time zone	<i>Set Time Zone ➔ Select area ➔ Enter city name ➔ + or - ➔ Enter time difference ➔</i>
Changing time format to 12 hour	<i>Time Format ➔ 12 Hour ➔</i>
Changing date format	<i>Date Format ➔ Select option ➔</i>
Starting the Calendar week on Monday	<i>Calendar Format ➔ Monday-Sunday ➔</i>

# Display & Illumination Settings

## Language

[Start Here](#) (●) ➔ **Settings** ➔ (●) ➔ Sound/Display menu

Switching interface between Japanese and English

*Language or 言語選択* ➔ (●) ➔ *English or 日本語* ➔ (●)

## Image & Text

[Start Here](#) (●) ➔ **Settings** ➔ (●) ➔ In Sound/Display menu, *Display* ➔ (●)

Showing preloaded images for incoming calls, etc.

*System Graphics* ➔ (●) ➔ Select item ➔ (●) ➔ *Preset Animation* (or *Pattern 1* to *Pattern 3*) ➔ (●)

Showing Data Folder images for incoming calls, etc.

*System Graphics* ➔ (●) ➔ Select item ➔ (●) ➔ Select folder ➔ (●) ➔ Select image ➔ (●) ➔ Specify image area ➔ (●)  
• Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

*System Graphics* ➔ (●) ➔ Select item ➔ (●) ➔ *Customized Screen* ➔ (●) ➔ (●)  
• Not available for *Power On* or *Power Off*.

Selecting image enhancement option for Standby and video playback

*Vivid Mode* ➔ (●) ➔ Select option ➔ (●)

Changing font of numbers entered in Standby

*Dial Number* ➔ (●) ➔ Select pattern ➔ (●)

Showing a message each time handset is powered on

*Greeting Message* ➔ (●) ➔ *Edit Message* ➔ (●) ➔ Enter message ➔ (●) ➔  
*Switch On/Off* ➔ (●) ➔ *On* ➔ (●)

## Display & Backlight

[Start Here](#) (●) ➔ **Settings** ➔ (●) ➔ In Sound/Display menu, *Display* ➔ (●)

Disabling display transition effects

*Display Effects* ➔ (●) ➔ *Off* ➔ (●)

Changing Display/key Backlight illumination time

*Backlight* ➔ (●) ➔ *Time Out* ➔ (●) ➔ Select time ➔ (●)  
• For custom illumination time, select *Other*.

Changing Display Brightness

*Backlight* ➔ (●) ➔ *Brightness* ➔ (●) ➔ Adjust level ➔ (●)

Canceling/activating Light Sensor

*Backlight* ➔ (●) ➔ *Brightness* ➔ (●) ➔ (S) (□/✓) ➔ (●)

Changing inactivity time after which Display turns off

*Display Saving* ➔ (●) ➔ Select time ➔ (●)



# Display & Illumination Settings 2

## Standby Display

[Start Here](#) ( ) ➔ **Settings** ➔ ( ) ➔ In Sound/Display menu, *Display* ➔ ( ) ➔ **Standby Display** ➔ ( )

Changing Clock/Calendar	<b>Clock/Calendar</b> ➔ ( ) ➔ Select type ➔ ( )
Selecting Mobile Widget display option	<b>Show Widget</b> ➔ ( ) ➔ Select option ➔ ( )
Showing Network service provider name in Standby	<b>Show Operator Name</b> ➔ ( ) ➔ <i>On</i> ➔ ( )
Hiding Pedometer in Standby	<b>Pedometer</b> ➔ ( ) ➔ <i>Off</i> ➔ ( )

## Key Backlight

[Start Here](#) ( ) ➔ **Settings** ➔ ( ) ➔ ( ) **Phone/** ( )

Disabling key Backlight illumination	<b>Set Key Light</b> ➔ ( ) ➔ <i>Off</i> ➔ ( )
--------------------------------------	---

## Key Illumination

[Start Here](#) ( ) ➔ **Settings** ➔ ( ) ➔ In Sound/Display menu, *Illumi & Light* ➔ ( )

Setting Key Illumination pattern by action	<b>Light</b> ➔ ( ) ➔ <b>Set Key Illumi</b> ➔ ( ) ➔ Select action ➔ ( ) ➔ <b>Key Pattern</b> ➔ ( ) ➔ Select pattern ➔ ( )
Disabling Key Illumination by action	<b>Light</b> ➔ ( ) ➔ <b>Set Key Illumi</b> ➔ ( ) ➔ Select action ➔ ( ) ➔ <b>Switch On/Off</b> ➔ ( ) ➔ <i>Off</i> ➔ ( )



# Incoming Transmission Settings

## Handset Response

[Start Here](#) (●) ➔ **Settings** ➔ (●) ➔ In Sound/Display menu, **Sounds & Alerts** ➔ (●)

Changing ringtone volume	<b>Volume</b> ➔ (●) ➔ Select item ➔ (●) ➔ Adjust level ➔ (●)
Answering calls with other keys	<b>Any Key Answer</b> ➔ (●) ➔ <b>On</b> ➔ (●) ● Use (0-9) - (9), (X), #, *, (静音), (待机), (挂机) or (回) in addition to (挂机).
Muting ringer with other keys	<b>Any Key Answer</b> ➔ (●) ➔ <b>Only Mute</b> ➔ (●) ● Use (0-9) - (9), (X), #, *, (静音), (待机), (挂机) or (回) in addition to (挂机).

## Handset Response (Lights)

[Start Here](#) (●) ➔ **Settings** ➔ (●) ➔ In Sound/Display menu, **Illumi & Light** ➔ (●)

Setting Small Light color	<b>Light</b> ➔ (●) ➔ <b>Event Light</b> ➔ (●) ➔ Select item ➔ (●) ➔ <b>Light Color</b> ➔ (●) ➔ Select color ➔ (●)
Selecting Small Light illumination option	<b>Light</b> ➔ (●) ➔ <b>Event Light</b> ➔ (●) ➔ Select item ➔ (●) ➔ <b>Switch On/Off</b> ➔ (●) ➔ <b>On, Link to Sound or Off</b> ➔ (●)
Changing Key Illumination patterns	<b>Light</b> ➔ (●) ➔ <b>Event Light</b> ➔ (●) ➔ Select item ➔ (●) ➔ <b>Key Pattern</b> ➔ (●) ➔ Select pattern ➔ (●) ● Not effective when Switch On/Off is set to <b>Link to Sound</b> .
Setting Small Light color for missed transmissions	<b>Light</b> ➔ (●) ➔ <b>Status Light</b> ➔ (●) ➔ Select item ➔ (●) ➔ <b>Light Color</b> ➔ (●) ➔ Select color ➔ (●)
Enabling/disabling Small Light illumination for missed transmissions	<b>Light</b> ➔ (●) ➔ <b>Status Light</b> ➔ (●) ➔ Select item ➔ (●) ➔ <b>Switch On/Off</b> ➔ (●) ➔ <b>On or Off</b> ➔ (●)





# Sound Settings

## System Sounds

[Start Here](#) ( ) ➔ **Settings** ➔ ( ) ➔ In Sound/Display menu, **Sounds & Alerts** ➔ ( )

Enabling Keypad Tones	<b>System Sounds</b> ➔ ( ) ➔ <b>Keypad Tones</b> ➔ ( ) ➔ Select tone ➔ ( )
Changing S! Circle Talk tone	<b>System Sounds</b> ➔ ( ) ➔ <b>S! Circle Talk</b> ➔ ( ) ➔ Select tone ➔ ( )
Changing other System Sounds	<b>System Sounds</b> ➔ ( ) ➔ Select item ➔ ( ) ➔ <b>Tone or Sound</b> ➔ ( ) ➔ Select folder ➔ ( ) ➔ Select tone/file ➔ ( ) • For files with limited usage period, choose <b>Yes</b> and press ( ).
Disabling System Sounds	<b>System Sounds</b> ➔ ( ) ➔ Select item ➔ ( ) ➔ <b>Tone or Sound</b> ➔ ( ) ➔ <b>Off</b> ➔ ( ) • Not available for <b>S! Circle Talk</b> . • For <b>Keypad Tone</b> , omit <b>Tone or Sound</b> selection step.
Changing System Sound duration	<b>System Sounds</b> ➔ ( ) ➔ Select item ➔ ( ) ➔ <b>Duration</b> ➔ ( ) ➔ Select/enter time ➔ ( ) • Not available for <b>Keypad Tones</b> or <b>S! Circle Talk</b> .
Changing System Sound volume	<b>Volume</b> ➔ ( ) ➔ <b>General Volume</b> ➔ ( ) ➔ Adjust level ➔ ( )

## Additional Sound Settings

[Start Here](#) ( ) ➔ **Settings** ➔ ( ) ➔ Sound/Display menu

Disabling Speaker when using Headphones	<b>Ringer Output</b> ➔ ( ) ➔ <b>Earphone</b> ➔ ( )
Activating Speaker surround	<b>Sounds &amp; Alerts</b> ➔ ( ) ➔ <b>Surround</b> ➔ ( ) ➔ <b>On</b> ➔ ( )

# Connectivity Settings

## Network

**Start Here** → **Settings** → **Network**

Selecting a Network manually	<b>Select Network</b> → <b>Manual</b> → <b>Select Network</b>
Adding preferred Networks	<b>Select Network</b> → <b>Set Preferred</b> → <b>Select target location</b> → <b>Insert</b> → <b>Select Network</b>
Adding preferred Networks to the end	<b>Select Network</b> → <b>Set Preferred</b> → <b>Add to End</b> → <b>Select Network</b>
Deleting preferred Networks	<b>Select Network</b> → <b>Set Preferred</b> → <b>Select Network</b> → <b>Delete</b>
Adding Networks	<b>Select Network</b> → <b>Add New Network</b> → <b>Add</b> → <b>Enter country code</b> → <b>Enter Network code</b> → <b>Enter name</b> <b>Select NW Type</b> → <b>Select type</b> • After selecting <b>Add New Network</b> and pressing <b>○</b> , Network list appears if Network has already been added. To add more, press <b>○</b> again and proceed.
Editing Networks	<b>Select Network</b> → <b>Add New Network</b> → <b>Select Network</b> → <b>Change</b> → <b>Edit in the same manner as adding Networks</b>
Deleting Networks	<b>Select Network</b> → <b>Add New Network</b> → <b>Select Network</b> → <b>Delete</b>
Switching Network service between 3G and GSM manually	<b>Select Service</b> → <b>Manual</b> → <b>Select service</b>
Refreshing Network connection	<b>Re-search Signal</b>
Retrieving Network Information	<b>Retrieve NW Info</b> → <b>Yes</b>
Checking Network status	<b>Network Info</b>
Editing connection names for mobile data communication	<b>External Device</b> → <b>Select name</b> → <b>Edit</b>
Clearing connection names for mobile data communication	<b>External Device</b> → <b>Reset</b> → <b>Enter Handset Code</b> <b>Yes</b>

## IP Service

**Start Here** → **Settings** → **Phone/** → **Locks**

Disabling IP Service	<b>IP Service Setting</b> → <b>Off</b> → <b>Enter Handset Code</b> • When <b>Off</b> , S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.
----------------------	---



# Reset Settings

## Restoring Default Settings

Start Here



Restoring default handset settings

**Reset Settings** ➔ ➔ **Enter Administrator Code** ➔ ➔ **Yes** ➔ ➔ **Yes** ➔

- Some default settings may not be restored.

Clearing all Phone Book entries, Data Folder files, etc.

**Reset All** ➔ ➔ **Enter Administrator Code** ➔ ➔ **Yes** ➔ ➔ **Yes** ➔

- Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.)
- Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications.
- Handset Code and Administrator Code return to the default settings.

- A confirmation may appear before entering Administrator Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

