

<b>Interface &amp; Storage</b> .....	<b>2-2</b>
Handset Interface & Media File Storage	
.....	2-2
Accessing Functions .....	2-3
<b>Menu Operations</b> .....	<b>2-4</b>
Main Menu .....	2-4
Using Simplified Menus (Simple Menu)	
.....	2-5
<b>Spinguru Menu</b> .....	<b>2-6</b>
Using Spinguru Menu .....	2-7
<b>Accessing Functions</b> .....	<b>2-9</b>
Function Shortcuts .....	2-9
Toggling Active Functions (Multi Job)	
.....	2-10
Standby Shortcuts .....	2-11
Icon View .....	2-12

<b>Cycloid Position</b> .....	<b>2-13</b>
Cycloid Position Setup .....	2-13
<b>Motion Control</b> .....	<b>2-14</b>
<b>Mobile Manners</b> .....	<b>2-16</b>
<b>Security Codes</b> .....	<b>2-17</b>
<b>Basic Tools</b> .....	<b>2-18</b>
My Details & Basic Tools .....	2-18
<b>Double Number</b> .....	<b>2-19</b>
Using Double Number .....	2-19
Modes .....	2-20
<b>Additional Functions</b> .....	<b>2-22</b>

# 2

## Basic Operations



## Handset Interface & Media File Storage

### Handset Operations

Use handset keys or Motion Control.

#### Handset Keys

Use Keypad, etc. in portrait position; supports all handset operations.



#### Vector Pad

 
Multi Selector touch sensor area. Adjust finger pressure to control scroll speed; make circular motion for Spinguru Menu.



Use center area for operations; using edges may inhibit cursor movement/scroll speed.

### Motion Control

Move handset (e.g., shake it left or right, turn it over, etc.) to access functions, enlarge/reduce fonts or images, navigate functions, and more. (Complete setup beforehand.)

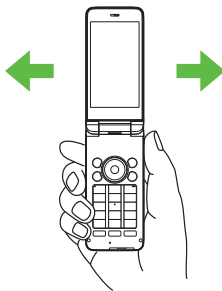

### Cycloid Position

Rotate Display to Cycloid position to watch TV or browse the Internet in widescreen, capture landscape images, and more.

### Media File Storage

While a Memory Card is inserted, captured images, downloads and some other files are saved to the card; change this setting in each function as needed.

 
- My Pictograms and Graphic Mail templates are saved to handset.
- Without a Memory Card, files are saved to handset automatically.



## Accessing Functions

Use the following methods as needed.

### Main Menu

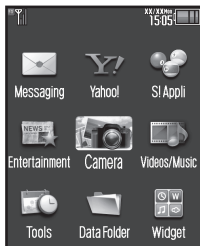


Repeat menu item selection.

### Spinguru Menu



 Access recommended/frequently used functions or operation history, etc.

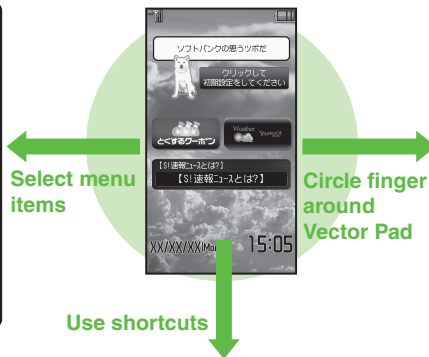

Select menu items

Circle finger around Vector Pad


Use shortcuts

### Shortcuts



 
Access assigned functions (changeable).

### Standby Shortcuts

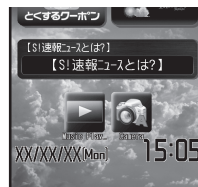

Save functions to Standby or Icon View.

### Quick Operations

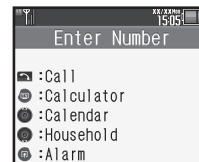 

Enter numbers to access functions. To activate functions, press the corresponding key.

Access a function in Shortcuts menu while another is active, then toggle function windows as needed.




## Main Menu

 2



Basic Operations


### Menu Item Selection

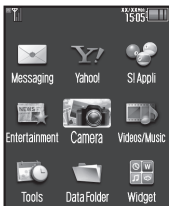

1 



 
- Main Menu opens.

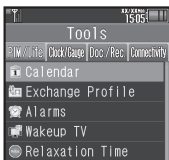2  Select menu item → 



- Menu/window opens.
- If Sub Menu opens, use  to select an item and press .


### Tabs

- Menus/lists in a single window appear on separate tabs; use  to toggle tabs.




Tab

### Reverse Navigation

- Press . If a confirmation appears, follow onscreen prompts.

### Returning to Standby

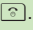- Press . If a confirmation appears, follow onscreen prompts.

### Simple Menu

- Simplify menus and enlarge fonts; ideal for users who use only basic handset functions.

### Main Menu Items

<b>Messaging</b>	Open/create messages, etc.
<b>Yahoo!</b>	Browse the Internet
<b>S! Appli</b>	Use S! Applications including games
<b>Entertainment</b>	Read e-Books, receive news updates, etc.
<b>Camera</b>	Capture images or record video
<b>Videos/Music</b>	Access various media services
<b>Tools</b>	Manage schedules, set Alarm, scan QR Codes, etc.
<b>Data Folder</b>	Open files saved on handset/Memory Card
<b>Widget</b>	Use Mobile Widgets
<b>TV</b>	Watch/record TV programs
<b>Phone</b>	Search contacts, add entries, etc.
<b>Settings</b>	Customize handset interface, sounds, etc.



## Using Simplified Menus (Simple Menu)

### Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.



- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).

 
### ■ Menu Items

<b>Messaging</b>	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
<b>Phone</b>	Phone Book, Add New Entry, Call Log, Play Messages, Answer Phone, Call Voicemail, My Details, Speed Dial/Mail
<b>Camera</b>	Photo Camera, Video Camera, Album, Scan Barcode, Scan Card, Kanji Grabber, Review
<b>Convenient Tool</b>	Calendar, Exchange Profile, Alarms, Calculator, Assignment, Dictionary, Notepad, S! GPS Navi, Pedometer, Compass, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
<b>Data Folder</b>	-
<b>TV</b>	-

Key assignments are largely the same as those in Standard Menu.

### Activating Simple Menu

#### 1 (Long)



#### 2 Simple Menu →

#### While Using an Incompatible Function

- End the function before activating Simple Menu.

#### Canceling Simple Menu

(Long) → Standard Menu →



## Spinguru Menu

 
2

Basic Operations

### Basics

Circle finger around Vector Pad; keep moving finger to select functions suitable for time of day/situation, or frequently used/recently opened files/records, etc.

- Available in Standby and while using functions. If Spinguru Menu is opened while using functions, corresponding menu items also appear.

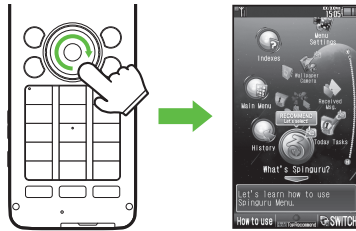


Spinguru Menu

- Spinguru Menu is available in landscape orientation as well.

### Menu Description

 Example: Spinguru Menu opened in Standby


- Favorites (gateway to frequently used functions) appears from the second day after the first use of handset.

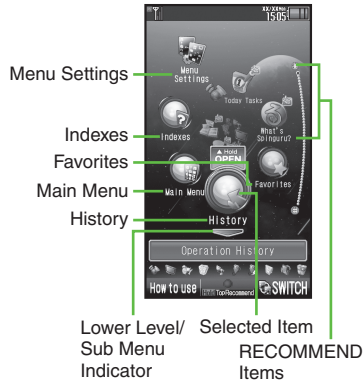

- Press **X** or **H** to jump left/right by seven items; Long Press **○** to return to initial item.

### Menu Navigation

 Press **○** when **◀** appears to access lower level/Sub Menu; press **○** (when **▶** appears) to return.

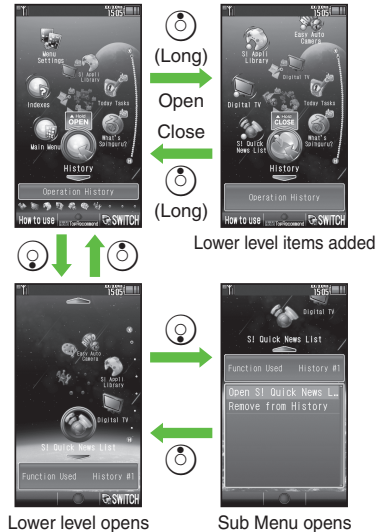

# Using Spinguru Menu

## Opening Functions

### General Items

#### 1 Circle finger around Vector Pad







- Spinguru Menu opens.

#### 2 Circle finger further to select item



- #### 3
- Menu/window opens.

### Deleting Functions from Spinguru Menu

After ,  ➔ *Remove from Recommended Functions* ➔  ➔ *Yes* ➔ 

## Advanced

-  ● Sorting Favorites items ● Deleting all Favorites items ● Deleting all History items ● Restoring deleted general items (P.2-22)

## Favorites & History

#### 1 In Spinguru Menu, select *Favorites or History* item



- #### 2







- Lower level opens.

#### 3 Select item

- #### 4
- Follow onscreen instructions.

### Deleting Functions from Favorites or History

After ,  ➔ *Remove from Favorites or Remove from History* ➔  ➔ *Yes* ➔ 

## Main Menu

#### 1 In Spinguru Menu, select *Main Menu* item



- #### 2

- #### 3 Select item ➔
- Follow onscreen instructions.



## Indexes (Japanese)

Search for functions by initial character of terms or keywords.

### 1 In Spinguru Menu, select *Indexes* item



- Character icons appear.



- Follow onscreen instructions.

## Spinguru Menu Settings

Follow these steps to reset Spinguru Menu:

### 1 In Spinguru Menu, select *Menu Settings* item

 


### 3 Initialize *Spinguru Menu*



## Toggling View

Press to toggle Spinguru Menu between linear and spiral views. In linear view, press to access lower level items/Sub Menu; press to return.

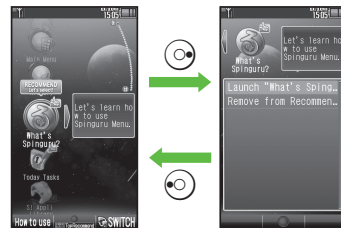

Spinguru Menu  
(linear view)

Lower level/  
Sub Menu opens

## Opening Help

Press in Spinguru Menu to open operational instructions.

## Advanced

- Changing scroll speed
- Setting Spinguru Menu opening method
- Changing Spinguru Menu spin speed
- Calibrating Vector Pad (P.2-22)



# Function Shortcuts

## Shortcuts Menu

Access assigned functions via Shortcuts menu.

1



2 **Select function** → ●

- Menu/window opens.

### Changing Default Shortcuts

In ●, select numbered function → ●  
 ● → **Assign Function** → ● → ●  
 Select menu item → ● → Select new item → ●

- To assign menu items, select one and press ●.

### Assigning Files & Folders

In ●, select numbered function → ●  
 ● → **Assign Data** → ● → Select file/folder → ●

- For folders, select **Set this folder** and press ●.

## Key Shortcut

In Standby, Long Press ●, ● or ● to access assigned functions.

●	Open S! Mail Composition window
●	Open PC Site Browser menu
●	Open Exchange Profile menu
●	Activate/cancel Bluetooth®
●	Access last opened Icon View page
●	Activate Familink Remote

## Changing Assigned Functions

Follow these steps to assign Calculator to ● (Long Press):

1 ● → **Settings** → ● → ●  
**Phone** ●

2 **Set Key Shortcut** → ● → ●  
**Long press** ● → ●

3 **From Appli** → ●

4 **Tools** → ● → In PIM/Life menu, **Calculator** → ●

## Bookmark

In ●, **From Bookmark** → ● → ●  
**Select title** → ● → **Yes** → ●  
**Infrared, Show Secret Data, Etc. On/Off**  
 In ●, **From Other** → ● → **Select item** → ●  
**Canceling Assigned Function**  
 In ●, **Off** → ●

## Movie Menu

Open Movie Menu with a single key to access video-related functions.

1



- Movie Menu opens.

2 **Select function** → ●

- Menu/window opens.

## Advanced

- Changing item order
- Restoring default shortcuts (P.2-22)

 


## toggling Active Functions (Multi Job)


### Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet

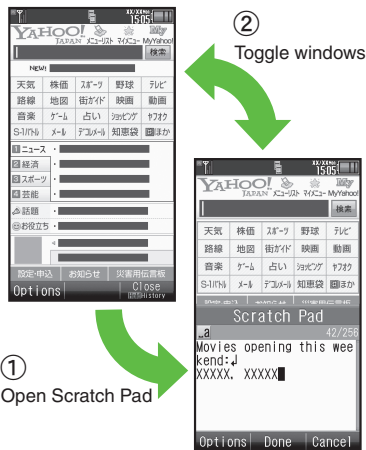







Jot down information

 - Multi Job may not activate from some menus/windows (e.g., ringtone/ringvideo selection, etc.).
- Multi Job is disabled while  (gold) appears.
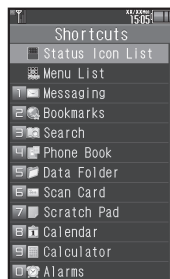
### Using Multi Job

- 1 In a function window,**    
 In text entry/dial windows, Long Press .



- 2 Select function**     
 • Menu/window opens.
- 3 To toggle active windows,** 
- 4**   **Multi Job ends**   
 • If a confirmation appears, follow onscreen prompts.



## Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.


### Saving Shortcuts to Standby

1  →  → **Paste Icon** → 





2 **Select item** → 




- Corresponding icon appears.
- >> appears when more items are available.

3  **Specify target location**  
→ 





### Saving from Menu/Window

- Follow these steps in Options menu:  
(Available when **Set as StbyShortcut** appears.)  
**Set as StbyShortcut** →  →  
**Standby Screen** → 

### Using Shortcuts

- 1  →  **Select icon** → 
- Menu/window opens or command is executed.

### Unlocking Temporarily

 →  →  → **Enter Handset Code** → 

### Removing Shortcuts from Standby

- 1  →  **Select icon** → 
- 2 **Remove** → 

### Advanced

-   Sorting icons  Moving icons  Moving icons to front/back  Removing multiple icons at once  Locking icons (P.2-22)



## Icon View

Save shortcuts to functions, files, folders, widgets, etc. to Icon View for easy access.




### Saving Shortcuts to Icon View

- If selected page is full, remove icons first.
- Installed widgets are saved automatically.

1 



Icon View Page

- Press  or  to open next or previous page. (Press  in **Page 1** to return to Standby.)

2    

3   **Select tab**  **Select item**



- Corresponding icon appears.
- >> appears when more items are available.

4  **Specify target location**





### Saving from Menu/Window

- Follow these steps in Options menu: (Available when **Set as StbyShortcut** appears.)




**Set as StbyShortcut**    **Select page or New Page**   **Specify target location** 

### When Five or More Pages Exist

- A confirmation appears after 1. Choose **Yes** or **No** and press .
  - To disable confirmation, press .

### Using Shortcuts

1 **On Icon View page, select icon** 

- Press  or  to open next or previous page. (Press  in **Page 1** to return to Standby.)

### Accessing Last Opened Page

 (Long)

### Showing Hidden Icons Temporarily

[Icon View Page]     **Enter Handset Code** 

### Removing Shortcuts

1 **On Icon View page, select icon**  (Long)

2 **Cancel Icon** 

### Advanced

-  Moving icons
-  Removing multiple icons at once
-  Editing page names
-  Hiding icons (And more on P.2-23)

## Cycloid Position Setup

Set handset to automatically execute one of these actions upon Display rotation:

<b>Activate Digital TV</b>	Activate TV
<b>Movie Menu</b>	Activate TV or access webcasting sites, video files and recorded programs
<b>Application Menu</b>	Activate mobile camera or access S! Applications, images and music files
<b>Show Internet Menu</b>	Open Bookmarks/ received messages or activate PC Site Browser/ Direct Browser
<b>Show Main Menu</b>	Open Main Menu
<b>Launch Appli</b>	Access assigned function
<b>Connect Bookmark</b>	Access saved URL
<b>Off(Standby)</b>	Keep Standby

Upon first rotation, setup menu opens.

### 1 Rotate Display (first time)



Landscape Menu

### 2 Select item → ●

- Setting is applied and Landscape setup option confirmation appears.


### 3 Yes or No → ●

- Selection appears.

#### Launch Appli or Connect Bookmark

- Handset accesses the assigned function or URL; change function/URL as needed.

### Changing Applied Setting

When **SetRotation** Softkey appears in Cycloid Position menus, etc., press  to change setting.




### 1

- Landscape menu opens.

### 2 Select item → ●

#### From Standby

- → **Settings** → ● → **Phone/** 
- **Display Rotation** → ● → **Rotate 90° to** → ● → **Rotate 90° to** → ● → **Select item** → ●

### Advanced

-  ● Changing function assigned to Launch Appli in landscape menu ● Changing URL assigned to Connect Bookmark in landscape menu (P.2-23)



## Motion Control

 
2

Basic Operations

Motion Sensor tracks handset orientation or movement. Move handset to navigate pages, access functions, etc.

- Cancel Keypad Lock and activate Display first. (Not necessary for activating Quick Silent.)
- Adjust Motion Sensor (**P.2-24**) before using Motion Control for the first time.
- Activate Motion Control by function beforehand.

### Turn Over

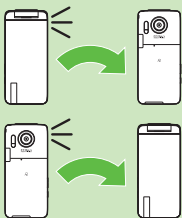

### Activate Quick Silent

Turn handset over to instantly mute ringer and stop vibration.

#### Ringer

Incoming Calls,  
Alarms, etc.

#### Vibration

Incoming Calls,  
Alarms, etc.

- Some tones may not be silenced.

### Open Quick Shortcut

 
Shake handset left and right approximately three times in Standby to access assigned functions.

- Change assigned functions as needed.

### Re-search Signal

Portrait Position  
Cycloid Position

### Shake Left/Right

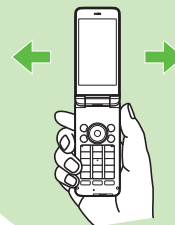

### Navigate Functions

Shake to the left to navigate back, or right to navigate forward.

#### Music

Music Player

#### Channels

Digital TV

#### Images

Data Folder  
(Pictures)

#### Pages

Document  
Viewer

### Multi Job

 
Shake to the left or right to toggle active windows.

#### Toggle Windows

Multi Job



## Shake Forward or Backward

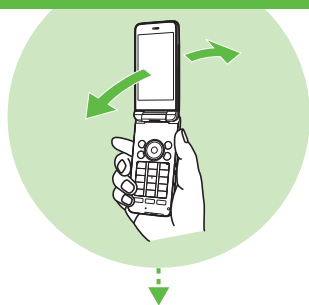

## Zoom In/Zoom Out

Shake forward to enlarge, or backward to reduce.

## Fonts

Yahoo! Keitai  
Message Window

## Zoom Image

Data Folder  
(Pictures)

## Zoom Page

 
PC Site Browser  
Direct Browser  
Document Viewer

## Toggling Motion Control On/Off

1 → Settings → →

Phone/

2 Motion Control →

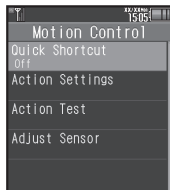

Motion Control Menu

3 Action Settings →

4 Select function →

5 On or Off →

## Enabling Quick Shortcut

1 In Motion Control menu,  
Quick Shortcut →

2 Switch On/Off →

3 On →

## Activating Show Secret Data Temporarily

Enter Handset Code → Shake handset left or right

- Close handset in Standby to cancel Show Secret Data.

## Important Motion Control Usage Notes

- Hold/shake handset correctly to avoid unintended results.
- Motion Control may be unavailable while handset is ringing/vibrating.
- Confirm there is ample space for Motion Control use; hold handset firmly and shake it gently to avoid injury/breakage. Do not shake handset roughly; handset may slip, resulting in injury or damage.

## Advanced

- Changing Quick Shortcut items
- Deleting Quick Shortcut items
- Restoring default Quick Shortcut items
- Practicing Motion Control actions
- Adjusting Motion Sensor (P.2-24)



# Mobile Manners

2

Basic Operations

 
Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Power it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

## Manner Mode

Mutes most handset function sounds.

1  (Long)

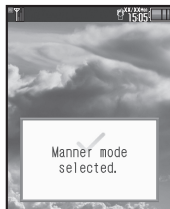

• Manner mode is set.


### When Manner Mode is Active

- Ringtones and other sounds are muted.
- 943SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.
- To unmute Speaker temporarily while playing music, etc., follow these steps:

During playback,  →  → Yes or

No → 

### Canceling Manner Mode

 (Long)

## Offline Mode

 
Temporarily suspends all transmissions.

1  → Settings →  → 

Network



2 Offline Mode → 

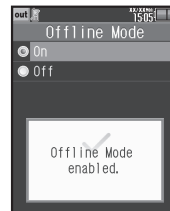3 On → 



• Offline Mode is set.

### Canceling Offline Mode

In , Off → 

## Advanced

-  • Changing handset modes • Creating a custom mode • Resetting Mode Settings • Suppressing Manner mode audio output confirmation (P.2-24)



## Security Codes

These codes are required for handset use.

- Write down Security Codes.
- Do not reveal Security Codes. SoftBank Mobile is not liable for misuse or damages.

<b>Handset Code*</b>	<b>9999</b> by default; use or change some functions
<b>Administrator Code*</b>	<b>9999</b> by default; required for Reset Settings, Reset All, Direct Browser Lock, Proxy Setting, etc.
<b>Center Access Code</b>	4-digit code selected at contract; access Optional Services via landlines or change contract details
<b>Network Password*</b>	4-digit code selected at contract; restrict incoming/outgoing calls (Call Barring)

\*Changeable on handset.

### Incorrect Code Entry

 
- Message appears for incorrect code entries; retry.
- If Network Password is incorrectly entered three times consecutively, Call Barring settings are locked. To resolve, Network Password and Center Access Code must be changed.

### Changing Security Codes

Enter four to eight digits.

#### Changing Handset Code

- 1 → **Settings** → → → **Phone**
- 2 **Locks** →

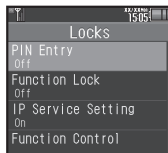

Locks Menu

- 3 **Chg. Handset Code** →

- 4 **Enter current Handset Code** →

- 5 **Enter new Handset Code** →

- 6 **Re-enter new Handset Code** →
  - To change Administrator Code subsequently, choose **Yes** and press .

- 7 **No** →

#### Changing Administrator Code

- 1 In **Locks** menu, **Administrator Setting** →
- 2 **Change Administrator Code** →
- 3 **Enter current Administrator Code** →
- 4 **Enter new Administrator Code** →
- 5 **Re-enter new Administrator Code** →



## My Details & Basic Tools

### My Number



- Handset phone number and the name entered at initial setup appear.

#### Editing My Details

After 1, (select tab) ➔ Select item ➔ ➔ Select item ➔ ➔ Edit ➔

### VeilView

Activate VeilView to prevent peeking.



#### Canceling VeilView

(Long)

### Keypad Lock

Lock handset keys and prevent accidental operation/function activation.



- Keypad Lock activates.
- does not power handset off.

#### Incoming Calls while Keypad Lock is Active

- Keypad Lock is temporarily canceled; press to answer calls. Keypad Lock reactivates after the call.

#### Canceling Keypad Lock



### Pen Light



- Mobile Light illuminates.



#### Important Pen Light Usage Note

- Do not point Pen Light at people or look at it directly.

### Battery Meter



- Approximate battery strength appears.

#### Battery Strength %

- 100% may not appear even when battery is full. This is by design; not a malfunction.

### Phone Help



- For *Indicators*, select a category and press .

## Advanced

- Clearing My Details
- Selecting My Details items to send
- Toggling My Details in Dual Mode
- Changing battery strength indicator pattern
- Changing VeilView pattern/density (P.2-25)

 


## Using Double Number

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

- Double Number requires a separate contract and basic monthly fee.
- Outside Japan, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.17-42).

### Two Phone Numbers & Two Mail Addresses

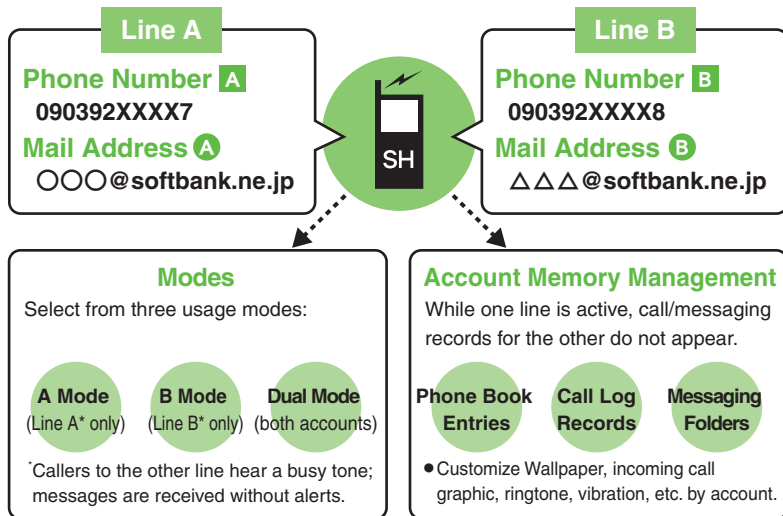

### Activating Double Number

Make sure signal is stable.

- 1 → **Settings** → →
- 2 **Double Number** →
- 3 **Switch On/Off** →
- 4 **On** →
- 5 **Enter Handset Code** → → **Yes** →

### Canceling Double Number

- In 4, **Off** → →
- When Double Number is canceled:
    - Line B calls and SMS messages are redirected to Line A Phone Number.
    - Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
    - Double Number account is not affected.



## Modes

Activate **A Mode** to use Line A only, **B Mode** to use Line B only, or **Dual Mode** to use both accounts.

### A Mode

#### Receive Calls to Line A Only

- Place calls or send messages via Line A.

#### A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).

### B Mode

#### Receive Calls to Line B Only

- Place calls or send messages via Line B.

#### B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status, S! Circle Talk and Decoration Call are unavailable.

## Advanced

- Omitting Handset Code entry when switching modes
- Renaming Double Number modes
- Showing indicator for calls missed or new mail on idle line
- Hiding Internet connection confirmation (P.2-25)



## Dual Mode

## Receive Calls to Both Accounts

- Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

## Phone Book Entries

Specify A, B or Dual.

## Messaging


Select Line A or Line B.  
Sender Address changes accordingly.

## Calling

Select Line A or Line B.  
Caller ID changes accordingly.

- Line type indicators appear in Phone Book entries, message lists, Call Log records, etc.

## Switching Modes

-  (Long)
- Enter Handset Code ➔ ●
- Select mode ➔ ●
  - For *B Mode*, a confirmation appears.
- Yes ➔ ●

## In Dual Mode

During an operation, if prompt window below appears, select a line and press ●.



If customizable by line, line indicator appears bottom right; press Ⓞ to switch.



If line selection is otherwise required, follow onscreen prompts.

## Advanced

-  ● Rejecting calls to either line in Dual Mode ● Setting main line for Dual Mode (P.2-25)



## Spinguru Menu

Sorting Favorites items	Open Spinguru Menu → Select <i>Menu Settings</i> item →  → <i>Sort Favorites</i> →  → <i>Yes</i> →
Deleting all Favorites items	Open Spinguru Menu → Select <i>Menu Settings</i> item →  → <i>Delete All Favorites</i> →  → <i>Yes</i> →
Deleting all History items	Open Spinguru Menu → Select <i>Menu Settings</i> item →  → <i>Delete All Histories</i> →  → <i>Yes</i> →
Restoring deleted general items	<small>[Start Here]</small> Open Spinguru Menu → Select <i>Menu Settings</i> item →  → See below  <b>All Items</b> <i>Restore All Recommended Functions Deleted</i> →  → <i>Yes</i> →  <b>One Item</b> <i>Select Restore XX</i> →  → <i>Yes</i> →
Changing scroll speed	→ <i>Settings</i> →  → <i>Phone/</i> → <i>Vector Pad Settings</i> →  → <i>Scroll Speed</i> →  → <i>Select speed</i> →
Setting Spinguru Menu opening method	→ <i>Settings</i> →  → <i>Phone/</i> → <i>Vector Pad Settings</i> →  → <i>Launch Spinguru Menu by</i> →  → <i>Select method</i> →
Changing Spinguru Menu spin speed	→ <i>Settings</i> →  → <i>Phone/</i> → <i>Vector Pad Settings</i> →  → <i>Jog Speed</i> →  → <i>Select speed</i> →
Calibrating Vector Pad	→ <i>Settings</i> →  → <i>Phone/</i> → <i>Vector Pad Settings</i> →  → <i>Correct Vector Pad</i> →  →  (Long)

## Shortcuts

Changing item order	→  → <i>Select numbered function</i> →  →  → <i>Move</i> →  →  → <i>Select target location</i> →
Restoring default shortcuts	→  → <i>Select numbered function</i> →  →  → <i>Set to Default</i> →  → <i>Yes</i> →

## Standby Shortcut

### Operations in Standby

Sorting icons	→  → <i>Operate from List</i> →  → <i>Sort Icon</i> →  → <i>Select option</i> → • Widgets may also be sorted depending on the size.
Moving icons	→  → <i>Select icon</i> →  → <i>Change Layout</i> →  → <i>Specify target location</i> →
Moving icons to front/back	→  → <i>Select icon</i> →  → <i>Operate</i> →  → <i>To Front or To Back</i> →
Removing multiple icons at once	→  → <i>Operate from List</i> →  → <i>Remove</i> →  →  → <i>Shortcut</i> → <i>Select icon</i> →  →  → <i>Complete selection</i> →  → <i>Yes</i> →
Locking icons	→  → <i>Settings</i> →  → <i>Lock Settings</i> →  → <i>Enter Handset Code</i> →  → <i>On</i> →



Icon View	
Moving icons	<p>⌚ → ⌚ (Long) → <i>Change Layout</i> → ● →</p> <p>Select icon → ● → Specify target location →</p> <p>● → ⌚</p>
Pasting to Standby	<p>⌚ → Select icon (widget) → ⌚ (Long) → <i>Set as StbyShortcut</i> → ● → Specify target location → ●</p>
Removing multiple icons at once	<p><b>Start Here</b> ⌚ → ⌚ (Long) → <i>Operate from List</i> → ● → See below</p> <p><b>Selected Icons</b></p> <p><i>Select &amp; Remove</i> → ● → ⌚ Select tab →</p> <p>Select icon → ● (☑) → Complete selection →</p> <p>⌚ → Yes → ●</p> <p><b>Whole Page</b></p> <p><i>Remove All</i> → ● → Select page → ⌚ → Yes → ●</p>
Switching pages	<p>⌚ → ⌚ (Long) → Select page → ●</p>
Changing page order	<p>⌚ → ⌚ (Long) → <i>Move Page</i> → ● → Select target location → ●</p>
Inserting pages	<p>⌚ → ⌚ (Long) → <i>Insert Page</i> → ● → <i>Insert Previous or Insert Next</i> → ●</p>
Editing page names	<p><b>Start Here</b> ⌚ → ⌚ (Long) → <i>Settings/Manage</i> → ● → <i>Change Page Name</i> → ● → See below</p> <p><b>Renaming</b></p> <p>Select page → ● → Enter name → ●</p> <p><b>Resetting All Page Names</b></p> <p>⌚ → Yes → ●</p>

Hiding icons	<p>⌚ → ⌚ (Long) → <i>Settings/Manage</i> → ● →</p> <p><i>Icon Off Setting</i> → ● → Enter Handset Code →</p> <p>● → Select page → ● → On → ●</p>
Opening properties	<p>⌚ → Select icon (widget) → ⌚ (Long) →</p> <p><i>Details</i> → ●</p>
Deleting invalid icons	<p>⌚ → ⌚ (Long) → <i>Settings/Manage</i> → ● →</p> <p><i>Remove Invalid Icon</i> → ● → Yes → ●</p>
Accessing last opened page with ⌚	<p>⌚ → ⌚ → <i>Settings</i> → ● → ● <i>Key Settings</i> →</p> <p>● → <i>Last Visited Page</i> → ●</p>

### Cycloid Position

Changing function assigned to <i>Launch Appli</i> in landscape menu	<p>● → <i>Settings</i> → ● → ⌚ <i>Phone/</i> →</p> <p><i>Display Rotation</i> → ● → <i>Rotate 90° to</i> → ●</p> <p>→ <i>Set Appli</i> → ● → Select menu item → ● →</p> <p>Select new item → ●</p> <ul style="list-style-type: none"> <li>Change is also effective when Rotate 90° is set to <i>Launch Appli</i> via Main Menu.</li> </ul>
Changing URL assigned to <i>Connect Bookmark</i> in landscape menu	<p>● → <i>Settings</i> → ● → ⌚ <i>Phone/</i> →</p> <p><i>Display Rotation</i> → ● → <i>Rotate 90° to</i> → ●</p> <p>→ <i>Set Bookmark</i> → ● → Select Bookmark entry → ● → Yes → ●</p> <ul style="list-style-type: none"> <li>Change is also effective when Rotate 90° is set to <i>Connect Bookmark</i> via Main Menu.</li> </ul>



## Motion Control

Changing Quick Shortcut items	<ul style="list-style-type: none"> <li>● → Settings → ● → Phone/☎ → Motion Control → ● → Quick Shortcut → ● → Shortcut Entry → ● → Open Position or Cycloid Position → ● → Select menu item → ● → Select new item → ●</li> <li>• To assign menu items, select one and press ☒.</li> </ul>
Deleting Quick Shortcut items	<ul style="list-style-type: none"> <li>● → Settings → ● → Phone/☎ → Motion Control → ● → Quick Shortcut → ● → Shortcut Entry → ● → Open Position or Cycloid Position → ☒ → Delete → ● → Yes → ●</li> </ul>
Restoring default Quick Shortcut items	<ul style="list-style-type: none"> <li>● → Settings → ● → Phone/☎ → Motion Control → ● → Quick Shortcut → ● → Shortcut Entry → ● → ☒ → Reset Settings → ● → Enter Handset Code → ● → Yes → ●</li> </ul>
Practicing Motion Control actions	<ul style="list-style-type: none"> <li>● → Settings → ● → Phone/☎ → Motion Control → ● → Action Test → ● → Select item → ●</li> <li>• Follow onscreen instructions.</li> </ul>
Adjusting Motion Sensor	<ul style="list-style-type: none"> <li>● → Settings → ● → Phone/☎ → Motion Control → ● → Adjust Sensor → ●</li> <li>• Follow onscreen instructions.</li> <li>• Avoid adjusting Motion Sensor near metal/magnetic objects or aboard trains or in vehicles.</li> </ul>

## Mode Settings

Changing handset modes	<ul style="list-style-type: none"> <li>Start Here → ● → Settings → ● → In Sound/Display menu, Mode Settings → ● → See below</li> </ul>
	<ul style="list-style-type: none"> <li>Selecting a Handset Mode</li> <li>Select mode → ●</li> <li>Customizing Handset Modes</li> <li>Select mode → ☒ → Select item → ● → Adjust settings</li> <li>• Not available for Normal mode.</li> </ul>
Creating a custom mode	<ul style="list-style-type: none"> <li>● → Settings → ● → In Sound/Display menu, Mode Settings → ● → Original → ☒ → Select item → ● → Adjust settings</li> </ul>
Resetting Mode Settings	<ul style="list-style-type: none"> <li>● → Settings → ● → In Sound/Display menu, Mode Settings → ● → Select mode → ☒ → Enter Handset Code → ● → Yes → ●</li> </ul>
Suppressing Manner mode audio output confirmation	<ul style="list-style-type: none"> <li>● → Settings → ● → In Sound/Display menu, Mode Settings → ● → Manner → ☒ → Audio Confirmation → ● → Do not Show → ●</li> </ul>





## My Details

Clearing My Details	→  →  → <i>Reset My Details</i> →  →  → <b>Yes</b> →
Selecting My Details items to send	→  →  → <i>Set Send Items</i> →  →  →  → <b>Complete selection</b> →
Toggle My Details in Dual Mode	→  →  → <i>Switch to B or Switch to A</i> →

## Battery Meter

Changing battery strength indicator pattern	→ <i>Settings</i> →  → <b>In Sound/Display menu, Display</b> →  → <i>Mini Battery</i> →  → <b>Select pattern</b> → <ul style="list-style-type: none"> <li>• Battery strength (appears as a percentage) is for reference only.</li> </ul>
---	--

## VeilView

Changing VeilView pattern/density	→ <i>Settings</i> →  → <b>In Sound/Display menu, Display</b> →  → <i>VeilView</i> →  → <b>See below</b>
	<b>Pattern</b> <i>Pattern Setting</i> →  → <b>Select pattern</b> →  → <b>Select scale or Animation</b> →
	<b>Density</b> <i>Density Setting</i> →  → <b>Select density</b> → <ul style="list-style-type: none"> <li>• Not available when pattern is set to <i>Animation</i>.</li> </ul>

## Double Number

<b>All Modes</b>	
Omitting Handset Code entry when switching modes	→ <i>Settings</i> →  → <b>Phone/</b> →  → <i>Double Number</i> →  → <i>Password Entry</i> →  → <b>Off</b> →  → <b>Enter Handset Code</b> →
Renaming Double Number modes	→ <i>Settings</i> →  → <b>Phone/</b> →  → <i>Double Number</i> →  → <i>Mode Name</i> →  → <b>Select mode</b> →  → <b>Enter name</b> →  → <b>Select icon</b> →
<b>A Mode &amp; B Mode</b>	
Showing indicator for calls missed or new mail on idle line	→ <i>Settings</i> →  → <b>Phone/</b> →  → <i>Double Number</i> →  → <i>Show Missed On</i> →
Hiding Internet connection confirmation	→ <i>Settings</i> →  → <b>Phone/</b> →  → <i>Double Number</i> →  → <i>Packet Warning</i> →  → <b>Off</b> → <ul style="list-style-type: none"> <li>• Available for B Mode.</li> </ul>
<b>Dual Mode</b>	
Rejecting calls to either line in Dual Mode	→ <i>Settings</i> →  → <b>Phone/</b> →  → <i>Double Number</i> →  → <i>Reject By Line</i> →  → <b>Select line</b> →  → <b>On</b> →
Setting main line for Dual Mode	→ <i>Settings</i> →  → <b>Phone/</b> →  → <i>Double Number</i> →  → <i>Send Priority</i> →  → <b>Select option</b> →

