

S! Appli	10-2
Using S! Applications.....	10-2
Mobile Widget	10-3
Customizing Standby Display (Japanese).....	10-3

Additional Functions	10-6
Troubleshooting	10-10

10

S! Applications & Widgets



Using S! Applications

 
Try out the preloaded S! Applications or download and use 943SH-compatible S! Applications, including games.

- Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.
- Subscription to Keitai Wi-Fi is required to use S! Applications over Wi-Fi.

Remote Control (Familink Remote)

- Use **ファミリンクリモコン for AQUOS** S! Application (Japanese) to control a TV, VCR, etc. via infrared.

- 1 → **S! Appli** →
- 2 **S! Appli Library** →

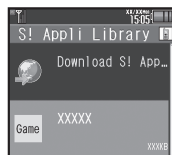

S! Appli Library

- 3 **Select application** →

Network S! Applications

- A message appears indicating that Internet connection is required. Follow onscreen instructions.

Incoming Calls

 
- Incoming calls automatically pause S! Application.

Opening S! Appli Notification History

In , **Notification History** →

Exiting S! Applications

- 1

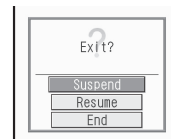

- 2 **End** →

Pausing S! Applications

In , **Suspend** →

Resuming S! Applications

→ **Resume** →

- Select **Cancel** to open Main Menu and keep the S! Application paused. (Additional function activation may be disabled depending on the S! Application.)
- Select **End** to exit the S! Application.

 
Advanced

- Downloading S! Applications
- Adjusting S! Application sound volume
- Canceling surround effect
- Setting handset responses to incoming transmissions
- Setting S! Application to activate in Standby
- Setting Permissions
- Opening properties
- Moving S! Applications to Memory Card
- Changing S! Application settings
- Deleting S! Applications
- Restoring default S! Application settings
- Restoring default S! Appli Library
- Synchronizing Memory Card S! Applications with 943SH
- Opening Java™ license information (P.10-6 - 10-7)



Customizing Standby Display (Japanese)

Paste various widgets (applications) to Standby to access/activate information/functions immediately from Standby.
To handle widgets with Icon View, see P.2-12 "Icon View."

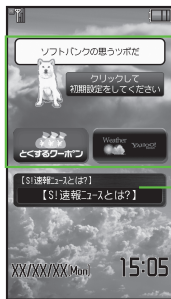

Widgets

SI Quick News &
SI Friend's Status Widget

Saving Widgets to Standby

Save up to three widgets (excluding *SI速報* *ニュース*/*SIともだち状況*, *歩数計* and *家計簿*).

1 → → **Paste Icon** →

Widget Tab

Standby Shortcut Tab



2 → →

3 **Select widget** →

- Corresponding icon appears.

4 → → **Specify target location**
→

Using Widgets

1 → → **Select widget** →



- Widget activates; follow onscreen instructions.

Unlocking Temporarily

→ → → **Enter Handset Code** →

 
Advanced

Moving widgets Removing multiple widgets at once Locking widgets (And more on P.10-8)



Removing Widgets from Standby

1 → Select widget →

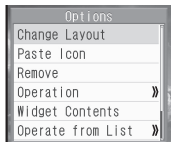

2 Remove →

Obtaining Widgets

1 → Widget →



Mobile Widget Menu

2 Widget Store →

- Follow onscreen instructions.

Installing Widgets

- Some widgets may need to be installed manually; follow these steps:

[Mobile Widget Menu] **Widget Contents** → → Select widget →

→ Install → → Yes →

Activating Widgets Not Saved in Standby

[Mobile Widget Menu] **Widget Contents** → → Select widget →

→

Deleting Widgets

1 In Mobile Widget menu, **Widget Contents** →

2 **Select widget** →

- *SI速報ニュース/SIともだち状況*, *歩数計* and *家計簿* cannot be deleted.

3 **Delete** → → Yes →

Deleting All Widgets

In , *SI速報ニュース/SIともだち状況* →

→ **Delete All** → → Enter

Handset Code → → Yes →

- If there is a widget saved in Standby, a confirmation appears; follow onscreen prompt.

Advanced

- Opening properties
- Saving widgets to Icon View
- Slowing pointer speed
- Opening widget notification history
- Changing automatic update interval
- Receiving updates automatically while outside Japan
- Hiding confirmation outside Japan
- Disabling widget notifications
- Disabling cookies
- Deleting cookies (P.10-8 - 10-9)



Using Function-Linked Widgets






943SH is preloaded with *S!速報ニュース!ともだち状況* (S! Quick News & S! Friend's Status widget), *歩数計* (Pedometer widget) and *家計簿* (Household Accounts widget).

S! Quick News & S! Friend's Status Widget

■ Setting View Pattern

- 1  ➔  **Select S! Quick News & S! Friend's Status widget** ➔ 
- 2 **Settings** ➔  ➔ **Pattern Setting** ➔ 
- 3 **Select item** ➔  (☑) ➔ 








■ Switching View

- 1  ➔  **Select S! Quick News & S! Friend's Status widget** ➔ 
- 2 **Operation** ➔  ➔ **Switch Pattern** ➔ 
 - Repeat the steps above to switch the view.

Pedometer Widget

First, save *歩数計* to Standby.

■ Saving Body Information

- 1  ➔  **Select Pedometer widget** ➔ 
- 2 **Settings** ➔  ➔ **Body Info Settings** ➔ 
- 3 **Enter Handset Code** ➔  ➔ **Complete information entry** ➔ 


Household Accounts Widget

First, save *家計簿* to Standby.

■ Opening Household Accounts Window

- 1  ➔  **Select Household Accounts widget** ➔ 

Advanced

-  ● Adding news items ● Changing news scroll speed ● Showing unread news only ● Assigning members ● Managing members (P.10-9)



S! Applications	
Downloading S! Applications	<ul style="list-style-type: none"> Start Here → S! Appli → S! Appli Library → Download S! Appli → Follow onscreen instructions.
Adjusting S! Application sound volume	<ul style="list-style-type: none"> S! Appli → Settings → Application Volume → Adjust level
Canceling surround effect	<ul style="list-style-type: none"> S! Appli → Settings → Surround → Off
Setting handset responses to incoming transmissions	<ul style="list-style-type: none"> Start Here → S! Appli → Settings → Calls & Alarms → See below
	<p>Showing Calls</p> <ul style="list-style-type: none"> Select item → Show Call Notice
	<p>Pausing S! Application for Incoming Mail</p> <ul style="list-style-type: none"> Incoming Message → Message Priority
	<p>Showing Alarm Notice</p> <ul style="list-style-type: none"> Alarm → Alarm Notice
	<p>Showing Incoming S! Appli Request Notice</p> <ul style="list-style-type: none"> Notification → Start Notice

Setting S! Application to activate in Standby	<ul style="list-style-type: none"> Start Here → S! Appli → See below <p>Activating Screensaver</p> <ul style="list-style-type: none"> Settings → Screensaver → Switch On/Off → On <p>Setting Screensaver</p> <ul style="list-style-type: none"> S! Appli Library → Select application → As Screensaver <ul style="list-style-type: none"> As Screensaver appears for compatible S! Applications. Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.
	<p>Changing Screensaver Activation Time</p> <ul style="list-style-type: none"> Settings → Screensaver → Activation Time → Enter time
	<p>Disabling Automatic Screensaver Restart</p> <ul style="list-style-type: none"> Settings → Screensaver → Stop Auto Start → On
Setting Permissions	<ul style="list-style-type: none"> Start Here → S! Appli → S! Appli Library → Select application → Permission → See below <p>Customizing Permissions for S! Appli Operations</p> <ul style="list-style-type: none"> Select item → Select option <p>Resetting Permission Settings</p> <ul style="list-style-type: none"> Reset Settings → Yes
	<p>Opening properties</p> <ul style="list-style-type: none"> S! Appli → S! Appli Library → Select application → Details



<p>Moving S! Applications to Memory Card</p>	<p>● → S! Appli → ● → S! Appli Library → ● → (v) → Select application → ● (□/✓) → Complete selection → ☺ → Move to Card → ●</p> <ul style="list-style-type: none"> When an older version of the S! Application is saved, choose Yes or No and press ●. Repeat application selection step, as needed, before pressing ☺. Some S! Applications may not be moved to Memory Card.
<p>Changing S! Application settings</p>	<p>Start Here ● → S! Appli → ● → Settings → ● → See below</p> <p>Activating Notification Setting Notification Setting → ● → On → ●</p> <p>Setting Backlight Status Backlight → ● → Switch On/Off → ● → Select option → ●</p> <ul style="list-style-type: none"> Selecting Normal Settings applies Display Backlight settings. <p>Disabling Backlight Flashing Backlight → ● → Blink → ● → Off → ●</p> <p>Disabling Vibration Vibration → ● → Off → ●</p>
<p>Deleting S! Applications</p>	<p>● → S! Appli → ● → S! Appli Library → ● → Select application → ☺ → Delete → ● → Yes → ●</p> <ul style="list-style-type: none"> Handset Code may be required. Cancel Screensaver to delete Screensaver S! Application.

<p>Restoring default S! Application settings</p>	<p>● → S! Appli → ● → Settings → ● → Set to Default → ● → Enter Handset Code → ● → Yes → ●</p>
<p>Restoring default S! Appli Library</p>	<p>● → S! Appli → ● → Settings → ● → Memory All Clear → ● → Enter Handset Code → ● → Yes → ●</p> <ul style="list-style-type: none"> Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.) Memory All Clear deletes all downloaded S! Applications and Lifestyle-Applications; Near Chat access restriction will be canceled.
<p>Synchronizing Memory Card S! Applications with 943SH</p>	<p>● → S! Appli → ● → Settings → ● → Synchronization → ● → Yes → ●</p>
<p>Opening Java™ license information</p>	<p>● → S! Appli → ● → Information → ●</p>



Mobile Widget

Operations in Standby

Selecting widget display option	<p>⏸ → ☰ → Settings → ● → Show Widget → ● → Select option → ●</p> <ul style="list-style-type: none"> • Always On: Widgets always appear. • On/Off: Press ☰ to show/hide widgets. • Off on Standby Screen: Press ⏸ to show widgets. • Always Off: Widgets do not appear even when ⏸ is pressed. (Reconfigure via Show Widget in Standby Display menu.)
Moving widgets	<p>⏸ → ⚙ → Select widget → ☰ → Change Layout → ● → Specify target location → ●</p>
Moving widgets to front/back	<p>⏸ → ⚙ → Select widget → ☰ → Operation → ● → To Front or To Back → ●</p>
Updating view	<p>⏸ → ⚙ → Select widget → ☰ → Operation → ● → Update View → ●</p>
Removing multiple widgets at once	<p>⏸ → ☰ → Operate from List → ● → Remove → ● → Select widget → ● (☑) → Complete selection → ⏸ → Yes → ●</p>
Locking widgets	<p>⏸ → ☰ → Settings → ● → Lock Settings → ● → Enter Handset Code → ● → On → ●</p>

Managing

Opening properties	<p>● → Widget → ● → Widget Contents → ● → Select widget → ☰ → Details → ●</p> <ul style="list-style-type: none"> • Select widget other than <i>SI速報ニュース/SIともだち状況歩数計</i> or <i>家計簿</i>.
Saving widgets to Icon View	<p>● → Widget → ● → Widget Contents → ● → Select widget → ☰ → Add to Icon View → ● → Select page → ● → Specify target location → ●</p>
Slowing pointer speed	<p>● → Widget → ● → Widget Contents → ● → Select widget → ● → ☰ → Cursor Speed → ● → Slow → ● → OK</p> <ul style="list-style-type: none"> • May be unavailable for some widgets.
Widget History	<p>Start Here → ● → Widget → ● → Widget History → ● → See below</p> <p>Showing All Text Select record → ☰ → View full text → ●</p> <p>Deleting a Record Select record → ☰ → Delete → ● → Yes → ●</p> <p>Deleting All Records Select record → ☰ → Delete All → ● → Enter Handset Code → ● → Yes → ●</p>
Opening widget notification history	



Settings

Changing automatic update interval	● → <i>Widget</i> → ● → <i>Settings</i> → ● → <i>Auto Refresh</i> → ● → <i>Select interval</i> → ●
Receiving updates automatically while outside Japan	● → <i>Widget</i> → ● → <i>Settings</i> → ● → <i>AutoConnect Abroad</i> → ● → <i>On</i> → ●
Hiding confirmation outside Japan	● → <i>Widget</i> → ● → <i>Settings</i> → ● → <i>Set Use Abroad</i> → ● → <i>Off</i> → ●
Disabling widget notifications	● → <i>Widget</i> → ● → <i>Settings</i> → ● → <i>Notification Setting</i> → ● → <i>Off</i> → ●
Disabling cookies	● → <i>Widget</i> → ● → <i>Settings</i> → ● → <i>Cookies</i> → ● → <i>Disabled</i> → ●
Deleting cookies	● → <i>Widget</i> → ● → <i>Settings</i> → ● → <i>Delete Cookies</i> → ● → <i>Yes</i> → ●

S! Quick News & S! Friend's Status Widget (S! Quick News)

Adding news items	⌚ → Select S! Quick News & S! Friend's Status widget → ☰ → <i>Operation</i> → ● → <i>Content Menu</i> → ● → <i>Add News</i> → ● → <i>S! Quick News List</i> → ● → <i>登録はこちら</i> → ● ● → <i>Yes</i> → ● → <i>Select genre</i> → ● → <i>Select item</i> → ● ● Follow onscreen instructions.
Changing news scroll speed	⌚ → Select S! Quick News & S! Friend's Status widget → ☰ → <i>Operation</i> → ● → <i>Content Menu</i> → ● → <i>News Display</i> → ● → <i>News Speed</i> → ● → <i>Select speed</i> → ●

Showing unread news only	⌚ → Select S! Quick News & S! Friend's Status widget → ☰ → <i>Operation</i> → ● → <i>Content Menu</i> → ● → <i>News Display</i> → ● → <i>Target News</i> → ● → <i>Unread Only</i> → ●
S! Quick News & S! Friend's Status Widget (S! Friend's Status)	
Assigning members	⌚ → Select S! Quick News & S! Friend's Status widget → ☰ → <i>Operation</i> → ● → <i>Content Menu</i> → ● → <i>Assign Member</i> → ● → <i>Select category</i> → ● → <i>Select entry/member</i> → ● → <i>(Empty)</i> → ●
Managing members	Start Here ⌚ → Select S! Quick News & S! Friend's Status widget → ● → <i>Select member</i> → ☰ → <i>Operation</i> → ● → <i>Content Menu</i> → ● → See below Deleting Members <i>Delete</i> → ● → <i>Yes</i> → ● Changing Member Order <i>Move</i> → ● → ☰ (Up) or ☶ (Down) → ● Changing Member Icons <i>Change Icon</i> → ● → <i>Select Pictogram</i> → ●



S! Applications

? Cannot move S! Applications to Memory Card

- Memory Card memory may be low.

? S! Applications do not pause for incoming transmissions despite *Calls & Alarms* settings

- Regardless of setting, a notice appears for Screensaver S! Applications.

? Keitai Wi-Fi connection failure confirmation appears upon starting S! Application

- Handset may be outside Wi-Fi range. Move into range or cancel **Switch from Wi-Fi to 3G** in Switch Notification.

