

<b>Date &amp; Time</b> .....	<b>16-2</b>
<b>Display &amp; Illumination</b> .....	<b>16-3</b>
Language.....	16-3
Image & Text.....	16-3
Display & Backlight.....	16-3
Standby Display.....	16-4
Key Backlight.....	16-4
Key Illumination .....	16-4
<b>Incoming Transmissions</b> .....	<b>16-5</b>
Handset Response .....	16-5

<b>Sounds</b> .....	<b>16-6</b>
System Sounds .....	16-6
Additional Sound Settings .....	16-6
<b>Connectivity</b> .....	<b>16-7</b>
Network .....	16-7
IP Service .....	16-7
<b>Reset</b> .....	<b>16-8</b>
Restoring Default Settings.....	16-8

# 16

## Handset Customization



# 🔧 Date & Time Settings

**Date & Time**

[Start Here](#) ⦿ ➔ *Settings* ➔ ⦿ ➔ In Sound/Display menu, *Date & Time* ➔ ⦿

Setting the date and time	<i>Set Date/Time</i> ➔ ⦿ ➔ Enter the year ➔ Enter the month ➔ Enter the day ➔ Enter the time ➔ ⦿
Correcting Clock manually	<i>Time Correction</i> ➔ ⦿ ➔ <i>Manual</i> ➔ ⦿ ➔ <i>Yes</i> ➔ ⦿ ➔ <i>Yes</i> ➔ ⦿
Disabling auto Clock correction	<i>Time Correction</i> ➔ ⦿ ➔ <i>Auto Corr. Setting</i> ➔ ⦿ ➔ <i>Off</i> ➔ ⦿
Setting auto Clock correction timing	<i>Time Correction</i> ➔ ⦿ ➔ <i>Auto Corr. Setting</i> ➔ ⦿ ➔ <i>On</i> ➔ ⦿ ➔ Select item ➔ ⦿ (☐/☑) ➔ Yr ➔ <input type="text"/>
Activating Daylight Saving	<i>Daylight Saving</i> ➔ ⦿ ➔ <i>On</i> ➔ ⦿
Changing Time Zone	<i>Set Time Zone</i> ➔ ⦿ ➔ Select area ➔ ⦿
Adding custom time zone	<i>Set Time Zone</i> ➔ ⦿ ➔ Enter city name ➔ ⦿ ➔ ↓ + or - ➔ ⦿ ➔ Enter time difference ➔ ⦿
Changing time format to 12 hour	<i>Time Format</i> ➔ ⦿ ➔ <i>12 Hour</i> ➔ ⦿
Changing date format	<i>Date Format</i> ➔ ⦿ ➔ Select option ➔ ⦿
Starting the Calendar week on Monday	<i>Calendar Format</i> ➔ ⦿ ➔ <i>Monday-Sunday</i> ➔ ⦿



# Y Display & Illumination Settings 1

## Language

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ Sound/Display menu

Switching interface between Japanese and English

**Language** or 言語選択 ➔ ● ➔ **English** or 日本語 ➔ ●

## Image & Text

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Display** ➔ ●

Showing preloaded images for incoming calls, etc.

**System Graphics** ➔ ● ➔ **Select item** ➔ ● ➔ **Preset Animation (or Pattern 1 to Pattern 3)** ➔ ●

Showing Data Folder images for incoming calls, etc.

**System Graphics** ➔ ● ➔ **Select item** ➔ ● ➔ **Select folder** ➔ ● ➔ **Select image** ➔ ● ➔ **Specify image area** ➔ ●  
 ● Some images may be usable without specifying image area.

Showing Customized Screen for incoming calls, etc.

**System Graphics** ➔ ● ➔ **Select item** ➔ ● ➔ **Customized Screen** ➔ ● ➔ ●  
 ● Not available for **Power On** or **Power Off**.

Selecting image enhancement option for Standby and video playback

**Vivid Mode** ➔ ● ➔ **Select option** ➔ ●

Changing font of numbers entered in Standby

**Dial Number** ➔ ● ➔ **Select pattern** ➔ ●

Showing a message each time handset is powered on

**Greeting Message** ➔ ● ➔ **Edit Message** ➔ ● ➔ **Enter message** ➔ ● ➔ **Switch On/Off** ➔ ● ➔ **On** ➔ ●

## Display & Backlight

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Display** ➔ ●

Disabling display transition effects

**Display Effects** ➔ ● ➔ **Off** ➔ ●

Changing Display/key Backlight illumination time

**Backlight** ➔ ● ➔ **Time Out** ➔ ● ➔ **Select time** ➔ ●  
 ● For custom illumination time, select **Other**.

Changing Display Brightness

**Backlight** ➔ ● ➔ **Brightness** ➔ ● ➔ **Adjust level** ➔ ●

Canceling/activating Light Sensor

**Backlight** ➔ ● ➔ **Brightness** ➔ ● ➔  (  /  ) ➔ ●

Changing inactivity time after which Display turns off

**Display Saving** ➔ ● ➔ **Select time** ➔ ●



## 🔧 Display & Illumination Settings 2

### Standby Display

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Display** ➔ ● ➔ **Standby Display** ➔ ●

Changing Clock/Calendar

**Clock/Calendar** ➔ ● ➔ **Select type** ➔ ●

Selecting Mobile Widget display option

**Show Widget** ➔ ● ➔ **Select option** ➔ ●

Showing Network service provider name in Standby

**Show Operator Name** ➔ ● ➔ **On** ➔ ●

### Key Backlight

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ **Phone** ➔ ●

Disabling key Backlight illumination

**Set Key Light** ➔ ● ➔ **Off** ➔ ●

### Key Illumination

[Start Here](#) ● ➔ **Settings** ➔ ● ➔ In Sound/Display menu, **Sounds & Alerts** ➔ ●

Setting Key Illumination pattern by action

**Set Key Illumi** ➔ ● ➔ **Select action** ➔ ● ➔ **Key Pattern** ➔ ● ➔ **Select pattern** ➔ ●

Disabling Key Illumination by action

**Set Key Illumi** ➔ ● ➔ **Select action** ➔ ● ➔ **Switch On/Off** ➔ ● ➔ **Off** ➔ ●





# Sound Settings

## System Sounds

**Start Here** → Settings → In Sound/Display menu, *Sounds & Alerts*

Enabling Keypad Tones	<i>System Sounds</i> → Keypad Tones → Select tone
Changing S! Circle Talk tone	<i>System Sounds</i> → S! Circle Talk → Select tone
Changing other System Sounds	<i>System Sounds</i> → Select item → Tone or Sound → Select folder → Select tone/file <ul style="list-style-type: none"> <li>For files with limited usage period, choose <b>Yes</b> and press.</li> </ul>
Disabling System Sounds	<i>System Sounds</i> → Select item → Tone or Sound → Off <ul style="list-style-type: none"> <li>Not available for <i>S! Circle Talk</i>.</li> <li>For <i>Keypad Tone</i>, omit <i>Tone</i> or <i>Sound</i> selection step.</li> </ul>
Changing System Sound duration	<i>System Sounds</i> → Select item → Duration → Select/enter time <ul style="list-style-type: none"> <li>Not available for <i>Keypad Tones</i> or <i>S! Circle Talk</i>.</li> </ul>
Changing System Sound volume	<i>Volume</i> → General Volume → Adjust level

## Additional Sound Settings

**Start Here** → Settings → Sound/Display menu

Disabling Speaker when using Headphones	<i>Ringer Output</i> → Earphone
Activating Speaker surround	<i>Sounds &amp; Alerts</i> → Surround → On



# Connectivity Settings

Network	
	<a href="#">Start Here</a> → Settings → Network
Selecting a Network manually	Select Network → Manual → Select Network
Adding preferred Networks	Select Network → Set Preferred → Select target location → Select Network
Adding preferred Networks to the end	Select Network → Set Preferred → Add to End → Select Network
Deleting preferred Networks	Select Network → Set Preferred → Select Network → Delete
Adding Networks	Select Network → Add New Network → Add → Enter country code → Enter Network code → Enter name → Select NW Type → Select type <ul style="list-style-type: none"> <li>After selecting <b>Add New Network</b> and pressing <b>Enter</b>, Network list appears if Network has already been added. To add more, press <b>Enter</b> again and proceed.</li> </ul>
Editing Networks	Select Network → Add New Network → Select Network → Change → Edit in the same manner as adding Networks
Deleting Networks	Select Network → Add New Network → Select Network → Delete
Switching Network service between 3G and GSM manually	Select Service → Manual → Select service
Refreshing Network connection	Re-search Signal
Retrieving Network Information	Retrieve NW Info → Yes
Checking Network status	Network Info
Editing connection names for mobile data communication	External Device → Select name → Edit
Clearing connection names for mobile data communication	External Device → Reset → Enter Handset Code → Yes
IP Service	
	<a href="#">Start Here</a> → Settings → Phone/ → Locks
Disabling IP Service	IP Service Setting → Off → Enter Handset Code <ul style="list-style-type: none"> <li>When <b>Off</b>, S! Friend's Status, S! Circle Talk, Decoration Call, S! Appli Notification Setting and Mobile Widget Notification Setting are disabled.</li> </ul>



# Reset Settings

## Restoring Default Settings

[Start Here](#) → Settings → Phone/☎ → Master Reset →

Restoring default handset settings	<p><b>Reset Settings</b> → Enter Administrator Code → Yes → Yes →</p> <ul style="list-style-type: none"> <li>Some default settings may not be restored.</li> </ul>
Clearing all Phone Book entries, Data Folder files, etc.	<p><b>Reset All</b> → Enter Administrator Code → Yes → Yes →</p> <ul style="list-style-type: none"> <li>Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keitai® service providers for details.)</li> <li>Files and records deleted by Reset All cannot be restored. Reset All deletes all downloaded S! Applications and Lifestyle-Applications.</li> <li>Handset Code and Administrator Code return to the default settings.</li> </ul>

- A confirmation may appear before entering Administrator Code; end the current function to proceed.
- When Double Number is active, regardless of usage mode setting, Reset Settings restores all default settings (Double Number is canceled), and Reset All clears all user files.

