Interface & Storage Handset Interface & Media File St	torage
Accessing Functions	2-3
Touch Panel	2- 4
Using Touch Panel	2-4
Menu Operations	2-6
Main Menu	
Using Simplified Menus (Simple M	,
Spinguru Menu	2-10
Using Spinguru Menu	
Accessing Functions	
Function Shortcuts	2-13
Toggling Active Functions (Multi Job)	2-14
Standby Shortcuts	
Icon View	

Viewer Position	. 2-17
Viewer Position Setup	2-17
Motion Control	. 2-18
Keypad Lock	. 2-20
Activating/Canceling Keypad Lock.	2-20
Mobile Manners	. 2-21
Basic Tools	2-22
My Details & Basic Tools	2-22
Double Number	. 2-23
Using Double Number	2-23
Modes	2-24
Additional Functions	. 2-26

2

Basic Operations



Handset Interface & Media File Storage

Handset Operations

Use handset keys, Touch Panel or Motion Control.

Handset Keys

Use Keypad, etc. with clamshell open; supports all handset operations.



Touch Panel

Touch menu items, Softkeys or icons in clamshell open or Viewer position.



Motion Control

Move handset (e.g., shake it left or right, turn it over, etc.) to access functions, enlarge/reduce fonts or images, navigate functions, and more. (Complete setup beforehand.)

 


Viewer Position

Use handset in the following styles in Viewer position.

■ Digital Camera & Portable TV

Hold handset in landscape; press Keypad Lock & Shutter Key to release shutter, or watch TV in widescreen.



■ Compact Touch Panel Device

Intuitive Touch Panel interface supports most handset operations.



Media File Storage


While a Memory Card is inserted, captured images, downloads and some other files are saved to the card; change this setting in each function as needed.

- My Pictograms and Graphic Mail templates are saved to handset.
- Without a Memory Card, files are saved to handset automatically.



Accessing Functions

Use the following methods as needed.

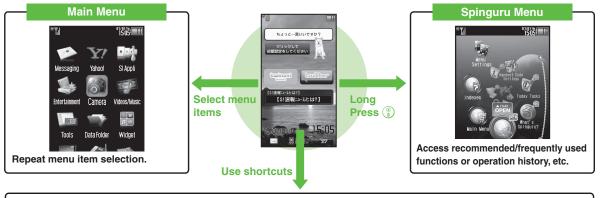





■Standby Shortcuts

Save functions to Standby or Icon View.

■Quick Operations



Enter numbers to access functions. To activate functions, press the corresponding key.



Using Touch Panel

Touch Display to select menu items, open functions, scroll pages, etc. Available in clamshell open or Viewer position (regardless of orientation).

Basic Operations





Tap item to open corresponding function; execute Softkey functions/operations.

■ Double Tap

 
Tap Display twice in rapid succession (within approximately 0.6 seconds).

Long Touch



Touch item for 1+ seconds to execute corresponding function/operation.

Drag




Touch and drag to move item or scribble/sketch; release when complete.

Swipe



Swipe Display to scroll.

 Spread & Pinch



Spread or pinch fingers across Display to enlarge or reduce images, etc.



Advanced

Operational Examples

Selection & Execution

Tap item to open or execute corresponding function/operation.



Tap **Data Folder**

The result is the same as selecting an item with \$ and pressing $\textcircled{\bullet}$.

■ Two Taps

When corresponding Options menu is available, etc., tapping item may only select (highlight) it; tap the item again to execute function/operation.



Tap Music twice



Music folder opens

Screen Scroll

To see items outside Display area, drag or swipe in opposite direction.



Swipe right



Left portion appears

Enlarge & Reduce

Spread or pinch to enlarge or reduce images, etc.





Enlarged

- Double-tapping images, etc. may also enlarge/reduce them.
- On Internet page or before saving captured image, Long Touch area/portion to enlarge it.

Open Menus

Long Touch Display to open menu.



Important Touch Panel Usage Notes

- Touch Panel may not respond in these situations:
 - Use with gloves/long fingernails
 - Use of pens, pencils or sharp objects
- Use with objects on/against Display
- When Display is wet
- To prevent malfunctions, do not:
 - Touch Display with wet fingers
- Use if Display is wet
- Subject Display to force/pressure
- Place labels or stickers over Display
- Calibrate Touch Panel (P.2-8) to improve response.



Main Menu

Opening Main Menu 0 **■**Touch Panel ■Handset Key

Window Description




- Main Menu Items


Messaging	Open/create messages, etc.
Yahoo!	Browse the Internet
S! Appli	Use S! Applications including games
Entertainment	Receive news, play/download media files, etc.
Camera	Capture images or record video
Videos/Music	Access various media services
Tools	Manage schedules, set Alarm, scan QR Codes, etc.
Data Folder	Open files saved on handset/Memory Card
Widget	Use Mobile Widgets
TV	Watch/record TV programs
Phone	Search contacts, add entries, etc.
Settings	Customize handset interface, sounds, etc.



 Follow these steps to open *World Clock* via handset keys or Touch Panel: (Touch Panel navigation screenshots are based on Viewer position.)

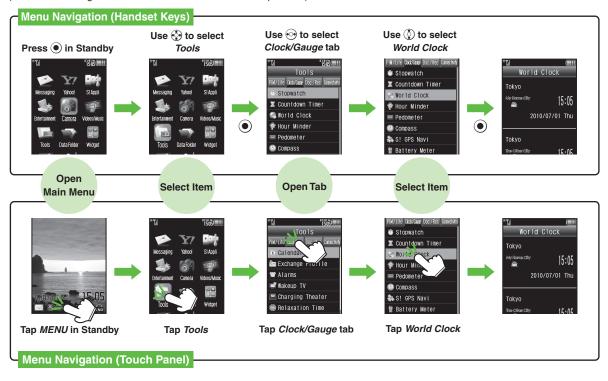



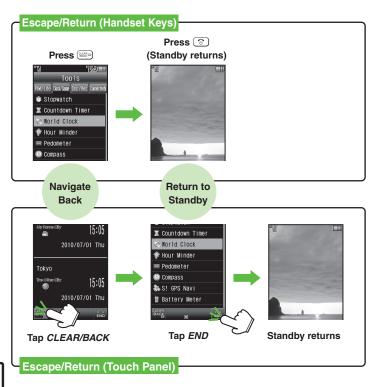

Calibrating Touch Panel

Calibrate Touch Panel to improve response. Hold handset normally during calibration.





Correct Touch Panel

◆

●





Follow onscreen instructions.

Undo Calibration

• If calibration does not improve response, follow these steps to restore default setting: After (4), (1889)



Using Simplified Menus (Simple Menu)

Simple Menu Features

Activate Simple Menu to reduce available handset functions and simplify menus.



- Fonts are enlarged and appear in bold.
- Clock is enlarged (Calendar is hidden).

■ Menu Items

Messaging	Received Msg., Create Msg., Drafts, Templates, Sent Messages, Unsent Msg., Create SMS
Phone	Phone Book, Add New Entry, Call Log, Play Messages, Answer Phone, Call Voicemail, My Details, Rakutomo Link, Speed Dial/Mail
Camera	Photo Camera, Video Camera, Album, Scan Barcode, Scan Card, Kanji/English Grabber, Review
Convenient Tool	Calendar, Exchange Profile, Alarms, Calculator, Assignment, Dictionary, Notepad, S! GPS Navi, Pedometer, Compass, S! Friend's Status, S! Circle Talk, Double Number, Change Menu
Data Folder	-
TV	-

While Simple Menu is active, some operations in Standby are disabled.

Activating Simple Menu







While Using an Incompatible Function

• End the function before activating Simple Menu.

Canceling Simple Menu

Change Menu

◆

● Standard Menu **→** •



Spinguru Menu

Basics


Long Press (2) to open Spinguru Menu; use (2) to select functions suitable for time of day/situation, or frequently used/recently opened files/records, etc.

- To open Spinguru Menu while using functions, press (3) twice; menu items available for the current function also appear.
- Alternatively, make a circle on Standby Display to open Spinguru Menu; repeat motion for further operations.
- Alternatively, in Viewer position, Long Touch Softkey with to open Spinguru Menu.

Menu Description

Example: Spinguru Menu opened in Standby

 Favorites (gateway to frequently used functions) appears from the second day after the first use of handset.

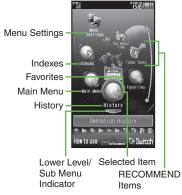

■ Menu Navigation

Press when appears to access lower level/Sub Menu; press when appears) to return.





Lower level items added



Lower level opens

Sub Menu opens



Using Spinguru Menu

Opening Functions

General Items





• Spinguru Menu opens.





Menu/window opens.

Deleting Functions from Spinguru Menu After ②, ② → Remove from Yes **▶** •

Favorites & History

In Spinguru Menu, 👀 Favorites or History



②



Lower level opens.

Select item

Follow onscreen instructions.

Deleting Functions from Favorites or History After €, ② → Remove from Favorites or Remove from History ▶ ♦ Yes ♦ ●

Main Menu

In Spinguru Menu, 😔 *Main* Menu



Select item ⇒ (●)

Follow onscreen instructions







Indexes (Japanese)

 
Search for functions by initial character of terms or keywords.







Character icons appear.







Spinguru Menu Settings

Follow these steps to reset Spinguru Menu:

In Spinguru Menu, *⊙ Menu* Settings





Initialize Spinguru Menu



Toggling View

Press

to toggle Spinguru Menu between linear and spiral views. In linear view, press

to access lower level items/Sub Menu; press

to return.



Spinguru Menu (linear view)

Lower level/ Sub Menu opens

Opening Help

Press (a) in Spinguru Menu to open operational instructions.

Function Shortcuts

Shortcuts Menu

Access assigned functions via Shortcuts menu.







• Menu/window opens

Changing Default Shortcuts In ②, select numbered function ▶

⇒ Assign Function → ● →
 Select menu item → ● > Select new item → ●

■ To assign menu items, select one and press ^(∞).

Assigning Files & Folders

In ②, select numbered function ⇒
⑤ → Assign Data → ⑥ → Select file/folder → ⑥

■ For folders, select **Set this folder** and press **③**.

Key Shortcut

In Standby, Long Press , or to access assigned functions.

Open S! Mail Composition window
 Open PC Site Browser menu
 Open Exchange Profile menu
 Activate/cancel Bluetooth®
 Access last opened Icon View page
 Activate Familink Bemote

Changing Assigned Functions

Follow these steps to assign Calculator to (5) (Long Press):

- Settings → → Phone/
- Set Key Shortcut → → Long press → ●
- 🕞 From Appli 🕈 💿
- Tools → In PIM/Life menu, Calculator → ●

Bookmark

In ②, From Bookmark ▶ ● ⇒
Select title ▶ ● ≯ Yes ▶ ●
Infrared, Show Secret Data, Etc. On/Off
In ②, From Other ▶ ● ≯ Select
item ▶ ●

Canceling Assigned Function In ⓒ, Off ▶ ⑥



Toggling Active Functions (Multi Job)

Multi Job Feature

Access a function in Shortcuts menu while another is active.

While browsing the Internet



Jot down information

- Multi Job may not activate from some menus/windows.
- Multi Job is disabled while (gold) appears.

Using Multi Job

In a function window, (8)
In text entry/dial windows, Long Press (8).



- Select function

 Menu/window opens.
- To toggle active windows,
 - Multi Job ends
 If a confirmation appears, follow onscreen prompts.



Standby Shortcuts

Paste shortcuts to functions, files, folders, etc. to Standby for easy access.

 
Saving Shortcuts to Standby






Standby Shortcut Tab -





 - Corresponding icon appears.
- >> appears when more items are available





Saving from Menu/Window

• Follow these steps in Options menu: (Available when Set as StbyShortcut appears.)

Set as StbyShortcut → ● → Standby Screen **→** ●

Using Shortcuts



• Menu/window opens or command is executed

Unlocking Temporarily



Removing Shortcuts from Standby







Icon View

Save shortcuts to functions, files, folders, widgets, etc. to Icon View for easy access.

Saving Shortcuts to Icon View

 
- If selected page is full, remove icons first.
- Installed widgets are saved automatically.





Icon View Page





- Corresponding icon appears.
- >> appears when more items are available.

Specify target location

Saving from Menu/Window

 Follow these steps in Options menu: (Available when Set as StbyShortcut appears.)

Set as StbyShortcut → ● → Select page or New Page → ● → Specify target location → ●

When Five or More Pages Exist

- A confirmation appears after ①. Choose
 Yes or No and press ②.
 - To disable confirmation, press <a>□.

Using Shortcuts

- On Icon View page, select icon →

${\bf Accessing\ Last\ Opened\ Page}$

(Long)

Removing Shortcuts

- On Icon View page, select icon ▶ (Long)
- Cancel Icon → ●



Advanced

Viewer Position Setup

Menu below appears the first time Display is rotated to Viewer position; set handset to automatically execute one of the following actions upon rotating Display to Viewer position:



Viewer Position Menu

Actions

HD Video Camera	Activate video camera
Take Picture	Activate mobile camera
Activate Digital TV	Activate TV
Show Main Menu	Open Main Menu
Launch Appli	Access assigned function
Connect Bookmark	Access saved URL
Off(Standby)	Keep Standby

In Viewer Position Menu, tap

 Setting is applied and Viewer position setup option confirmation appears.

🔁 Tap *Yes* or *No*

Selection appears.

Take Picture

 In Photo Viewfinder, Mobile Light may illuminate automatically depending on ambient light level. Follow these steps to turn setting off:

[Photo Viewfinder] Tap MENU → Tap Mobile Light twice → Tap Off twice Launch Appli or Connect Bookmark

 Handset accesses the assigned function or URL; change function/URL as needed.

From Standby

- Settings ⇒ → → Phone/
 ⇒ Viewer Position ⇒ → Move
- Settings \blacktriangleright \bullet \blacktriangleright Select item \blacktriangleright \bullet






Motion Control

Motion Sensor tracks handset orientation or movement. Move handset to navigate pages, access functions, etc.

- Cancel Keypad Lock and activate Display first. (Not necessary for activating Quick Silent.)
- Adjust Motion Sensor (P.2-28) before using Motion Control for the first time.
- Activate Motion Control by function beforehand.

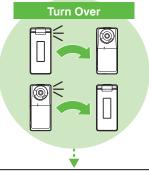



Activate Quick Silent

Turn handset over to instantly mute ringer and stop vibration.

Ringer	Vibration	
coming Calls,	Incoming Calls	
Alarms etc	Alarms, etc.	

Some tones may not be silenced.


Open Quick Shortcut

Shake handset left and right approximately three times in Standby to access assigned functions.

Change assigned functions as needed.

Re-search Signal

Portrait Orientation Landscape Orientation

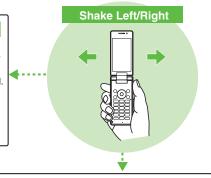

Navigate Functions

Shake to the left to navigate back, or right to navigate forward.

Music	
Music Player	

Channels
Digital TV

Images
Data Folder
(Pictures)

Pages Documen

Document Viewer

Multi Job


Shake to the left or right to toggle active windows.

Toggle Windows

Multi Job



Shake Forward or Backward

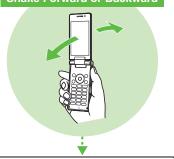

Zoom In/Zoom Out

Shake forward to enlarge, or backward to reduce.

Fonts

Zoom Image

Yahoo! Keitai Message Window

Data Folder (Pictures)

Zoom Page

PC Site Browser
Direct Browser
Document Viewer

Toggling Motion Control On/Off







Motion Control Menu

 
- 💦 Action Settings 🕈 💿
- Select function → ●
- 🦲 On or Off 🕈 💿

Enabling Quick Shortcut

In Motion Control menu,

Quick Shortcut

● ●





Activating Show Secret Data Temporarily Enter Handset Code ◆ Shake handset left or right

■ Close handset (clamshell closed) in Standby to cancel Show Secret Data.

Important Motion Control Usage Notes

- Hold/shake handset correctly to avoid unintended results. (For better recognition, shake handset straight without swinging your arm.)
- Motion Control may be unavailable while handset is ringing/vibrating.
- Be sure there is ample space for Motion Control use; hold handset firmly and shake it gently to avoid injury/breakage.
 Do not shake handset roughly; handset may slip, resulting in injury or damage.

Advanced





Activating/Canceling Keypad Lock

Activating

Prevent accidental operation/function activation in Viewer position.



In Viewer position,



 Display goes dark and Keypad Lock activates.

When Keypad Lock is Active

• Handset keys and Touch Panel are locked.

Canceling

Open handset (clamshell open). To cancel Keypad Lock in Viewer position, follow these steps:





Display activates.



- - Keypad Lock deactivates.
 - Alternatively, swipe down on ▼Unlock.

Automatic Keypad Lock (Viewer Position)

• In Viewer position, Display goes dark and Keypad Lock activates after a period of inactivity; follow the steps above to cancel it.



Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Power it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, buses, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

Manner Mode

Mutes most handset function sounds.





Manner mode is set.

When Manner Mode is Active

- Ringtones and other sounds are muted.
- 945SH vibrates for transmissions/alerts.
- Shutter click still sounds at fixed volume.
- To unmute Speaker temporarily while playing music, etc., follow these steps:
 During playback, (⑤) → (⑥) → Yes or
 No → (⑥)

 
Canceling Manner Mode

(Long)

Offline Mode

Temporarily suspends all transmissions.









• Offline Mode is set.

Canceling Offline Mode In €, Off → •

Advanced

My Details & Basic Tools

VeilView

Activate VeilView to prevent peeking.



Canceling VeilView (Long)

My Number





 Handset phone number and the name entered at initial setup appear.

Editing My Details

After 0, ∞ (select tab) \Rightarrow Select item $\Rightarrow \infty \Rightarrow$ Select item $\Rightarrow \infty \Rightarrow$ Edit $\Rightarrow \infty$

Pen Light

- With clamshell closed,
 - Mobile Light illuminates.
- Side Key ➡ Mobile Light goes out

Important Pen Light Usage Note

• Do not shine Pen Light in eves.

Battery Meter



Battery Meter → ●

• Approximate battery strength appears.

Battery Strength %

• 100% may not appear even when battery is full. This is by design; not a malfunction.

Phone Help



- Phone Help **→**
 - Select item
 ●

 For Indicators, select a category and press ●. For What's
 Spinguru? (Japanese), select a menu item and press ●.

Advanced



Using Double Number


messages are received without alerts.

Manage two accounts (Line A and Line B, with separate phone numbers and mail addresses) on one handset.

graphic, ringtone, vibration, etc. by account.

- Double Number requires a separate contract and basic monthly fee.
- Outside Japan, any Line B messaging charges are applied to Line A.
- For more information, contact SoftBank Mobile Customer Center, General Information (P.17-43).

Two Phone Numbers & Two Mail Addresses

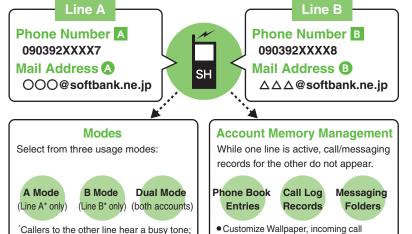

Activating Double Number

Make sure signal is stable.



- Double Number → ●
- Switch On/Off → ●
- **(4)** On **⇒ (9)**
- F Yes → •

Canceling Double Number

In ②, Off → ⊙ → ⑤

- When Double Number is canceled:
- Line B calls and SMS messages are redirected to Line A Phone Number.
- Initial portion of Line B S! Mail is redirected to Line A. (Full messages are irretrievable.)
- Double Number account is not affected.



Modes

Activate A Mode to use Line A only, B Mode to use Line B only, or Dual Mode to use both accounts.



Receive Calls to Line A Only

• Place calls or send messages via Line A.

A Mode & B Mode Precautions

- Line indicators do not appear in Phone Book entries, message lists, Call Log records, etc.
- When an operation affects information on the other line, a confirmation appears. Follow onscreen prompt(s).



Receive Calls to Line B Only

• Place calls or send messages via Line B.

B Mode Restrictions

- Handset connects to the Internet via Line A. (During Internet connections, place/receive calls via Line B.)
- S! Friend's Status and S! Circle Talk are unavailable.





Receive Calls to Both Accounts

 Place calls or send messages via Line A (or the account of record for Phone Book entries or Call Log records) by default; toggle accounts as required.

Phone Book Entries

Specify A, B or Dual.

Messaging

Select Line A or Line B. Sender Address changes accordingly.

Calling

Select Line A or Line B.
Caller ID changes
accordingly.

• Line indicators appear in Phone Book entries, message lists, Call Log records, etc.

Switching Modes

















In Dual Mode

During an operation, if prompt window below appears, select a line and press .



If customizable by line, line indicator appears bottom right; press * to switch.



If line selection is otherwise required, follow onscreen prompts.

	۰	
	_	
	C	U
	2	٥
	U	9
	7	7
	٠	•
	C	7
٠	č	3
	ă	5
	2	ŧ

Touch Panel	
Enabling Touch vibration	Start Here
	Enabling Always On(Vibrating) → ●
	Enabling Except in Manner Mode On(Except Manner Mode) → ●
Disabling Touch Panel	● ⇒ Settings ⇒ ● ⇒ ⇔ Phone/₩ ⇒ Touch Panel ⇒ ● ⇒ Switch On/Off ⇒ ● ⇒ Off ⇒ ●

Spinguru Menu	
Sorting Favorites items	Open Spinguru Menu → ⊖ Menu Settings → ③ → Sort Favorites → ● → Yes → ●
Deleting all Favorites items	Open Spinguru Menu → Menu Settings → ② → Delete All Favorites → ● → Yes → ●
Deleting all History items	Open Spinguru Menu → ⊙ Menu Settings → ② → Delete All Histories → ○ → Yes → ○
	Start Here Open Spinguru Menu → → Menu Settings → ② → See below
Restoring deleted general items	All Items Restore All Recommended Functions Deleted → ● → Yes → ●
	One Item Select Restore XX → ● → Yes → ●

Shortcuts

Changing item order	 Select numbered function → □ → Move Select target location → ● 	
Restoring default shortcuts	Select numbered function ⇒ □ ⇒ Set to Default ⇒ ● → Yes ⇒ ●	

Standby Shortcut

Operations in Standby

Operations in Standby	
Sorting icons	 ③ → Operation → ● Sort Icon → ● Select option → ● Widgets may also be sorted depending on the size.
Moving icons	③ → ② Select icon → ② → Operation → ● → Move → ● → Specify target location → ●
Moving icons to front/back	 ♦ Select icon → B → Operation → ● To Front or To Back → ●
Removing multiple icons at once	(S) ⊗ Operate from List ⊗ → Remove ⊗ ⊗ Shortcut > Select icon ⊗ (□) > Complete selection ⊗ → Yes ●
Locking icons	(b) → (c) → Settings → (c) → Lock Settings → (c) → On → (c) → Handset Code is required to re-select Off.



Icon View	
Moving icons	 (⊙ ⇒ (a) (Long) ⇒ Move ⇒ (a) ⇒ Select icon ⇒ (a) ⇒ Specify target location ⇒ (a) ⇒ (a)
Pasting to Standby	③ ▶ Select icon (widget) ▶ ⊚ (Long) ▶ Set as StbyShortcut ▶ ● ▶ Specify target location ▶ ●
	Start Here
Removing multiple icons at once	Selected Icons Select & Remove → ● → ⇔ Select tab → Select icon → ● (→) → Complete selection → ⊗ → Yes → ●
	Whole Page Remove All → ● Select page → ♡ → Yes → ●
Switching pages	⊙ ⇒ ഈ (Long) ⇒ Select page ⇒ ●
Changing page order	
Inserting pages	O → (Long) → Insert Page → • Insert Previous or Insert Next → •
Editing page names	Start Here
	Renaming Select page
	Resetting All Page Names ② → Yes → ●

Hiding icons	③ ● ② (Long) → Settings/Manage → ④ → Hide Icons → ④ → Select page → ● On → ● Handset Code is required to re-select Off.
Opening properties	
Deleting invalid icons	
Accessing last opened page with ③	(5) → (8) → Settings → (9) → (1) Key Settings → (1) → Last Visited Page → (1)

Viewer Position Setup	
Changing function assigned to Launch Appli in Move Settings	● Settings → ● Phone/ Viewer Position → ● Set Appli → ● Select menu item → ● Select new item → ●
Changing URL assigned to Connect Bookmark in Move Settings	Settings

Motion Control

Changing Display rotation method	● Settings ● ● → → Phone/ → Motion Control ● ● Display Change ● ● Select method ● ●
Changing Quick Shortcut items	● Settings ● → → Phone/ → Motion Control ● → Quick Shortcut ● → Shortcut Entry ● → Portrait or Landscape ● → Select menu item → ● Select new item → ● To assign menu items, select one and press ③.
Deleting Quick Shortcut items	● Settings ● → ⊖ Phone/ → Motion Control ● → Quick Shortcut ● → Shortcut Entry ● → Portrait or Landscape ● ⑤ → Delete ● → Yes → ●
Restoring default Quick Shortcut items	● Settings ● → ⊖ Phone/ → Motion Control ● → Quick Shortcut ● → Shortcut Entry ● ○ □ → Reset Settings ● → Yes ●
Practicing Motion Control actions	● Settings ● ● → Phone/ → Motion Control ● ● Action Test ● ● Select item ● ● Follow onscreen instructions.
Adjusting Motion Sensor	Settings Motion Control Motion Adjust Sensor Follow onscreen instructions. Avoid adjusting Motion Sensor near metal/magnetic objects or aboard trains or in vehicles.

Keypad Lock

Canceling Keypad	Settings →
Lock upon Display	Panel ⇒ ● → Keypad Lock ⇒ ● ⇒ Set
activation	● Settings → ● → ⊖ Phone/ → Touch Panel → ● → Keypad Lock → ● → Set Keypad Lock → ● → Simple Lock → ●
	Settings
Lock cancellation	Panel ⇒ ● → Keypad Lock ⇒ ● → Keypad
method	Unlock → ● > Select method → ●

Mode Settings

	(Start Here) → Settings → • In Sound/Display menu, Mode Settings → • See below
Changing handset	Selecting a Handset Mode Select mode
modes	Customizing Handset Modes Select mode
Creating a custom mode	● Settings ● In Sound/Display menu, Mode Settings ● Original ● Select item ● Adjust settings
Resetting Mode Settings	● Settings → ● In Sound/Display menu, Mode Settings → ● Select mode → Yes → ●
Suppressing Manner mode audio output confirmation	● Settings ● In Sound/Display menu, Mode Settings ● Manner ● □ Audio Confirmation ● Do not Show ●



VeilView

Changing VeilView pattern/density

Density

Density

Density:2 or Density:3, use

Settings → Settings → Setect pattern → Settings → Select patterns.

Density:2 or Density:3, use → before pressing → to adjust the pattern appearance for straight view.

My Details

Clearing My Details	● → ① · · · · · · · · · · · · · · · · · ·
Selecting My Details items to send	● ● □□ ◆ ◎ ◆ Set Send Items ◆ ● ◆ Select item ◆ ● (/ / /) ◆ Complete selection ◆ ②
Toggling My Details in Dual Mode	● → ① □ → □ → Switch to B or Switch to A → ●

Battery Meter

	● <i>Settings</i> → ● In Sound/Display
Changing battery	menu, <i>Display</i> → ● → <i>Mini Battery</i> → ●
strength indicator	Select pattern
pattern	 Battery strength (appears as a percentage) is for
	reference only.

Double Number

All Modes

	Settings Phone/ Phone/ P
	Double Number ⇒ ● → Mode Name ⇒ ● ⇒
Number modes	Select mode
	Select icon

A Mode & B Mode

Showing indicator for calls missed or	● → Settings → ● → → Phone/ → → Double Number → ● → Show Missed → ●
new mail on idle line	<i>On</i> ⇒ (
Hiding Internet connection confirmation	● Settings ● ● → Phone/ Double Number ● ● Packet Warning ● ● Off ● ● Available for B Mode.

Dual Mode

Rejecting calls to either line in Dual Mode	● Settings • ● • ⊖ Phone/ Double Number • ● Reject By Line • ● Select line • ● • On • ●
Setting main line for Dual Mode	● Settings → ● → → Phone/ Double Number → ● → Send Priority → ● → Select option → ●

