

Internet Services	6-2
Service Basics	6-2
Yahoo! Keitai	6-3
Using Yahoo! Keitai.....	6-3
PC Sites	6-5
Browsing PC Sites.....	6-5
Browsing	6-6
Basic Operations	6-6

Bookmarks & Saved Pages	6-9
Using Bookmarks & Saved Pages....	6-9
RSS Feeds	6-10
Updating Blogs & News.....	6-10
Additional Functions	6-11
Troubleshooting	6-19

6

Internet



Service Basics

Access the Mobile Internet via Yahoo! Keitai, or view PC Internet sites via PC Site Browser or Direct Browser.

- Service requires a separate contract; retrieve Network Information to use these services.
- For more about Yahoo! Keitai, see SoftBank Mobile Website (**P.17-24**).
- Outside Japan, Yahoo! Keitai and PC Site Browser cannot be used over Wi-Fi.


Transmission/Information Fees

Some page content may automatically activate Internet connection incurring transmission fees. (Information fees may also apply.) To prevent automatic connection, select an appropriate option for **Script Settings**, **Flash® auto-download** and **Download Videos (P.6-18)**.

Security

Electronic certificates are saved on handset to support SSL (encryption protocol for Internet transmissions of important/sensitive information).

Opening Secure Pages

- A confirmation appears. Choose **Yes** and press  to proceed.
- When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage. SoftBank, VeriSign Japan, Cybertrust, Entrust Japan, GMO GlobalSign, RSA Security, SECOM Trust Systems and Comodo Japan cannot be held liable for any damages associated with the use of SSL.



Using Yahoo! Keitai

Access Yahoo! Keitai sites via 3G Network or Wi-Fi.

- To use Wi-Fi, subscribe to Keitai Wi-Fi and complete related settings.
- Within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Internet pages may not open depending on connection/Server status, etc.

 
Using Yahoo! Keitai Main Menu

Browse Yahoo! Keitai sites from Yahoo! Keitai Main Menu.


1 ➔ Connection starts



Internet Page


- Yahoo! Keitai Main Menu opens.
- To disconnect, press .

2 Highlight menu item ➔

- Corresponding page opens.
- Repeat  to open additional links.

3 ➔ Yes ➔ ➔ Page closes

Returning to Previous Pages

[Internet Page]  ➔ Previous page opens

- Follow these steps to return to the initial page:

[Internet Page]  ➔ Forward ➔ 

Returning to Yahoo! Keitai Main Menu

[Internet Page]  ➔ Yahoo! Keitai

➔ 

User Authentication

Enter user ID or password ➔  ➔ 


Accessing *メニューリスト* Directly

 ➔ Yahoo! ➔  ➔ Menu List ➔ 





Switching between 3G and Wi-Fi Manually

[Internet Page]  ➔ Convenient

Functions ➔  ➔ Switch Wi-Fi/3G

➔  ➔ Select network ➔ 

Advanced

-  Switching browsers
-  Clearing cache (temporarily saved information)
-  Clearing authentication information (And more on P.6-11)
-  Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.) (And more on P.6-18)



Playing Media during Download


Play files while they transfer from the server (progressive download) or stream media files.

- Save progressive download files, as needed, after playback. (Copy protected files cannot be saved.)
- Streaming media files cannot be saved even after playback.
- Packet transmission fees apply (except when downloading via Wi-Fi) even while playback is paused.


1 On a page, select file ➔ 

- Playback starts.

Pausing Playback

- To resume playback, press .
- Progressive download continues even while playback is paused.


Stopping Playback

- Progressive download continues on the page even while playback is stopped. (Press  to resume playback.)

Stopping Progressive Download


During playback,  ➔ Previous page returns ➔ 

Playback Sound

- Sound is heard from Speaker/Headphones regardless of  Sound Output setting.

Using History

1  ➔ *Yahoo!* ➔  ➔ *History* ➔ 

2 **Select record** ➔  ➔ **Connection starts**

- Corresponding page opens.

3  ➔ *Yes* ➔  ➔ **Page closes**

Entering URLs Directly



 

1  ➔ *Yahoo!* ➔  ➔ *Enter URL* ➔ 

2 **Enter URL** ➔  ➔ **Connection starts**

- Corresponding page opens.

3  ➔ *Yes* ➔  ➔ **Page closes**

Advanced

-  Using previously entered URLs
-  Deleting History records
-  Sorting History records (And more on **P.6-11**)
-  Customizing media playback settings (And more on **P.6-15**)



Browsing PC Sites

View PC Internet sites via PC Site Browser or Direct Browser. (Direct Browser requires Wi-Fi connection.)

- To use Wi-Fi, subscribe to Keitai Wi-Fi and complete related settings.
- When using PC Site Browser within registered access point range, handset connects to the Internet via Wi-Fi automatically whenever possible; switch between 3G and Wi-Fi manually.
- Network does not switch to Wi-Fi automatically if Wi-Fi signal reception is poor or after switching it to 3G manually.
- Browsing PC sites via PC Site Browser may incur high charges depending on subscribed price plan.
- Internet pages may not open depending on connection/Server status, etc.
- PC Site Browser and Direct Browser share Bookmarks, Saved Pages, History, etc.

1 → **Yahoo!** →

2 **PC Site Browser or Direct Browser** →

3 **Homepage** → → **Connection starts**



Internet Page

- Yahoo! JAPAN Home opens.
- If a message appears, follow onscreen prompts.
- To disconnect, press .

4 **Highlight menu item** →

- Corresponding page opens.
- Repeat 4 to open additional links.

5 → **Yes** → → **Page closes**

Direct Browser

- Use this Wi-Fi-based browser to view PC sites without using SoftBank 3G Network service.

Returning to Previous Pages

[Internet Page] → Previous page opens

- Follow these steps to return to the initial page:

[Internet Page] → **Forward** →

Returning to Yahoo! JAPAN Home

[Internet Page] → **Homepage** →

User Authentication

Enter user ID or password → →

Using History

In , **History** → → Select record →

Entering URLs Directly

In , **Enter URL** → → Enter URL →

Switching between 3G and Wi-Fi Manually (PC Site Browser)

[Internet Page] → **Convenient Functions** → → **Switch Wi-Fi/3G** → → Select network →

Advanced

- Switching browsers
- Using previously entered URLs
- Deleting History records
- Opening History properties (And more on P.6-11)
- Showing navigation map for continuous scroll
- Changing scroll unit
- Hiding PC Site Browser messages
- Setting up proxy
- Setting search engine URLs (And more on P.6-14)




Basic Operations

Page Browsing

Scrolling Pages


If page content continues beyond view, use to scroll pages.

Long Press to scroll continuously.

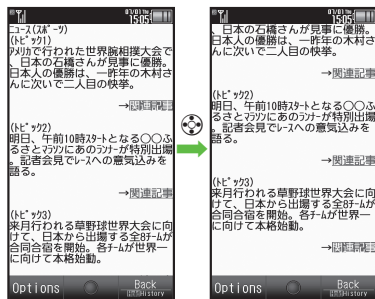

Switching Frames

On framed pages, Long Press to switch active frame.

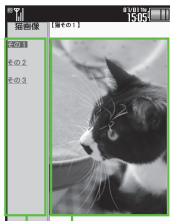

Frames

- In pointer navigation, point to a frame and press to select it.
- Otherwise, use to select one.
- Alternatively, tap a frame to select it.

Viewing Single Frame

[Internet Page] Select frame

Convenient Functions

Frame In

 
- To return, press .

Tabbed Browsing

Open another page in a new tab and switch between tabs.

Opening a New Tab

- 1 On a page, select menu item **Tab Menu**
- 2 **Open in New Tab**



Switching Tabs

- 1 (Long) **Select tab**
- In pointer navigation, point to a tab and press to open it.
 - Alternatively, tap a tab to open it.

Closing Tabs

- 1 (Long) **Select tab** **Close Tab** or **Close All Other Tabs**


Advanced

- Looking up copied words in dictionaries
- Saving files to Data Folder
- Changing Font Size
- Enlarging specific areas
- Disabling automatic image display/sound playback
- Changing scroll unit (And more on P.6-12 - 6-14)

Selecting Items in Enlarged View

Enlarge area to select items with finger.

1 On a page, Long Touch area

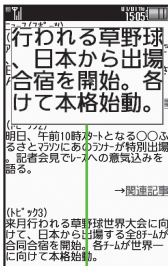

Enlarged View

2 Drag to highlight item in enlarged view ➔ Release

Enlarging Areas in Pointer Navigation
[Internet Page] Point to area ➔

7 (Long)

- Use to move pointer in enlarged view; highlight item and press to execute it.
- To close enlarged view, press a key other than .

 
Selecting Text

Activate Drag Mode in pointer navigation to enable text selection. Select text to copy or look up words in dictionaries. Follow these steps to use a dictionary: (Text may not be selectable or linked page may open depending on the site or page.)

1 On a page, point to first character ➔ (Long)

- Drag Mode is activated.

2 Highlight text range



3

4 ➔ Select dictionary



- Dictionary opens with text inserted.

5 Search ➔ ➔ Select word, etc. ➔

Starting Over


After 3, point to first character ➔

➔ From 2



Additional Page Operations

Enter text or select/execute items.

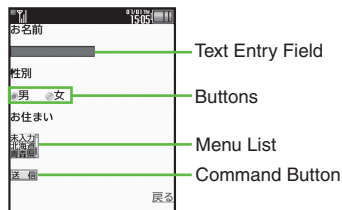

Text Entry

1 On a page, select text entry field → ●

2 Enter text → ●
 • Internet page returns.

Using Entered Text (Input Memory)

[Internet page] Select text entry field
 → ● → ☒ → *Insert/Font Size* → ●
 → *Input Memory* → ● → Select text
 → ●

Pull-down Menu Item Selection

1 On a page, select menu list field → ●

2 Select item → ●

When Multiple Selection is Supported

• Select items as needed and press .

Page Item Indicators

Selection Items

Buttons ● or boxes ☐ appear.

1 On a page, select button or box → ●



●/☐ changes to ●/☑.

Execution Items

Execute the assigned command.

1 On a page, select command → ●















Using Bookmarks & Saved Pages









Bookmarks

Bookmark sites for quick access.





Saving Bookmarks


- 1 On a page,   **Bookmarks**   **<Add New Entry>**  
- 2 Check/edit URL  
- 3 Check/edit title  
- 4 Save  

Opening Bookmarks

- 1   **Yahoo!**   **Bookmarks**  
- 2 Select title  
 - Corresponding page opens.

Switching Bookmarks Lists

After 1,   **Change List**  

Select type 

Opening Bookmarks Online

[Internet Page]   **Bookmarks** 

 Select title 

Saved Pages

Save page content; handset opens saved pages without connecting to the Internet.

Saving Pages








Some pages may not be saved.

- 1 On a page,   **Saved Pages**   **Save (or Register(Image Only))**  





 - Select **Register(Image Only)** to capture page content as a screenshot.


- 2 Check/edit title  

Opening Saved Pages

- 1   **Yahoo!**   **Saved Pages**  
- 2 Select page  
 - Corresponding page opens.

Switching Saved Pages Lists

After 1,   **Change List**  









Select type 

Opening Saved Pages Online

[Internet Page]   **Saved Pages** 

 **Open List**   Select page  

Advanced

-   Deleting titles  Editing titles  Changing title order  Sorting titles into folders  Deleting pages  Editing page titles  Changing page order (And more on P.6-15 - 6-16)



Updating Blogs & News

Register RSS-compatible sites; view content updates without opening source sites.

Packet transmission fees apply (except when handling RSS feeds via Wi-Fi).

Subscribing to RSS Feeds

Indicator below appears for RSS-compatible sites.



RSS Indicator

Available for PC Site Browser and Direct Browser.

- 1 On a compatible page, ➔ **Register In RSS Feed** ➔
- 2 Select feed ➔ ➔ ➔ **Complete selection** ➔
- 3 **Save** ➔
 - Choose **Yes** to update immediately or **No** and press .

Via RSS Icons

Use RSS icons to subscribe to RSS feeds from sites that are not RSS-compatible. Available for PC Site Browser and Direct Browser.

- 1 On a page, select icon ➔
- 2 **Yes** ➔ ➔ **Save** ➔

Checking Updates

Follow these steps to update all feeds:

- 1 ➔ **Yahoo!** ➔
- 2 **PC Site Browser or Direct Browser** ➔ ➔ **RSS Feed** ➔



RSS Feed List

- 3 **Reload All** ➔
 - If a message appears, follow onscreen prompts.

- 4 **Select feed** ➔



Title List

- 5 **Select title** ➔
 - Information appears.

Updating Single RSS Feeds

- [RSS Feed List] Select feed ➔ ➔ **Reload** ➔
- If a message appears, follow onscreen prompts.

Accessing Source Sites

- After , select linked title ➔ ➔ **Yes** ➔
- If a message appears, follow onscreen prompts.

Advanced

- Disabling feed updates
- Sorting feeds into folders
- Deleting feeds
- Sorting feeds
- Opening feed properties
- Exchanging feeds with other devices
- Sending feeds via mail (P.6-17)



Connecting & Browsing

■ General

Switching browsers	On a page, ☰ → Switch Browser → ● → This Page or Linked Page → ● → Select browser → ● <ul style="list-style-type: none"> A confirmation may appear when switching to PC Site Browser.
	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Start Here ● → Yahoo! → ● → See below</div> Yahoo! Keitai Enter URL → ● → ☰ → URL Entry Log → ● → Select URL → ● → ●
Using previously entered URLs	PC Site Browser & Direct Browser PC Site Browser or Direct Browser → ● → ● Enter URL → ● → ☰ → URL Entry Log → ● → ● → Select URL → ● → ● → ●

■ History

Follow these steps to switch History lists:

☰ → **Change List** → ● → **Select browser** → ●

Deleting History records	<div style="border: 1px solid black; padding: 2px; margin-bottom: 5px;">Start Here ● → Yahoo! → ● → History → ● → ●</div> See below
	One Record Select record → ☰ → Delete → ● → Yes → ●
	All Records ☰ → Delete All → ● → Yes → ●

Opening History properties	● → Yahoo! → ● → History → ● → Select record → ☰ → Details → ●
Sorting History records	● → Yahoo! → ● → History → ● → ☰ → Sort → ● → By Domain or By Date → ●
Sending History records via mail	● → Yahoo! → ● → History → ● → Select record → ☰ → Send URL → ● → S! Mail or SMS → ● → Complete message → ☰ <ul style="list-style-type: none"> S! Mail Composition window opens automatically depending on character count.

■ Memory Operation

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** → ●.

PC Site Browser (or Direct Browser) → ● → **PC Site Browser Settings (or Set Direct Browser)** → ●

Clearing cache (temporarily saved information)	● → Yahoo! → ● → Browser Settings → ● → Memory Operation → ● → Delete Cache → ● → Yes → ●
Clearing cookies	● → Yahoo! → ● → Browser Settings → ● → Memory Operation → ● → Delete Cookies → ● → Yes → ●
Clearing authentication information	● → Yahoo! → ● → Browser Settings → ● → Memory Operation → ● → Delete Auth Info → ● → Yes → ●



Page Operations

■ All Browsers

Using linked info	Dialing Numbers On a page, highlight number → ● → <i>Call or Video Call</i> → ●
	Sending Messages On a page, highlight number or mail address → ● → <i>Create Message</i> → ● → <i>S! Mail or SMS</i> → ● → <i>Complete message</i> → (Y) • For mail addresses, omit mail type selection step.
Copying text	On a page, (⊖) → <i>Copy Text</i> → ● → <i>Select first character</i> → ● → <i>Highlight text range</i> → ●
Looking up copied words in dictionaries	On a page, (⊖) → <i>Convenient Functions</i> → ● → <i>Copy & Search Dict.</i> → ● → <i>Select first character</i> → ● → <i>Highlight text range</i> → ● → <i>Select dictionary</i> → ● → <i>Search</i> → ● → <i>Select word, etc.</i> → ●
Using Web Search	On a page, (⊖) → <i>Convenient Functions</i> → ● → <i>Web Search</i> → ● → <i>Enter search text</i> → ●
Searching current page	On a page, (⊖) → <i>Convenient Functions</i> → ● → <i>Search</i> → ● → <i>Enter search text</i> → ● • Press ● to jump to next search result, if any.
Jumping to page top/bottom	On a page, (⊖) → <i>Convenient Functions</i> → ● → <i>Jump In Page</i> → ● → <i>Page Top or Page Bottom</i> → ●
Opening page properties	On a page, (⊖) → <i>Convenient Functions</i> → ● → <i>Details</i> → ● → <i>Select item</i> → ●
Sending URLs via mail	On a page, (⊖) → <i>Send URL</i> → ● → <i>S! Mail or SMS</i> → ● → <i>Complete message</i> → (Y) • S! Mail Composition window opens automatically depending on character count.

Handling Flash® files

(Start Here) On a page, (⊖) → *Convenient Functions* → ● → *Flash® Menu* → ● → See below

Pausing/Playing

Pause, Resume or Replay → ●

Selecting Image Quality

Quality → ● → *Select quality* → ●

Saving files to Data Folder

(Start Here) On a page, (⊖) → *Save Items* → ● → See below

Files on Page

Select file → ● → *Save* → ● → *Enter name* → ● → *Save here* → ●

- On a page with background image, select *Save Items* and press ● first.
- Some files are saved automatically.
- End memory-consuming operations (TV recording, etc.) beforehand.
- Be sure signal is strong, battery is adequately charged and that there is enough free memory beforehand.

Background Images

Save Background Image → ● → *Save* → ● → *Enter name* → ● → *Save here* → ●

Updating page content

On a page, (⊖) → *Reload* → ●
 • To update content in Saved Pages, open a page and follow the steps above.

Changing encoding to read garbled text

On a page, (⊖) → *Settings* → ● → *Char-code* → ● → *Select option* → ●

Opening Help

On a page, (⊖) → *Help* → ●



■ Yahoo! Keitai

Changing Font Size	On a page, (3/2) (Long) to enlarge or (1/2) (Long) to reduce
Enlarging pages 200%	On a page, (2/2) <ul style="list-style-type: none"> Press (2/2) to toggle size. Size may not change depending on the page.

■ PC Site Browser & Direct Browser

Switching view	On a page, (2/2) → <i>PC Screen or Small Screen</i> → ● <ul style="list-style-type: none"> In Small Screen view, PC sites are redesigned to fit Display.
Zooming on pages (Zoom Factor)	On a page, (3/2) (Long) to enlarge or (1/2) (Long) to reduce
Jumping to specific locations	On a page, (5/2) (Long) → <i>Quick Movement map appears</i> → <i>Select target location</i> → ●
Enlarging specific areas	On a page, point to area → (7/2) (Long) <ul style="list-style-type: none"> Use (7/2) to move pointer in enlarged view; highlight item and press ● to execute it. To close enlarged view, press a key other than (7/2).
Hiding Softkeys	On a page, (2/2) → <i>Convenient Functions</i> → ● <ul style="list-style-type: none"> Softkey Area → ● → <i>Off</i> → ● To show Softkeys temporarily, press (2/2).
Enlarging images 200%	On a page, (2/2) <ul style="list-style-type: none"> Press (2/2) to toggle size. Size may not change or layout may be affected depending on the page.

Internet Page Settings

■ All Browsers

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** → ●.

PC Site Browser (or Direct Browser) → ● → **PC Site Browser Settings (or Set Direct Browser)** → ●

Disabling automatic image display/sound playback	Start Here → ● → <i>Yahoo!</i> → ● → <i>Browser Settings</i> → ● → <i>Downloads</i> → ● → <i>See below</i>
	Image Display <i>Images</i> → ● → <i>Do not Show</i> → ● Sound Playback <i>Sounds</i> → ● → <i>Do not Play</i> → ●
Changing Font Size	● → <i>Yahoo!</i> → ● → <i>Browser Settings</i> → ● → <i>Font Size</i> → ● → <i>Select size</i> → ●
Using pointer navigation	Start Here → ● → <i>Yahoo!</i> → ● → <i>Browser Settings</i> → ● → <i>Cursor Settings</i> → ● → <i>See below</i>
	Activating <i>Cursor Mode Settings</i> → ● → <i>Normal Mode</i> → ● Changing Pointer Speed <i>Speed Settings</i> → ● → <i>Select speed</i> → ●
Using handset as primary download storage	● → <i>Yahoo!</i> → ● → <i>Browser Settings</i> → ● → <i>Download to</i> → ● → <i>Phone Preferred</i> → ● <ul style="list-style-type: none"> Some files may be saved to Memory Card regardless of this setting.



■ Yahoo! Keitai

Changing scroll unit → ● → *Yahoo!* → ● → *Browser Settings* → ● → *Scroll Unit* → ● → *Select unit* → ●

■ PC Site Browser & Direct Browser

For Direct Browser, perform the following sequence instead of *PC Site Browser* → ● → *PC Site Browser Settings* → ● → *Direct Browser* → ● → *Set Direct Browser* → ●

Showing navigation map for continuous scroll → ● → *Yahoo!* → ● → *PC Site Browser* → ● → *PC Site Browser Settings* → ● → *Scroll Settings* → ● → *Page Navigation* → ● → *On* → ●

Changing scroll unit → ● → *Yahoo!* → ● → *PC Site Browser* → ● → *PC Site Browser Settings* → ● → *Scroll Settings* → ● → *Scroll Unit* → ● → *Select unit* → ●

■ PC Site Browser

Hiding PC Site Browser messages → ● → *Yahoo!* → ● → *PC Site Browser* → ● → *PC Site Browser Settings* → ● → *Warning Message* → ● → *Off* → ●

■ Direct Browser

Restricting Direct Browser use → ● → *Yahoo!* → ● → *Direct Browser* → ● → *Set Direct Browser* → ● → *Direct Browser Lock* → ● → *On* → ● → *Enter Administrator Code* → ●

Setting up proxy	<p>Start Here → ● → <i>Yahoo!</i> → ● → <i>Direct Browser</i> → ● → <i>Set Direct Browser</i> → ● → <i>Proxy Setting</i> → ● → <i>Enter Administrator Code</i> → ● → <i>Use</i> → ● → <i>See below</i></p> <p>Entering Address <i>Proxy Address</i> → ● → <i>Enter address</i> → ● → <i>Yr</i></p> <p>Entering Port Number <i>Port Number</i> → ● → <i>Enter number</i> → ● → <i>Yr</i></p> <p>Specifying Addresses to Bypass Proxy <i>Exempted Address</i> → ● → ● → <i>Enter address</i> → ● → <i>Yr</i></p>
	<p>● → <i>Yahoo!</i> → ● → <i>Direct Browser</i> → ● → <i>Set Direct Browser</i> → ● → <i>Proxy Setting</i> → ● → <i>Enter Administrator Code</i> → ● → <i>Use</i> → ● → <i>Select item</i> → ● → <i>Edit</i> → <i>Yr</i></p>
	<p>● → <i>Yahoo!</i> → ● → <i>Direct Browser</i> → ● → <i>Set Direct Browser</i> → ● → <i>Homepage Setting</i> → ● → <i>Enter URL</i> → ●</p>
Editing proxy settings	
Changing home page	
Setting search engine URLs	<p>Start Here → ● → <i>Yahoo!</i> → ● → <i>Direct Browser</i> → ● → <i>Set Direct Browser</i> → ● → <i>Search Page</i> → ● → <i>See below</i></p> <p>Adding <i><Empty></i> → ● → ● → <i>Enter URL</i> → ●</p> <p>Changing <i>Select URL</i> → ●</p> <p>Editing <i>Select URL</i> → ● → <i>Edit</i> → ●</p>



Streaming & Progressive Download

General

Customizing media playback settings	<p>Start Here During playback, → Settings → </p> <p>→ See below</p>
	<p>Changing Playback Size</p> <p>Display Size → → Select size → </p> <ul style="list-style-type: none"> • Playback size may not change depending on file.
	<p>Setting Backlight Status</p> <p>Backlight → → Select option → </p> <ul style="list-style-type: none"> • Selecting Normal Settings applies Display Backlight settings.
	<p>Adjusting Sound Effects</p> <p>Sound Effects → → Select effect → </p>

Streaming

Streaming from Media Player	<p>Start Here → Entertainment → → Media Player → → Streaming → → See below</p>
	<p>Resuming from Stopped Point</p> <p>Last Played → </p>
	<p>Using Bookmarks</p> <p>Bookmarks → → Select title → </p>
	<p>Using History</p> <p>History → → Select record → </p>
Switching networks during media playback	<p>During playback, → Switch Wi-Fi/3G → </p> <p>→ Select network → </p>

Bookmarks

Deleting titles	<p>Start Here → Yahoo! → → Bookmarks → </p> <p>→ See below</p>
	<p>One Title</p> <p>Select title → → Delete → → Yes → </p> <p>All Titles</p> <p> → Delete All → → Yes → </p>
Editing titles	<p> → Yahoo! → → Bookmarks → </p> <p>Select title → → Edit → → Title: → </p> <p>Enter title → → </p>
Editing bookmarked URLs	<p> → Yahoo! → → Bookmarks → </p> <p>Select title → → Edit → → URL: → </p> <p>Edit → → </p>
Sending bookmarked URLs via mail	<p> → Yahoo! → → Bookmarks → </p> <p>Select title → → Send → → As Message → → S! Mail or SMS → → Complete message → </p> <ul style="list-style-type: none"> • S! Mail Composition window opens automatically depending on character count.
Changing title order	<p> → Yahoo! → → Bookmarks → </p> <p>Select title → → Change Order → </p> <p>Select target location → </p>
Opening title properties	<p> → Yahoo! → → Bookmarks → </p> <p>Select title → → Details → </p>



Sorting titles into folders

Start Here → ● → Yahoo! → ● → Bookmarks → ● → See below
Creating Folders ☰ → Create Folder → ● → Enter name → ●
Moving to Folders Select title → ☰ → Move → ● → Select folder → ● → Move → ●
Moving from Folders Select folder → ● → Select title → ☰ → Move → ● → Move → ●
Renaming Folders Select folder → ☰ → Rename → ● → Enter name → ●
Deleting All Titles within a Folder Select folder → ● → Select title → ☰ → Delete All → ● → Yes → ●
Deleting Folders Select folder → ☰ → Delete → ● → Yes → ●

Saved Pages

Start Here → ● → Yahoo! → ● → Saved Pages → ● → See below
Deleting pages One Page Select page → ☰ → Delete → ● → Yes → ● All Pages ☰ → Delete All → ● → Yes → ●
Editing page titles ● → Yahoo! → ● → Saved Pages → ● → Select page → ☰ → Rename → ● → Enter title → ●
Changing page order ● → Yahoo! → ● → Saved Pages → ● → Select page → ☰ → Change Order → ● → Select target location → ●
Opening page properties ● → Yahoo! → ● → Saved Pages → ● → Select page → ☰ → Details → ●
Switching page list view ● → Yahoo! → ● → Saved Pages → ● → Select page → ☰ → List View or Preview View → ●



RSS Feeds

For Direct Browser, select **Direct Browser** instead of **PC Site Browser**.

Disabling feed updates	<p> → Yahoo! → → → → → </p>	
Sorting feeds into folders	<p> → Yahoo! → → → </p> <p>Creating Folders</p> <p> → → </p> <p>Moving to Folders</p> <p> → → → → </p> <p>Renaming Folders</p> <p> → → → </p> <p>Deleting Folders</p> <p> → → </p>	
	Deleting feeds	<p> → Yahoo! → → → </p> <p>One Entry</p> <p> → → </p> <p>All Entries</p> <p> → → </p> <ul style="list-style-type: none"> Alternatively, perform Delete RSS Feed List in Memory Operation (PC Site Browser Settings or Set Direct Browser) to delete all feeds.

Sorting feeds	<p> → → → → → </p>	
Opening feed properties	<p> → → → → → </p>	
Exchanging feeds with other devices	<p> → Yahoo! → → → → </p> <p>Exporting All Feeds</p> <p> → </p> <p>Importing (Adding Feeds)</p> <p> → → → </p> <ul style="list-style-type: none"> If a confirmation appears, follow onscreen prompts. <p>Importing (Overwriting Existing Feeds)</p> <p> → → → → → </p> <ul style="list-style-type: none"> If a confirmation appears, follow onscreen prompts. 	
	Sending feeds via mail	<p> → → → → → → </p>



Security Settings

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** ➔ ●.

PC Site Browser (or Direct Browser) ➔ ● ➔ **PC Site Browser Settings (or Set Direct Browser)** ➔ ●

Disabling manufacture number auto send for authentication	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Manufacture Number ➔ ● ➔ Off ➔ ● ● Not available for Direct Browser.
Disabling referer information delivery to the Server	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Send Referer ➔ ● ➔ Not Send ➔ ●
Enabling/disabling cookies	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Cookies ➔ ● ➔ Select option ➔ ●
Selecting script execution option	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Script Settings ➔ ● ➔ Select option ➔ ●
Selecting automatic Flash® file download option	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Flash® auto-download ➔ ● ➔ Select option ➔ ●
Disabling Flash® video download	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Download Videos ➔ ● ➔ Not Acquire ➔ ●
Opening electronic certificates saved on handset	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Security Settings ➔ ● ➔ Root Certificates ➔ ● ➔ Select certificate ➔ ●

Changing validity of entered user ID/ password

- ➔ **Yahoo!** ➔ ● ➔ **Browser Settings** ➔ ● ➔ **Security Settings** ➔ ● ➔ **Keep Auth Info** ➔ ● ➔ **Select option** ➔ ●
- **Per Browsing** retains entered user ID/password during browsing sessions. **On** retains such authentication information even after powering handset off.
 - Authentication information may not be retained depending on the site.

Suppressing confirmation when entering/exiting secure pages

- ➔ **Yahoo!** ➔ ● ➔ **Browser Settings** ➔ ● ➔ **Security Settings** ➔ ● ➔ **Secure Prompt** ➔ ● ➔ **Do not Show** ➔ ●

Resetting

For PC Site Browser and Direct Browser, perform the following sequence instead of **Browser Settings** ➔ ●.

PC Site Browser (or Direct Browser) ➔ ● ➔ **PC Site Browser Settings (or Set Direct Browser)** ➔ ●

Resetting browser settings and stored information (Bookmarks, Saved Pages, etc.)	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Initialized Browser ➔ ● ➔ Yes ➔ ● ● For Direct Browser, Administrator Code is required to proceed.
Restoring default handset settings	● ➔ Yahoo! ➔ ● ➔ Browser Settings ➔ ● ➔ Reset Settings ➔ ● ➔ Yes ➔ ● ● For Direct Browser, Administrator Code is required to proceed.



Connecting & Browsing

? What is the bar at Display bottom?

- This is a data progress bar; the number beside it indicates transmitted (green) or received (red) data.

Page Operations

? Internet page does not open completely

- Portions of page content may not appear in tabbed browsing; close other tabs.

? Text overlaps

- The site may be designed for browsing on PCs; try *Tiny* font size.

? Cannot access other functions while browsing the Internet

- Multi Job may be active. When switching between browsers, additional function activation is disabled; close either browser and retry.

Bookmarks

? Cannot add Bookmarks

- **<Add New Entry>** is unselectable if storage limit is reached; delete titles.

