

Videos/Music	9-2
Accessing Webcasting Sites (Japanese).....	9-2
Media Player	9-3
Media Player Basics	9-3
Music	9-5
Playing Music.....	9-5

Video	9-6
Playing Video	9-6
Playlists	9-7
Using Playlists	9-7
Additional Functions	9-8
Troubleshooting	9-12

9




Video & Music



Accessing Webcasting Sites (Japanese)

Access Yahoo! Streaming and other webcasting sites.

- Subscription to Keitai Wi-Fi may be required to use some services/content.
- Read information on the source site.

- 1  ➔ **Videos/Music** ➔ 
 - If an update message appears, follow onscreen prompts.
- 2 **Select item** ➔ 
 - Follow onscreen instructions.

Menu Updates

Information window opens for Videos/Music menu update notice. Follow these steps to open it:

- 1 **In Information window, Menu Update Notif.** ➔ 
- 2 **Yes** ➔ 
 - Follow onscreen instructions.


Suppressing Information Window for Menu Updates

-  ➔ **Settings** ➔  ➔  **Phone** ➔ 
- ➔ **Videos/Music Menu Updates** ➔ 
-  ➔ **Notification Off** ➔ 

Streaming

Most media on webcasting sites are provided as streams; handset plays media while it downloads.

Playing Media Streams


- 1 **Select file** ➔ 



- Playback starts.
- For playback window description, see **P.9-6** "Video Playback Window Description."

Stopping Playback During playback,

Playback Sound

- Streaming sound is heard from Speaker/Headphones regardless of  Sound Output setting in Media Player.



Media Player Basics

Use Media Player to play music/video on 945SH.

- Download media files from Mobile Internet sites via Media Player or transfer files from PCs or AQUOS Blu-ray Disc recorders (hereafter "Blu-ray Disc recorders").
- Transfer PC music files and save them on Memory Card.

Music File Support

My Music

(Handset/Memory Card)
Downloads/Transferred Files

SD AUDIO

(Memory Card)
Transferred SD-Audio Files

WMA

(Memory Card)
Transferred WMA Files

Video File Support

My Videos

(Handset/Memory Card)
Downloads/Recorded Files

Recorder Contents/ SD VIDEO

(Memory Card)
Transferred SD-Video Files

Playback Precautions

- Media Player is not compatible with some recording/playback formats. Files may not play depending on the Memory Card status.
- Playback stops for incoming calls.
- If battery is low, Media Player will not play. Playback stops if battery runs low during playback.
- Turn down the volume if distortion is noticeable in Speaker sound.
- Handset plays media while it downloads (streaming/progressive download). Packet transmission fees apply (except when downloading via Wi-Fi) even while playback is paused.

Compatibility

- Files transferred from PCs cannot be used as ringtones or System Sounds.



Downloading Media Files

Download media files from the Internet. Read information (price, expiry date, etc.) on the source site.

- 1 **Entertainment** **Media Player**



- 2 **Music or Videos**

- 3 **Download Music or Download Videos**

- Follow the links to download media.

Saving Music Files from PCs

- Use software to convert music file format.
- For software usage and specifications, see the provider's website, etc.
- SoftBank Mobile does not guarantee compatibility with any software.
- USB Cable may be purchased separately.

Handling Transferred Files

- Copyright laws limit duplicated material to private use only.
- Files created with PC software, etc. may not play.
- Comply with copyright and other intellectual property laws when using obtained files.

Saving AAC Files

 
Convert PC music files to 945SH-compatible format (P.17-22), then save to corresponding Memory Card folder (P.17-25) via Mass Storage.

Install USB Cable driver beforehand.

Saving WMA Files

Follow these steps to save WMA files via compatible software:
(Copy protected files can only be played on the handset with which the files were transferred.)

- 1 **Connect handset to a PC via USB Cable**

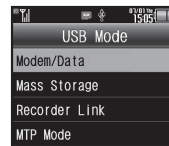

- 2 **MTP Mode**

- Copy music from PC. Refer to the software's help menu for operational instructions.

- 3 **Yes** **Connection ends**

- Disconnect USB Cable.

If Menu in 1 Does Not Appear

- Follow these steps:
 - Tools** **Connectivity**
 - USB Mode** **From**
 - Operations on the PC may be required; if prompted, follow onscreen instructions.



Playing Music

- 1 → **Entertainment** →
- 2 **Media Player** → → **Music**
→
- 3 **My Music** → → **Select**
tab (folder)



Music Playlists Window

- 4 **All Music** →
- 5 **Select file** →



Music Playback Window

- Album art appears for compatible Chaku-Uta Full® files. (WMA album art is not supported.)

Using Other Functions while Playing Music

After , or

- To stop playback, follow these steps in Standby:

→ **Yes** →

Playing SD AUDIO or WMA Files

In , **SD AUDIO** or **WMA** → →

From

Searching Music Files

After , → **Search** → → Enter
search text →

Lyric Display-Compatible Files


- Press to display lyrics.

Music Playback Operations

Replay	(Long Press: Rewind')
Skip Forward	(Long Press: Fast Forward')
Volume Down	(Long Press: Mute)
Volume Up or Cancel Mute	
Pause	
Stop	In Pause,
Switch Sound Output	(Long)
Open Help	

'Release for playback.

 Music Playback Window Description

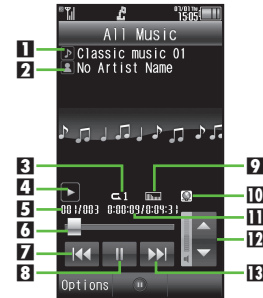

1 Title	8 Pause
2 Artist name	9 Sound Effects
3 Playback Mode	10 Information link
4 Status	11 Elapsed time
5 Track number	12 Volume control
6 Playback slider	13 Skip forward
7 Replay	

 
Advanced

- Resuming from stopped point Specifying start point Playing repeatedly or randomly Changing Sound Effects (And more on P.9-8)



Playing Video

- 1 **Entertainment**
- 2 **Media Player Videos**
- 3 **My Videos Memory Card or Phone Memory**

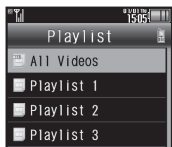

Video Playlists Window

- 4 **All Videos**

- 5 **Select file**



Video Playback Window

- 6 **Playback stops**

Playing Video Files Transferred from Blu-ray Disc Recorders

In **Recorder Contents**

Playing SD VIDEO Files

In **SD VIDEO**

Searching Video Files

After **Search** Enter search text

At Alarm Time

- Playback pauses.

Video Recorded on Other Devices

- Video image may appear rotated.


Video Playback Operations

For pause, volume up/down, sound output or help, see P.9-5 "Music Playback Operations."

Fast Forward/Rewind	[FF]/[REW]
Advance/Reverse Frame	In Pause, [FWD]/[REV]
Replay	[REPEAT] (Long)
Skip Forward/Backward	[SKIP FWD]/[SKIP BWD]
Toggle View	[ON/OFF] (Interface On/Off) [DISPLAY] (Display Size) [ASPECT] (Aspect)

*Each press increases speed.

 Video Playback Window Description

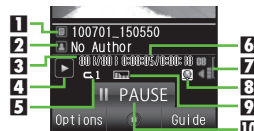

1 Title	6 Elapsed time
2 Author name	7 Volume
3 Clip number	8 Information link
4 Status	9 Sound Effects
5 Playback Mode	10 Pause

Advanced






- Resuming from stopped point
- Specifying start point
- Accessing linked information
- Switching audio output to wireless device
- Playing repeatedly or randomly
- Saving scenes as still images
- Hiding linked information (And more on P.9-8 - 9-9)

Using Playlists

Playlists store playback orders. Add favorite media files to Playlists, or organize files by artist/genre. Playlists store only file locations. Source files remain in All Music or All Videos.

Adding to Playlist

Follow these steps to add a music file to **プレイリスト1**:

- 1  → **Entertainment** → 
- 2 **Media Player** →  → **Music** → 
- 3 **My Music** → 










Playlists Window







- 4 **All Music** →  → **Select file** → 
- 5 **Add to Playlist** →  → **プレイリスト1** → 

Renaming Playlists

- 1 **In Playlists window, select Playlist** → 
- 2 **Edit List Title** →  → **Enter name** → 

Advanced

 [Music Files]  Organizing Playlists  Sorting files  Opening properties  Deleting/editing SD AUDIO files  Deleting All WMA files  Downloading Contents Keys (P.9-9 - 9-10)

[Video Files]  Organizing Playlists  Sorting files  Downloading Contents Keys  Opening properties  Deleting SD VIDEO files  Renaming files transferred from Blu-ray Disc recorders (And more on P.9-10 - 9-11)



Media Playback

Music & Video

Resuming from stopped point	<ul style="list-style-type: none"> ▶ Entertainment ▶ Media Player ▶ Music or Videos ▶ Last Played Music or Last Played Video
Specifying start point	<ul style="list-style-type: none"> ▶ During playback, [⏮] ▶ Time Search ▶ Enter time
Accessing linked information	<ul style="list-style-type: none"> ▶ During playback, [⏮] ▶ Access Web Link ▶ Yes
Switching audio output to wireless device	<ul style="list-style-type: none"> ▶ Entertainment ▶ Media Player ▶ Music or Videos ▶ Settings ▶ Sound Output ▶ Bluetooth Device

Music

Playing repeatedly or randomly	<ul style="list-style-type: none"> ▶ [Start Here] ▶ During playback, [⏮] ▶ Playback Mode ▶ See below
	<ul style="list-style-type: none"> ▶ Repeat One File ▶ Repeat
	<ul style="list-style-type: none"> ▶ Repeat All Files ▶ Repeat All
	<ul style="list-style-type: none"> ▶ Play Randomly ▶ Random
Changing Sound Effects	<ul style="list-style-type: none"> ▶ During playback, [⏮] ▶ Sound Effects ▶ Select effect

Changing illumination settings	<ul style="list-style-type: none"> ▶ [Start Here] ▶ Entertainment ▶ Media Player ▶ Music ▶ Settings ▶ Music Illumination ▶ See below
	<ul style="list-style-type: none"> ▶ Enabling Illumination ▶ Switch On/Off ▶ On
	<ul style="list-style-type: none"> ▶ Changing Illumination Pattern ▶ Pattern/Color ▶ Select pattern ▶ Select color • Light color is unselectable for some patterns.
	<ul style="list-style-type: none"> ▶ Changing Key Illumination Pattern ▶ Key Pattern ▶ Select pattern

Video

Some functions may be unavailable depending on file.

Playing repeatedly or randomly	<ul style="list-style-type: none"> ▶ [Start Here] ▶ During playback, [⏮] ▶ Settings ▶ Playback Mode ▶ See below
	<ul style="list-style-type: none"> ▶ Repeat One File ▶ Repeat
	<ul style="list-style-type: none"> ▶ Repeat All Files ▶ Repeat All
Saving scenes as still images	<ul style="list-style-type: none"> ▶ Play Randomly ▶ Random
	<ul style="list-style-type: none"> ▶ During playback, [⏮] ▶ (Long) ▶ Images are saved to Data Folder (Pictures).



Changing Sound Effects	During playback,
Changing playback size	During playback,
Setting Backlight status	During playback, <ul style="list-style-type: none"> Selecting Normal Settings applies Display Backlight settings.
Hiding linked information	During playback,

Managing Music Files

Organizing Playlists	See below
	Adding New Playlists Enter name
	Deleting Playlists Select Playlist
	Deleting Playlist Files Select Playlist
	Changing File Order Select Playlist

Sorting files	
	See below
Opening properties	SD AUDIO Files
	Other Files
Deleting/editing SD AUDIO files	
	Deleting Single Files <ul style="list-style-type: none"> Source files will be deleted.
	Deleting All Files <ul style="list-style-type: none"> Source files will be deleted.
	Editing Title/Artist



Deleting All WMA files	<p> → Entertainment → → Media Player → → Music → → Settings → → Delete All WMA → → Yes </p> <ul style="list-style-type: none"> • Source files will be deleted.
Downloading Contents Keys	<p> → Entertainment → → Media Player → → Music → → My Music → → Select tab (folder) → Select Playlist → → Yes → → Select file (with) → → Yes </p> <ul style="list-style-type: none"> • Follow onscreen instructions.

Managing Video Files

Organizing Playlists	<p> [Start Here] → → Entertainment → → Media Player → → Videos → → My Videos → → Memory Card or Phone Memory → → See below </p>
	<p> Adding New Playlists → Add New Playlist → → Enter name → </p>
	<p> Deleting Playlists Select Playlist → → Delete Playlist → → Yes </p>
	<p> Deleting Playlist Files Select Playlist → → Select file → → Delete → → Yes </p>
	<p> Changing File Order Select Playlist → → Select file → → Change Order → → Select target location → </p>

Sorting files	<p> → Entertainment → → Media Player → → Videos → → My Videos → → Memory Card or Phone Memory → → All Videos → → Sort → → Select option </p>
Downloading Contents Keys	<p> → Entertainment → → Media Player → → Videos → → My Videos → → Memory Card or Phone Memory → → All Videos →) → → Yes </p> <ul style="list-style-type: none"> • Follow onscreen instructions.
Opening properties	<p> [Start Here] → → Entertainment → → Media Player → → Videos → → See below </p> <p> SD VIDEO Files SD VIDEO → → Select file → → Details </p>
	<p> Files Transferred from Blu-ray Disc Recorders Recorder Contents → → Select file → → Details </p> <p> Other Files My Videos → → Memory Card or Phone Memory → → Select Playlist → → Select file → → Details </p>
Deleting SD VIDEO files	<p> → Entertainment → → Media Player → → Videos → → SD VIDEO → → Select file → → Delete → → Yes </p> <ul style="list-style-type: none"> • Source files will be deleted.



Renaming files transferred from Blu-ray Disc recorders	<ul style="list-style-type: none"> ● → Entertainment → ● → Media Player → ● → Videos → ● → Recorder Contents → ● → Select file → ☰ → Rename → ● → Enter name → ●
Checking Memory Card memory status	<ul style="list-style-type: none"> ● → Entertainment → ● → Media Player → ● → Videos → ● → Recorder Contents → ● → ☰ → Memory Remaining → ●
Deleting files transferred from Blu-ray Disc recorders	<p data-bbox="299 270 724 342"> Start Here ● → Entertainment → ● → Media Player → ● → Videos → ● → Recorder Contents → ● → See below </p> <p data-bbox="299 353 724 373">Single Files</p> <p data-bbox="299 379 724 399">Select file → ☰ → Delete → ● → Yes → ●</p> <p data-bbox="299 410 724 430">All Files</p> <p data-bbox="299 436 724 456">☰ → Delete All → ● → Yes → ●</p>



Music

? How do I delete files in All Music?

- Delete All Music files in My Music via Data Folder (Music or Ring Songs-Tones).

? WMA files do not appear (WMA files are not transferable)

- Did you use 945SH to transfer the files? Copy protected files can only be played on the handset with which the files were transferred.
- Copy protection information may be corrupted; perform **Delete All WMA** and re-transfer the files.
- Files transferred via Mass Storage appear when moved to corresponding Memory Card folder. (Transfer copy protected files via MTP Mode.)
- WMA files may be corrupted; perform **Delete All WMA** and retry.

? Cannot play WMA files

- Playback rights may have expired (license not found message appears); re-transfer the files. If files still cannot be played, they may be corrupted; perform **Delete All WMA** and retry.

Video

? How do I delete files in All Videos?

- Delete All Videos files via Data Folder (Videos).

? Cannot play video files

- Files created with PC software, etc. may not play.

