

<b>S! Appli</b> .....	<b>10-2</b>
Using S! Applications.....	10-2
<b>Mobile Widget</b> .....	<b>10-3</b>
Customizing Standby Display (Japanese).....	10-3

<b>Additional Functions</b> .....	<b>10-6</b>
<b>Troubleshooting</b> .....	<b>10-10</b>

# 10

## S! Applications & Widgets



## Using S! Applications

Try out the preloaded S! Applications or download and use 945SH-compatible S! Applications, including games.

- Refer to the S! Application's help menu or the source Internet site, etc. for operational instructions.
- Subscription to Keitai Wi-Fi is required to use S! Applications over Wi-Fi.

### Remote Control (Familink Remote)

- Use **ファミリンクリモコン** for **AQUOS** S! Application (Japanese) to control a TV, VCR, etc. via infrared.

- 1 → **S! Appli** →
- 2 **S! Appli Library** →



S! Appli Library

- 3 **Select application** →

### Network S! Applications

 
- A message appears indicating that Internet connection is required. Follow onscreen instructions.

### Incoming Calls

- Incoming calls automatically pause S! Application.

## Exiting S! Applications

- 1

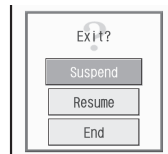

- 2 **End** →

### Pausing S! Applications

In 2, **Suspend** →

### Resuming S! Applications

→ **Resume** →

- Select **Cancel** to open Main Menu and keep the S! Application paused. (Additional function activation may be disabled depending on the S! Application.)
- Select **End** to exit the S! Application.

 
## Advanced

- Downloading S! Applications
- Adjusting S! Application sound volume
- Canceling surround effect
- Setting handset responses to incoming transmissions
- Setting S! Application to activate in Standby
- Setting Permissions
- Opening properties
- Moving S! Applications to Memory Card
- Changing S! Application settings
- Deleting S! Applications
- Restoring default S! Application settings
- Restoring default S! Appli Library
- Synchronizing Memory Card S! Applications with 945SH
- Opening Java™ license information (P.10-6 - 10-7)



## Customizing Standby Display (Japanese)

Paste various widgets (applications) to Standby to access/activate information/ functions immediately from Standby.

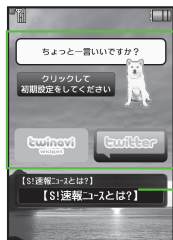

Widgets

S! Quick News &  
S! Friend's Status Widget

### Saving Widgets to Standby

Save up to three widgets (excluding *S!速報ニュース/S!ともだち状況*, *歩数計* and *家計簿*).

1 → → **Paste Icon** →

Widget Tab

Standby Shortcut Tab



2

 
3 **Select widget** →

- Corresponding icon appears.

4 **Specify target location**  
→

### Using Widgets

1 → **Select widget** →

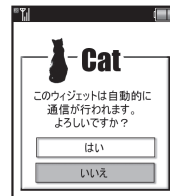

- Widget activates; follow onscreen instructions.

### Unlocking Temporarily

→ → → **Enter Handset Code** →

 
### Advanced

Moving widgets Removing multiple widgets at once Locking widgets (And more on P.10-8)



## Removing Widgets from Standby

1  →  Select widget → 

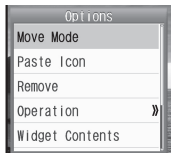

2 Remove → 

## Obtaining Widgets

1  → **Widget** → 



Mobile Widget Menu

2 **Widget Store** → 




- Follow onscreen instructions.

## Installing Widgets

- Some widgets may need to be installed manually; follow these steps:

[Mobile Widget Menu] **Widget Contents** →  → **Select widget** →  → **Install** →  → **Yes** → 

## Activating Widgets Not Saved in Standby

[Mobile Widget Menu] **Widget Contents** →  → **Select widget** →  → 

## Deleting Widgets





1 In Mobile Widget menu, **Widget Contents** → 

2 **Select widget** → 

- *SI速報ニュース/SIともだち状況*, *歩数計* and *家計簿* cannot be deleted.






 


3 **Delete** →  → **Yes** → 

## Deleting All Widgets

In   → **Delete All** →  → **Yes** → 

- If there is a widget saved in Standby, a confirmation appears; follow onscreen prompt.

## Advanced

-  Opening properties
-  Saving widgets to Icon View
-  Slowing pointer speed
-  Changing automatic update interval
-  Receiving updates automatically while outside Japan
-  Hiding confirmation outside Japan
-  Disabling cookies
-  Deleting cookies (P.10-8 - 10-9)










## Using Function-Linked Widgets






945SH is preloaded with *S!*速報ニュース!*S!*と  
もだち状況 (*S!* Quick News & *S!* Friend's  
Status widget), 歩数計 (Pedometer widget)  
and 家計簿 (Household Accounts widget).

### S! Quick News & S! Friend's Status Widget

#### ■ Setting View Pattern

- 1  ➔  Select S! Quick News & S! Friend's Status widget ➔ 
- 2 *Settings* ➔  ➔ *Pattern Setting* ➔ 
- 3 **Select item** ➔  (/☑) ➔ 

#### ■ Switching View

- 1  ➔  Select S! Quick News & S! Friend's Status widget ➔ 
- 2 *Operation* ➔  ➔ *Switch Pattern* ➔ 
  - Repeat the steps above to switch the view.







## Advanced

-   Adding news items  Changing news scroll speed  Showing unread news only  Assigning members  Managing members (P.10-9)

## Pedometer Widget

First, save 歩数計 to Standby.

### ■ Saving Body Information

- 1  ➔  Select Pedometer widget ➔ 
- 2 *Settings* ➔  ➔ *Body Info Settings* ➔ 
- 3 **Complete information entry** ➔ 

### ■ Household Accounts Widget

First, save 家計簿 to Standby.

### ■ Opening Household Accounts Window

- 1  ➔  Select Household Accounts widget ➔ 



S! Applications	
Downloading S! Applications	<ul style="list-style-type: none"> <li>Start Here → S! Appli → S! Appli Library → Download S! Appli</li> <li>Follow onscreen instructions.</li> </ul>
Adjusting S! Application sound volume	<ul style="list-style-type: none"> <li>S! Appli → Settings → Application Volume → Adjust level</li> </ul>
Canceling surround effect	<ul style="list-style-type: none"> <li>S! Appli → Settings → Surround → Off</li> </ul>
Setting handset responses to incoming transmissions	<ul style="list-style-type: none"> <li>Start Here → S! Appli → Settings → Calls &amp; Alarms → See below</li> </ul>
	<ul style="list-style-type: none"> <li><b>Showing Calls</b></li> <li>Select item → Show Call Notice</li> </ul>
	<ul style="list-style-type: none"> <li><b>Pausing S! Application for Incoming Mail</b></li> <li>Incoming Message → Message Priority</li> </ul>
	<ul style="list-style-type: none"> <li><b>Showing Alarm Notice</b></li> <li>Alarm → Alarm Notice</li> </ul>
	<ul style="list-style-type: none"> <li><b>Showing S! Appli Notice</b></li> <li>Notification → Start Notice</li> </ul>

Setting S! Application to activate in Standby	<ul style="list-style-type: none"> <li>Start Here → S! Appli → See below</li> </ul>
	<ul style="list-style-type: none"> <li><b>Activating Screensaver</b></li> <li>Settings → Screensaver → Switch On/Off → On</li> </ul>
	<ul style="list-style-type: none"> <li><b>Setting Screensaver</b></li> <li>S! Appli Library → Select application → As Screensaver</li> <li>Switch On/Off is set to <b>On</b>.</li> <li><b>As Screensaver</b> appears for compatible S! Applications.</li> <li>Screensaver may not start or operate correctly when an external device (Headphones, etc.) is connected to handset.</li> </ul>
	<ul style="list-style-type: none"> <li><b>Changing Screensaver Activation Time</b></li> <li>Settings → Screensaver → Activation Time → Enter time</li> </ul>
Setting Permissions	<ul style="list-style-type: none"> <li>Start Here → S! Appli → S! Appli Library → Select application → Permission → See below</li> </ul>
	<ul style="list-style-type: none"> <li><b>Customizing Permissions for S! Appli Operations</b></li> <li>Select item → Select option</li> <li><b>Resetting Permission Settings</b></li> <li>Reset Settings → Yes</li> </ul>
Opening properties	<ul style="list-style-type: none"> <li>S! Appli → S! Appli Library → Select application → Details</li> </ul>



Moving S! Applications to Memory Card	<p>● → S! Appli → ● → S! Appli Library → ● →          (v) → Select application → ● (□/☑) →          Complete selection → ☹ → Move to Card → ●</p> <ul style="list-style-type: none"> <li>When an older version of the S! Application is saved, choose <b>Yes</b> or <b>No</b> and press ●.</li> <li>Some S! Applications may not be moved to Memory Card.</li> </ul>
Changing S! Application settings	<p><b>Start Here</b> ● → S! Appli → ● → Settings → ●          → See below</p> <p><b>Setting Backlight Status</b>          Backlight → ● → Switch On/Off → ● →          Select option → ●</p> <ul style="list-style-type: none"> <li>Selecting <b>Normal Settings</b> applies Display Backlight settings.</li> </ul> <p><b>Disabling Backlight Flashing</b>          Backlight → ● → Blink → ● → Off → ●</p> <p><b>Disabling Vibration</b>          Vibration → ● → Off → ●</p>
Deleting S! Applications	<p>● → S! Appli → ● → S! Appli Library → ●          → Select application → ☹ → Delete → ● →          Yes → ●</p> <ul style="list-style-type: none"> <li>Handset Code may be required.</li> <li>Cancel Screensaver to delete Screensaver S! Application.</li> </ul>

Restoring default S! Application settings	<p>● → S! Appli → ● → Settings → ● → Reset Settings → ● → Yes → ●</p>
Restoring default S! Appli Library	<p>● → S! Appli → ● → Settings → ● →  <b>Memory All Clear</b> → ● → Yes → ●</p> <ul style="list-style-type: none"> <li>Delete IC Card data beforehand. (Procedures to delete IC Card data vary by Lifestyle-Appli; contact Osaifu-Keita<sup>®</sup> service providers for details.)</li> <li>Memory All Clear deletes all downloaded S! Applications and Lifestyle-Applications.</li> </ul>
Synchronizing Memory Card S! Applications with 945SH	<p>● → S! Appli → ● → Settings → ● →          Synchronization → ● → Yes → ●</p>
Opening Java™ license information	<p>● → S! Appli → ● → Information → ●</p>



## Mobile Widget

## ■ Operations in Standby

Selecting widget display option	<p>⌚ → ☰ → <b>Settings</b> → ● → <b>Show Widget</b> → ● → <b>Select option</b> → ●</p> <ul style="list-style-type: none"> <li>• <b>Always On:</b> Widgets always appear.</li> <li>• <b>On/Off:</b> Press ☰ to show/hide widgets.</li> <li>• <b>Off in Standby:</b> Press ⌚ to show widgets.</li> <li>• <b>Always Off:</b> Widgets do not appear even when ⌚ is pressed. (Reconfigure via <b>Show Widget</b> in Standby Display menu.)</li> </ul>
Moving widgets	<p>⌚ → ⌕ → <b>Select widget</b> → ☰ → <b>Move Mode</b> → ● → <b>Drag widget to target location</b> → ●</p>
Moving widgets to front/back	<p>⌚ → ⌕ → <b>Select widget</b> → ☰ → <b>Operation</b> → ● → <b>To Front or To Back</b> → ●</p>
Updating view	<p>⌚ → ⌕ → <b>Select widget</b> → ☰ → <b>Operation</b> → ● → <b>Update View</b> → ●</p>
Removing multiple widgets at once	<p>⌚ → ☰ → <b>Operate from List</b> → ● → <b>Remove</b> → ● → <b>Select widget</b> → ● (☑) → <b>Complete selection</b> → ⌵ → <b>Yes</b> → ●</p>
Locking widgets	<p>⌚ → ☰ → <b>Settings</b> → ● → <b>Lock Settings</b> → ● → <b>On</b> → ●</p> <ul style="list-style-type: none"> <li>• Handset Code is required to re-select <b>Off</b>.</li> </ul>

## ■ Managing

Opening properties	<p>● → <b>Widget</b> → ● → <b>Widget Contents</b> → ● → <b>Select widget</b> → ☰ → <b>Details</b> → ●</p> <ul style="list-style-type: none"> <li>• Select widget other than <i>スピードニュース!</i> と <i>もだち状況</i>, <i>歩数計</i> or <i>家計簿</i>.</li> </ul>
Saving widgets to Icon View	<p>● → <b>Widget</b> → ● → <b>Widget Contents</b> → ● → <b>Select widget</b> → ☰ → <b>Add to Icon View</b> → ● → <b>Select page</b> → ● → <b>Specify target location</b> → ●</p>
Slowing pointer speed	<p>● → <b>Widget</b> → ● → <b>Widget Contents</b> → ● → <b>Select widget</b> → ● → ☰ → <b>Cursor Speed</b> → ● → <b>Slow</b> → ● → <b>OK</b></p> <ul style="list-style-type: none"> <li>• May be unavailable for some widgets.</li> </ul>





## ■ Settings

Changing automatic update interval	⌚ → <i>Widget</i> → Ⓞ → <i>Settings</i> → Ⓞ → <i>Auto Refresh</i> → Ⓞ → <i>Select interval</i> → Ⓞ
Receiving updates automatically while outside Japan	Ⓞ → <i>Widget</i> → Ⓞ → <i>Settings</i> → Ⓞ → <i>AutoConnect Abroad</i> → Ⓞ → <i>On</i> → Ⓞ
Hiding confirmation outside Japan	Ⓞ → <i>Widget</i> → Ⓞ → <i>Settings</i> → Ⓞ → <i>Set Use Abroad</i> → Ⓞ → <i>Off</i> → Ⓞ
Disabling cookies	Ⓞ → <i>Widget</i> → Ⓞ → <i>Settings</i> → Ⓞ → <i>Cookies</i> → Ⓞ → <i>Disabled</i> → Ⓞ
Deleting cookies	Ⓞ → <i>Widget</i> → Ⓞ → <i>Settings</i> → Ⓞ → <i>Delete Cookies</i> → Ⓞ → <i>Yes</i> → Ⓞ

## ■ S! Quick News &amp; S! Friend's Status Widget (S! Quick News)

Adding news items	⌚ → Select S! Quick News & S! Friend's Status widget → ☰ → <i>Operation</i> → Ⓞ → <i>Content Menu</i> → Ⓞ → <i>Add News</i> → Ⓞ → <i>S! Quick News List</i> → Ⓞ → <i>登録はこちら</i> → Ⓞ → <i>Yes</i> → Ⓞ → <i>Select genre</i> → Ⓞ → <i>Select item</i> → Ⓞ <ul style="list-style-type: none"> <li>• Follow onscreen instructions.</li> </ul>
Changing news scroll speed	⌚ → Select S! Quick News & S! Friend's Status widget → ☰ → <i>Operation</i> → Ⓞ → <i>Content Menu</i> → Ⓞ → <i>News Display</i> → Ⓞ → <i>News Speed</i> → Ⓞ → <i>Select speed</i> → Ⓞ
Showing unread news only	⌚ → Select S! Quick News & S! Friend's Status widget → ☰ → <i>Operation</i> → Ⓞ → <i>Content Menu</i> → Ⓞ → <i>News Display</i> → Ⓞ → <i>Target News</i> → Ⓞ → <i>Unread Only</i> → Ⓞ

## ■ S! Quick News &amp; S! Friend's Status Widget (S! Friend's Status)

Assigning members	⌚ → Select S! Quick News & S! Friend's Status widget → ☰ → <i>Operation</i> → Ⓞ → <i>Content Menu</i> → Ⓞ → <i>Assign Member</i> → Ⓞ → <i>Select category</i> → Ⓞ → <i>Select entry/member</i> → Ⓞ → <i>(Empty)</i> → Ⓞ
Managing members	<b>Start Here</b> ⌚ → Select S! Quick News & S! Friend's Status widget → Ⓞ → <i>Select member</i> → ☰ → <i>Operation</i> → Ⓞ → <i>Content Menu</i> → Ⓞ → See below <b>Deleting Members</b> <i>Delete</i> → Ⓞ → <i>Yes</i> → Ⓞ <b>Changing Member Order</b> <i>Move</i> → Ⓞ → ☰ (Up) or ☹ (Down) → Ⓞ <b>Changing Member Icons</b> <i>Change Icon</i> → Ⓞ → <i>Select Pictogram</i> → Ⓞ



## S! Applications

### ? Cannot move S! Applications to Memory Card

- Memory Card memory may be low.


### ? S! Applications do not pause for incoming transmissions despite *Calls & Alarms* settings

- Regardless of setting, a notice appears for Screensaver S! Applications.

### ? Keitai Wi-Fi connection failure confirmation appears upon starting S! Application

- Handset may be outside Wi-Fi range. Move into range or cancel **Switch from Wi-Fi to 3G** in Switch Notification.

### ? (S! Appli Notification indicator) does not disappear

- To delete , open the corresponding Information item as follows:

