

Data Folder	14-2
Opening Files	14-3
Managing Files & Folders.....	14-4
Memory Card	14-5
Using Memory Card.....	14-5

Additional Functions.....	14-7
Troubleshooting.....	14-10

14

Data Folder & Memory Card



Data Folder

Handset files are organized in folders by file format.

■ Preset Folders

	Contents
Pictures*	Still images
DCIM	Still images on Memory Card (images captured with save location set to DCIM)
Ring Songs-Tones*	Downloaded melodies and other sound files
S! Appli*	S! Applications
Widget*	Widgets
Music*	Downloaded Chaku-Uta Full® files
Videos*	Video images
Lifestyle-Appli*	Lifestyle-Appli required to use Osaifu-Keitai®
Books*	Downloaded e-Books, etc.
Customized Screen*	Downloaded Customized Screen files
Status Templates	Combinations of Status Icon and Status Label for S! Friend's Status
Flash®	Downloaded Flash® (animation) files
Other Documents	Other files (Dictionary files, etc.)

*Contains corresponding Yahoo! Keitai menu shortcut.

Checking Memory Status

 
● ➔ Data Folder ➔ ● ➔ Memory Status ➔ ● ➔ Phone Memory or Memory Card ➔ ●

- The category **Others**: includes Data Folder management files, Saved Pages, etc.
- Delete messages/files when memory is low. Handset performance may be affected when memory is full.



Opening Files


1 → Data Folder →

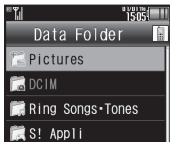

- Unselectable files/folders appear in gray.
- To show/hide sub folders, select a folder and press .

2 Select folder →

 To open a sub folder, select it and press .

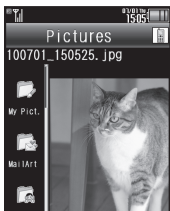

File List

3 Select file →



- The content plays or appears.
- To return to file list, press .

Handling Open Images

- Press to enlarge, or press / to open next or previous image. Press to rotate 90 degrees clockwise.

Attaching to Mail

After , select file → → *Send/ Blog* → → *As Message* →

- If a confirmation appears, follow onscreen instructions.

Copy Protected Files (or)

- Some functions may be unavailable.

Slide Show

Available for Pictures or DCIM folder.

1 In file list, select file →

2 *Slide Show* →

- Slide Show starts.

3 → Slide Show stops

Changing Interval

After , → *Speed* → → *Select speed* →

- When Speed is set to *Manual*, press /#/1-3 or /X/1-3 to advance or reverse frame.

Note

- Backlight stays on during Slide Show; exit to save battery power.

Advanced

- Switching file list view
- Changing image quality
- Changing Slide Show settings
- Using files as Wallpaper
- Using files as ringtones
- Using files as ringvideos (And more on P.14-7 - 14-8)



Managing Files & Folders

Adding Folders

May be unavailable for some folders.

- 1 ➔ **Data Folder** ➔ ➔ **Select folder** ➔



File List

- 2 If **Download** is selected or folder is empty, skip ahead to 4.
- 3 **Manage Items** ➔
- 4 **Create Folder** ➔ ➔ **Enter name** ➔

Moving/Copying Files

Some files may not be moved/copied.

- 1 In file list, select file ➔
- 2 **Move or Copy** ➔ ➔ **Phone or Memory Card** ➔
 - For still images, select a destination folder (**Pictures**, **Mail Art**, etc.) and press .
- 3 Select folder ➔
- 4 **Move here or Copy here** ➔

Selecting Multiple Files

- 1 In file list,
- 2 Select file ➔
 - Repeat 2 as needed. (To uncheck, select a file with and press .)

Hiding Folders

Restrict access to created folders.

- 1 In file list, select folder ➔
- 2 **Set Secret (Set Hidden for Memory Card)** ➔

Accessing Secret/Hidden Folders (Unlock Temporarily)

[File List] ➔ **Unlock Temporarily** ➔ ➔ **Enter Handset Code** ➔

Canceling Secret/Hidden

Unlock Secret/hidden folders temporarily and select target folder ➔ ➔ **Unset Secret (Unset Hidden for Memory Card)** ➔

Advanced

- Renaming folders ● Opening file properties ● Renaming files ● Sorting files ● Deleting files & created folders ● Handling SVG files (P.14-8 - 14-9)

Using Memory Card

Use microSD/microSDHC Memory Card (hereafter "Memory Card") to save and organize files for use on 945SH.

- Use recommended Memory Cards only. For details, see P.17-24 "microSD Memory Card Compatibility."
- If inserted, captured images, downloads and other files save to Memory Card. (My Pictograms and Graphic Mail templates save to handset.)

 
Important Memory Card Usage Notes

- Do not force Memory Card into or out of handset.
- Keep Memory Cards out of infant's reach; may cause suffocation if swallowed.
- Do not touch terminals or expose them to metal objects.
- SoftBank Mobile is not liable for any damages resulting from accidental loss/alteration of information. Keep a copy of Phone Book entries, etc. in a separate place.
- Never power handset off or remove battery while files are being accessed.
- Be careful not to erase or overwrite files accidentally.


Inserting & Removing

First, power handset off.

1 Remove battery (P.17-4)

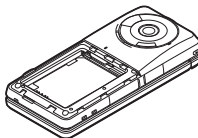


2 Insert card

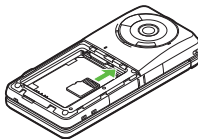 


- With terminal side up, insert card until it clicks.
- Do not insert other objects into Memory Card Slot.

  3 Insert battery, then close Battery Cover (P.17-4)

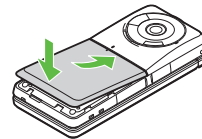





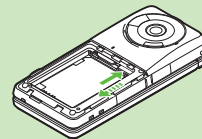




If Appears after Power On

- Memory Card may not be inserted properly; reinsert the card.
- Removing Memory Card**
- Gently push in card and release it; card pops out. Pull card straight out gently.



Format Card

When using a new Memory Card for the first time, format it on the handset before trying to save files, etc. Format Card deletes all Memory Card files, even those created on other devices.

- 1  → **Settings** →  → 
Phone/ → **Memory Card**
→ 
- 2 **Format Card** →  → **Yes**
→ 
 - Offline Mode is set. Handset transmissions are suspended until format is complete.
- 3 **Yes** → 
 - To cancel, choose **No** and press .




Precaution



- Never remove Memory Card or battery while formatting; may cause damage.

Opening Memory Card Files



Follow these steps to open files via Data Folder:

(Memory Card Data Folder opens first.)



- 1  → **Data Folder** → 
 - Memory Card Data Folder opens.
- 2 **Select folder** → 

To open a sub folder, select it and press .
- 3 **Select file** → 



Opening Handset Data Folder Files

- After 1,  → **Change to Phone** → 
→ **From** 2

Advanced

-   Using HTML files on Memory Card (P.14-9)



File/Folder View Settings	
Switching file list view	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → ⊖ → Manage Items → ● → Change List View → ● → Select option → ●
Changing image quality	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → Select file → ● → ⊖ → Switch Display (Picture Quality for Flash® files) → ● → Select quality → ●
Changing transition effect when using 	<ul style="list-style-type: none"> ● → Data Folder → ● → Select folder → ● → Select file → ● → ⊖ → Effect Type Settings → ● → Select effect → ●
Changing Slide Show settings	<ul style="list-style-type: none"> Start Here ● → Data Folder → ● → Select folder → ● → Select file → ● → ⊖ → Slide Show → ● → ⊖ → See below
	<p>Playing Once</p> <p>Repeat → ● → Off → ●</p>
	<p>Playing Music</p> <p>BGM Settings → ● → Switch On/Off → ● → On → ●</p>
	<p>Changing Music</p> <p>BGM Settings → ● → Play Ring Tones → ●</p> <p>→ Select folder → ● → Select file → ●</p>
	<p>Disabling Sharpening</p> <p>Kukkiri → ● → Off → ●</p>
	<p>Setting Music to Control Illumination</p> <p>Illumination → ● → Switch On/Off → ● → Link to Sound → ● → </p>

Changing Slide Show settings

Start Here ● → **Data Folder** → ● → Select folder → ● → Select file → ● → ⊖ → **Slide Show** → ●

→ ⊖ → See below

Changing Illumination Pattern

Illumination → ● → **Pattern/Color** → ● → **Select pattern** → ● → **Select color** → ● → 

- Light color is unselectable for some patterns.

Changing Key Illumination Pattern

Illumination → ● → **Key Pattern** → ● → **Select pattern** → ● → 

- Regardless of Key Pattern setting, ringtones control illumination when Switch On/Off is set to **Link to Sound**.

Disabling Key Illumination

Illumination → ● → **Switch On/Off** → ● → **Off** → ● → 

Hiding Softkeys

SW Guide Display → ● → **Off** → ●

Setting Backlight to Turn Off after a Period of Time

Always Backlight → ● → **Off** → ●

- Choosing **Off** applies Display Backlight settings. (Display remains on during Slide Show regardless of Display Saving setting.)

Changing Image Transition Effect

Effect Type Settings → ● → Select effect → ●

Using Data Folder Images in Transition Effect

EffectImageSettings → ● → Select effect → ● → Select image → ● → Specify image area or zoom in/out → ●

Restoring Default Image

EffectImageSettings → ● → Select effect →  → **Yes** → ●



Showing Softkeys in image view	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → Select folder → ● → Select file → ⊞ → <i>SW Guide Display</i> → ● → <i>On</i> → ●
Disabling sharpening	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → Select folder → ● → Select file → ⊞ → <i>Kukkiri</i> → ● → <i>Off</i> → ●

Using Files/Folders


Using files as Wallpaper	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → Select folder → ● → Select file → ⊞ → <i>Set as Wallpaper</i> → ● → <i>Vertical or Horizontal</i> → ● → ● • For images smaller or larger than Display, Wallpaper Display options appear; follow onscreen prompts.
Using files as ringtones	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → Select folder → ● → Select file → ⊞ → <i>Set as Ringtone</i> → ● → ● → Select item → ● • If prompted, enter ring time and press ●. • If a confirmation appears, follow onscreen instructions.
Using files as ringvideos	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → <i>Videos</i> → ● → ● → Select file → ⊞ → <i>Set as Ring Video</i> → ● → ● → Select item → ● • If prompted, enter ring time and press ●.
Saving Phone Book entries	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → Select folder → ● → Select file → ⊞ → <i>Save to Phone Book</i> → ● → <i>As New Entry</i> → ● → Complete other fields → ▾ • To add to an existing entry, select <i>As New Detail</i>.

Activating mobile camera, etc. in corresponding folders	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → Select folder → ● → ⊞ → <i>Take Picture, Record Video or Record Voice</i> → ●
---	---

Managing Files/Folders

Renaming folders	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → Select folder → ● → Select folder → ⊞ → <i>Manage Items</i> → ● → <i>Rename</i> → ● → Enter name → ● • Assign different names to folders within a layer.
Opening file properties	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → Select folder → ● → Select file → ⊞ → <i>Details</i> → ●
Renaming files	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → Select folder → ● → Select file → ⊞ → <i>Manage Items</i> → ● → ● → <i>Rename</i> → ● → Enter name → ●
Sorting files	<ul style="list-style-type: none"> ● → <i>Data Folder</i> → ● → Select folder → ● → ⊞ → <i>Manage Items</i> → ● → <i>Sort</i> → ● → ● → Select method → ●
Deleting files & created folders	<ul style="list-style-type: none"> Start Here → ● → <i>Data Folder</i> → ● → Select folder → ● → ● → See below
	<ul style="list-style-type: none"> Single Files Select file → ⊞ → <i>Delete</i> → ● → ● → <i>Yes</i> → ● Folder & Files Within Select folder → ⊞ → <i>Delete</i> → ● → ● → <i>Yes</i> → ●



Handling SVG files	Start Here → Data Folder → Other Documents → Select file → See below
	Line Scroll 
	Page Scroll 2 (Up), 8 (Down), 6 (Right), 4 (Left)
	Zoom 1 (Zoom out), 3 (Zoom in)
	Rotate 7 (Counterclockwise), 9 (Clockwise)
	Key Action Mode 0
	Default View 5

Memory Card

Using HTML files on Memory Card	Settings → Phone/Memory Card → SD Local Contents → Select title
---------------------------------	---



Managing Files/Folders

? Cannot copy files

- Files may be copy/forward protected. (If a copy/forward protected file is included in selected files, only the remaining files are copied.)

? Copied/moved files cannot be used on PCs, etc.

- Some files may not be usable on other SoftBank handsets or PCs, etc.

? Cannot sort files properly

- Check the number of files/folders in the folder. Files/folders in folders containing 961 or more files/folders are sorted per 240 files/folders in the order they were saved. The order may change when a file/folder is deleted, etc.

? Cannot use some characters in file/folder names

- Single-byte Symbols ¥, /, :, ;, ,, <, >, /, ?, # and " are not supported.

